

**THOR**  
K I T C H E N<sup>®</sup>

# USE + CARE MANUAL

**24INCH 1.6 CU FT. COMPACT  
MICROWAVE OVEN WITH  
SENSOR AND CONVECTION  
TM024H**



# TABLE OF CONTENTS

|                                                                                |           |
|--------------------------------------------------------------------------------|-----------|
| <b>1. SAFETY WARNINGS .....</b>                                                | <b>04</b> |
| 1.1 Precautions To Avoid Possible Exposure To Excessive Microwave Energy ..... | 04        |
| 1.2 Specifications .....                                                       | 04        |
| 1.3 Important Safety Instructions .....                                        | 04        |
| 1.4 For Combination Microwave Ovens .....                                      | 06        |
| 1.5 Grounding Instructions .....                                               | 06        |
| 1.6 Radio Interference .....                                                   | 07        |
| 1.7 Utensils .....                                                             | 08        |
| 1.8 Materials You Can Use In Microwave Oven .....                              | 09        |
| 1.9 Materials To Be Avoided In Microwave Oven .....                            | 10        |
| 1.10 Causes Of Damage .....                                                    | 10        |
| <b>2. PRODUCT INSTALLATION .....</b>                                           | <b>12</b> |
| 2.1 Important Information .....                                                | 12        |
| 2.2 Before You Begin .....                                                     | 12        |
| 2.3 Checklist For Installation .....                                           | 13        |
| 2.4 Installation Instructions .....                                            | 13        |
| <b>3. PRODUCT OVERVIEW .....</b>                                               | <b>17</b> |
| 3.1 Your New Appliance .....                                                   | 17        |
| 3.2 Control Panel .....                                                        | 17        |
| 3.3 Display Screen .....                                                       | 17        |
| 3.4 Touch Keys And Display .....                                               | 17        |
| 3.5 Parameter Adjustment .....                                                 | 18        |
| 3.6 Cooling Fan .....                                                          | 18        |
| 3.7 Accessories .....                                                          | 19        |
| <b>4. OPERATION INSTRUCTIONS .....</b>                                         | <b>21</b> |
| 4.1 Before Using The Appliance For The First Time .....                        | 21        |
| 4.2 Setting The Oven .....                                                     | 21        |
| 4.3 Cooking Mode .....                                                         | 23        |
| 4.4 Other Settings .....                                                       | 32        |
| <b>5. CLEANING AND CARE .....</b>                                              | <b>35</b> |
| 5.1 Care And Cleaning .....                                                    | 35        |
| 5.2 Cleaning And Maintenance .....                                             | 36        |
| <b>6. TROUBLESHOOTING .....</b>                                                | <b>38</b> |
| 6.1 Malfunction Table .....                                                    | 38        |
| 6.2 Acrylamide In Foodstuffs .....                                             | 38        |
| 6.3 Energy And Environment Tips .....                                          | 39        |
| <b>WARRANTY .....</b>                                                          | <b>40</b> |

# 1. SAFETY WARNINGS

## 1.1 PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allows soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - DOOR (bent)
  - HINGES AND LATCHES (broken or loosened)
  - DOOR SEALS AND SEALING SURFACES
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## 1.2 SPECIFICATIONS

|                  |              |
|------------------|--------------|
| Model            | TM024H       |
| Rated Voltage    | 120 V~ 60 Hz |
| Microwave Input  | 1750 W       |
| Microwave Output | 950 W        |
| Grill            | 1700 W       |
| Convection       | 1700 W       |
| Bake             | 600 W        |

## 1.3 IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed. Including the following:  
WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- 1) Read all instructions before using the appliance.
- 2) Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on (specific page or section to be included).
- 3) This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on (specific page or section to be included).

# 1. SAFETY WARNINGS

- 4) Install or locate this appliance only in accordance with the provided installation instructions.
  - 5) Some products such as whole eggs and sealed containers – for example, closed glass jars – are able to explode and should not be heated in this oven.
  - 6) Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
  - 7) **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.
  - 8) Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
  - 9) This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
  - 10) Do not cover or block any openings on the appliance.
  - 11) Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
  - 12) Do not immerse cord or plug in water.
  - 13) Keep cord away from heated surfaces.
  - 14) Do not let cord hang over edge of table or counter.
  - 15) Please always follow the instructions specified on Page 35-Page 37 for door surface cleaning.
  - 16) To reduce the risk of fire in the oven cavity:
    - i) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
    - ii) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
    - iii) If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
    - iv) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
  - 17) Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.**
- To reduce the risk of injury to persons:
- Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.

# 1. SAFETY WARNINGS

- After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- Use extreme care when inserting a spoon or other utensil into the container.
- Do not operate any heating or cooking appliance beneath the appliance. (Exception: A microwave oven investigated for use above another heating appliance.)
- Do not mount unit over or near any portion of heating or cooking appliance. (Exception: A microwave oven investigated for use above another heating appliance.)
- Do not mount over sink.
- Do not store anything directly on top of the appliance surface when the appliance is in operation.
- Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- Do not use paper products when appliance is operated in the toaster mode.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the oven.

## SAVE THESE INSTRUCTIONS

### 1.4 For COMBINATION MICROWAVE OVENS

- 1) Oversized foods or oversized metal utensils should not be inserted in a microwave oven as they may create a fire or risk of electric shock.
- 2) Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- 3) Do not use paper products when appliance is operated in the toaster mode.
- 4) Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- 5) Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the oven.

### 1.5 GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the

# 1. SAFETY WARNINGS

risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

## **DANGER - Electric Shock Hazard**

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## **WARNING - Electric Shock Hazard**

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- If a long cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - The extension cord must be a grounding-type 3-wire cord.
  - The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## **1.6 RADIO INTERFERENCE**

- Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
- When there is interference, it may be reduced or eliminated by taking the following measures:
  - Clean door and sealing surface of the oven.
  - Reorient the receiving antenna of radio or television.
  - Relocate the microwave oven with respect to the receiver.
  - Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits
  - This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

# 1. SAFETY WARNINGS

- This device complies with CAN ICES-001 (B) / NMB-001 (B) & CAN ICES-003 (B) / NMB-003 (B). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with part 18 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 1.7 UTENSILS

CAUTION - Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

### Utensil Test:

- Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- Cook on maximum power for 1 minute.
- Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- Do not exceed 1 minute cooking time.

# 1. SAFETY WARNINGS

## 1.8 MATERIALS YOU CAN USE IN MICROWAVE OVEN

| Utensils              | Remarks                                                                                                                                                                                                                                                                |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Browning dish         | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.                                                                                                |
| Dinnerware            | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.                                                                                                                                                                         |
| Glass jars            | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.                                                                                                                                                        |
| Glassware             | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.                                                                                                                                                         |
| Oven cooking bags     | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.                                                                                                                                                                  |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking.                                                                                                                                                                                   |
| Paper towels          | Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.                                                                                                                                                                 |
| Parchment paper       | Use as a cover to prevent splattering or a wrap for steaming.                                                                                                                                                                                                          |
| Plastic               | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap          | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.                                                                                                                                                     |
| Thermometers          | Microwave-safe only ( meat and candy thermometers).                                                                                                                                                                                                                    |
| Wax paper             | Use as a cover to prevent splattering and retain moisture.                                                                                                                                                                                                             |

# 1. SAFETY WARNINGS

## 1.9 MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

| Utensils                        | Remarks                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------|
| Aluminum tray                   | May cause arcing. Transfer food into microwave-safe dish.                                |
| Food carton with metal handle   | May cause arcing. Transfer food into microwave-safe dish.                                |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing.               |
| Metal twist ties                | May cause arcing and could cause a fire in the oven.                                     |
| Paper bags                      | May cause a fire in the oven.                                                            |
| Plastic foam                    | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood                            | Wood will dry out when used in the microwave oven and may split or crack.                |

## 1.10 CAUSES OF DAMAGE

### Caution!

- Creation of sparks: Metal e.g. a spoon in a glass must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Water in the hot cooking compartment: Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage.
- Moist food: Do not store moist food in the closed cooking compartment for long periods. Do not use the appliance to store food. This can lead to corrosion.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").

# 1. SAFETY WARNINGS

- Using the appliance door for standing on or placing objects on: Do not stand or place anything on the open appliance door. Do not place ovenware or accessories on the appliance door.
- Transporting the appliance: Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a ceramic plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- The oven should be cleaned regularly and any food deposits removed since they may explode, even after microwave heating has ended.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

## 2. PRODUCT INSTALLATION

### 2.1 IMPORTANT INFORMATION

**Electrical connection with plug** (only for some models, subject to our products)

The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.

Only a qualified electrician who takes the appropriate regulations into account may install the socket or replace the connecting cable.

If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm. Contact protection must be ensured by the installation. Fuse protection: see instructions for use-technical data.

**Electrical connection without plug** (only for some models, subject to our products)

The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.

Only a qualified electrician who takes the relevant regulations into account may replace the power cord. Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.

If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3 mm must be provided.

**Connect the wires of the mains power cord in accordance with the following colour coding:**

|                  |                  |
|------------------|------------------|
| Green and yellow | Earth wire (E)   |
| Blue             | Neutral wire (N) |
| Brown            | Live (L)         |

**Great Britain and Australia:**

Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work.

When the appliance is installed, protection must be provided against accidental contact in the future.

### 2.2 BEFORE YOU BEGIN

**Tools and parts needed**

- Philips head screwdriver
- 1/8" drill bit and drill
- Measuring tape
- Knife

**Parts included**

- Microwave oven
- Philips head screws

**Power Requirements**

The outlet must be properly grounded in accordance with all applicable codes. It can be installed in the back wall directly behind the appliance.

## 2. PRODUCT INSTALLATION

### 2.3 CHECKLIST FOR INSTALLATION

Use this checklist to verify that you have completed each step of the installation process. This can help you avoid mistakes.

Refer to detailed instructions for each step in the sections following this checklist.

1. Before installing the appliance, be sure to verify the cabinet dimensions are correct for your appliance and that the required electrical connections are present. Make sure the electrical conduit provided on the appliance is able to reach to the point of connection.
2. Move the appliance into place in front of the cabinet opening.
3. Remove packaging materials, leaving the bottom packaging on the appliance to avoid damage to the floor.
4. Team-lift the appliance directly into the cabinet cutout.
5. Slide the appliance all the way into place.
6. Fasten the appliance to the cabinet opening with the screws supplied.


Always read and follow the complete installation instructions contained in this manual.

### 2.4 INSTALLATION INSTRUCTIONS

#### GENERAL CABINET REQUIREMENTS:


- 1/4" space is required between the side of the appliance and an adjacent wall or cabinet door when installed at the end of a cabinet run.
- The cabinet base must be flat and capable of supporting the weight (roughly 90 pounds) of your appliance when in use.
- The appliance door will overlap the furniture below by approx 3/16" when opened.
- There must be an air gap of at least 1/4" between the appliance and the cabinet walls when the appliance is installed, i.e. 1/8" each side.

#### DIMENSIONS

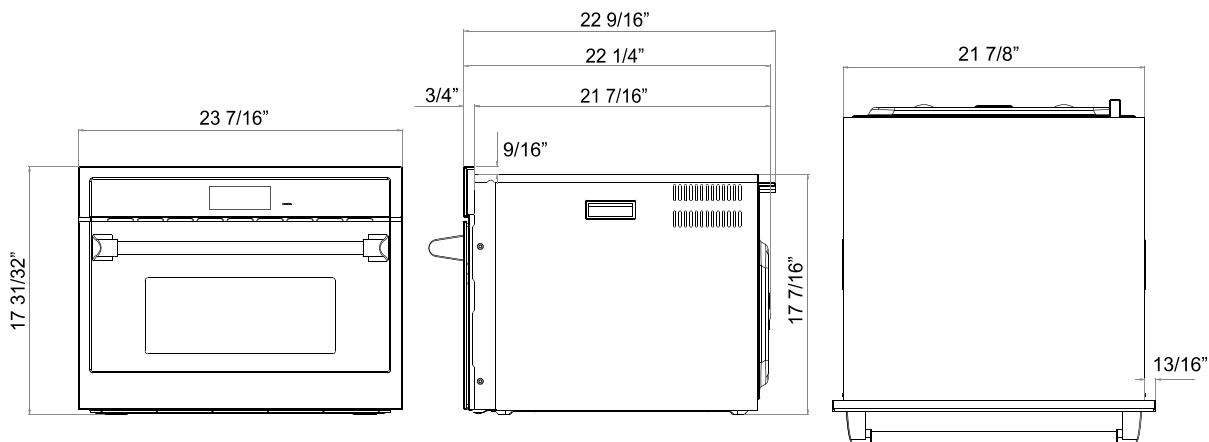


## 2. PRODUCT INSTALLATION


### BUILT-IN

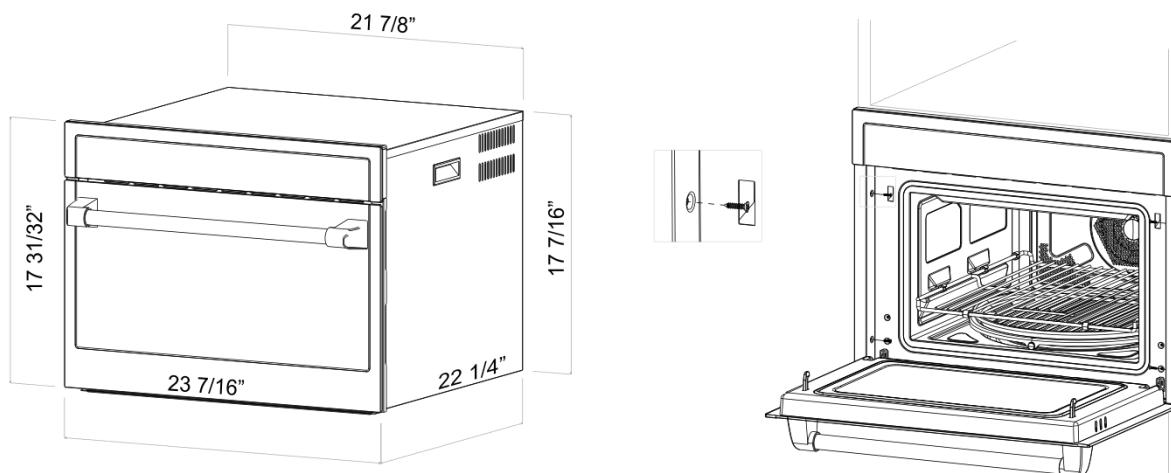


### STANDARD INSTALLATION

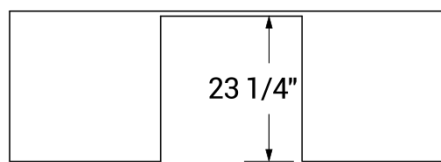

Top view

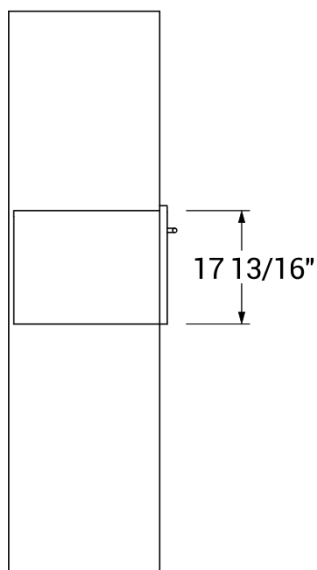

Side view

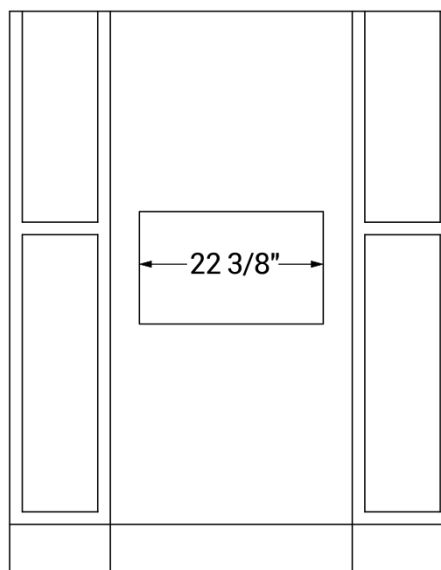


Front view

Cutout width :  $22\frac{3}{8}"$   
Cutout depth :  $23\frac{1}{4}"$

Cutout height :  $17\frac{13}{16}"$

## 2. PRODUCT INSTALLATION

### FLUSH INSTALLATION

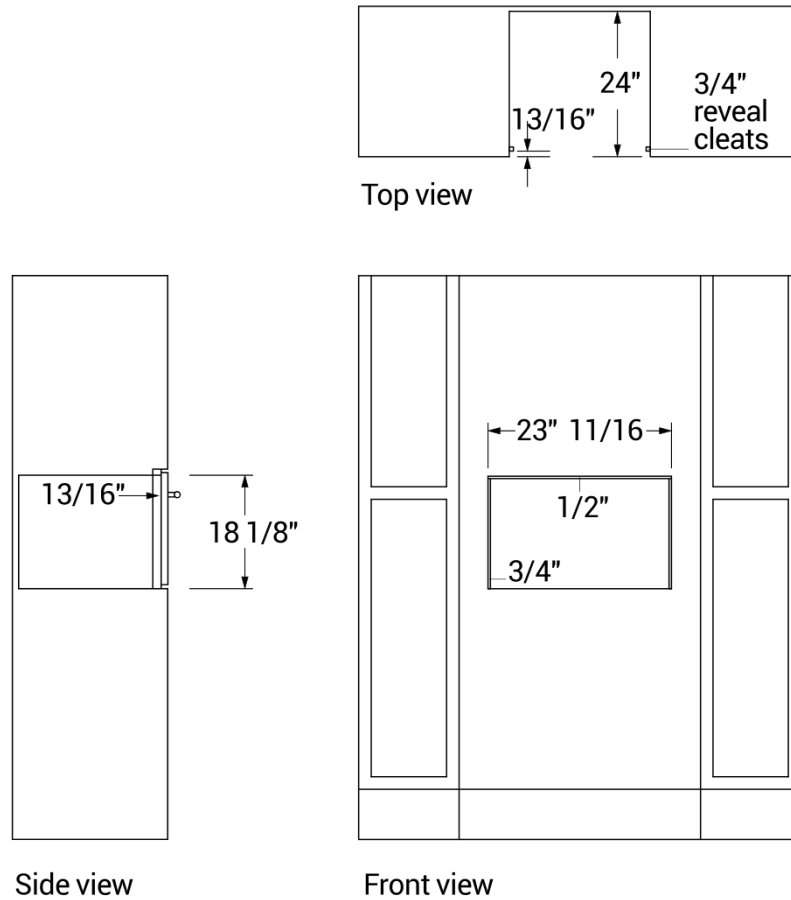


Cutout width :  $23\frac{11}{16}$ "  
Cutout depth :  $24$ "

Cutout height :  $18\frac{1}{8}$ "

## 2. PRODUCT INSTALLATION

### VENTILATED CABINET

- This appliance is only intended to be fully fitted in a kitchen. This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least  $1\frac{3}{4}$ " must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of  $38\frac{3}{4}$  in<sup>2</sup> in the base. To achieve this, cut back the base panel or fit a ventilation grill.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The units into which the appliance is fitted must be heat-resistant up to 194° F.
- Note: There should be a minimum  $\frac{1}{16}$ " gap above the oven.
- Note: The vent should not be directly against the enclosed space, such as ceiling mezzanine, sound insulation wall mezzanine.

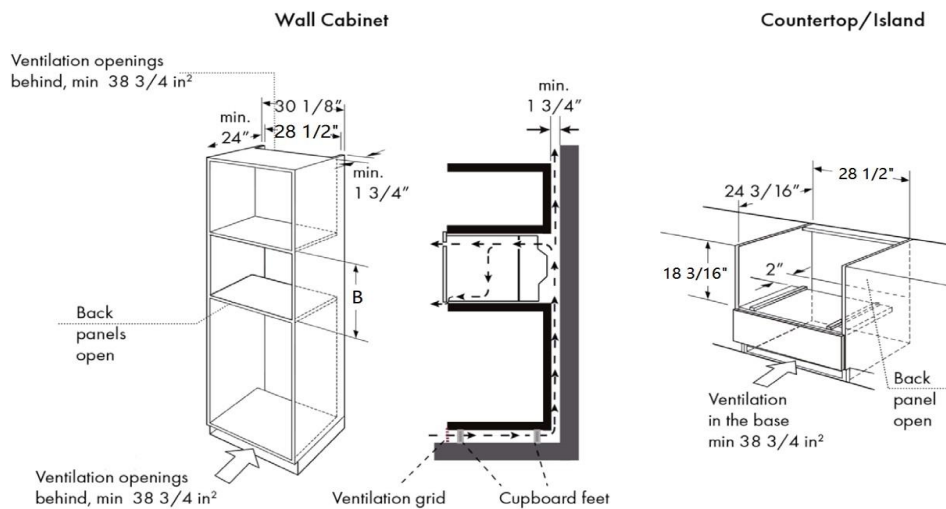

Note: There should be a gap above the oven.

- Carefully push the microwave into the cabinetry, making sure that it is in the center.
- Do not kink the electrical cable.
- Open the door and fasten the microwave with the screws that were supplied.



**WARNING:** The gap between the worktop and the appliance must not be closed by additional battens.

### MOUNT TO CABINET

NOTE: The appliance is heavy. It is advisable to install it with a second person.



**NOTICE:** Before installing the appliance, be sure to verify the cabinet dimensions and electrical connections.


1. Fully insert the appliance and center it. Do not kink the electrical cable.
2. Screw the appliance into pre-drilled holes in the cabinetry.

## 3. PRODUCT OVERVIEW


### 3.1 YOUR NEW APPLIANCE

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are explained. You will find information on the cooking compartment and the accessories.

### 3.2 CONTROL PANEL

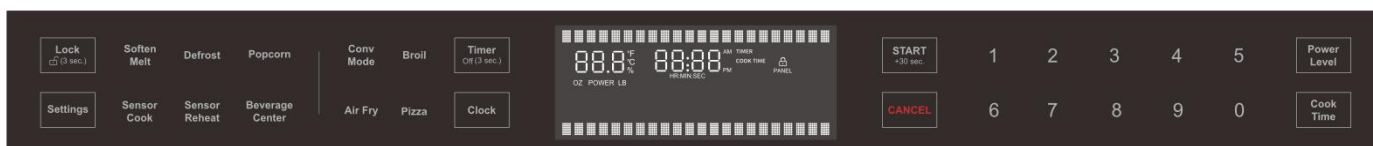

### 3.3 DISPLAY SCREEN

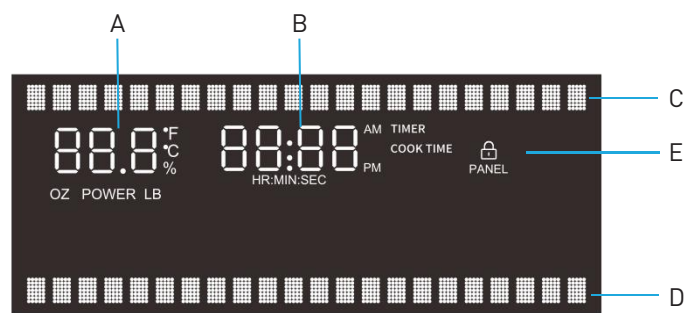

A: Microwave cavity display    B: Time of cooking / timer / clock display    C: Function prompt area  
D: Parameter setting prompt area    E: Control lock display

### 3.4 TOUCH KEYS AND DISPLAY

The touch keys are used to set the various additional functions. On the display, you can read the values that you have set.

| Symbol                                                                                            | Function                       |
|---------------------------------------------------------------------------------------------------|--------------------------------|
| Lock  (3 sec.) | Activate/deactivate child lock |
| Settings                                                                                          | System settings                |
| Soften/Melt                                                                                       | Select Soften/Melt programs    |
| Sensor Cook                                                                                       | Select Sensor Cook programs    |
| Defrost                                                                                           | Select Auto Defrost programs   |
| Sensor Reheat                                                                                     | Select Sensor Reheat programs  |
| Popcorn                                                                                           | Cook popcorn                   |
| Beverage Center                                                                                   | Heat beverages                 |
| Conv Mode                                                                                         | Select Convection modes        |
| Air Fry                                                                                           | Select Airfry cook programs    |

## 3. PRODUCT OVERVIEW

| Symbol            | Function                                                 |
|-------------------|----------------------------------------------------------|
| Broil             | Set Broil mode                                           |
| Pizza             | Select pizza programs                                    |
| Timer/Off(3 sec.) | Set the time of timer                                    |
| Clock             | Set time of day                                          |
| START/+30 sec.    | Confirm entered values/Start cooking mode Add 30 seconds |
| CANCEL            | Cancel the programs/turn the appliance off               |
| 0-9               | Use the number keys to enter customized values           |
| Power Level       | Set power level for microwave operation                  |
| Cook Time         | Set cooking time                                         |

### 3.5 PARAMETER ADJUSTMENT

Use the adjusting keys to set the parameters.

| parameter   | Function                       |
|-------------|--------------------------------|
| Power Level | Set the microwave power level. |
| Cook Time   | Set the time of cooking.       |

### 3.6 COOLING FAN

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door. The cooling fan continues to run for a certain time after operation.

#### Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

#### Notes

- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

## 3. PRODUCT OVERVIEW

### 3.7 ACCESSORIES


#### Turntable

As a surface for the wire rack.

Food which particularly requires a lot of heat from underneath can be prepared directly on the turntable. The turntable can turn clockwise or anti-clockwise.

Place the turntable on the drive in the centre of the cooking compartment. Ensure that it is properly fitted.


- Never use the microwave without the turntable.
- The turntable can withstand max. 5 kg.
- The turntable must turn when using all types of heating.

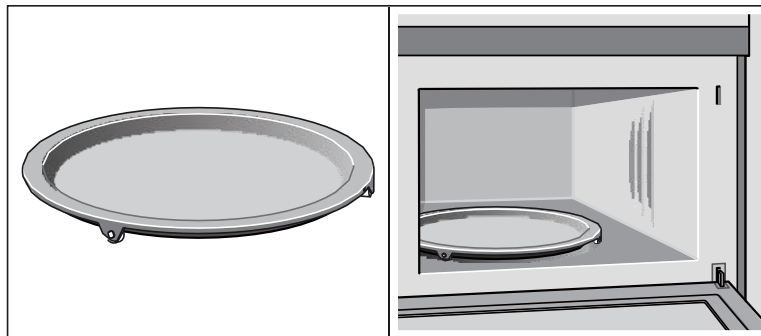

#### Baking rack

For grilling, e.g. steaks, sausages and for toasting bread.

We recommend using the rack together with the baking tray when cooking items on the rack which might drip.

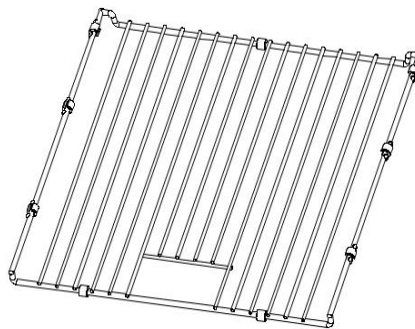


### 3. PRODUCT OVERVIEW

#### Ceramic Tray

For microwave cooking and convectional cooking. You can place food, like a popcorn bag, potatoes, microwave pizza or defrost, directly on the ceramic tray.

The ceramic tray will get hot during the convection cooking. Place the ceramic tray on the top of the metal tray turntable. The ceramic tray can remain in the oven for all cooking modes, unless "Bake on Metal Tray" is required.

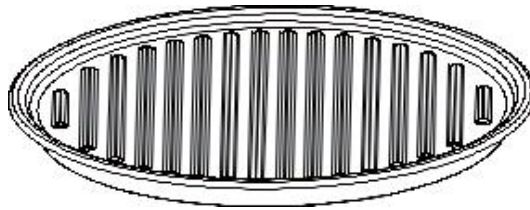

#### Note:

Type and quantity of accessories is subject to actual demand.

## 4. OPERATION INSTRUCTIONS

### 4.1 BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Here you will find everything you need to do before using your oven to prepare food for the first time. First read the section on .IMPORTANT SAFETY INSTRUCTIONS.

#### Setting the clock

When power is first supplied to the oven, the timer display will flash "12:00" and "Clock setting" will appear on the display . Enter the time by touching the number keypads. Then touch **START** to allow operation.proceed as follow:

1. Touch **START** to set clock or touch **Clock**,
2. Choose 12 or 24 hours system according to the prompts,
3. Enter the correct time using the number keys. Example: To set the clock to 12:30 type in 1 2 3 0,
4. Touch **START** to confirm is complete setting.

#### Note

When power is first supplied to the oven, you can directly press any key to enter the settings without setting the clock.

#### Heating up the oven

To remove the new oven smell, heat up the appliance when it is empty and closed. One hour with Convection at 350° F (180 ° C) is ideal. Ensure that no packaging remnants have been left in the oven cavity.

1. Touch **Conv Mode** and then enter the numbers to select **Baked goods** ,according to the prompts,
2. Enter the numbers 3 5 0 with the number keys,and then press **START** to confirm temperature is complete setting,
3. Enter the cooking time numbers 6 0 with the number keys,
4. Touch **SATART** to start cooking.

The oven light turns on and the appliance starts heating.

#### Cleaning the accessories

Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.

### 4.2 SETTING THE OVEN

#### Settings

The oven has additional settings which can be accessed and adjusted using the settings button. They remain in the control's memory until changed.

## 4. OPERATION INSTRUCTIONS

### How to use:

1. Touch **Settings**. The oven display will scroll through the various options.
2. Touch the number keypad for the specific option to toggle the function setup. Use a following chart as a guide.

| Option           | Code | Function Description                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Temp Units       | 1    | Set temperature unit                                                                                                                                                                                                                                                                                                                                                                                              |
| Sound            | 2    | Key sound switch                                                                                                                                                                                                                                                                                                                                                                                                  |
| Error Code query | 3    | Query for error codes that have occurred                                                                                                                                                                                                                                                                                                                                                                          |
| Version          | 4    | Version information query                                                                                                                                                                                                                                                                                                                                                                                         |
| Display Mode     | 5    | Set oven demo mode                                                                                                                                                                                                                                                                                                                                                                                                |
| Sabbath          | 6    | Set sabbath mode.(The cooking time can be set within 74 hours) Sabbath mode disables the oven lights (the oven light will not turn on when the door is opened), all sounds (the control will not beep when the screen is pressed), Convection modes, Broil modes, Warm, Proof, and all time functions. Sabbath mode can only be used with traditional Bake. This feature conforms to Jewish Sabbath requirements. |
| Factory Reset    | 7    | Restore factory setting                                                                                                                                                                                                                                                                                                                                                                                           |

### Timer/Off(3 sec.)

The Timer can be set in minutes and seconds or hours and minutes and counts down the set time.

How to set timer:

1. Touch **Timer/Off(3 sec.)**.The oven display will scroll through the various options.
2. Touch number keypad "1" to select HR:MIN or "2" to select MIN:SEC.
3. Touch number keypads to set a length of the timer.
4. Touch **START**.

The oven display will count down the timer. If both cooking time and timer are set, only display the time of the cooking. If enabled, end-of-cycle tones will sound, It ends automatically in one minute, or hold Timer/Off(3sec.) for 3 seconds to clear the display and stop the reminder tones.

**NOTE:** The Timer does not start or stop the oven.

## 4. OPERATION INSTRUCTIONS



To Lock Control:

Touch the oven control is lock ,when a lock icon appears in the display.

To Unlock Control:

Hold for 3 seconds,3-2-1 appears in the display, and then the oven is unlock and the lock icon is remove.

**NOTE:** The Control Lock shuts down the control panel keypads to avoid unintended use of the oven. The Control Lock will remain set after a power failure, if set before the power failure occurs.

When the control is locked, only the **CANCEL**, keypads will function.

### 4.3 COOKING MODE

There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can also select the oven cooking time for your dish. Please refer to the section on Setting the time-setting options.

#### Soften/Melt

Soften and Melt functions may be used to soften or melt your food. Times and cooking powers have been preset for a number of food types.

How to use Soften and Melt:

1. Touch **Soften/Melt** ,The oven display will scroll through the various options.
2. Touch number keypad "1" to select soften function or "2" to select melt function.
3. Touch number keypad to select food type from the Soften Chart or Melt Chart.
4. Touch number keypads to enter quantity (weight or sticks).
5. Touch **START** to start cooking.  
The oven display will count down the soften or melt time.

When the stop time is reached, the oven will shut off automatically and "Soften complete" or "Melt complete" will appear in the display.

If enabled, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

#### Soften Chart

| Food         | Code | Quantity                            | Preparation                                     |
|--------------|------|-------------------------------------|-------------------------------------------------|
| Butter       | 1    | 0.5-2 Sticks                        | Unwrap and place in microwave- safe container.  |
| Margarine    | 2    | 0.5-2 Sticks                        |                                                 |
| Ice cream    | 3    | 16,32,64 oz (454, 907 g, or 1.8 kg) |                                                 |
| Cream Cheese | 4    | 3 or 8 oz (85 g or 227 g)           | Unwrap and place in microwave - safe container. |

## 4. OPERATION INSTRUCTIONS

### Melt Chart

| Food         | Code | Quantity                          | Preparation                                                                    |
|--------------|------|-----------------------------------|--------------------------------------------------------------------------------|
| Butter       | 1    | 0.5-2 Sticks                      | Unwrap and place in microwave- safe container.                                 |
| Margarine    | 2    | 0.5-2 Sticks                      |                                                                                |
| Chocolate    | 3    | 2,4, 6, 8 oz (57, 113, 170,227 g) | Cut squares into small pieces or use chips. Place in microwave-safe container. |
| Cheese       | 4    | 8 or 16 oz (227 or 454 g)         | Cut into small pieces and place in microwave-safe container.                   |
| Marshmallows | 5    | 5 or 10 oz (142 or 283 g)         | Place in microwave-safe container.                                             |

### Sensor Cook

You can select two sensor cooking modes. Sensor cooking allows you to cook many of your favorite foods without selecting cooking times and power levels. The microwave oven automatically determines the required cooking time for each food item.

During the Sensor Cook function a sensor automatically adjusts for the cook time and power level. The microwave oven display will show the "Maximum Time Remaining" prompt and the time countdown once the sensor identifies the cooking duration.

If the microwave oven door is opened during a sensor function, the microwave oven will turn off, and any additional operations will be canceled.

How to use Sensor Cook:

1. Touch **Sensor Cook**. The oven display will scroll through the various options.
2. Touch number keypad to select food type from the Sensor Cook Chart.
3. Touch number keypads to enter quantity (weight or cups).
4. Touch **START** to start cooking.

The oven display will count down the Sensor Cook time.

When the stop time is reached, the oven will shut off automatically and "Sensor cooking complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

## 4. OPERATION INSTRUCTIONS

### Sensor Cook Chart

| Food                                                                                                                          | Code | Quantity               |
|-------------------------------------------------------------------------------------------------------------------------------|------|------------------------|
| Baked Potato<br>Pierce skin with a fork.Do not cover.After cooking,allow to stand wrapped in foil for 5 minutes.              | 1    | 1–4 potatoes (8–32 oz) |
| Ground Meat<br>After cooking,allow to stand,covered,for 3-4 minutes.                                                          | 2    | 8–24 oz (0.5-1.5 lbs)  |
| Vegetable<br>No water is needed if vegetables have just been washed.Add 2 tablespoons water per 8 ounces of fresh vegetables. | 3    | 4–16 oz (0.25-1 lbs)   |
| Fish/Seafood<br>Roll thin edges underneath.Arrange in a ring around microwaveable dish.                                       | 4    | 8–20 oz (0.5-1.25 lbs) |
| Frozen Entree<br>Follow package instructions for vent,cutting plastic film,etc.                                               | 5    | 10–20 oz               |

### Sensor Reheat

The sensor reheat feature lets you reheat dinner plates or casseroles(8-16 oz) for your cooking convenience.

How to use Sensor Reheat:

1. Touch **Sensor Reheat**.
2. Touch **START** to start cooking.  
The oven display will count down the Reheat time.

When the stop time is reached, the oven will shut off automatically and "Reheat complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### Notes

- Cover with vented plastic wrap or wax paper.
- Reheat food on a microwaveable dinner plate.

## 4. OPERATION INSTRUCTIONS

### Sensor Reheat Cooking Suggestions

| Food  | Directions                                                                                                                                                                                                                                                                                                                          | Quantity     |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Pasta | Cover plate with lid or vented plastic wrap. If food is not hot enough after heating with the Reheat feature, continue heating using manual time and power level setting.<br>Stir foods once before serving.<br>Contents: <ul style="list-style-type: none"><li>• Pasta: Canned spaghetti and ravioli, refrigerated foods</li></ul> | 1-4 servings |

### Defrost

The Defrost feature can be used, or the microwave oven can be manually set to defrost by using 30% cook power.

- For optimal results, food should be 0° F (-18° C) or colder when defrosting.
- For optimal results, food should be 0° F (-18° C) or colder when defrosting.
- Shallow packages will defrost more quickly than deep blocks.
- Separate food pieces as soon as possible during or at the end of the cycle for more even defrosting.
- Foods left outside the freezer for more than 20 minutes or frozen ready-made food should not be defrosted using the Defrost feature, but should be defrosted manually.
- Use small pieces of aluminum foil to shield parts of food such as chicken wings, leg tips, and fish tails.
- Times and cooking powers have been preset for defrosting a number of food types.
- Manual Defrost requires that a cook time and power level be entered if using other than 30% cook power.

### How to use Defrost:

1. Touch **Defrost** ,The oven display will scroll through the various options.
2. Touch number keypad to select food type from the Defrost Chart(Except Manual Defrost).
3. Touch number keypads to enter weight.
4. Touch **START** to start cooking.

The oven display will count down the Defrost time. For better results, a preset standing time is included in the defrosting time. This may make the defrosting time seem longer than expected.

When the stop time is reached, the oven will shut off automatically and "Defrost complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### How to use Manual Defrost:

1. Touch **Defrost** .The oven display will scroll through the various options

## 4. OPERATION INSTRUCTIONS

2. Touch number keypad to select food type from the Defrost Chart(Except Manual Defrost).
3. Touch number keypads to enter weight.
4. Touch **START** to start cooking.

The oven display will count down the Defrost time. For better results, a preset standing time is included in the defrosting time. This may make the defrosting time seem longer than expected.

When the stop time is reached, the oven will shut off automatically and "Defrost complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### How to use Manual Defrost:

1. Touch **Defrost** .The oven display will scroll through the various options
2. Touch number keypad "6" to select Manual Defrost.
3. Touch number keypads to set a length of time to defrost. Time can be set up to 99 minutes and 99 seconds.
4. The default power level is 30%. To change power level, touch **Power Level** and then enter the desired power level. See the Power Level Chart.
5. Touch **START** to start cooking.

The oven display will count down the Defrost time. For better results, a preset standing time is included in the defrosting time.

When the stop time is reached, the oven will shut off automatically and "Defrost complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### Defrost Chart

| Food     | Code | Weight                                |
|----------|------|---------------------------------------|
| Poultry* | 1    | 0.1 – 6.6 lbs (45 g – 3 kg)           |
| Meats*   | 2    | 0.1 – 6.6 lbs (45 g – 3 kg)           |
| Fish*    | 3    | 0.1 – 6.6 lbs (45 g – 3 kg)           |
| Bread    | 4    | 0.1 – 2.0 lbs (45 g – 907 g)          |
| Juice    | 5    | 6, 12, or 16 oz (177, 355, or 473 ml) |
| Manual   | 6    | Default power level 30%)              |

\*See the Defrost Preparation Chart at end of "Defrost" section for cuts, sizes, and instructions.

## 4. OPERATION INSTRUCTIONS

### Defrost Preparation Chart

| Poultry                            |                                                                                                                                                                                                                             |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Chicken: whole and cut up          | Place in microwave-safe baking dish, chicken breast side up. Remove giblets from whole chicken.                                                                                                                             |
| Cornish hens                       |                                                                                                                                                                                                                             |
| Turkey: breast                     |                                                                                                                                                                                                                             |
| Meats                              |                                                                                                                                                                                                                             |
| Beef: ground, steaks, roast, stew  | The narrow or fatty areas of irregular shaped cuts should be shielded with foil before defrosting.<br><br>Do not defrost less than ¼ lb (113 g) or two 4 oz (113 g) patties. Place all meats in microwave-safe baking dish. |
| Lamb: stew and chops               |                                                                                                                                                                                                                             |
| Pork: chops, ribs, roasts, sausage |                                                                                                                                                                                                                             |
| Fish                               |                                                                                                                                                                                                                             |
| Filletts, Steaks, Whole, Shellfish | Place in microwave-safe baking dish.                                                                                                                                                                                        |

### Popcorn

#### CAUTION

Do not leave oven unattended while popping corn. Popcorn may ignite and cause fire.

How to use popcorn mode:

The appliance must be turned off.

1. Touch **Popcorn**. The oven display will scroll through the various options.
2. Touch number keypads to select the weight code from popcorn chart.
3. Touch **START** to start cooking.

The oven display will count down the popcorn time.

When the stop time is reached, the oven will shut off automatically and "Popcorn complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

**NOTE:** Follow the instructions provided by the microwave popcorn manufacturer.

### Popcorn Chart

| Code | Weight |
|------|--------|
| 1    | 1.5 oz |
| 2    | 2.5 oz |
| 3    | 3.5 oz |

## 4. OPERATION INSTRUCTIONS

### Beverage Center

The beverage feature heats 0.5 to 2 cups of a beverage.

How to use Beverage Center:

1. Touch **Beverage Center**. The oven display will scroll through the various options.
2. Touch number keypads to select the weight code from beverage center chart.
3. Touch **START** to start cooking.

The oven display will count down the Beverage Center time.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### Beverage Center Chart

| Code | Weight   |
|------|----------|
| 1    | 0.5 Cups |
| 2    | 1.0 Cups |
| 3    | 1.5 Cups |
| 4    | 2.0 Cups |

### Conv Mode

Convection cooking uses the convection element, the broil element and the fan. Hot air is circulated throughout the oven cavity by the fan. The constantly moving air surrounds the food to heat the outer portion quickly.

- The convect function may be used to cook small amounts of food on a single rack.
- Always use the convection grid placed on turntable or baking tray.
- Do not cover turntable or convection grid or baking tray with aluminum foil.
- Do not use light plastic containers, plastic wrap, or paper products. All heatproof cookware or metal utensils can be used in convection cooking. Round pizza pans are excellent for convection cooking.
- Use convection cooking for items such as souffles, breads, cookies, angel food cakes, pizza, and most meats and fish.
- All Convection Mode functions require preheating before use. Place food in microwave oven after preheating is complete.

How to use Convection Mode:

1. Touch **Conv Mode**. The oven display will scroll through the various options.
2. Touch number keypad to select food type from the Convection Mode Chart.

## 4. OPERATION INSTRUCTIONS

3. Touch number keypads to enter temperature.
4. Touch number keypads to set a length of time to Convection cooking.
5. Touch **START** to start cooking.

The oven start to preheat until preheat complete ,a beep will sound and the oven display will count down the Convection Mode time.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

Tips: You can touch **START** directly without enter the time of cooking ,after setting the cooking temperature.

The oven will work for the maximum safe time, at which time the cooking time not be display.

### Convection Mode Chart

| Option      | Code | Food                                                                                                                                                            | Cook Time     | Oven Temp  |
|-------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|------------|
| Baked goods | 1    | Biscuits, Breads: quick and yeast,Cakes and Cookies<br>Casseroles: including frozen entrées and soufflés Fish                                                   | 0:01-10:00 hr | 175-450° F |
| Meats       | 2    | Baked potatoes<br>Chicken: whole and pieces, Meat loaf,Roasts: pork, beef, and ham<br>*Turkey and large poultry are not included because their cook times vary. | 0:01-10:00 hr | 175-450° F |
| Other foods | 3    | Convenience foods: french fries, nuggets, fish sticks, pizza, Pies: fruit and custard                                                                           | 0:01-10:00 hr | 175-450° F |

### Air Fry

Air Fry is a special, no-preheat, cooking mode that is designed to produce foods with a crispier exterior than traditional oven cooking.

- Only use broil safe cookware when using Air Fry mode.
- A dark sheet pan is recommended. A dark pan promotes better browning and crisping.
- Oven baking baskets and baking grids can also be used. A sheet pan should be placed on the rack below the foods to catch any drippings when using a baking basket.

## 4. OPERATION INSTRUCTIONS

How to use Air Fry:

1. Touch **Air Fry**.
2. Touch number keypads to enter temperature. The temperature can be set between 175 °F and 450°F.
3. Touch number keypads to set a length of time to Air fryer. Time can be set up to 1 minutes and 10 hours.
4. Touch **START** to start cooking.

The oven display will count down the Air Fry time.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

Tips: You can touch **START** directly without enter the time of cooking ,after setting the cooking temperature. The oven will work for the maximum safe time, at which time the cooking time not be display.

### Tips

- For cooking fresh or home made foods spread the oil over a larger area more evenly, crisping up the food more effectively.

### Broil

When the crisper pan is used with microwaves, it is like a frying pan or griddle, ideal for French toast, burgers, eggs, stir- frying, and sautéing. The default temperature is 400°F, the default cooking time is 3 hours. The oven temperature and cook time can not be set.

How to use Broil:

1. Touch **Broil**.
2. Touch **START** to start cooking.

The oven display will count down the Broil time, but not display.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display.

If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### Pizza

- Check pizza before minimum time, pizza may cook faster compared to a traditional oven.
- For fresh pizza use a pizza paddle for sliding the pizza on and from the metal turntable.
- If using a pizza paddle, sprinkle the paddle liberally with cornmeal for ease in transferring the dough to the metal turntable.
- Maximum size is 12 inches for fresh and frozen pizzas.
- Avoid using a pizza stone as it can damage the oven.

## 4. OPERATION INSTRUCTIONS

- The metal turntable can be used for cutting pizza into slices. Remove the turntable from the oven after the pizza is baked.

How to use Pizza:

1. Touch **Pizza**.
2. Touch number keypads to enter temperature. The temperature can be set between 175 °F and 450°F.
3. Touch number keypads to set a length of time to cooking. Time can be set up to 1 minutes and 10 hours.
4. Touch **START** to start cooking.

The oven start to preheat until preheat complete ,a beep will sound and the oven display will count down the Pizza time if you set .

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display. If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

Tips: You can touch **START** directly without enter the time of cooking ,after setting the cooking temperature. The oven will work for the maximum safe time, at which time the cooking time not be display.

### 4.4 OTHER SETTINGS

Power Level

Many recipes for microwave cooking specify which cooking power to use by percent, name, or number. For example, 70%=7=Medium-High.

Use the following chart as a general guide for the suggested cooking power of specific foods.

How to use Power Level:

1. Touch **Power Level**.
2. Touch number keypads to enter power level from microwave cooking power chart.
3. Touch number keypads to set a length of time to microwave cooking. Time can be set up to 1 seconds and 99 minutes.
4. Touch **START** to start cooking.

The oven display will count down the Microwave cooking time.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display. If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

Microwave Cooking Power Chart

| Percent                      | Number | Use                                                                                                               |
|------------------------------|--------|-------------------------------------------------------------------------------------------------------------------|
| 100%,High<br>Default Setting | 10     | Quick heating convenience foods and foods with high water content, such as soups, beverages, and most vegetables. |
| 90%                          | 9      | Cooking small, tender pieces of meat, ground meat, poultry pieces, and fish fillets. Heating cream soups.         |

## 4. OPERATION INSTRUCTIONS

| Percent                 | Number | Use                                                                                                                                             |
|-------------------------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 80%                     | 8      | Heating rice, pasta, or casseroles.<br>Cooking and heating foods that need a cook power lower than high. For example, whole fish and meat loaf. |
| 70%,Medium-High         | 7      | Reheating a single serving of food.                                                                                                             |
| 60%                     | 6      | Cooking sensitive foods such as cheese and egg dishes, pudding, and custards.<br>Cooking non-stirrabable casseroles, such as lasagna.           |
| 50%,Medium              | 5      | Cooking ham, whole poultry, and pot roasts.Simmering stews.                                                                                     |
| 40%                     | 4      | Melting chocolate.<br>Heating bread, rolls, and pastries.                                                                                       |
| 30%,Medium-Low, Defrost | 3      | Defrosting bread, fish, meats, poultry, and precooked foods.                                                                                    |
| 20%                     | 2      | Softening butter, cheese, and ice cream.                                                                                                        |
| 10%,Low                 | 1      | Taking chill out of fruit.                                                                                                                      |

### Cook Time

How to use Cook Time:

1. Touch **Cook Time**.The default power level is 100%.If you need other power level,you can touch Power Level to set.
2. Touch number keypads to set a length of time to microwave cooking.Time can be set up to 1 seconds and 99 minutes.
3. Touch **START** to start cooking.

The oven display will count down the Microwave cooking time.

When the stop time is reached, the oven will shut off automatically and "Cooking complete" will appear in the display. If enable, end-of-cycle tones will sound, It ends automatically in one minute, or touch **CANCEL** or open the door to clear the display and stop the reminder tones.

### START/+30 sec.

The START/+ 30 sec. keypad controls 2 separate functions for the built-in microwave: Start and Add 30 seconds.

### START

The START/+ 30 sec. keypad begins any upper or single oven cooking function once enough data has been entered and the door is closed.

## 4. OPERATION INSTRUCTIONS

After enough data has been entered and the door is closed, “Press START to confirm “ will appear on the oven display as a reminder. If the Start keypad is not touched within 30 seconds after touching another keypad, the oven display will return to the inactive mode and the programmed function will be canceled.

If cooking is interrupted by opening the door, touching **START/+ 30 sec.** after the door is closed again will resume the preset cycle.

### **+30 sec.**

Touching **START/+ 30 sec.** when the microwave oven is off will start 30 seconds of cook time at 100% power. Touching **START/+ 30 sec.** while the microwave oven is operating will add cook time to the current cycle by 30 seconds. Multiple seconds can be added by repeatedly touching **START/+ 30 sec.**(manually enter cooking time modes only).

### **Update Temperature**

1. Touch number keypad to update temperature.
2. Touch **START** to start cooking with the new settings.

### **Update Cooking Time**

1. Touch **Cook Time**.
2. Touch number keypad to update the time of cooking.
3. Touch **START** to start cooking with the new settings.

### **Update Power Level**

1. Touch **Power Level**.
2. Touch number keypad to update the power level of cooking.
3. Touch **START** to start cooking with the new settings.

### **Heating Food**

#### **Risk of scalding!**

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only moves a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the container. This will prevent delayed boiling.



## 5. CLEANING AND CARE

### 5.1 CARE AND CLEANING

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

#### Risk of electric shock.!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

#### Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

#### Risk of serious damage to health!

Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.

#### NOTE:

- Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Unpleasant odours, e.g. after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Place a spoon into the container as well, to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave power.

#### Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal,
- hard scouring pads and sponges,
- cleaning agents with high concentrations of alcohol.

Wash new sponge cloths thoroughly before use.

Allow all surfaces to dry thoroughly before using the appliance again.

| Area            | Cleaning agents                                                                                                                           |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance front | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning. |

## 5. CLEANING AND CARE

|                                      |                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance front with stainless steel | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning. |
| Cooking compartment                  | Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth.<br>If the oven is very dirty: Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly.                             |
| Recess in cooking compartment        | Damp cloth:<br>Ensure that no water seeps through the turntable drive into the appliance interior.                                                                                                                                                                                                                                                                                    |
| Wire racks                           | Hot soapy water:<br>Clean using stainless steel cleaning agent or in the dishwasher.                                                                                                                                                                                                                                                                                                  |
| Door panels                          | Glass cleaner:<br>Clean with a dish cloth. Do not use a glass scraper.                                                                                                                                                                                                                                                                                                                |
| Seal                                 | Hot soapy water:<br>Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning.                                                                                                                                                                                                                                                                          |

### 5.2 CLEANING AND MAINTENANCE

#### WARNING

Be sure the entire appliance has cooled and grease has solidified before attempting to clean any part of the appliance.

#### Cleaning Guide

- For best performance and for safety reasons, keep the oven clean inside and outside. Take special care to keep the inner door panel and oven front frame free of food and grease build-up.
- Never use abrasive scouring powder or pads on the microwave. Wipe the microwave oven inside and out with a soft cloth and warm (not hot) mild detergent solution. Then rinse and wipe completely dry.
- Wipe spatters immediately with a wet paper towel, especially after cooking greasy foods like chicken or bacon.
- Clean your microwave oven weekly or more often, if needed.

## 5. CLEANING AND CARE

- Never operate the microwave oven without food in the oven cavity, unless pre-heating with Convection, Pizza, Frozen Foods and Keep Warm mode; this can damage the magnetron tube or ceramic tray. You may wish to leave a cup of water standing inside the oven when it is not in use to prevent damage if the oven is accidentally turned on.

| Part                                       | Recommendations                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Oven cavity                                | <p>Keep inside (cavity) of the oven clean. Food particles and spilled liquids can stick to the oven walls, causing the oven to work less efficiently.</p> <p>Wipe up spills immediately. Use a damp, clean cloth and mild soap. DO NOT use harsh detergents or abrasive cleaners.</p> <p>To help loosen baked-on food particles or liquids, heat 2 cups of water (add the juice of 1 lemon if you desire to keep the oven fresh smelling) in a 4 cup measuring glass at High power for 5 minutes or until boiling. Let stand in oven cavity for 1 or 2 minutes.</p> <p>For baked-on grease spatters, wash with hot, soapy water, rinse and dry.</p> |
| Wire rack                                  | Wash with soapy water. Rinse thoroughly and dry, or gently rub with cleansing powder or soap-filled pads as directed. The wire rack can also be washed in the dishwasher.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Metal turntable tray                       | Remove metal turntable tray from the oven when cleaning the oven cavity and tray. Wash the metal turntable tray in warm sudsy water or in the dishwasher.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Ceramic tray                               | Clean with warm, soapy water or in the dishwasher.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Door seal                                  | Wipe with damp cloth.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Door glass                                 | <p>Wash with soap and water or glass cleaner. Apply Fantastik® or Formula 409® to a clean sponge or paper towel and wipe clean. Avoid using powder cleaning agents, steel wool pads and oven cleaners.</p> <p>If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate when operating the oven in high humidity and in no way indicates microwave leakage.</p>                                                                                                                                                                                                                                            |
| Painted surfaces                           | Clean with hot soapy water or apply Fantastik® or Formula 409® to a clean sponge or paper towel and wipe clean. Avoid using powder cleaning agents, steel wool pads and oven cleaners.                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Stainless steel surfaces/exterior surfaces | Always wipe or rub in the direction of the grain. Clean with a soapy sponge, then rinse and dry, or wipe with Fantastik® or Formula 409® spray on a paper towel. Protect and polish with Stain-less Steel Magic® and a soft cloth. Remove water spots with a cloth dampened with white vinegar.                                                                                                                                                                                                                                                                                                                                                     |
| Plastic & Controls                         | When cool, clean with soapy water, rinse and dry.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Printed areas (words & numbers)            | Do not use abrasive cleaners or petroleum based solvents.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## 6. TROUBLESHOOTING

### 6.1 MALFUNCTION TABLE

Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not turn out exactly as you wanted, refer to the Expert Cooking Guide section, where you will find plenty of cooking tips and tricks.

#### Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

#### Error Code

| Error Code | Error Description                                                                 |
|------------|-----------------------------------------------------------------------------------|
| F3E1       | The temperature sensor in the oven has an open or short circuit fault.            |
| F3E8       | The communication of the oven humidity sensor is faulty.                          |
| F3E9       | The oven humidity sensor module is faulty.                                        |
| F6E5       | The safety protector is disconnected.                                             |
| F1E1       | The communication between the display board and the power supply board is faulty. |
| F1E4       | The communication between the display board and the left touch pad is faulty.     |
| F1E5       | The communication between the display board and the right touch pad is faulty.    |

#### NOTE

Press "CANCEL", then restart the oven. If the problem persists, disconnect all power to your range for at least 30 seconds, then reconnect the power. If this does not solve the problem, call for service.

### 6.2 ACRYLAMIDE IN FOODSTUFFS

Which foods are affected?

Acrylamide is mainly produced in grain and potato products that are heated to high temperatures, such as potato crisps, chips, toast, bread rolls, bread, fine baked goods (biscuits, gingerbread, cookies).

## 6. TROUBLESHOOTING

|                            | Tips for keeping acrylamide to a minimum when preparing food                                                                                                                                                                                                                                                                                                    |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| General                    | Keep cooking times to a minimum. Cook meals until they are golden brown, but not too dark. Large, thick pieces of food contain less acrylamide.                                                                                                                                                                                                                 |
| Baking biscuits Oven chips | Max. 200 ° C in Top/bottom heating or max. 180 ° C in 3D hot air or hot air mode. Max. 190° C in Top/bottom heating or max. 170 ° C in 3D hot air or hot air mode. Egg white and egg yolk reduce the formation of acrylamide. Distribute thinly and evenly over the baking tray. Cook at least 400 g at once on a baking tray so that the chips do not dry out. |

### 6.3 ENERGY AND ENVIRONMENT TIPS

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

#### Saving energy

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.
- Open the oven door as infrequently as possible while you are cooking, baking or roasting.
- It is best to bake several cakes one after the other. The oven is still warm. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.
- For longer cooking times, you can switch the oven off

10 minutes before the end of the cooking time and use the residual heat to finish cooking.

#### Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.

# WARRANTY



## Warranty&Service

This product has been manufactured by Thor International, 4651 E Airport Dr, Ontario, CA 91761

---

For Customer Service, please call (877) 288 - 8099

For the most up to date warranty and service policy, please refer to our website  
[WWW.THORKITCHEN.COM/WARRANTY-REGISTRATION](http://WWW.THORKITCHEN.COM/WARRANTY-REGISTRATION)

For in-warranty service requests, please visit our website at  
[WWW.THORKITCHEN.COM/SERVICE](http://WWW.THORKITCHEN.COM/SERVICE)

Please Note: You must provide proof of purchase or installation date for any in- warranty service requests

# We Stand Behind the Quality of Our Appliances.



Reliability and customer satisfaction are our top priorities. We offer a solid two-year warranty on both parts and labor. Enjoy professional-grade performance with the confidence that we've got you covered.

## Warranty Registration Made Easy.

**01** Scan the QR Code or visit [thorkitchen.com/register-your-product](https://thorkitchen.com/register-your-product).

**02** Input your purchase and product information and select register.

**03** That's it. You're all set. Enjoy!

Questions: [service@thorinternational.com](mailto:service@thorinternational.com)



WARRANTY



PARTS



[ThorKitchen.com](https://thorkitchen.com) | [#IgniteYourCulinaryCreativity](https://twitter.com/ThorKitchen) [d](https://www.youtube.com/channel/UCqWz8v8v8v8v8v8v8v8v8v8) [i](https://www.instagram.com/thorkitchen) [f](https://www.facebook.com/thorkitchen) [y](https://www.youtube.com/channel/UCqWz8v8v8v8v8v8v8v8v8v8) [X](https://www.x.com/thorkitchen) [p](https://www.pinterest.com/thorkitchen) [in](https://www.linkedin.com/company/thorkitchen)