


XDYW52
V20251208

User Manuals

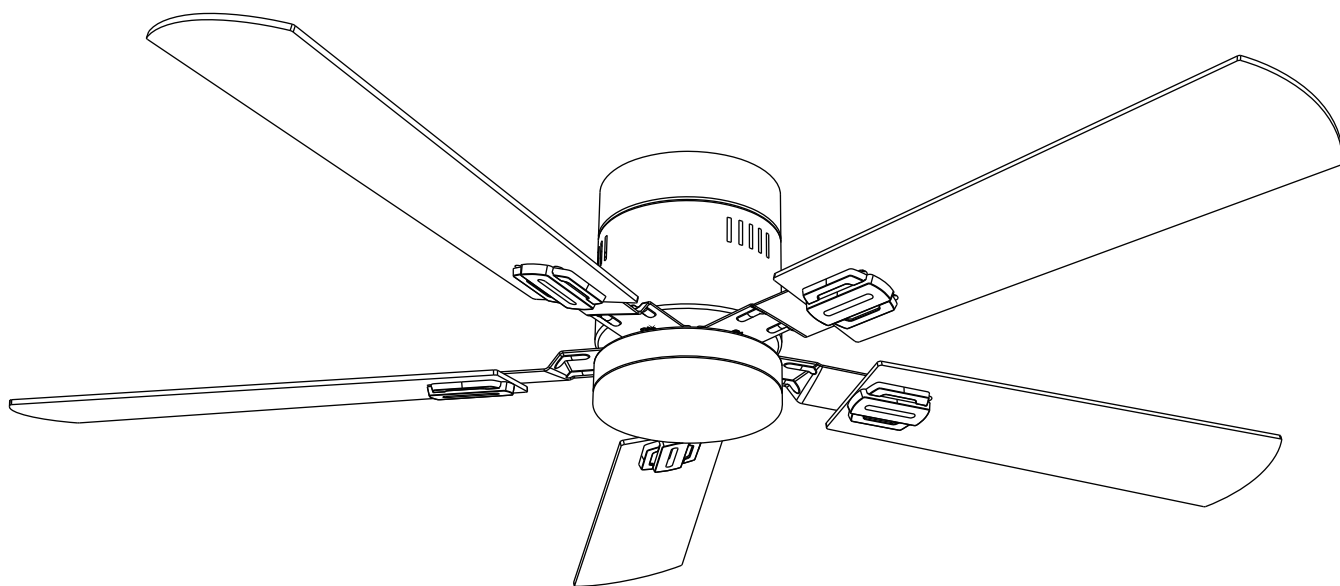

Scan to watch installation video

After-sales Email: support@fanlamppro.com

To assist you faster, please share your order confirmation screenshot so we can quickly resolve this.

CEILING FAN

WARM TIPS

1. Wall switch light memory: (Figure 1)

- * Turn off wall switch
 - * Wait 10 seconds to turn on wall switch, it will remember the last light setting.
- If quickly toggle the wall switch within 5 seconds, the CCT will switch.

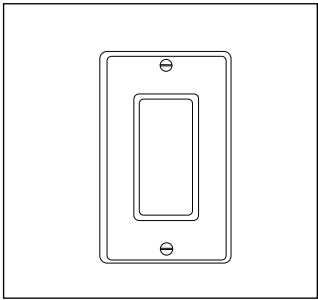


Figure 1


2. Remote control/wall will not have memory until 10 seconds after turning off the lights.

3. The lighting kit is replaceable.


TOOLS MAY REQUIRED




Ladder

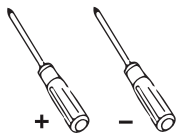

Screwdriver



Wire Strippers




Tape



Goggles


ACCESSORIES




AA



BB



CC



DD



EE




FF



GG



HH



II



JJ



	AA	BB	CC	DD	EE	FF	GG	HH	II	JJ
AA	Washer									7
BB	Balance sticker									2
CC	Balance clamp									1
DD	Wire connector									4
EE	Host screw (Spare)									4
FF	Plastic expansion tube									5





CEILING FAN





GG	Self-tapping screw	5
HH	J-box screw	3
II	Blade screw, red washer	24+19
JJ	Expansion screw	2

PACKAGE CONTENTS

■ In addition to the parts included in the accessory package, there are a total of 10 fan light accessories. Please check carefully whether any parts are missing from the package and make sure to confirm all parts inside the box.

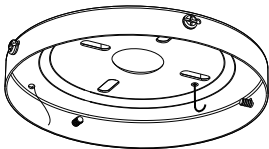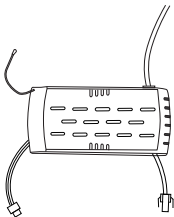Mounting bracket	Receiver	Lampshade
A 	B 	C 
1	1	1

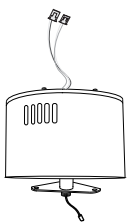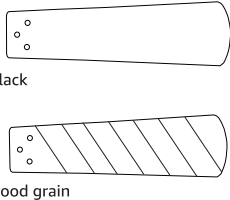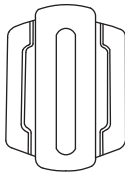Motor host	Fan blade	Blade arm	Blade decorative part
D 	E  black wood grain	F 	G 
1	5	5	5

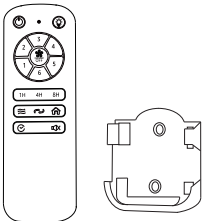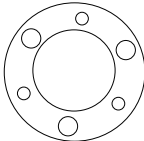Lamp body	Remote control kit	Ceiling canopy	Top washer
H 	I 	J 	K 
1	2	1	1

CEILING FAN

IMPORTANT WARNING

- To reduce the risk of electric shock, turn off all power sources.
- All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.



WARNING




**TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PERSONAL INJURY
MOUNT FAN TO OUTLET BOX MARKED
ACCEPTABLE FOR FAN SUPPORT**

- Do not turn the fan blades until the fan installation is completed.
- To avoid personal injury or damage to the fan and other items, maintain and clean the fan with care.
- Do not use water or detergents to clean the fan or fan blades. A dry rag or slightly damp cloth is suitable for cleaning.
- Electrical diagrams are for reference only. Please refer to the instructions used with the packaging for properly assembled lighting kits.

CEILING FAN

ELECTRICAL AND STRUCTURAL REQUIREMENTS

- Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds. Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2"-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.
- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

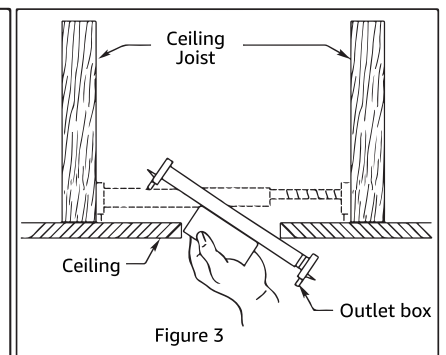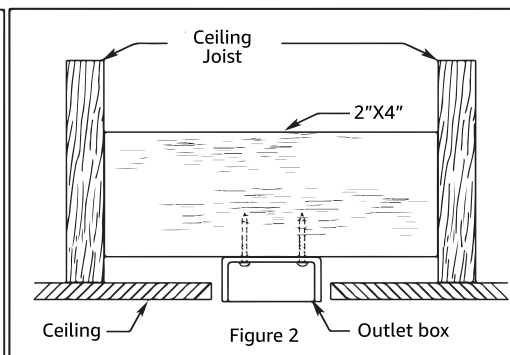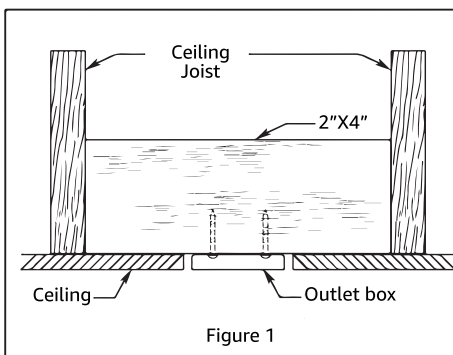

WARNING



To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

WARNING



Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

CEILING FAN



INITIAL INSTALLATION

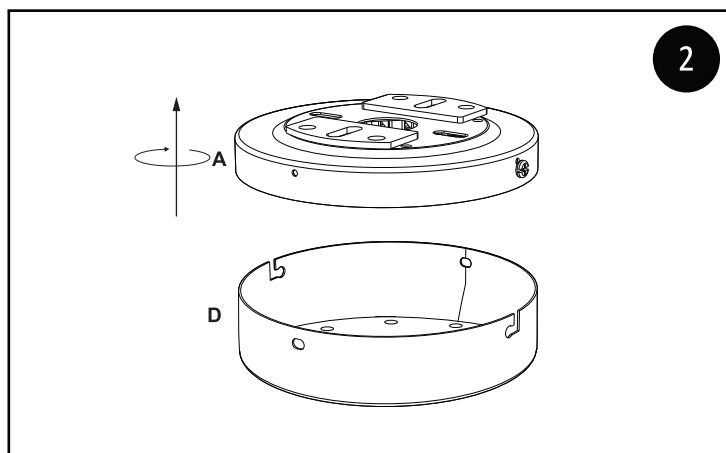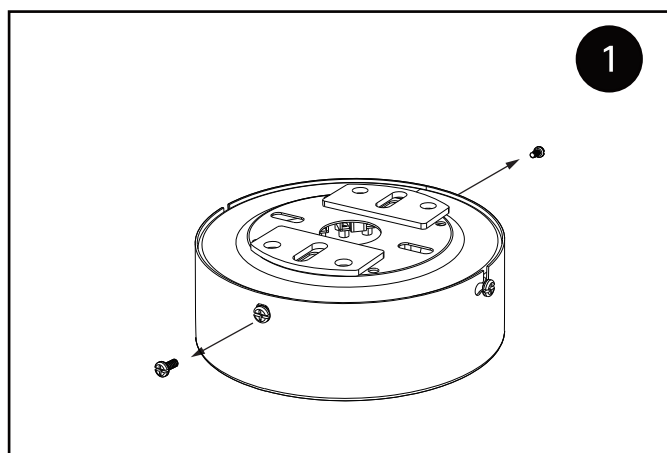

- 1 Take out the 2 round hole screws from canopy.
- 2 Loosen the 2 screws and then rotate to remove the bracket.

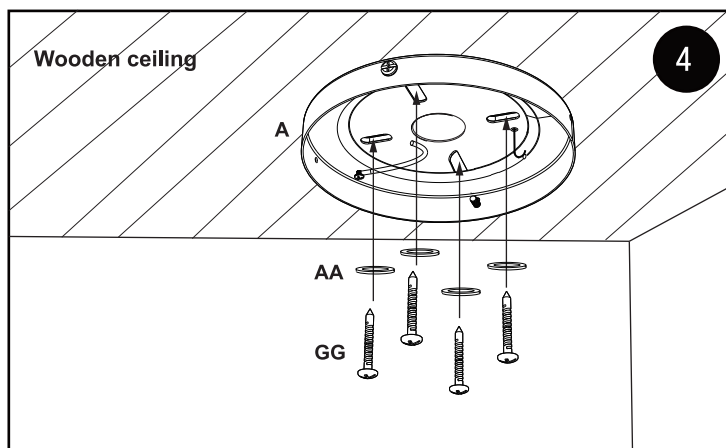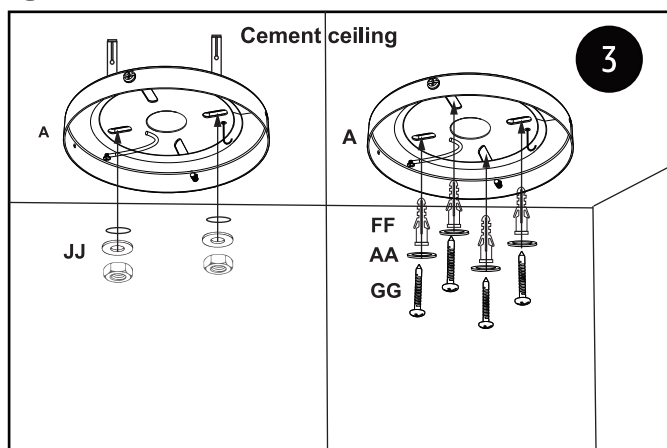



- 3 Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.
Cement ceiling: Drill hole on the cement ceiling, then use expansion screws or expansion tube and self-tapping screw to fix
- 4 Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.

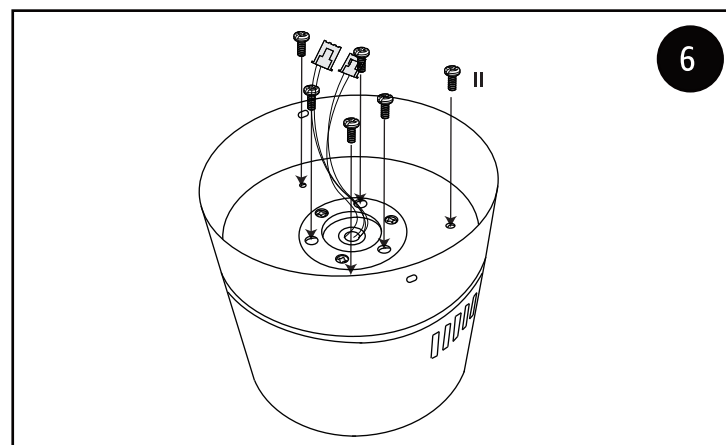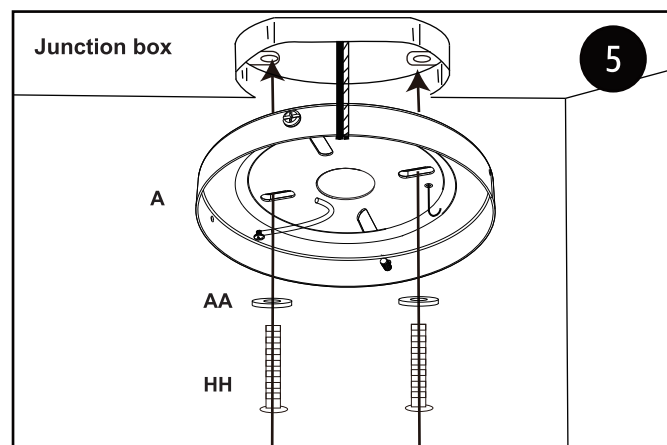



- 5 Junction box: Use j-box screw and washer to fix the bracket to the ceiling.
(Please choose the corresponding hole size of 3 inches or 4 inches based on the dimensions of the ceiling junction box for installation.)
- 6 Place the top washer into the ceiling canopy, then secure the top washer using six screws.

CEILING FAN



INITIAL INSTALLATION

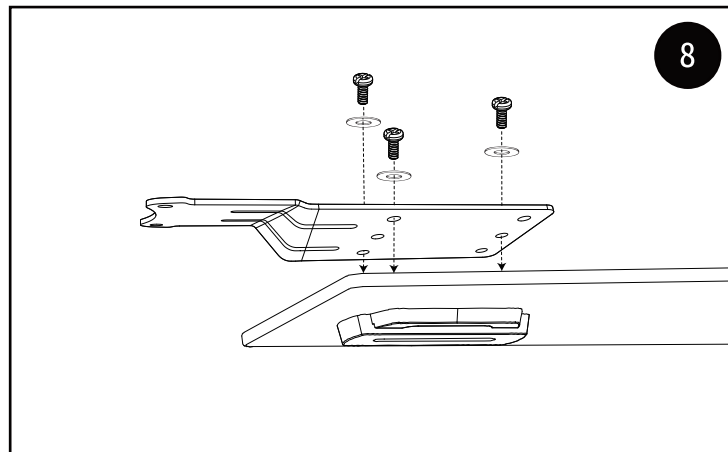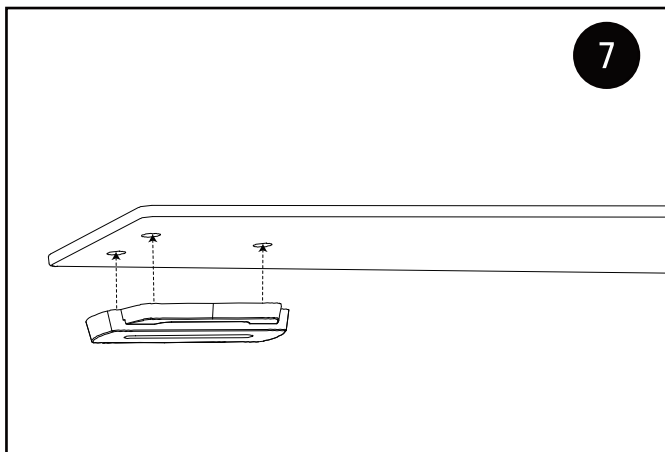

- 7 Choose which side of the fan blades to use and attach the decorative cover to the chosen side.
- 8 Attach the blade arms to the fan blades using three screws and three red washers, noting that the side of the blade arms facing up is marked with the word "UP."

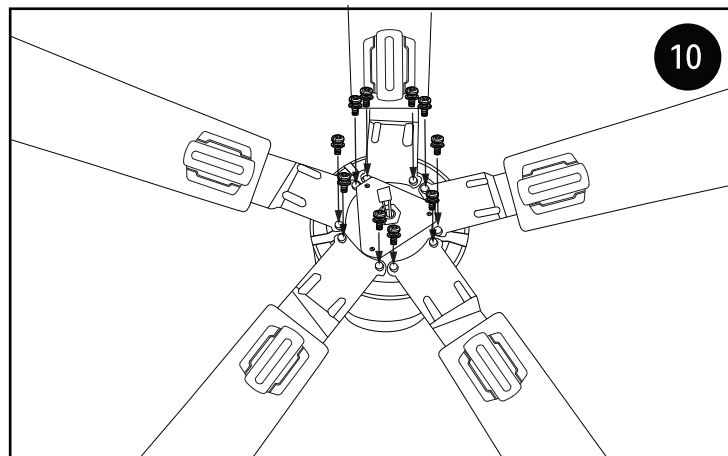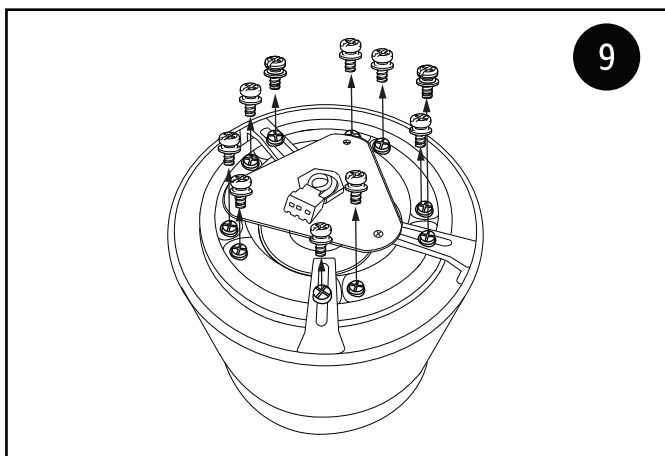



- 9 Remove the ten screws securing the arm and detach the motor protection clamp from the motor housing.
- 10 Use the ten screws removed in the previous step to attach the blade arms to the main body.

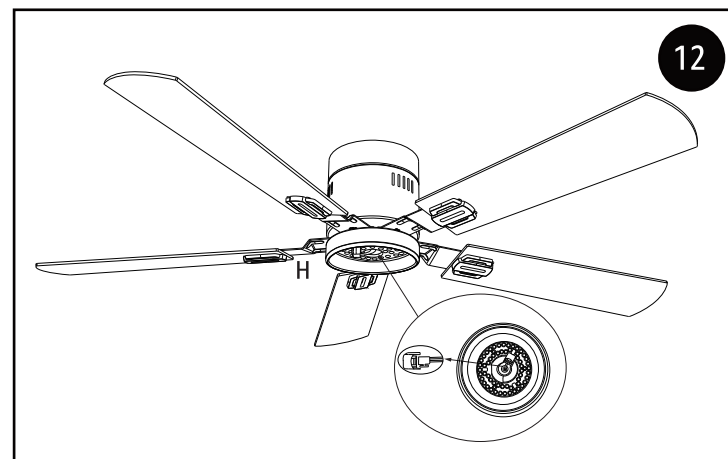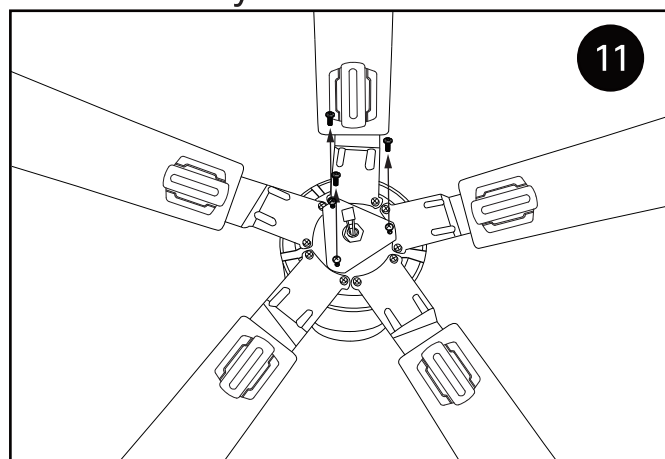

- 11 Take out the screws (pre-installed) from the triangular plate.
- 12 Connect the LED board wire terminal.



CEILING FAN

INITIAL INSTALLATION

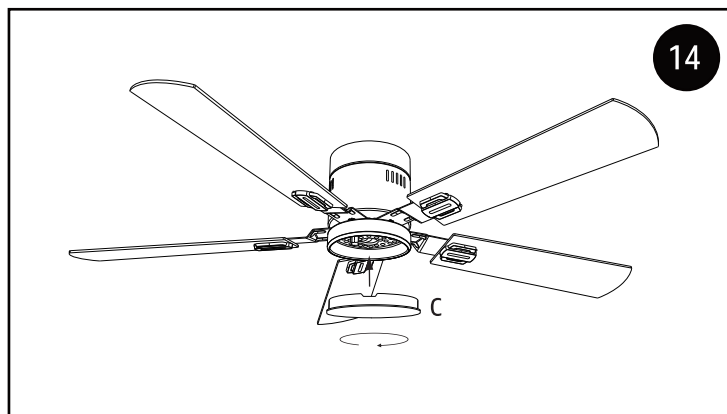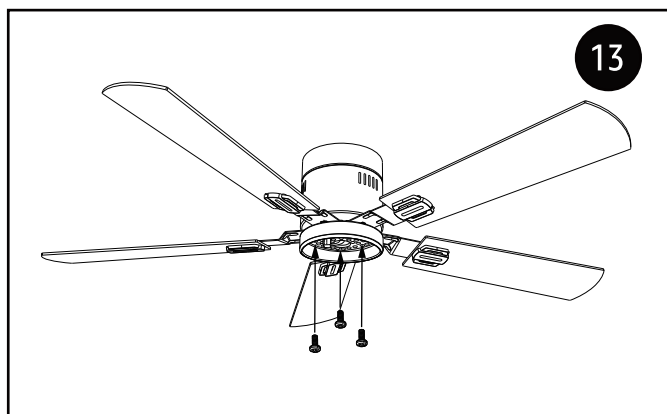

13 Install the lamp body onto the host part and tighten the screws. (Use the 3 screws from the previous 2 steps).

14 Locate the locking point of lamp body, and screw in the lamp shade.

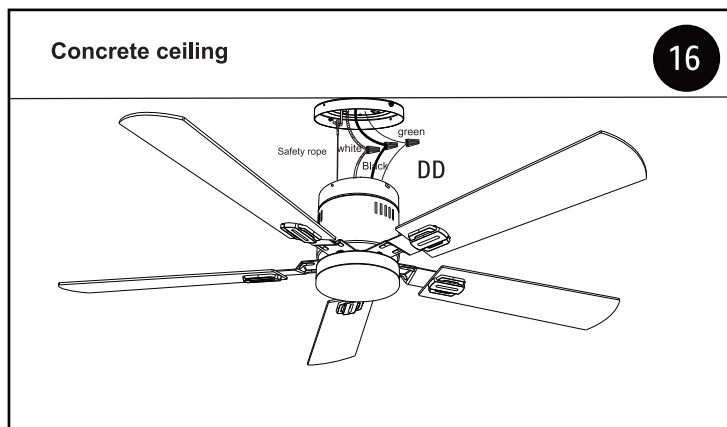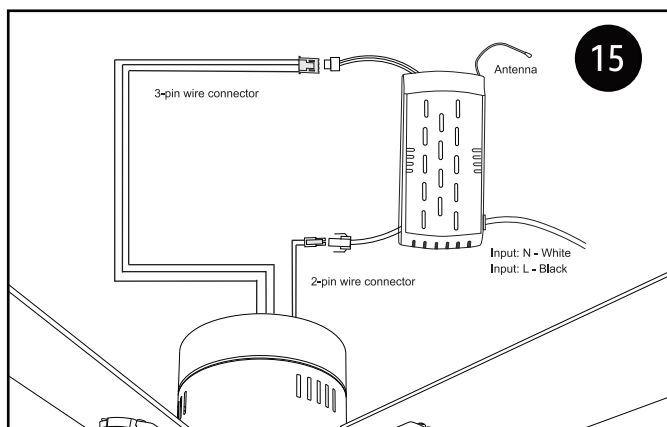

15 Connect the wires between the receiver and the fan motor: white to white wires, blue to blue wires, and connect the 3-pin wire connector.



16 First, use the safety rope to hang the ceiling fan to the bracket hook, and then proceed with the wiring.

Wiring:

Connect the "Neutral wire" (white wire) from ceiling to the white wire.

Connect the "Live wire" (black wire) from ceiling to the black wire.

Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the green wire.

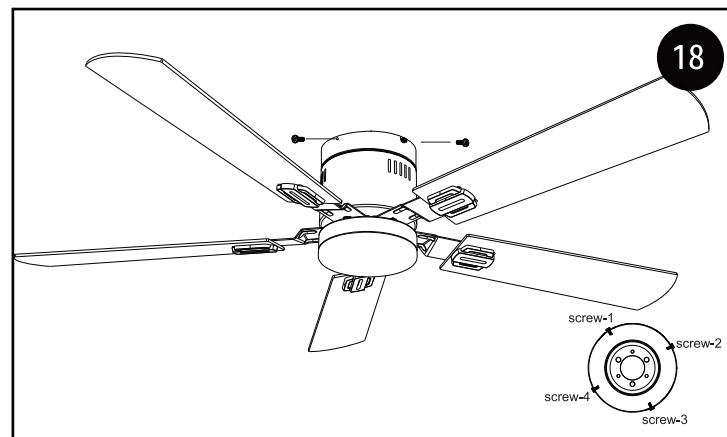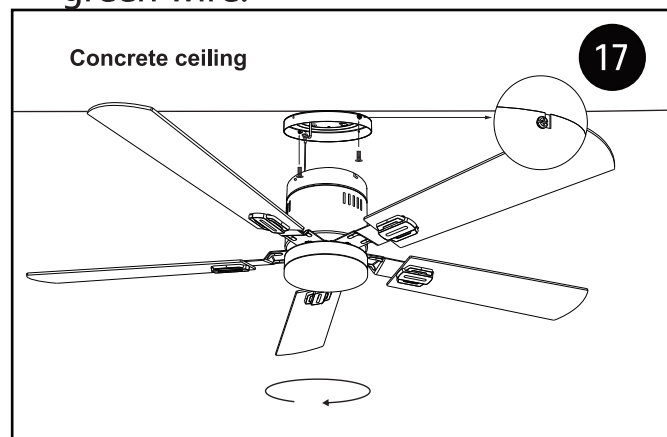



17 Align the canopy L slot to the bracket screw, rotate to certain position.

18 Lock the other 2 screws and ensure that the 4 screws are tightened.

CEILING FAN


HOW TO OPERATE YOUR CEILING FAN

- **IMPORTANT:** Using a full range dimmer switch(not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed(Figure 1).
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

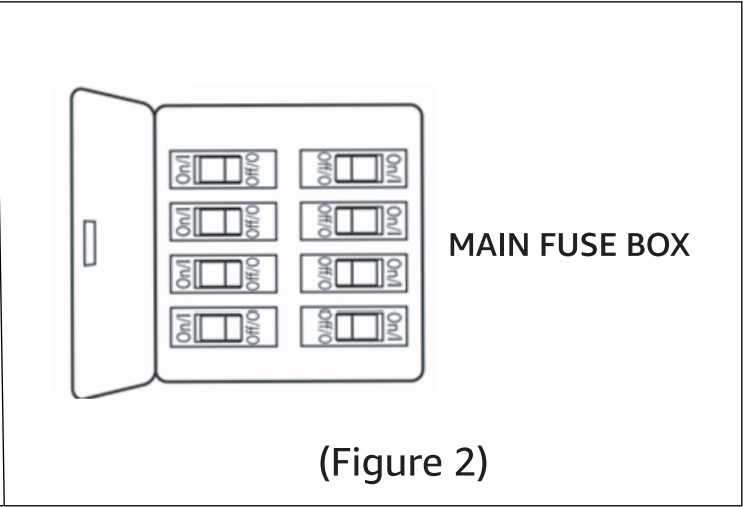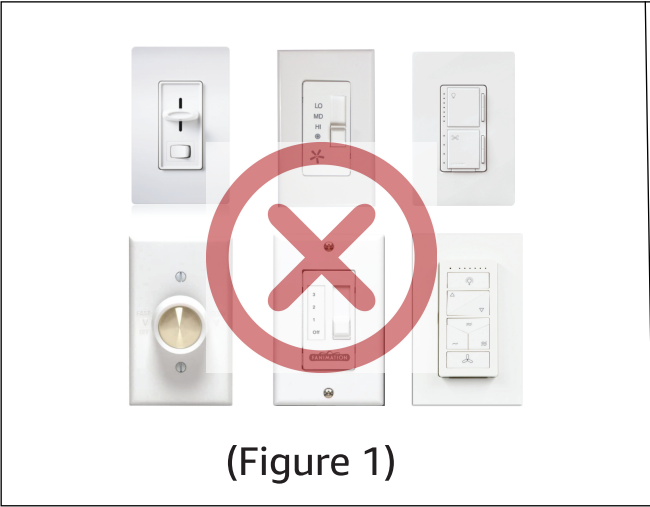


INSTALLATION RECOMMENDED

Room Size:

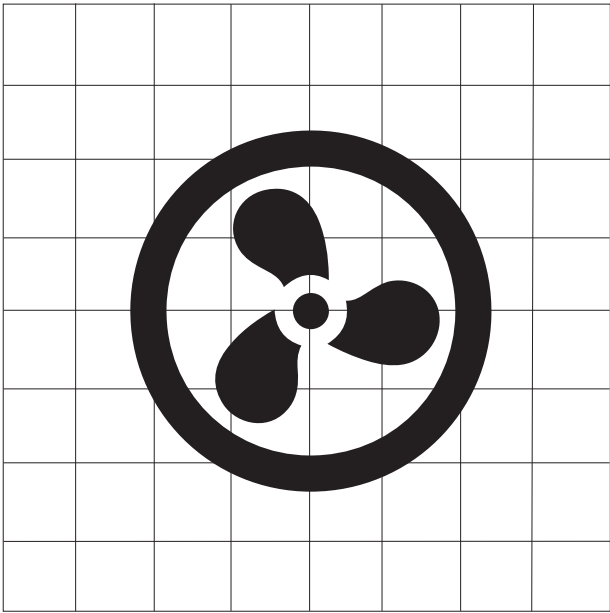

UP TO 15 ft x 15 ft


Room Height:

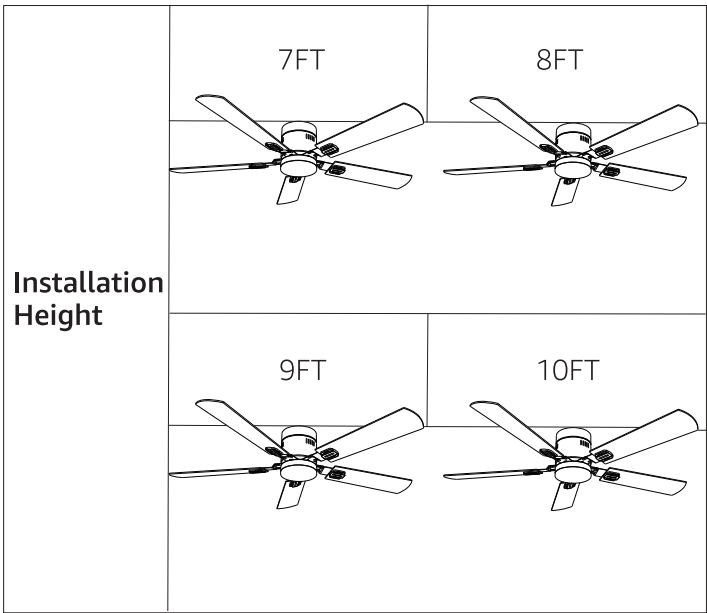

CEILING FAN

REMOTE CONTROL

■ To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

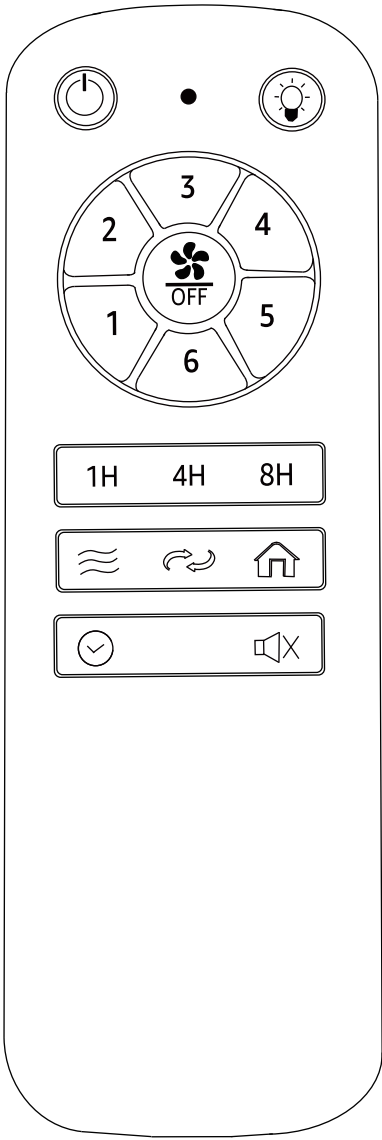	All off	
	Light on/off (light memory after 10 seconds) CCT switch (fast click to switch)	
1-6	Fan speed setting	
	Fan on/off	
	Natural wind	
	Airflow direction	
	Anti-theft mode (Press the button will turn off light and fan. Then, the light and fan will run for 10 minutes in every 4 hours.)	
	Delayed off in 5 minutes	
	Mute	
1H 4H 8H	Quick timer setting (1H-4H-8H)	

Remote Controller Pairing:
The remote controller can be used to control multiple ceiling fans.
1. For the ceiling fans you want to pair, turn the main power switch off for at least 1 minute.
2. Turn on the main power switch, then press and hold the  button within 10 seconds.
3. Wait for the fan receiver to make a beeping sound, then release the button.
If the pairing process is unsuccessful, please repeat the above steps.


CEILING FAN

TROUBLESHOOTING

PROBLEM	SUGGESTED REMEDY
If fan does not start	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure forward/reverse switch is firmly in bottom or top position. Fan will not operate when switch is in the middle. 3. Make sure that the wall control is turned "ON" 4. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 5. Make sure battery has power, change battery(2*AAA) to try again. 6. The remote controller is not paired, check Page.9 to pair. 7. The motor or receiver or remote controller is fault, contact our customer service.
If fan sounds noisy	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Make sure the blade is correct installed, "UP" side up. 4. Too close to the wall, make sure the blades at least 3ft to the wall. 5. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 6. If using an optional ceiling fan lightkit, make sure the screws securing the lampshade tight. 7. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control. 8. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
If fan wobbles	All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step. 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. 4. Make sure the downrod is well fixed by screws 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.

CEILING FAN

TROUBLESHOOTING

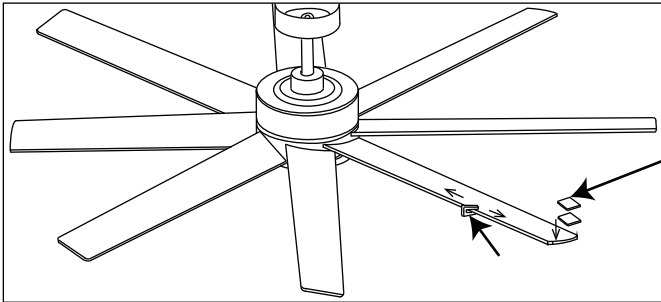PROBLEM	SUGGESTED REMEDY
If fan wobbles	6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps: <u>How to use balancing kit:</u> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights. 
If light does not work or flickering	1. Check for loose or disconnected wires in fan switch housing. 2. Check the wiring of receiver to the light kit. 3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted. 4. Check for faulty light bulbs. (light bulb version only) 5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fansto check if still flickering. CAUTION: Make sure main circuit is turned off before entering switch housing.

CEILING FAN

CUSTOMER SERVICE

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

CONTACT INFORMATION



: You can contact us by sending an email to support@fanlamppro.com