


# willz

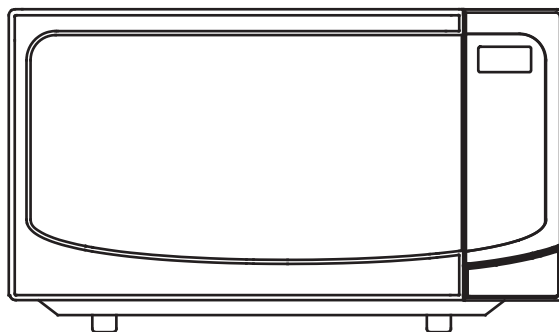

Microwave Oven  
User Manual

WLCMB916S5-10

Please read these instructions carefully before installing and operating the oven.

# 1 CONTENT

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....	2
IMPORTANT SAFETY INSTRUCTIONS .....	2
GROUNDING INSTRUCTIONS .....	4
INSTALLATION GUIDE .....	4
COOKING UTENSILS GUIDE .....	5
PART NAMES .....	6
CONTROL PANEL .....	6
OPERATION INSTRUCTIONS .....	7
SETTING THE CLOCK .....	7
SETTING THE TIMER .....	7
MICROWAVE COOKING .....	7
EXPRESS COOKING .....	7
SPEED DEFROST .....	7
COOK BY WEIGHT .....	8
DEFROST BY WEIGHT .....	8
MULTISTAGE COOKING .....	8
CHILD LOCK .....	9
AUTO COOK MENUS .....	9
POPCORN .....	9
POTATO .....	9
PIZZA .....	9
BEVERAGE .....	9
FROZEN DINNER .....	9
REHEAT .....	9
FRESH VEGETABLE .....	10
SOUP .....	10
CLEANING AND CARE .....	10
SPECIFICATIONS .....	11

## 2

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
  - a) Door (including any bent),
  - b) Hinges and latches (broken or loosened),
  - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

## 3

# IMPORTANT SAFETY INSTRUCTIONS

**WARNING!**--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 2.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" on page 4.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Do not operate the oven when empty.
6. Some products such as whole eggs and sealed containers -for example, closed glass jars- are able to explode and should not be heated in this oven.
7. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
8. As with any appliance, close supervision is necessary when used by children.
9. To reduce the risk of fire in the oven cavity:
  - a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
  - d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
10. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the

container is removed from the microwave oven is not always present. THEIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to person:

- a) Do not overheat the liquid.
  - b) Stir the liquid both before and halfway through heating it.
  - c) Do not use straight-sided containers with narrow necks.
  - d) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - e) Use extreme care when inserting a spoon or other utensil into the container.
11. Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
  12. Do not cover or block any openings on the appliance.
  13. Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
  14. Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
  15. Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
  16. This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
  17. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
  18. This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

19. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

## SAVE THESE INSTRUCTIONS

## 4 GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING!--** Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance

### **Electrical Requirements**

The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and grounded.

### **Power Cord**

1. A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If long cord or extension cord is used:
  - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - b) The extension cord must be a grounding-type 3-wire cord, and The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

## 5 INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. This microwave oven must be placed on a flat.
3. For correct operation, the oven must have sufficient air flow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet on which oven stands.
4. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
5. Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surface.
6. The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.

## 6 COOKING UTENSILS GUIDE

This section lists which utensils can be used in this microwave, which have limited use for short periods, and which should not be used in this microwave.

### Recommended

- Microwave browning dish — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.
- Microwaveable plastic wrap — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.
- Paper towels and napkins — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.
- Glass and glass-ceramic bowls and dishes — Use for heating or cooking.
- Paper plates and cups — Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.
- Wax paper — Use as a cover to prevent spattering.

Thermometers — Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

### Limited Use

- Aluminum foil — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.
- Ceramic, porcelain, and stoneware— Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.
- Plastic — Use only if labeled "Microwave Safe". Other plastics can melt.

### Not Recommended


- Glass jars and bottles — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.
- Paper bags — These are a fire hazard, except for popcorn bags that are designed for microwave use.
- Styrofoam plates and cups — These can melt and leave an unhealthy residue on food.
- Plastic storage and food containers — Containers such as margarine tubs can melt in the microwave.
- Metal utensils — These can damage your oven. Remove all metal before cooking.

Note:

Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave on HIGH for 30 seconds. A dish which becomes very hot should not be used.

## 7 PART NAMES

1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Roller Ring
5. Door Release Button
6. Control Panel
7. Wave Guide (Please do not remove the mica plate covering the wave guide)
8. Glass Tray

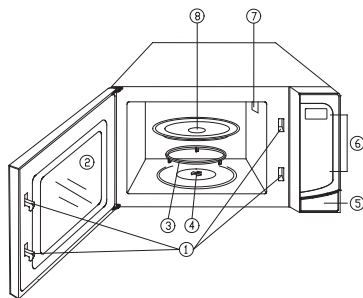

## 8 CONTROL PANEL



### MENU ACTION SCREEN

Cooking time, power, indicators and present time are displayed.

### AUTO COOK BUTTONS

Instant settings to cook popular foods.

### POWER

Press to set cooking power level.

### TIME

Press to set timer function.

### COOK

Use for multi-stage cooking.

### COOK BY WEIGHT

Press to set cooking program based on weight.

### DEFROST BY WEIGHT

Press to set defrost program based on weight.

### SPPED DEFROST

Press to set defrost program based on time.

### NUMBER PADS (0-9)

Press to set time or food weight.

### CLOCK

Press to set clock time.

### STOP/RESET

Clears all previous settings before setting other function.

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

It is also used to be set child lock.

### EXPRESS

Press to set express cooking.

### START MINUTE PLUS

Press to start the oven or add cooking time.

Simply press it a number of times to set cooking time and cook immediately at full power level.

# 9 OPERATION INSTRUCTIONS

- In the process of setting, broken about 25 seconds the oven will return to standby mode.
- During cooking, if press STOP/RESET button once, the program will be paused, then press START MINUTE PLUS button to resume, but if press STOP/RESET button twice, the program will be cancelled.
- After cooking end, the screen will display End and the system will sound every two minutes until user press any button or open the door.
- In the process of operation, press a valid pad, the buzzer rings once, but if press a invalid pad, the buzzer rings twice.

## SETTING THE CLOCK

1. In standby mode, press CLOCK button once.
2. Use number buttons to enter correct time.
3. Press CLOCK button again to confirm.

### NOTE:

- This is a 12 hour clock. When the oven is first plugged in or when power resumes after a power interruption, the display will show "ENTER", "CLOCK", "TIME" and ":" flashing.
- If you don't have to set the clock time, press the RESET button directly or waiting for 25 seconds to enter standby mode.
- During cooking, you can check the current clock time by pressing CLOCK button.

## SETTING THE TIMER

1. In standby mode or during cooking, press TIMER button once.
2. Use number buttons to enter desired time. The longest time is 99 minutes and 99 seconds.
3. Press START MINUTE PLUS to confirm.

NOTE: When the countdown ends, the buzzer will beep to remind you. Time countdown can be seen for 5 seconds by pressing TIMER button, and then you can cancel the program by pressing STOP/RESET button to when the display shows the time.

## MICROWAVE COOKING

1. Use number buttons to enter cooking time. The longest time is 99 minutes and 99 seconds.
2. Press POWER button once (default 100% power level), and then use the number buttons to enter other power level.
3. Press START MINUTE PLUS to confirm.

Press Number	Power (Display)
1,0	100% (100)
9	90% (90)
8	80% (80)
7	70% (70)
6	60% (60)
5	50% (50)
4	40% (40)
3	30% (30)
2	20% (20)
1	10% (10)
0	0% (0)

NOTE: During cooking, you can check the current cooking power level by pressing POWER button.

## EXPRESS COOKING

Use this feature to program the oven to microwave food at 100% power conveniently. In standby mode, press EXPRESS button in quick succession to set the cooking time (each press to increase 30 seconds, and up to 10 minutes). The oven will start working automatically.

NOTE: During express cooking and microwave cooking, you can add cooking time by pressing START MINUTE PLUS button. Each press to increase 1 minute, and up to 99 minutes.

## SPEED DEFROST

1. Press SPEED DEFROST button once.
2. Press number buttons to enter defrosting time. The longest time is 99 minutes and 99 seconds.
3. Press START MINUTE PLUS to confirm.

NOTE: During defrosting, the oven will pause and sound to remind you to turn food over, after that, press START MINUTE PLUS to resume.

## COOK BY WEIGHT

1. Press COOK BY WEIGHT button once.
2. Enter one digit code by pressing correct number button (1~3).
3. Use number button to enter food weight.
4. Press START MINUTE PLUS to confirm.

Cook by weight code description:

Code	Food	Maximum Weight
1	Beef	5 lb. 16 oz.
2	Mutton	5 lb. 16 oz.
3	Pork	5 lb. 4 oz.

NOTE:

- Meat must be defrosted and at refrigerated temperature.
- Weight must be in pounds and ounces. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart.
- During cooking, the system will pause and sound automatically to remind user to turn food over, after that press START MINUTE PLUS to resume cooking.
- Let meat stand a few minutes before carving.

Converting Fractions of a Pound to Ounces

Fractions of a pound	Ounces
Less than .03	0
.03 to .09	1
.10 to .15	2
.16 to .21	3
.22 to .27	4
.28 to .34	5
.35 to .40	6
.41 to .46	7
.47 to .53	8
.54 to .59	9
.60 to .65	10
.66 to .71	11
.72 to .78	12
.79 to .84	13
.85 to .90	14
.91 to .97	15
above .97	go to next even

## DEFROST BY WEIGHT

1. Press DEFROST BY WEIGHT button once.
2. Use number button to enter food weight. The maximum weight is 5 lb. 16 oz.
3. Press START MINUTE PLUS button to confirm.

NOTE:

- Weight must be in pounds and ounces. If label gives weight in pounds only, change the fraction of a pound to ounces using the chart given above.
- During defrosting, the oven will pause and sound to remind you to turn food over then press START MINUTE PLUS to resume.

## MULTISTAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. It can be composed of speed defrost with one or two microwave cooking program, or composed of two microwave cooking program.

A. Speed defrost with one or two-stage microwave cooking:

1. Open the door and place the food into the oven, close it.
2. Press SPEED DEFROST button once.
3. Enter desired defrosting time by pressing correct number buttons.
4. Press COOK button once.
5. Input the first microwave cooking program. Do not press START MINUTE PLUS.
6. Press COOK button once.
7. Input the second microwave cooking program.
8. Press START MINUTE PLUS to confirm.

NOTE: Step 6 and 7 are not necessary if you just need one microwave cooking program.

B. Two-stage microwave cooking:

Some recipes require different stages of cooking at different temperatures.

1. Input the first microwave cooking program.
2. Press COOK button once.
3. Input the second microwave cooking program.
4. Press START MINUTE PLUS to confirm.

## CHILD LOCK

The safety lock prevents unsupervised operation by children.

To set the child proof lock: In standby mode, press and hold STOP/RESET button for 3 seconds, then a

beep will sound and the indicator light will turn on.

In the lock state, all buttons are disabled.

To cancel the child proof lock: Press and hold STOP/RESET button for 3 seconds, then a beep will sound and the indicator light will turn off.

# 11 AUTO COOK MENUS

The auto cook menus allow you to cook or reheat food automatically without entering power level or time. For smaller portions, simply press the applicable button and start. For larger portions, push the button twice.

## POPCORN

1. Press POPCORN once.  
Popcorn automatically sets the cooking time for a 3.5 oz. bag of microwave popcorn.
2. Press START MINUTE PLUS to confirm.

NOTE: To change the preset popcorn time: Press POPCORN twice. Press number buttons to enter cooking time. The longest time is 99 minutes and 99 seconds. Press START MINUTE PLUS. This new cooking time will be set as the default one until you change it or next power on.

## POTATO

For potatoes (4 ~ 6 oz/serving):

1. Press POTATO once.
2. Enter number of potatoes by pressing number buttons from 1 to 4.
3. Press START MINUTE PLUS to confirm.

For larger potatoes (8 ~10 oz/serving):

1. Press POTATO twice.
2. Enter number of potatoes by pressing number buttons from 1 to 4.
3. Press START MINUTE PLUS to confirm.

## PIZZA

Reheating a slice of pizza (about 5 oz):

1. Press PIZZA once.
2. Press START MINUTE PLUS to confirm.

Heating a whole frozen pizza (about 16 oz):

1. Press PIZZA twice.
2. Press START MINUTE PLUS to confirm.

## BEVERAGE

For cups (5 ~ 7 oz/serving):

1. Press BEVERAGE once.
2. Enter number of cups by pressing number buttons from 1 to 4.
3. Press START MINUTE PLUS to confirm.

For larger cups (9 ~ 11 oz/serving):

1. Press BEVERAGE twice.
2. Enter number of mugs by pressing number buttons from 1 to 4.
3. Press START MINUTE PLUS to confirm.

## FROZEN DINNER

For one or two small frozen dinners (7 ~ 9 oz/serving):

1. Press FROZEN DINNER once.
2. For 1 entree, press number button "1". For 2 entrees, press number button "2".
3. Press START MINUTE PLUS to confirm.

For one or two large frozen dinner (10 ~ 12 oz/serving):

1. Press FROZEN DINNER twice.
2. For 1 entree, press number button "1". For 2 entrees, press number button "2".
3. Press START MINUTE PLUS to confirm.

## REHEAT

To reheat a plate of leftover (12 ~ 18 oz)

1. Press REHEAT button once.
2. Press START MINUTE PLUS to confirm.

## FRESH VEGETABLE

For fresh vegetable (100 ~ 600 g)

1. Press FRESH VEGETABLE button once.
2. Use number buttons 1~6 to enter food weight.
3. Press START MINUTE PLUS to confirm.

## SOUP

For soup (8 ~ 9 oz/serving)

1. Press SOUP button once.
2. Use number buttons 1~4 to enter servings.
3. Press START MINUTE PLUS to confirm.

# 12 CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. If the light bulb burns out, please contact customer service to have it replaced.
11. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
12. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

Power Consumption	120V/60Hz, 1500W(microwave)
Output	1000W
Operation Frequency	2450MHz
Outside Dimensions(H x W x D)	12 <sup>1</sup> / <sub>4</sub> × 21 <sup>3</sup> / <sub>4</sub> × 18 <sup>3</sup> / <sub>8</sub> in.
Oven Capacity	1.5 cu.ft.
Net Weight	Approx.35.3 lbs



Distributed by: Galanz Americas Limited Company  
Ridgefield Park, NJ 07660

For service, support and warranty information, please call 800-562-0738