QUOIZEL
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoizel.com

Assembly Instruction Sheet #IS-NYL8411K
For Style NYL8411K

Please go to **www.quoizel.com** for product cleaning tips. Go to the **Care + Maintenance** selection.
Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: LED 16W
Estimated Assembly Time: 20-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.
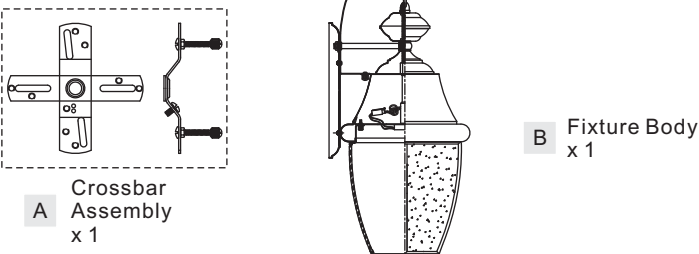**Fixture can only be mounted in the direction indicated on page 2.**

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.
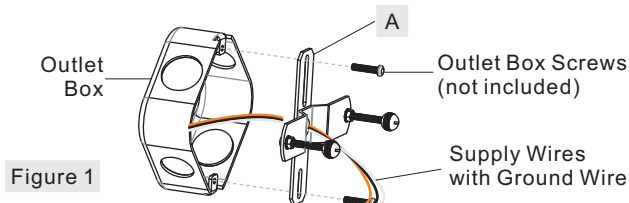
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

A. Crossbar Assembly x 1
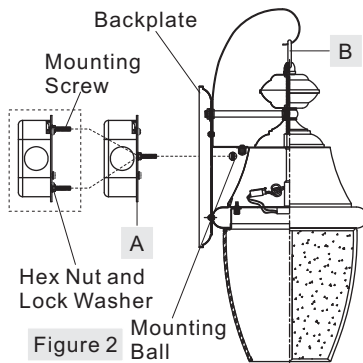
B. Fixture Body x 1

STEP 1 – Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Outlet Box
A
Outlet Box Screws (not included)
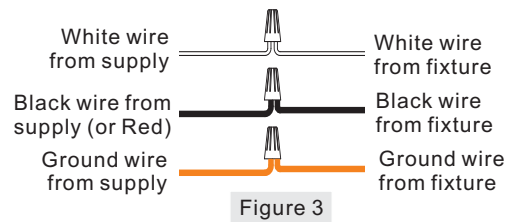Supply Wires with Ground Wire
Figure 1

STEP 2 – Fit Backplate to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (A). Fit the backplate on Fixture Body (B) to the Crossbar Assembly (A) and secure with mounting balls.
Note: The backplate on Fixture Body (B) should be snug against the wall and the mounting balls. If not, adjust the length of the mounting screw on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the backplate on Fixture Body (B) is secure, remove the mounting ball and Fixture Body (B) and proceed to Step 3.

Backplate
Mounting Screw
B
A
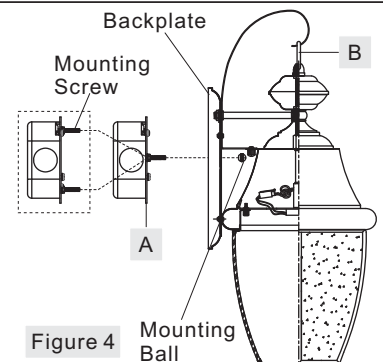Hex Nut and Lock Washer
Mounting Ball
Figure 2

STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

White wire from supply — White wire from fixture
Black wire from supply (or Red) — Black wire from fixture
Ground wire from supply — Ground wire from fixture
Figure 3

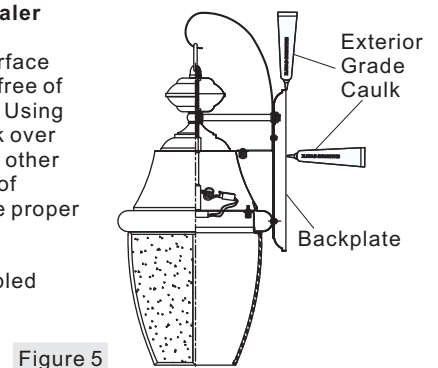## STEP 4 – Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the backplate of fixture body (B) over the outlet box. Align the holes in the backplate with the mounting screws. Place caulk (not supplied) into the previously removed mounting balls and then attach fixture body (B) using the mounting balls. Hand tighten until snug.

Backplate
Mounting Screw
B
A
Mounting Ball
Figure 4

STEP 5 – Apply Silicone Sealer

A. Make sure exterior wall surface and fixture backplate are free of dirt before applying caulk. Using exterior grade caulk, caulk over top of backplate and down other side. Do not caulk bottom of fixture backplate to ensure proper moisture drainage.

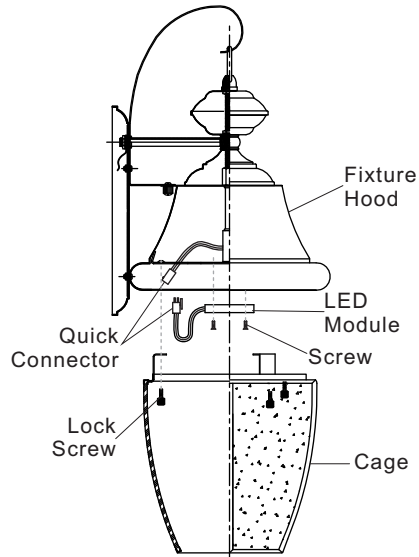Your fixture is now assembled and ready to use. Enjoy!

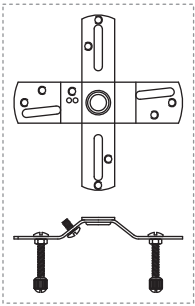Exterior Grade Caulk
Backplate
Figure 5

HOW TO REPLACE GLASS PANELS

A. Remove the Cage from the Fixture Body by unscrewing Lock Screws. Separate the Quick Connector.
B. Unscrew Lock Screws on the LED Module. Add the replacement LED Module and tighten until snug with screws previously removed.
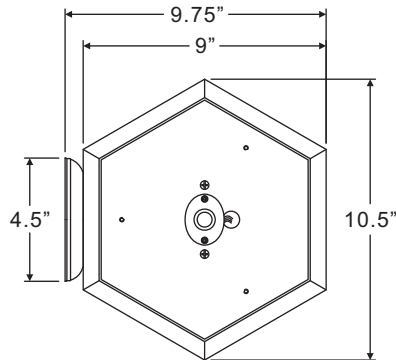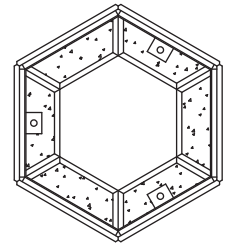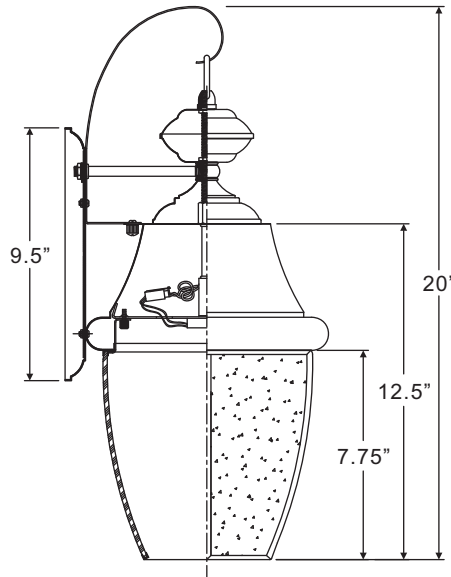C. Reverse Step A to Step B to re-install parts together.

Figure 6

Fixture Hood

LED Module

Quick Connector

Screw

Lock Screw

Cage

NYL8411K

FINISH: MYSTIC BLACK

Fixture can only be mounted in the direction indicated

9.5"

20"

12.5"

7.75"

9.75"

9"

4.5"

10.5"

NO.	PART NUMBER	REPLACEMENT PART	REQ.
1			
2			

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4″

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

© 2016 Quoizel Inc.

January 2016

Rev.A