


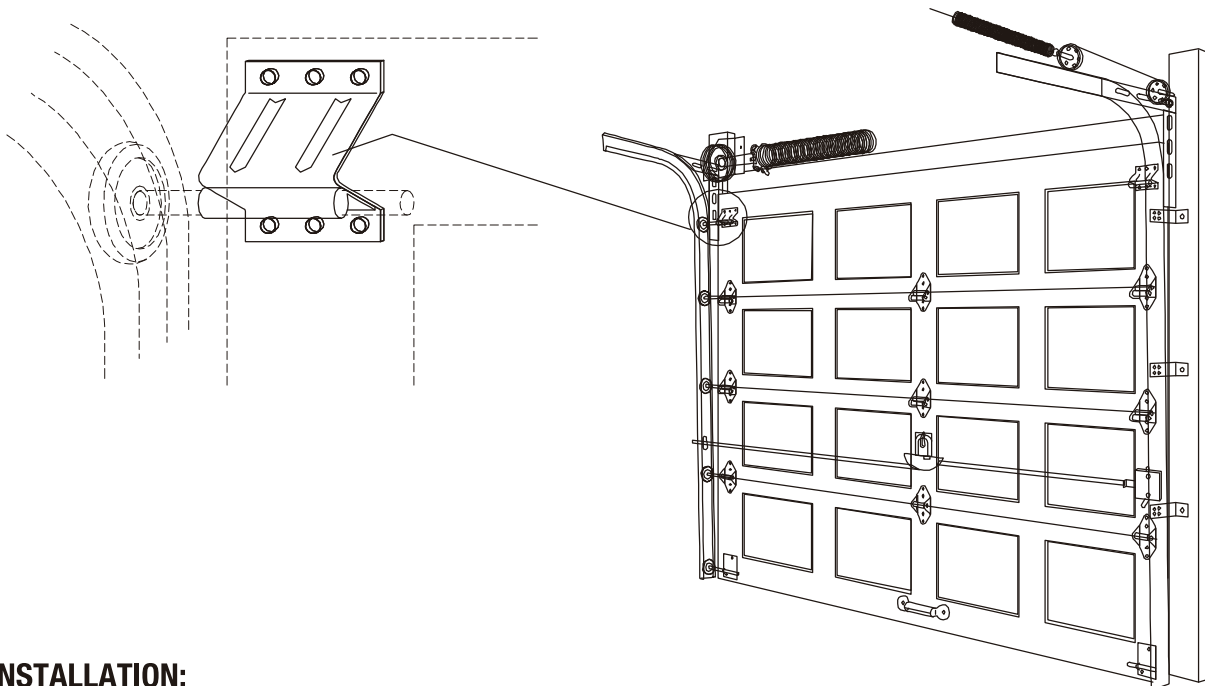

INSTALLATION:

1. **NOTE:** This installation instruction only applies to the top fixture. Do not remove or in any way tamper with the bottom fixture. Contact a professional door installer. To avoid stripping threads, do not over-tighten fixture screws.
2. Close, disconnect power and disengage the door. Fasten C clamps to doors, above both rollers to prevent door from opening.
3. Remove the existing top fixture by unscrewing the self-extruding screws holding the fixture.
4. Remove the existing roller's wheel from track and the existing rollers from track and top fixture.
5. Slide the new roller's shaft into the top fixture.
6. Install the new roller's wheel to the track.
7. Reposition the top fixture to the original location and refasten using the existing self-extruding screws (sold separately).
8. Loosen the two slide bolts on the top fixture and press the door against the door jamb.
9. Pull the roller slide towards you so roller is tight against the groove inside the track. Tighten the slide bolts while in this position.

INSTALACIÓN:

1. **NOTA:** Estas instrucciones de instalación solo se aplican al ensamble superior. NO retire ni manipule de ninguna manera el enganche inferior. Póngase en contacto con un instalador de puertas profesional. Para evitar estropear las roscas, no apriete demasiado los tornillos del ensamble.
2. Cierre, desconecte la alimentación y desenganche la puerta. Asegure las abrazaderas en C a las puertas, por encima de los dos rodillos para evitar que la puerta se abra.
3. Retire el ensamble superior existente retirando los tornillos de autoextrusión que lo sostienen.
4. Retire la rueda del rodillo existente del riel y retire los rodillos existentes del riel y del ensamble superior.
5. Deslice el eje del nuevo rodillo en dirección al ensamble superior.
6. Instale la rueda del nuevo rodillo en el riel.
7. Coloque nuevamente el ensamble superior en su ubicación original y vuelva a sujetarlo con los tornillos de autoextrusión existentes (se vende por separado).
8. Afloje los dos pernos deslizantes del ensamble superior y presione la puerta contra la jamba de la misma.
9. Jale el deslizador del rodillo en dirección a usted, de manera que se ajuste contra la ranura del interior del riel. Apriete los pernos deslizantes en esta posición.

TOOLS REQUIRED

HERRAMIENTAS NECESARIAS

