




INSTRUCTION MANUAL FOR TREE FUNCTIONS

12-Key Remote Control Diagram

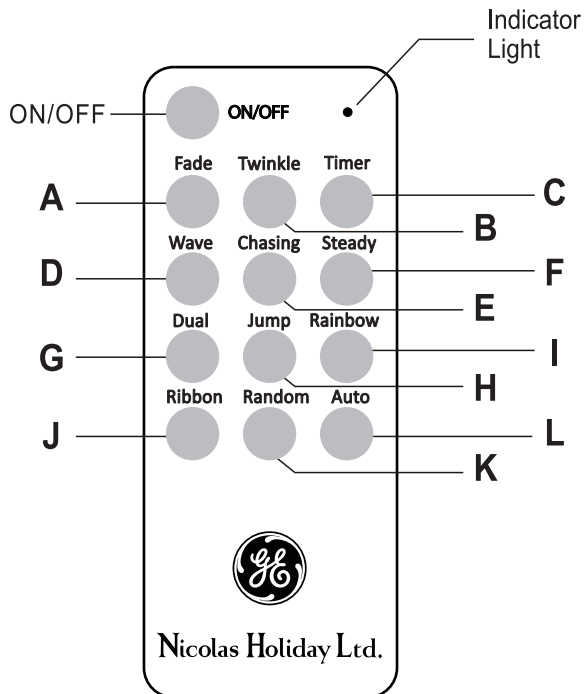

A.Fade

Red/Green/Purple/
Yellow/Blue/ White

G.Dual

1. Fade
2. Twinkle

B.Twinkle

1. Warm White
2. Multi
3. Red/Green/Purple/
Yellow/Blue (Single)

H.Jump

Red/Green/Purple/
Yellow/Blue

C.Timer

5H On/Time Control

I.Rainbow

1. Rainbow
2. Blue /Green
3. Yellow/Purple

D.Wave

1. Warm White
2. Multi
3. Red/Green/Purple/
Yellow/Blue (Single)

J.Ribbon

1. Red/Blue/White
2. Blue/Green
3. Red/Green

E.Chasing

1. Multi
2. Warm White

K.Random

1. Warm White
2. Multi
3. Red
4. Green
5. Blue

F.Steady

Warm White/Muti/
Red/Green/Purple/
Gold/Blue/Teal/White

L.Auto

Auto (B to K, no C/F)

BATTERY CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not mix old and new batteries. Always replace the whole set of batteries at once time.
- Batteries are to be inserted with the correct polarity (+and-).
- Exhausted batteries are to be removed from the product.
- Replace only with (2) AAA batteries.
- Batteries included.
- Do not dispose of batteries in fire. Batteries may explode or leak.

For indoor use only

GE is a trademark of General Electric Company and is under license by Nicolas Holiday Limited

Questions, call customer service toll free at 1-877-398-7337 or visit us on web at www.geholidaylighting.com

NHL Model No. 25101 LO
Remote Control: 25211
Printed in China
FP25




The sculpture can alternatively be controlled using manual button located at the control box.



MANUAL DE INSTRUCCIONES DE LAS FUNCIONES DEL ÁRBOL

Diagrama De Control Remoto De 12 Teclas

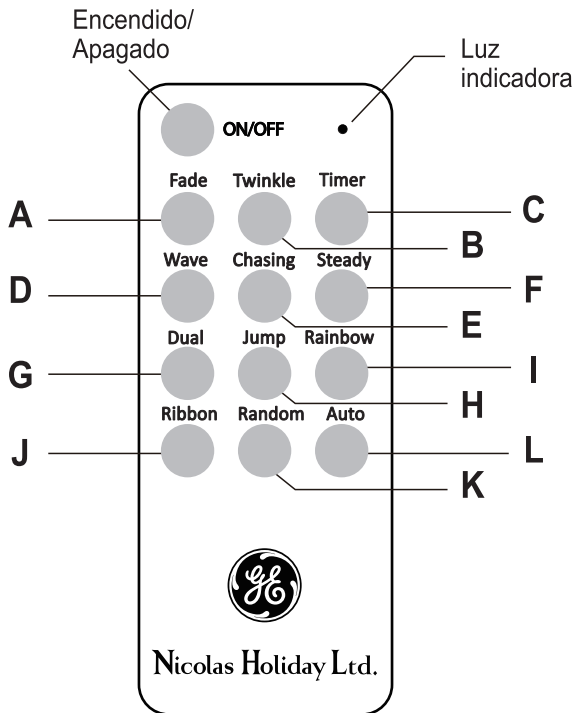

A.Desvanecimiento

Rojo/Verde/Morado/Yellow/
Azul/Blanco

G.Doble

1.Desvanecimiento
2.Destellante

B.Destellante

1. Blanco cálido
2. Multicolor
3. Rojo/Verde/Morado/
Yellow/Azul (Simple)

H.Salto

Rojo/Verde/Morado/
Yellow/Azul

C.Temporizador

5 horas encendido/
Control de tiempo

I.Arcoíris

1.Arcoíris
2.Azul/Verde
3.Yellow/Morado

D.Wave

1. Blanco cálido
2. Multicolor
3. Rojo/Verde/Morado/
Yellow/Azul (Simple)

J.Cinta

1.Rojo/Azul/Blanco
2.Azul/Verde
3.Rojo/Verde

E.Persecución

1. Multicolor
2. Blanco cálido

K.Aleatorio


1. Blanco cálido
2. Multicolor
3. Rojo
4. Verde
5. Azul

F.Steady

Blanco cálido/Multicolor/
Rojo/Verde/Morado/
Dorado/Blue/Teal/White

L.Automático

Auto (B to K, no C/F)



PRECAUCIÓN SOBRE LA BATERÍA:

- No deben recargarse las baterías que no estén creadas para tal fin.
- No mezcle los diferentes tipos de baterías, como alcalinas, cinc-carbono o recargables.
- No mezcle baterías antiguas con nuevas.
- Siempre reemplace todo el conjunto de baterías a la vez.
- Las baterías se deben insertar en la polaridad correcta. (+y-).
- Las baterías agotadas se deben retirar del producto.
- Reemplace solo con (2) baterías alcalinas AAA.
- Incluye baterías.

No incinere las baterías. Estas podrían explotar o filtrarse.

Sólo para uso en interiores

GE es una marca registrada de General Electric Company y se utiliza con licencia por Nicolas Holiday Limited

Si tiene preguntas, llame al número gratuito del Servicio al Cliente al 1-877-398-7337 o visítenos en el sitio web www.geholidaylighting.com

NHL Model No. 25101 LO
Control remoto: 25211
Impreso en China
FP25

La escultura se puede controlar alternativamente mediante un botón manual ubicado en la caja de control.