


ASSEMBLY INSTRUCTION

E566-96 DINING TABLE

A Table Top	B Rail	C Support Rail	D Side Frame
			
1pc	1pc	2pcs	2pcs


E Bolt 5/16"x1-1/2"	F Bolt 5/16"x3/4"	G Lock Washer 5/16"	H Flat Washer 5/16"x16mm
			
12pcs	8pcs	20pcs	20pcs

I Allen Wrench 5mm	J Metal Bracket 60x44mm
	
1pc	2pcs

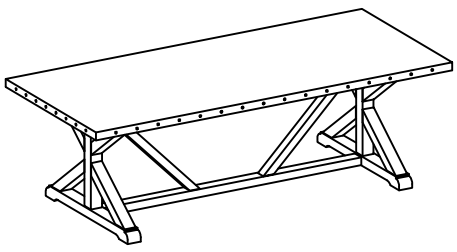


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Assemble rail (B) and (C) with bolt (E), lock washer (G) and flat washer (H), tight by allen wrench (I).

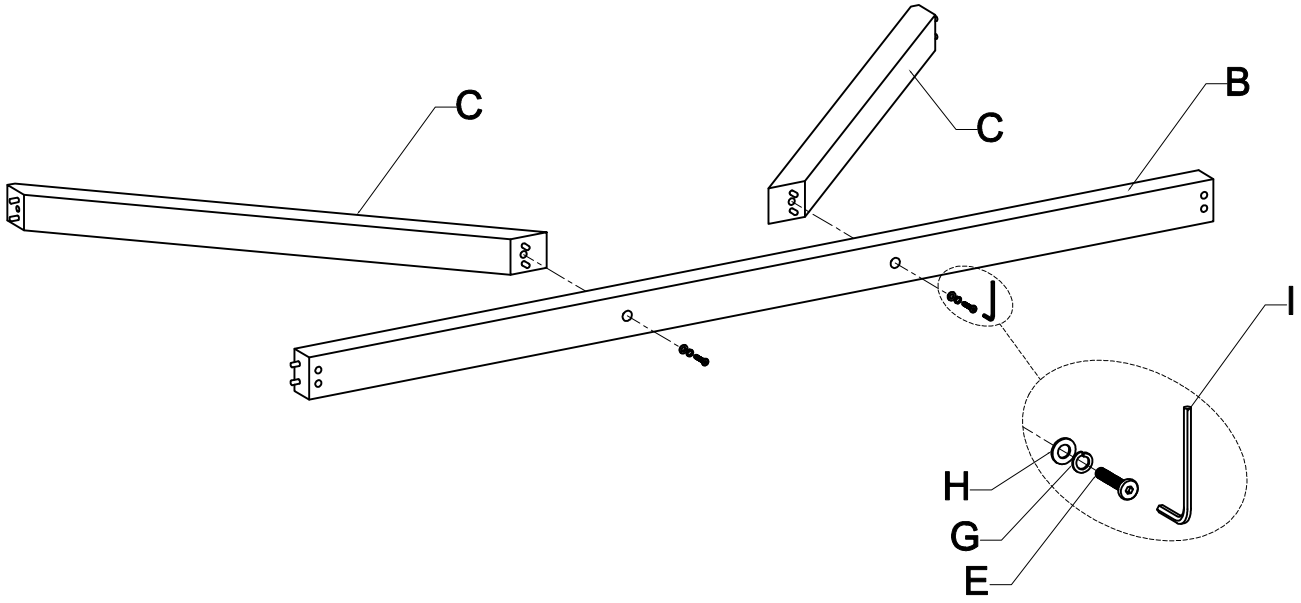

2 Assemble side frame (D) with rail (B) & (C) by bolt (E) & (F), lock washer (G), metal bracket (J) and flat washer (H), tight by allen wrench (I).

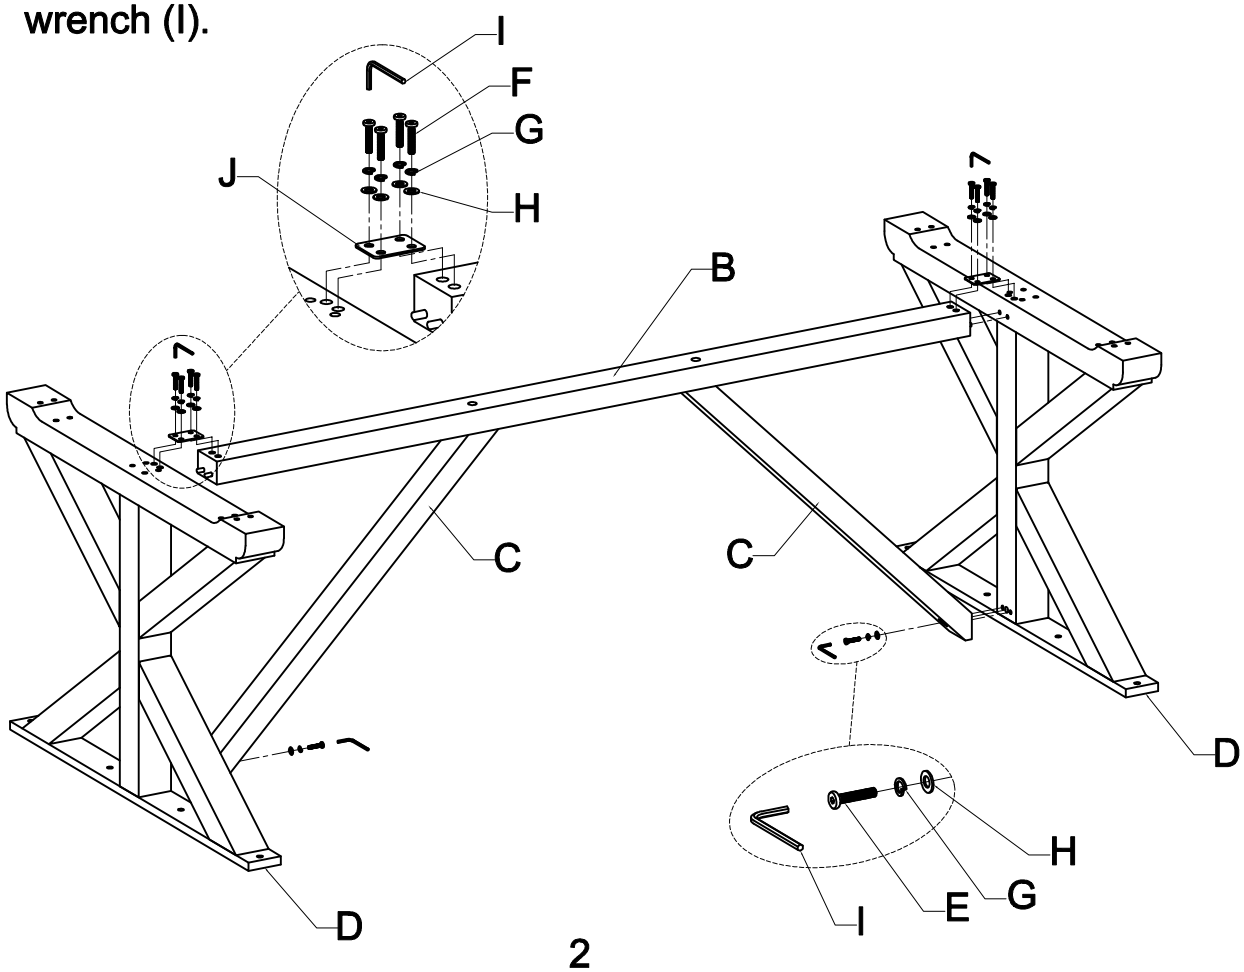

3 Upside down the table top (A), attach the base and install using bolt (E), lock washer (G) and flat washer (H), tight by allen wrench (I).

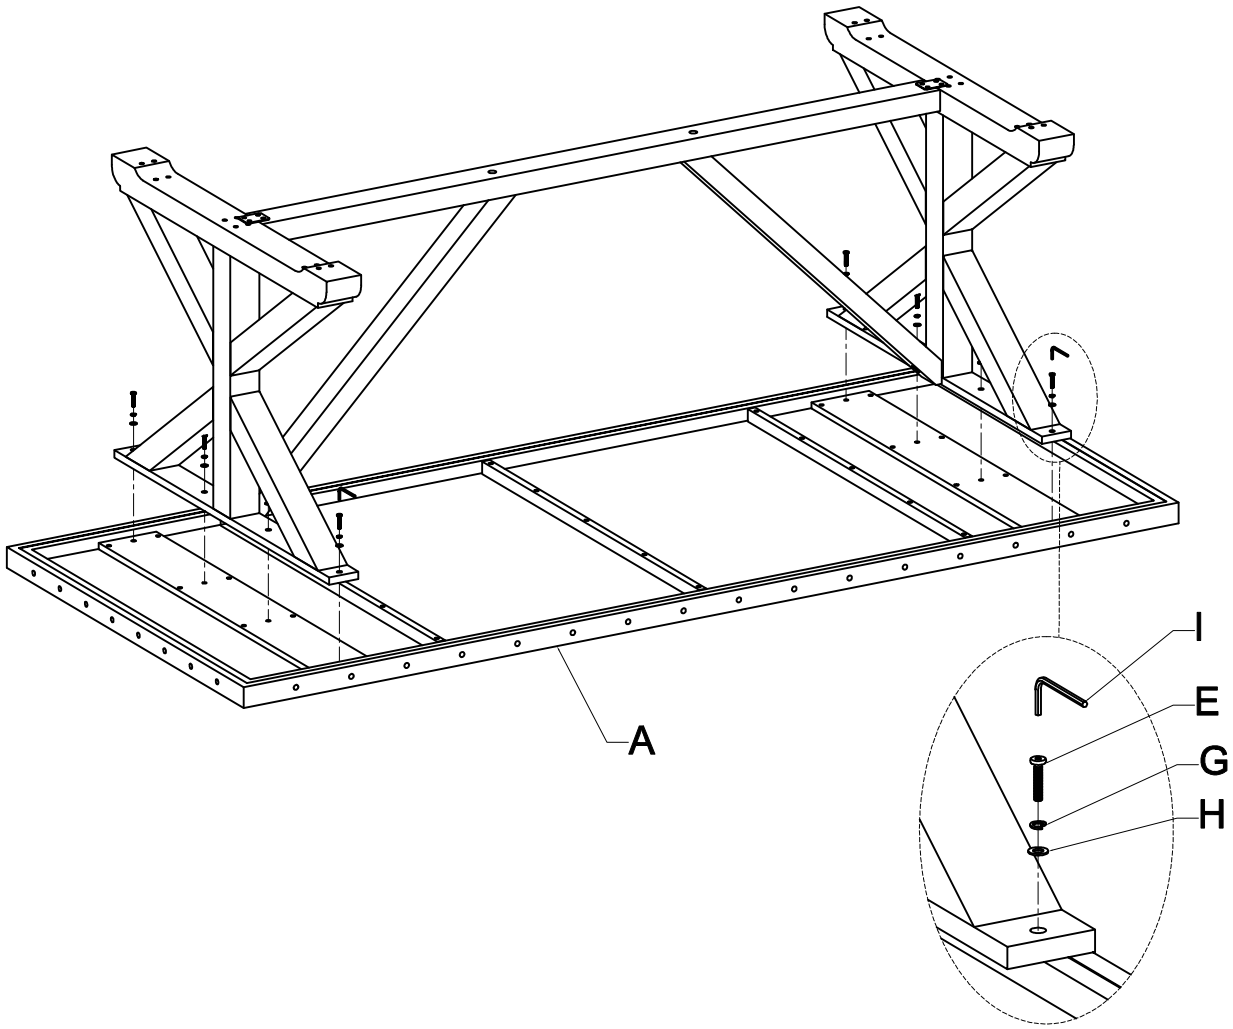

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.