

SWEAT STOP VALVE INSTALLATION INSTRUCTIONS




Installation Instructions:

1. Turn off water supply, and drain the line.
2. Cut copper square or remove existing valve and disconnect supply line.
3. Clean copper and inside valve with emery cloth.
4. Coat inside valve and copper with flux.
5. Push valve on copper pipe and align with fixture.
6. Heat joint until solder liquefies and feed solder around edges of the valve.
7. Wipe connection with damp cloth to clean and cool joint.
8. Connect supply line to stop valve and fixture.
9. Turn on water and check connections.

Instrucciones de instalación:

1. Cierre el suministro de agua y drene la tubería.
2. Corte la escuadra de cobre o quite la válvula existente y desconecte la tubería de suministro.
3. Limpie el cobre y la válvula interior con un papel de lija.
4. Recubra la válvula interior y el cobre con material para soldar.
5. Empuje la válvula en la tubería de cobre y alinéela con el accesorio.
6. Caliente la junta hasta que el material para soldar se haga líquido y colóquelo alrededor de los bordes de la válvula.
7. Limpie la conexión con un paño húmedo para limpiar y enfriar la junta.
8. Conecte la tubería de suministro para detener la válvula y el accesorio.
9. Abra el flujo de agua y revise las conexiones.

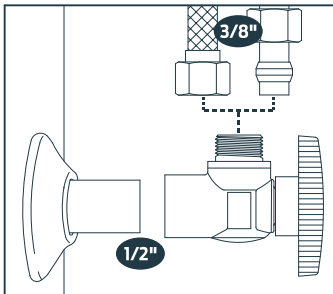

AN RWC BRAND



Distributed by
Reliance Worldwide Corporation®
1-877-700-4242