



ITM9900RE

QUICK REFERENCE GUIDE

The Glue Cards are designed for use with Emerson Indoor Flying Insect Trap model ITM8110 (sold separately). It is highly recommended to fully read the main owner's manual of ITM8110 to receive the full safety instructions and operation procedures.

DIRECTIONS FOR USE

The insect trap works by using a continuous, attractive light to draw insects. Once they are enticed, they are caught by a highly effective sticky paper, preventing their escape.

INSECT TRAP MODE

1. To open the device, turn the lower section clockwise.

2. Remove the adhesive liner from the Glue Card.


3. Insert the Glue Card into the mesh basket (glue side up).

4. Close the device.

5. Connect the device to the adapter provided. Plug in the device to an indoor outlet.

6. Press the ON/OFF button. To optimize the performance, leave the unit power on continuously.

7. Replace the Glue Card when it is full of bugs, dust or debris. It is advisable to check every 2 weeks. Keep the device plugged in continuously. Once full, unplug it and replace it with a fresh glue trap.

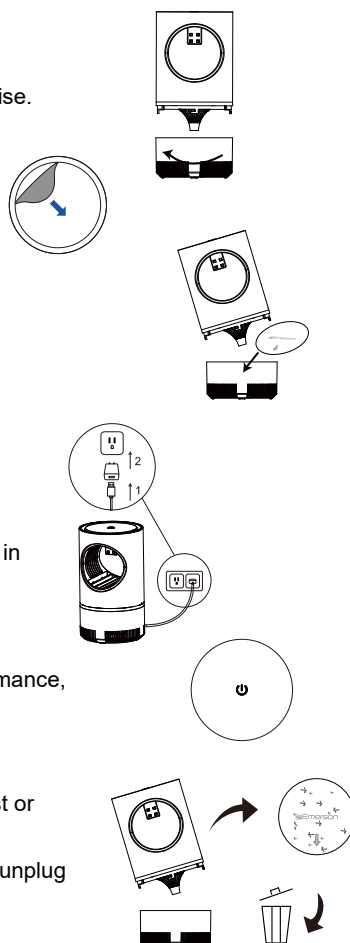

GUÍA DE REFERENCIA RÁPIDA

Las tarjetas adhesivas están diseñadas para usarse con la trampa para insectos voladores de interior Emerson, modelo **ITM8110** (se vende por separado). Se recomienda leer el manual del usuario de la **ITM8110** para obtener todas las instrucciones de seguridad y los procedimientos de funcionamiento.

INSTRUCCIONES DE USO

La trampa para insectos funciona mediante una luz continua y atractiva que atrae a los insectos. Una vez atraídos, quedan atrapados por un papel adhesivo altamente efectivo que impide su escape.

MODO TRAMPA PARA INSECTOS

1. Para abrir el dispositivo, gire la sección inferior en sentido horario.

2. Retire el adhesivo de la tarjeta adhesiva.

3. Inserte la tarjeta adhesiva en la cesta de malla (con el adhesivo hacia arriba).

4. Cierre el dispositivo.

5. Conecte el dispositivo al adaptador proporcionado. Conecte el dispositivo a una toma de corriente interior.

6. Pulse el botón de encendido/apagado. Para optimizar el rendimiento, deje la unidad encendida continuamente.

7. Reemplace la tarjeta adhesiva cuando esté llena de insectos, polvo o residuos. Se recomienda revisarla cada dos semanas. Mantenga el dispositivo enchufado continuamente. Una vez llena, desenchúfela y reemplácela con una trampa adhesiva nueva.

