

OWNER'S MANUAL

MAXIM

bObsweep

Download & Connect



App Store



Google Play



MAXIM®

OWNER'S MANUAL

Model MAX-25-2050
Version 2025.c



Congratulations!

Congratulations on your new intelligent floor cleaner!
Maxim is now at your service.
To see Maxim at his best, please read the
Quick Start Guide and this manual thoroughly.

Welcome to the bObsweep family and Happy Sweeping!

If you have any questions or concerns, feel free to contact our
helpful support team at **support@bobsweep.com** or **1-888-549-8847**.
Business Hours: Monday – Friday, 9 a.m. – 5 p.m. Pacific Time.

Table of Contents

1 General
Important Safety Instructions
Declaration of Conformity
Contact us

3 Box Contents

4 Anatomy
Maxim
Dustbin & Filter
Display Screen & Buttons
Charging Station

11 Getting Started
Who is Maxim?
How does Maxim find his way?

14 Maxim's First Clean
Install the Side Brush
Attach the Mops
Set Up the Charging Station
Power ON and Charge Maxim
Download the bObsweep App
Let Maxim GO!
Cleaning Modes & Settings

25 Maintenance Guides
Brushes
Sensors
Dustbin & Filter
Mop Cloths
Front Wheel
Battery
Charging Station

39 Trouble-shooting

41 Home Checkup Test

42 Battery Safety & Shipping

43 FAQs

46 Manuel du propriétaire

95 End User License Agreement

Important Safety Instructions

- Maxim (hereafter referred to as Maxim, bot, device, or robot) is not intended for use by persons (including children) with reduced physical or mental capabilities, or lack of experience and knowledge, unless under the close supervision of a person responsible for their safety.
- Maxim is composed of electronic components that in rare and unintended cases can cause hazards of heating, fire, and other malfunctions. And, because Maxim is capable of autonomous movement, his use poses the risk of collision with property, pets, and persons. Unintended removal of articles — such as small valuables, jewelry, or hair of persons or pets lying on the floor — may also occur.
- Maxim is not a toy. Small children and pets should be supervised when Maxim is operating.
- Be aware that Maxim moves on its own. Take care when walking in the area that Maxim is operating in to avoid stepping on it or tripping over it.
- If Maxim or his charging station has been damaged in any way, do not operate them. Contact our support team for further assistance.
- Do not let Maxim drop. The impact from a drop can damage the SLAM LiDAR.
- Do not use Maxim outdoors. And , do not store Maxim in a car.
- Do not expose Maxim or his charging station to temperatures outside 39-113°F (4-45°C), moisture, or humidity
- Store and operate in room temperature environments only.
- Only use Maxim with a 110-120v electric plug. Do not use with a voltage converter or transformer. Note: Using Maxim with a power converter will immediately void the warranty. Use of Maxim outside of the country where it was initially purchased voids the warranty.
- Maxim comes with a North American region approved power supply cord and is designed to be plugged into a standard household AC power outlet only. Do not use any other power supply cord or power strip.
- Do not use unauthorized cords or chargers. Use of an unauthorized charger could cause the battery to generate heat, smoke, catch fire, or explode.
- Risk of electric shock, use indoors in dry location only. Do not handle Maxim or his charging station with wet hands; use only on dry surfaces. Do not use a broken or damaged power inlet/ wire.
- The charging station may be protected with a surge protector in the event of electrical storms or fluctuations.
- Do not pull or carry the charging station by the cord, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces. To unplug the cord, grasp the plug, not the cord.
- Power Maxim OFF and remove him from a power source when you are not using him and before conducting maintenance.
- Do not open or handle Maxim’s charging station when plugged into the wall. Unplug first.
- Periodically inspect the battery pack for any sign of damage or leakage. Do not charge damaged or leaking battery packs. Leaks from the battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin, wash quickly with water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes, and seek immediate medical attention.
- Do not mutilate or incinerate the battery, as it will explode at high temperatures.
- Do not short-circuit the battery by allowing metal objects to contact battery terminals or immerse in liquid. Do not subject batteries to mechanical shock.
- Do not dispose of your battery in fire. Old batteries should be recycled safely through your local recycler.
- If the floor contains stairs, place physical barriers to block off Maxim and prevent access to the stairs and ensure safe operation.
- If the floor contains a balcony, place physical barriers to block off Maxim and prevent access to the balcony and ensure safe operation.
- If the floor contains equipment, such as a stove, fan, space heater, or humidifier, remove the equipment before operation. There is a risk of injury, accident or malfunction if Maxim comes in contact and pushes the equipment.
- If Maxim passes over a power cord and drags it, there is a chance an object could be pulled off a table or shelf. Before using this device, pick up objects like clothing, loose papers, pull cords for blinds or curtains, power cords, and any fragile objects. Extinguish candles. Shut off space heaters.
- Do not use Maxim to pick up sharp objects, glass, or anything that is burning or smoking such as cigarettes, matches, or hot ashes.
- Do not operate Maxim in areas with exposed electrical outlets on the floor.
- With the exception of the wet mop attachment, do not immerse any part of Maxim into water or other liquids. Do not use Maxim to pick up spills. Do not allow Maxim or his station to become wet.
- Do not look directly into the rotating transmitting part (laser) of the SLAM LiDAR.
- For your safety, do not insert tools, fingers, or other items into the rotating part of the SLAM LiDAR.
- Do not use without dust bag and/or filters in place.
- Do not attempt to disassemble or open the charging station other than instructed in this Owner’s Manual. Repairs on the station should only be carried out by our qualified technicians.
- Do not expose Maxim’s SLAM LiDAR to direct sunlight or infrared light.
- Perform the required maintenance described in this Owner’s Manual to ensure the safe operation of the robot and charging station.

Important Safety Instructions

Read all instructions before using Maxim.
Save these instructions.

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING – To reduce the risk of fire, electric shock, or injury: Use only as described in this manual. Use only manufacturer’s recommended attachments. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Do not handle plug or appliance with wet hands.

This device is for indoor household use only. Not for commercial use and not for outdoor use.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Place the cords from other appliances out of the area to be cleaned. Do not operate the vacuum in a room where an infant or child is sleeping. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into. Do not allow children to sit on the vacuum.

Declaration of Conformity

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user’s authority to operate the equipment.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Contact Us

If you have any questions or concerns, please contact our helpful support team at **support@bobsweep.com** or toll-free at **1-888-549-8847** | Hours: Monday – Friday, 9 a.m. – 5 p.m. Pacific Time. Additional troubleshooting information and how-to guides can be found on the bObsweep app and at **www.bobsweep.com/maxim-support**.


Box Contents

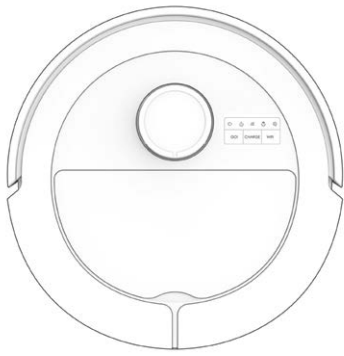

Maxim®

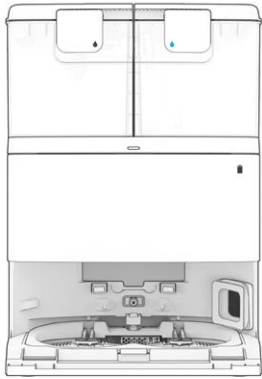

Charging Station

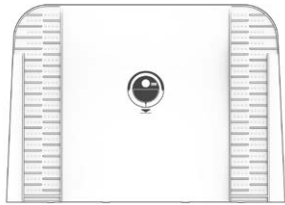

Charging Station Ramp



Mop Attachment (2)



Microfiber Mop Cloth (2)



Heavy-Duty Mop Cloth (2)



Filter (Spare)



Dust Bag (Spare)



Cleaning Solution



Cleaning Tool




Side Brush (2)

Anatomy


Maxim®

SLAM LiDAR

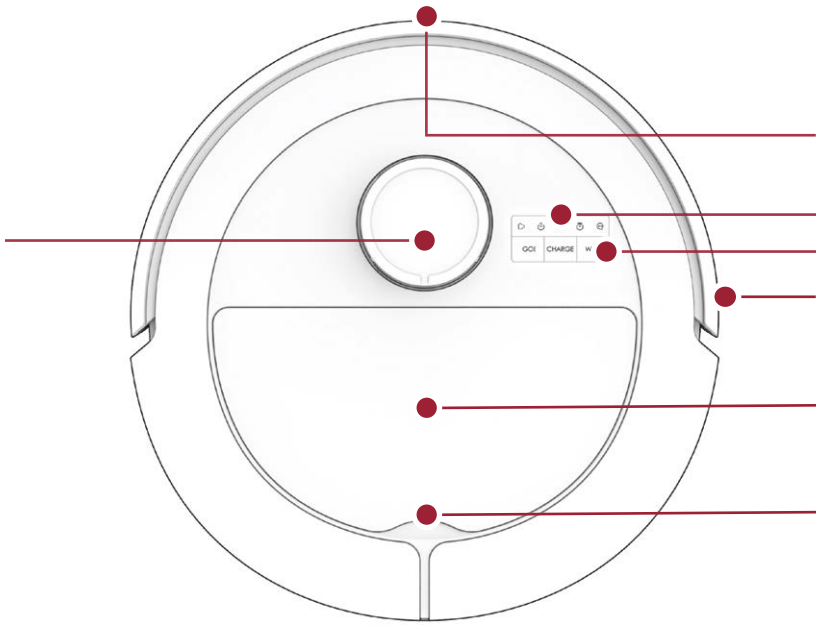

- VisiOn Camera
- Display Screen Buttons
- Wall Follow Sensor
- Top Cover
- Top Cover Tab

FloorSense™ Sensor
Front Wheel
Side Brush
Right Wheel
Main Brush
Main Brush Gate

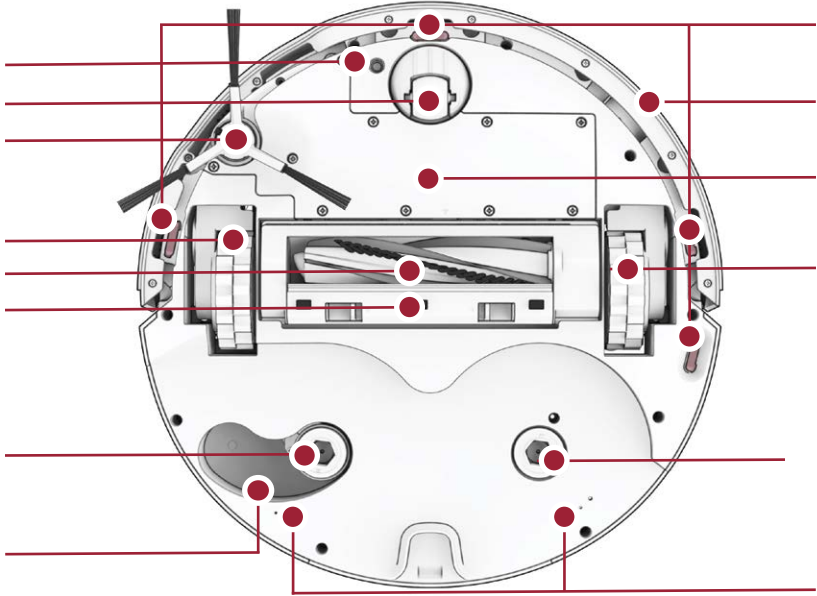

- Edge Sensor
- Speaker
- Battery
- Left Wheel
- Right Mop Connector / EdgeReach™ Mop Arm/ Mop Arm Socket
- Left Mop Connector
- Mop Water Dispenser



Anatomy

Maxim[®]

EdgeReach[™]
Side Brush Arm

Mop

Disposal Vent
Aperture / Flap

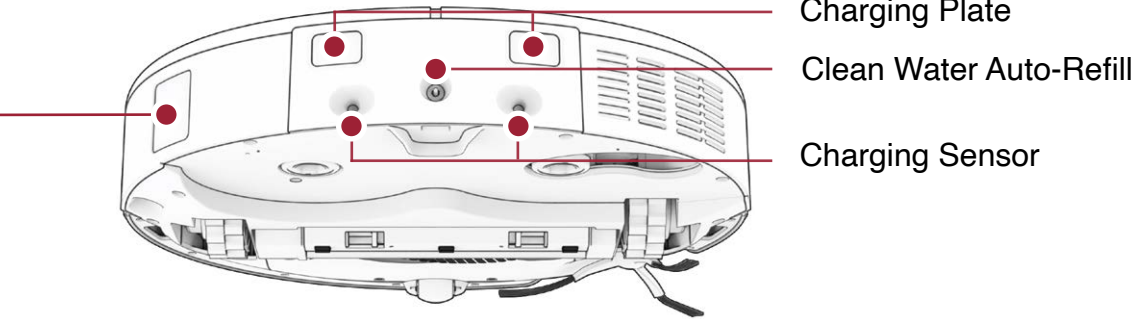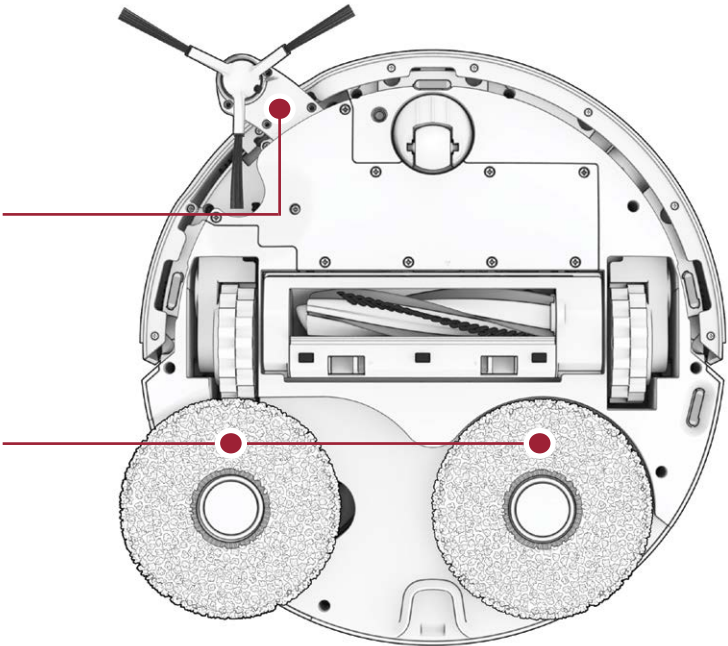

Anatomy

Dustbin & Filter


Dustbin Release Tabs

Disposal Vent

Disposal Vent
Aperture / Flap

Dustbin

Top Cover
Magnetic Holders

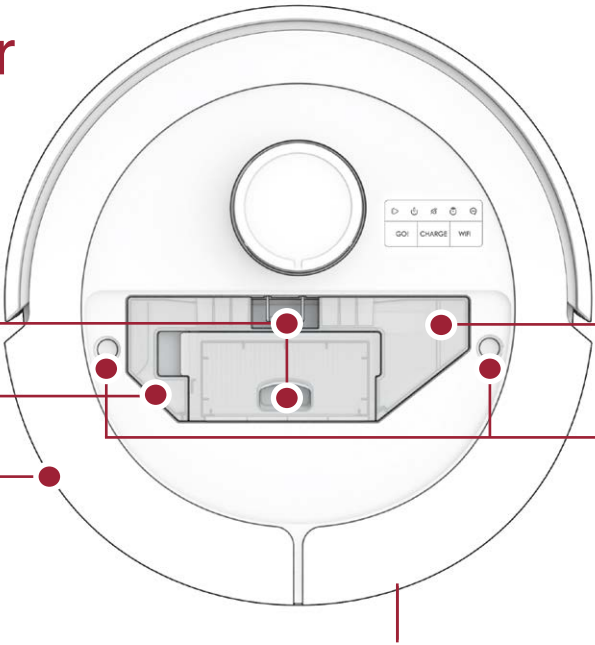

Filter Release Tab




Dustbin Disposal
Port

Dustbin


Dust Inlet

Filter Cartridge
(non-removable)


Filter

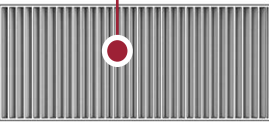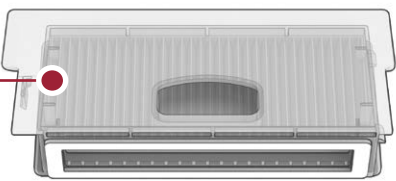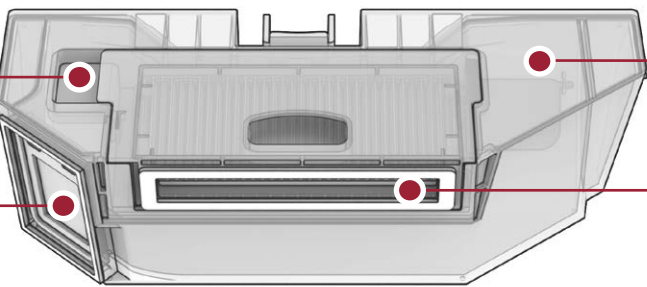


Display Screen & Buttons

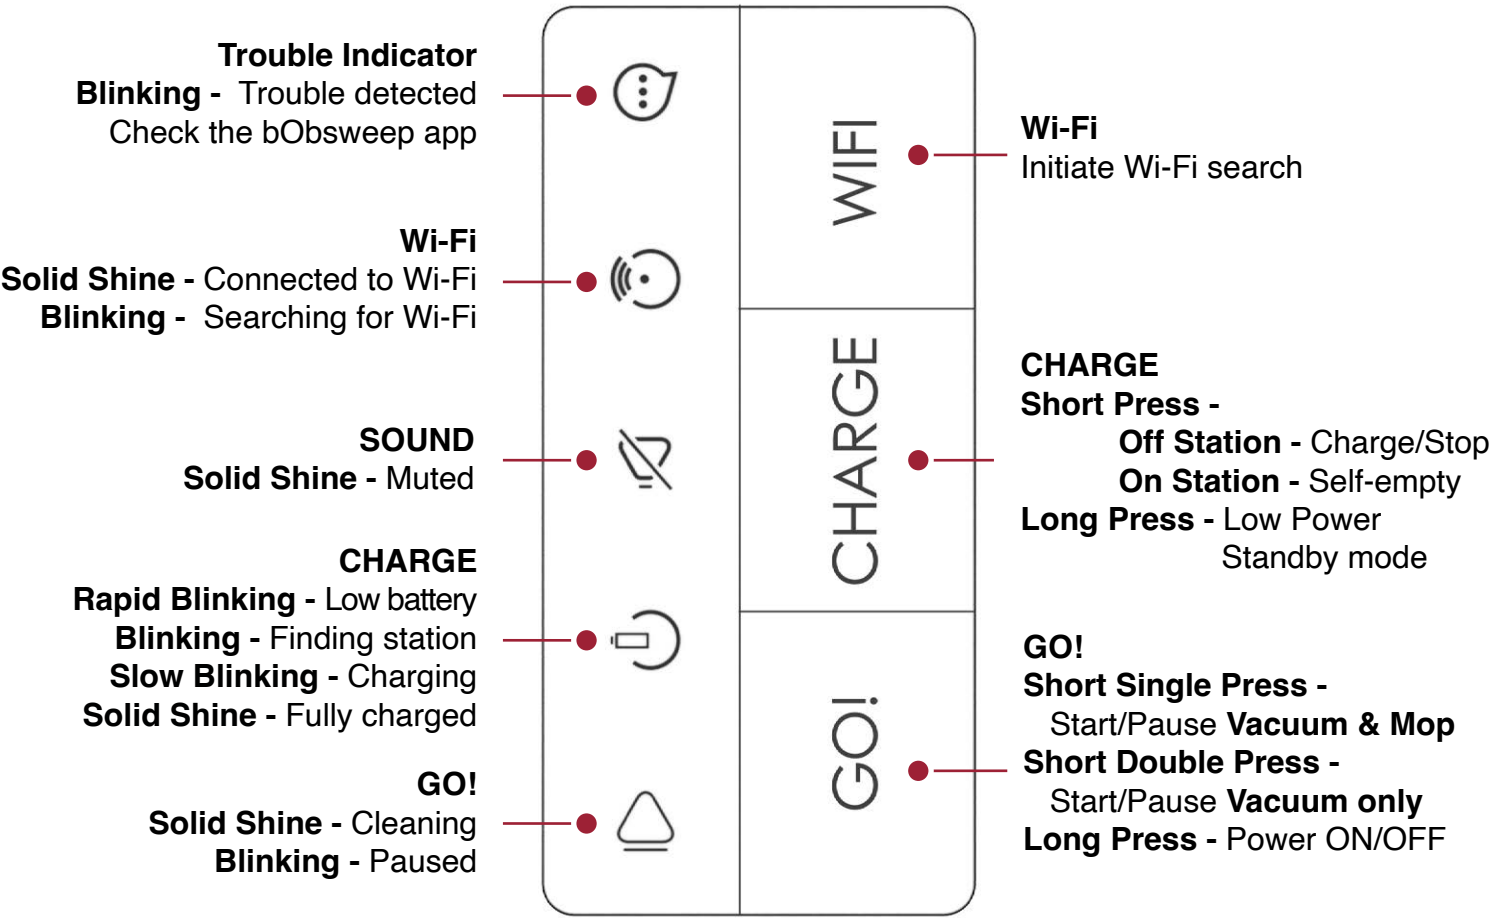


Charging Station

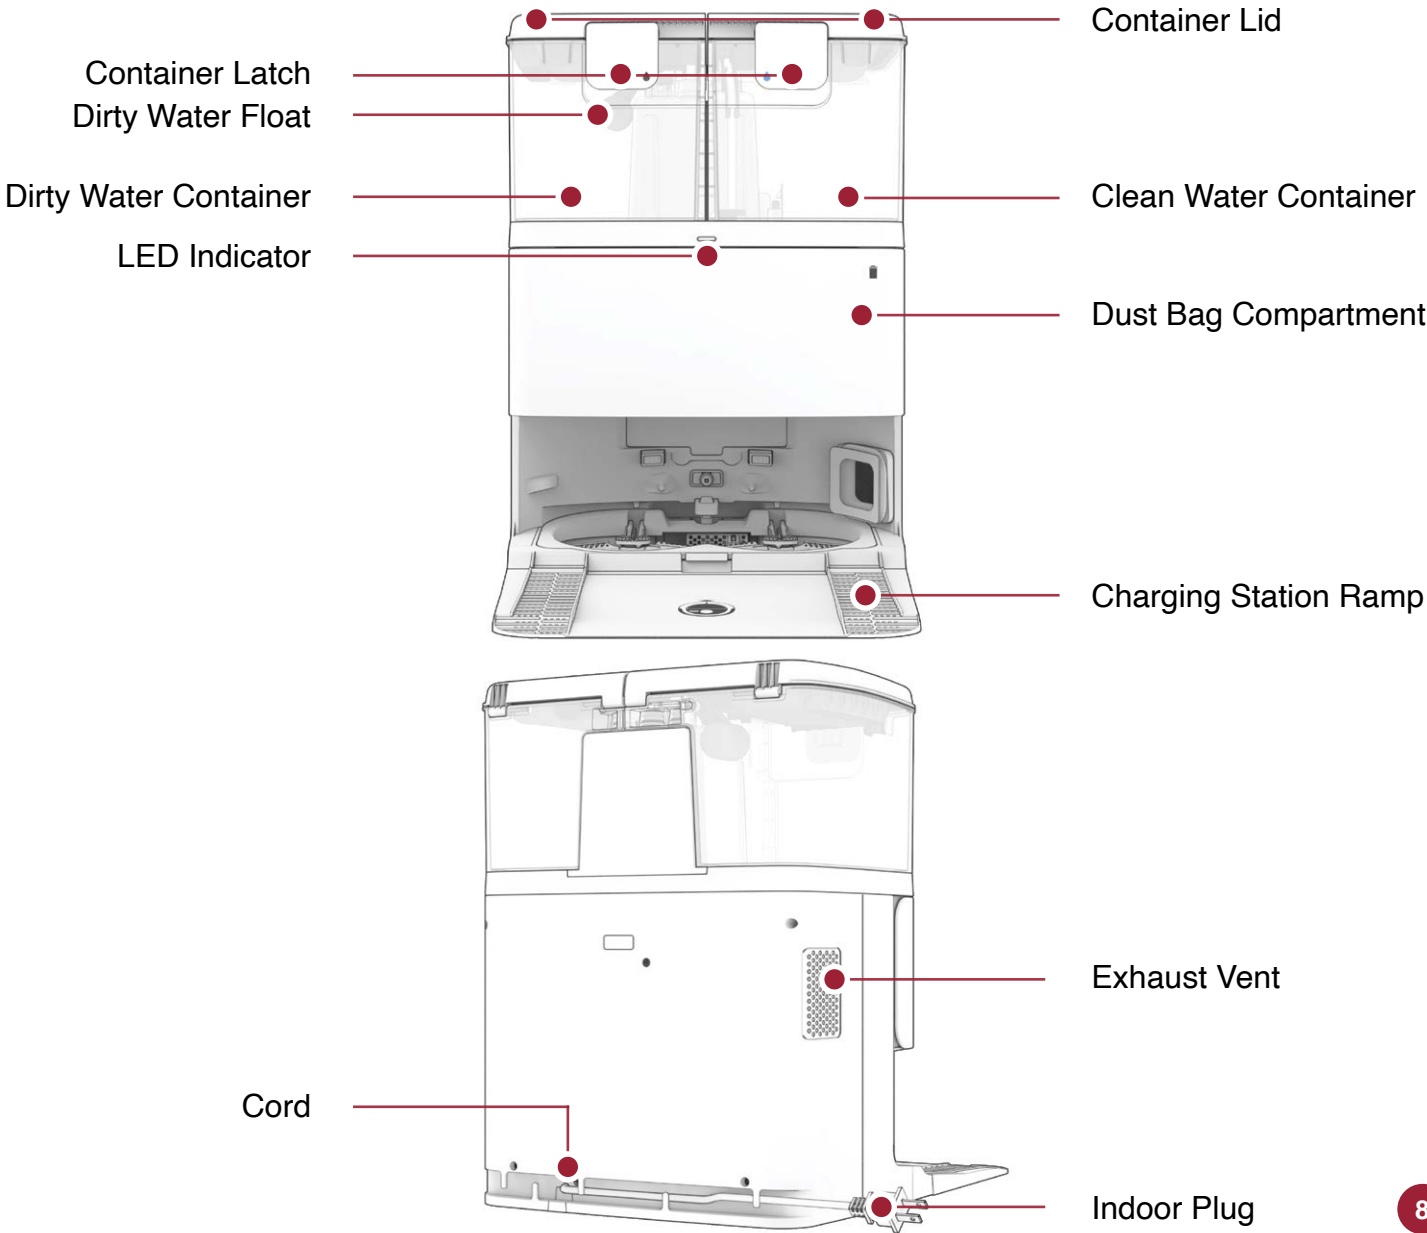

Charging Station

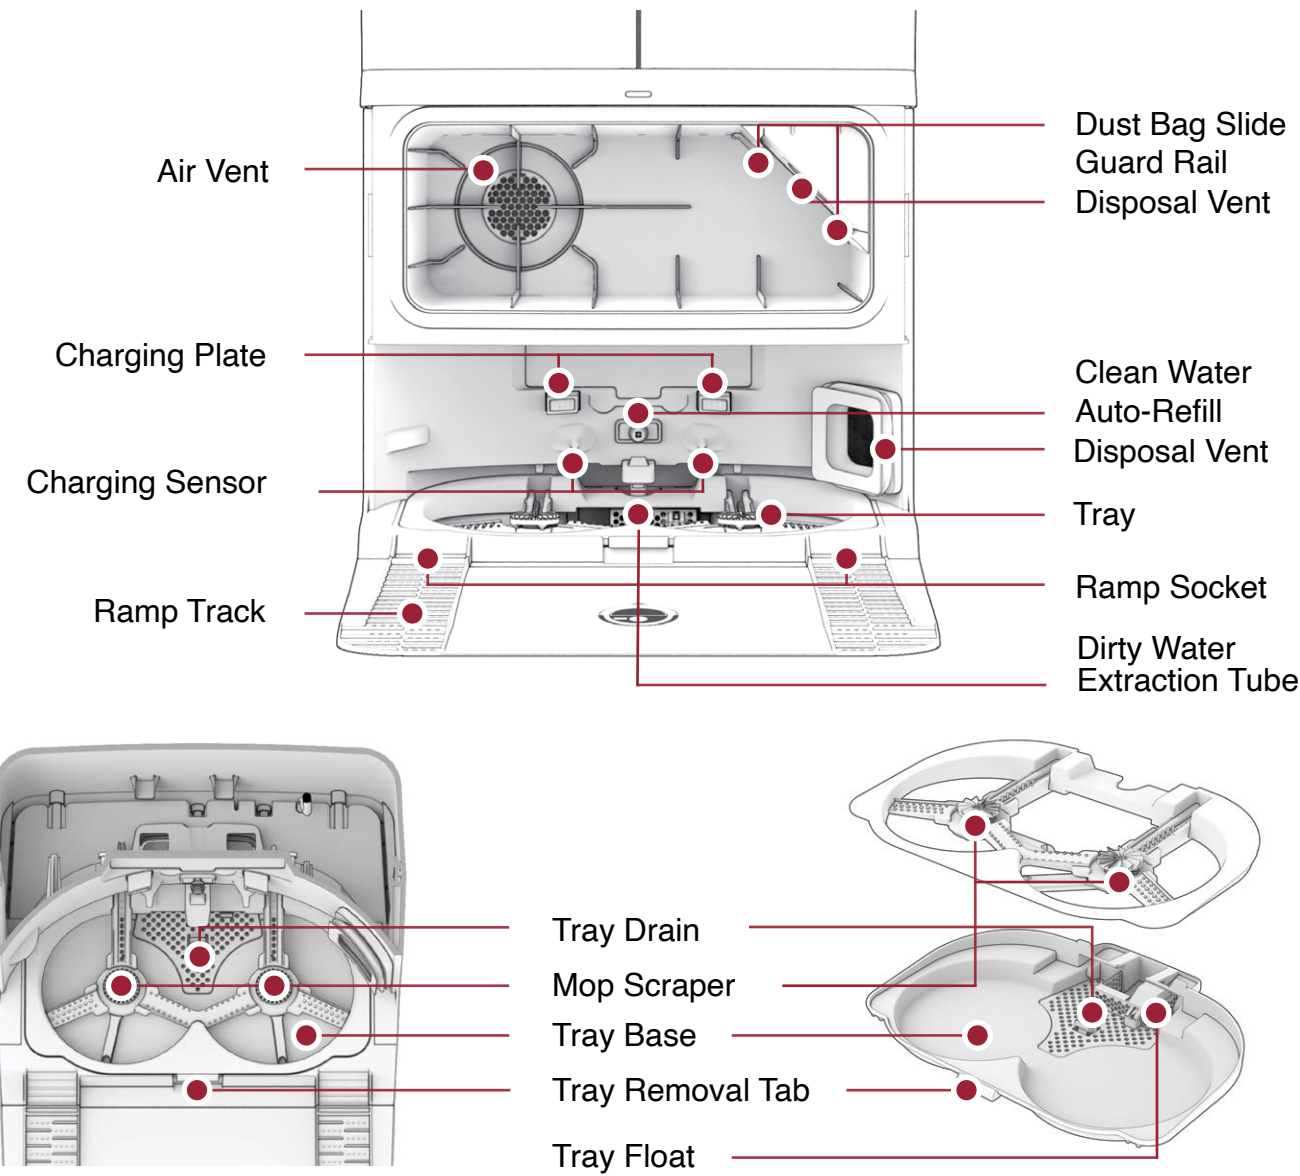

Charging Station

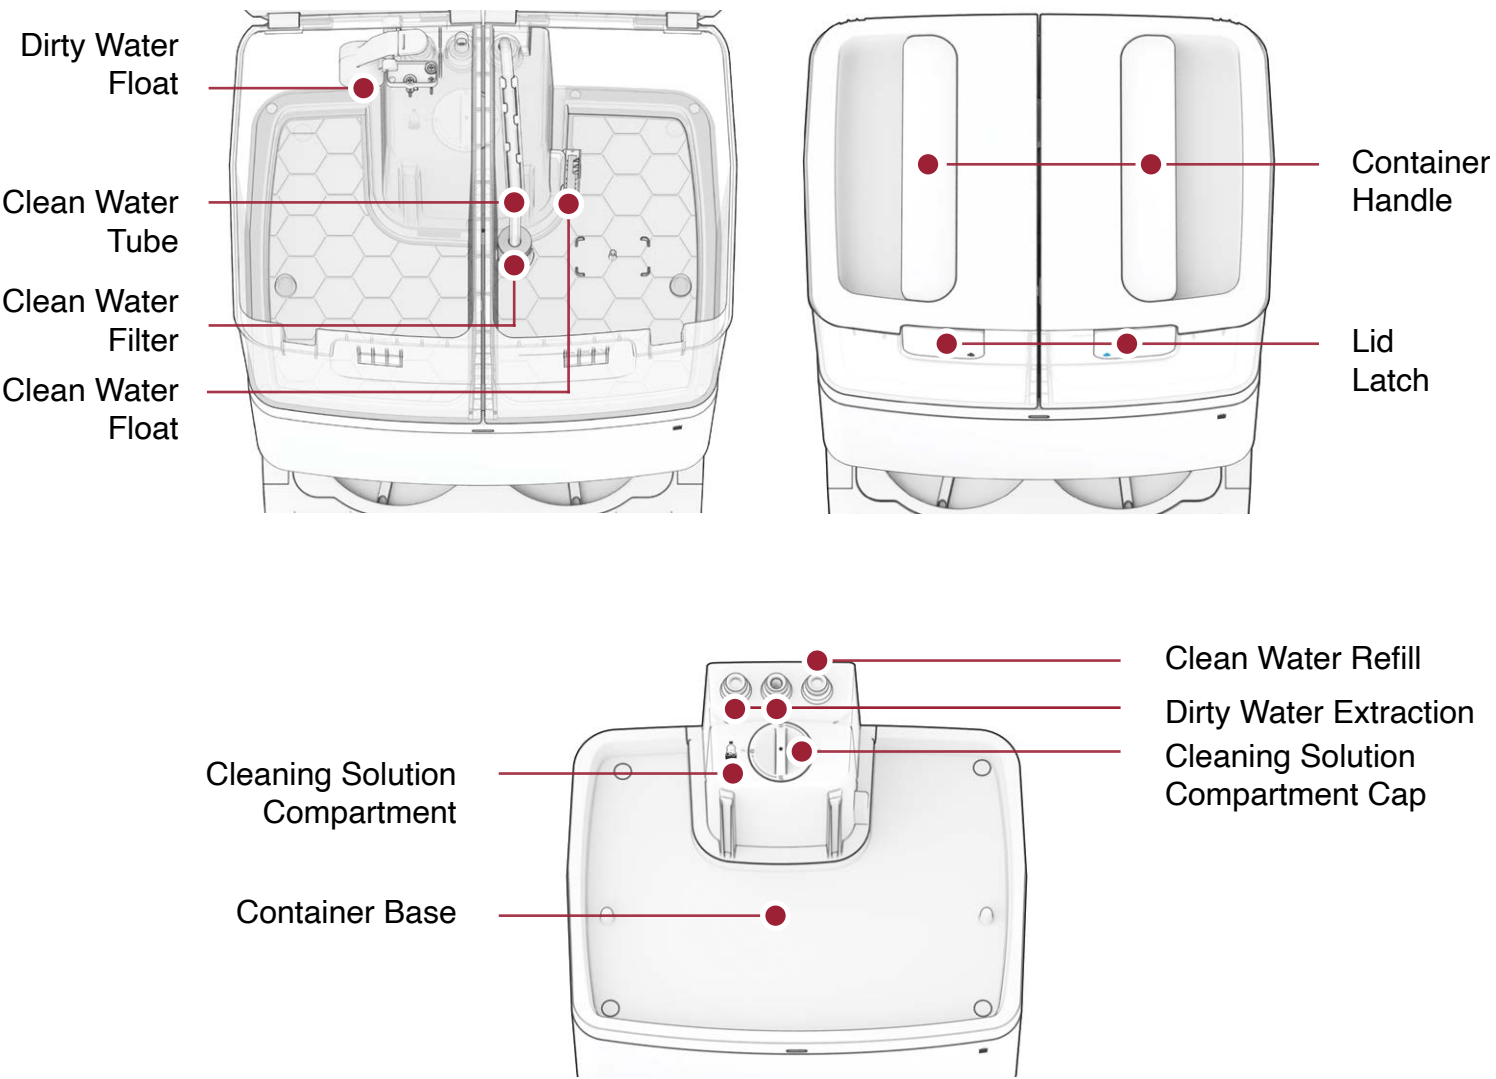

Who is Maxim?

Maxim is an autonomous robotic vacuum cleaner, at your service! Connect Maxim to Wi-Fi and use the bObsweep app to create a customized cleaning plan. Maxim will clean your home, your way.

How does Maxim find his way?

Maxim uses laser vision, a network of sensors, and a state-of-the-art QSLAM® mapping and localizing technology to detect walls, furniture, and obstacles.

As Maxim cleans, he simultaneously creates a map of the areas he can access and clean. You can view and customize this map by tapping the Map button on the Control page of the bObsweep app. Using the map and the app's customization tools, Maxim efficiently cleans your home throughout a full cycle.


Equipped with dual scrub mops, Maxim vacuums and mops simultaneously while avoiding carpets and rugs. His EdgeReach extendable arms reach tight corners for an immaculate, thorough clean.

After cleaning, Maxim returns to his charging station to empty his dustbin and to wash and dry his mops. Enjoy truly hands-free, automated vacuuming and mopping with Maxim.

Learn about Maxim's map and his features:



More how-to videos and instructions:

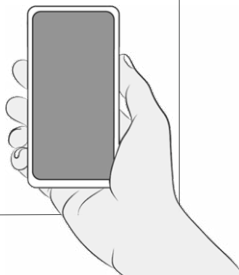

Who is Maxim?

Specialty furniture, such as desk chairs with wheels or stools with circular bases, may take longer for Maxim to clean around; he may get stuck on a ledge for a few minutes, and then decide to clean somewhere else. Allow him to continue cleaning and finding his own way around.

Stairs and Edges

Remove small objects such as shoes, toys, or mats near stairs, as Maxim may fall while trying to avoid them. To prevent an accidental fall caused by objects left near stairs or edges, draw a **NoSweep™ Zone** on the map to block the entire stair width.

NoSweep™ Zones

Maxim respects your limits and boundaries! Using the bObsweep app, draw **NoSweep™ Zones** on the map — perfect for marking off-limit or hard-to-navigate areas. Maxim will avoid these zones, whether vacuuming, mopping, or both.

Dark-colored Carpet

If Maxim backs up repeatedly or a trouble message appears

when he's on dark carpets, try turning off Edge Detection in the app: Settings > Cleaning Preferences > Edge-detection. **Warning:** With the edge sensors off, Maxim cannot detect stairs. Be sure to draw a **NoSweep™ Zone** on the map to block the entire stair width.

FloorSense™

With **FloorSense™** toggled ON (default), Maxim detects carpets and lifts his mop automatically. To force mop an area, turn off FloorSense in the app: Settings > Cleaning Preferences > FloorSense. **Caution:** Maxim can't detect rugs and carpets with the **FloorSense™** sensor turned off.

NoMop™ Zones

If you have non-carpet areas

in your home that you would like vacuumed but not mopped, draw a **NoMop™ Zone** on the map before sending Maxim to clean.

Shag Carpet

Maxim detects and avoids mopping carpeted areas. When his mop is lifted, he can cross rugs of up to 0.5 inch (1.25 cm) high. For taller high-pile carpets, simply draw **NoSweep™ Zones** on the map to keep Maxim from climbing into those areas.

Spacious Spaces

If Maxim can't finish the job in one charge, turn on **Auto-Resume** in the app: Settings > Cleaning Preferences > Auto-Resume. Maxim will recharge, and pick up right where he left off after recharging.

Getting Started

EdgeReach™

Maxim is equipped with two extendable side brush and mop arms to help him reach into corners & along walls. In order to enable them, turn on EdgeReach in the bObsweep app: Settings > Cleaning Preferences > EdgeReach.

You can activate the side brush, the mop arm, or both, depending on your cleaning needs.

Object Detection

Turn on Maxim's VisiOn camera, and he will detect small, very low-height objects and will mark them directly on the map. To enable Object Detection, go to: Settings > Cleaning Preferences > Object Detection.

Vacuum Power

By default Maxim cleans in his energy-efficient, low power mode, providing

quieter operation for everyday cleaning. To experience Maxim's maximum suction power of 20,000 Pa, switch the setting to High in the app. Note that Maxim will use more battery when operating on the High setting.

Mop Intensity

Define Maxim's mop intensity in the bObsweep app: Settings > Cleaning Preferences > Mop Intensity. Higher mop intensities use more water, require more frequent refills, and consume more battery.

Refresh Cycle

Depending on your vacuum and mop settings and the size of your space, Maxim may need to freshen up mid-cleaning. When this happens, Maxim will pause cleaning for a few minutes and return to his station to refill his water reservoir and refresh his mops. Choose the mode that best suits your household, and set the desired water temperature for mop cleaning in the app.

Deep Clean Cycle

At the end of each cleaning session, Maxim automatically empties his dustbin, then deep-cleans the mops using heated water and cleaning solution, and finally dries them. This ensures the mops are refreshed and hygienic.

Self-empty Intervals

When Maxim docks, a short but loud vacuuming process empties his bin into the dust bag. Adjust the self-emptying frequency in the app, keeping in mind that if the dustbin becomes too full, its contents may not be emptied properly. For the first few days, allow more frequent self-empties to prevent the bin from getting too packed, ensuring proper airflow.

Multi-floor Homes

Want to clean multiple floors? Maxim can handle them all—he saves up to 3 separate floor maps. To save a map, click the dropdown menu next to Map at the top of the map page. Then tap "+", and give you map a name.

Maxim's First Clean

Install the Side Brush

Install Maxim's side brush to help him reach the corners and edges of rooms.


Parts You'll Need:




Side brush

Before Using Maxim

Remove all protective foam pieces and invisible films from Maxim's bottom, bumper, and the charging station before use.

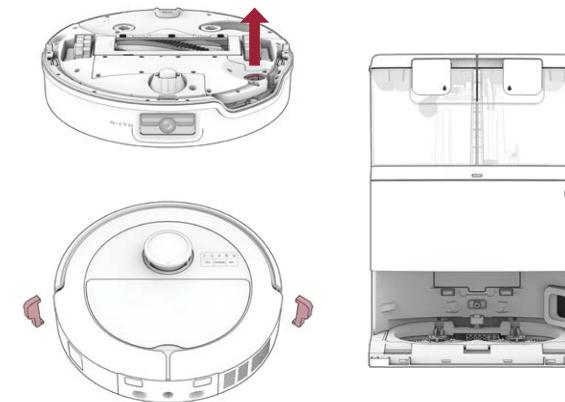

Place the side brush over the empty socket on Maxim. Press down to click and lock in place.

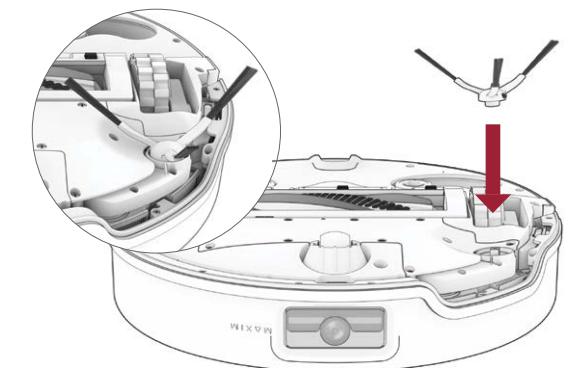

Maxim's First Clean

Attach the Mops

Attach Maxim's mop attachments and mops.

Parts You'll Need:




Mop attachment (x2)




Mop cloth (x2)

Before Using Maxim

Look inside the charging station containers and remove any anti-moisture packs before use.

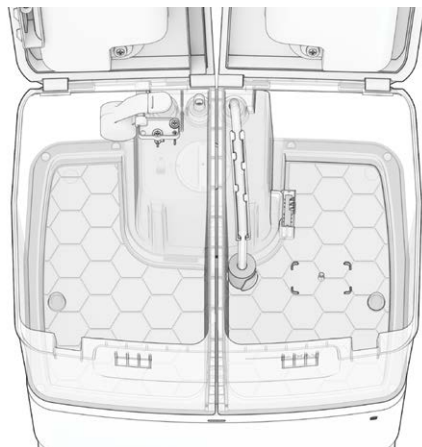

Place the mop cloths over the mop attachments and secure them on the Velcro side. Then, insert the mop attachments into the connection slots under Maxim. The magnets will connect and hold the mop attachments in place firmly.

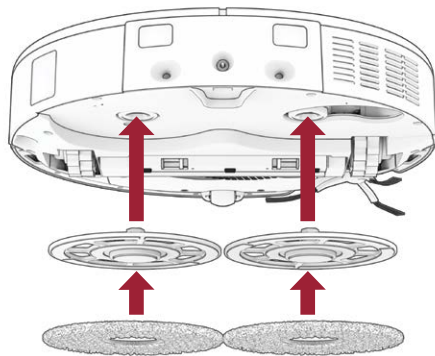


Maxim's First Clean

Set Up the Charging Station

Bright sunlight, shiny surfaces, and reflective objects can interfere with Maxim's docking signals. Set up Maxim's station in a central area away from uncovered windows, mirrors, and shiny objects.

Parts You'll Need:




Charging station




Charging station ramp

Positioning

Place the charging station in a central area with a strong Wi-Fi signal, on a hard, flat surface, away from edges or stairs, and with plenty of space around it for easy docking.

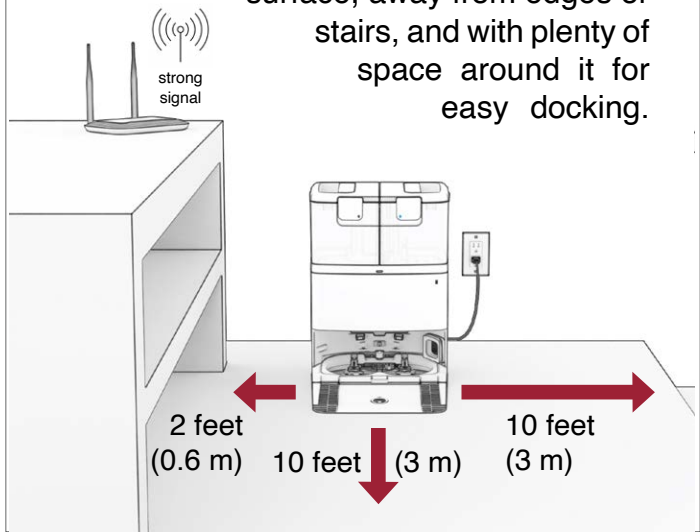

Align the ramp with the front of the charging station and press down until it snaps and locks into place.

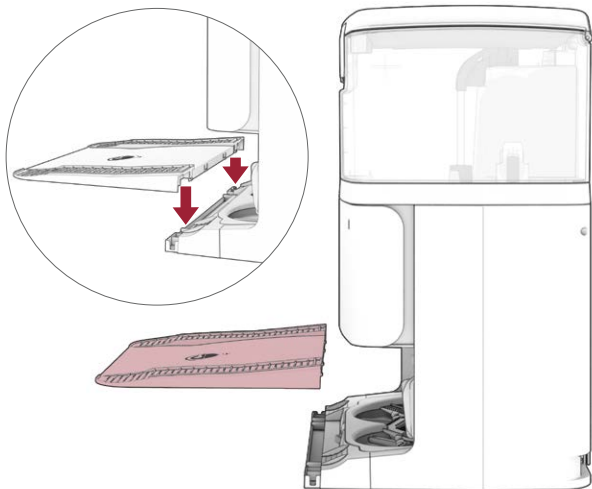


Maxim's First Clean


Add Cleaning Solution

Pour compatible cleaning solution directly into the compartment inside the charging station.

1. Using the handles on top, lift and remove the clean and dirty water containers from the station.

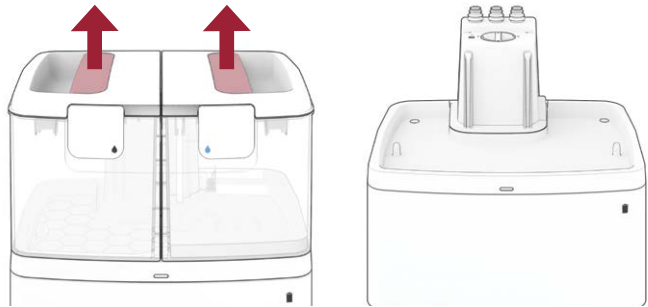

2. Twist the cleaning solution compartment cap counterclockwise to open.

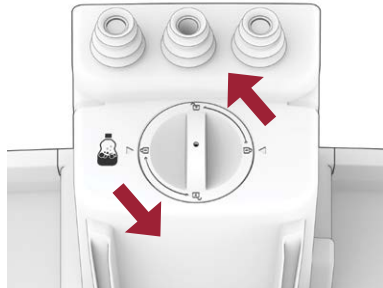


3. Pour Maxim's cleaning solution into the compartment. Close the cap by turning it clockwise.



4. Secure the dirty water container back onto the station.

Quick Tip: Only certain cleaning solutions can be safely used with Maxim. Compatible solutions can be found on bobsweep.com/maxim-parts, or on the shop page of the bObsweep app.

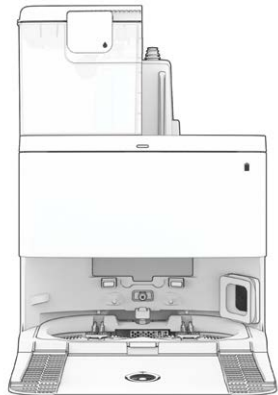


Maxim's First Clean

Add Water


Add water to the clean-water container. In hard-water areas, use distilled water to prevent scale on pumps, lines, and motors.

1. Pull the latch straight up to open the clean water container.


Important Note:
Do not use force. The latch is fixed and does not flip or hinge open.

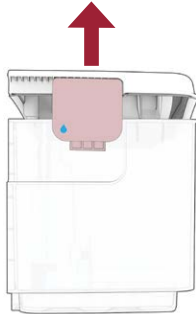


2. Fill the container with clean water up to maximum fill line.

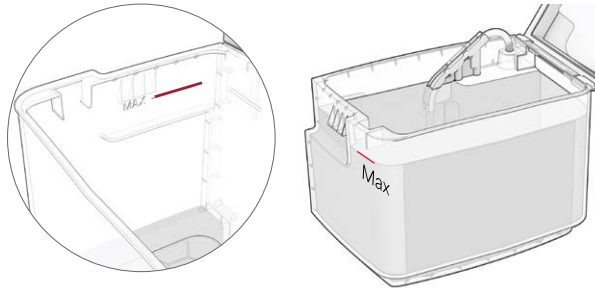

3. Close the lid and press down to lock the latch securely in place. Before lifting, test to ensure the container is shut tight.

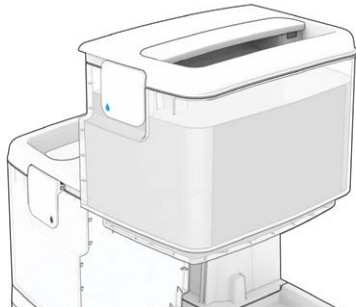


4. The station's LED indicator shines blue to confirm it is ready for Maxim to dock.

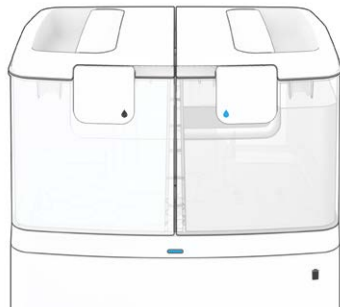

Power ON and Charge Maxim

Press and hold the GO! button until the screen lights up. Maxim chimes to confirm he's powered on. Press the CHARGE button on Maxim to send him to his charging station.

Parts You'll Need:




Charging station

Charging Indicator



- Low Battery: blinks rapidly.
- Finding Station: blinks.
- Charging: blinks slowly.
- Fully Charged: shines white.

To charge Maxim manually, place him in front of the charging station and slide him forward until the metal charging contacts are aligned. To remove Maxim manually, slide him toward you and then lift him off the station.

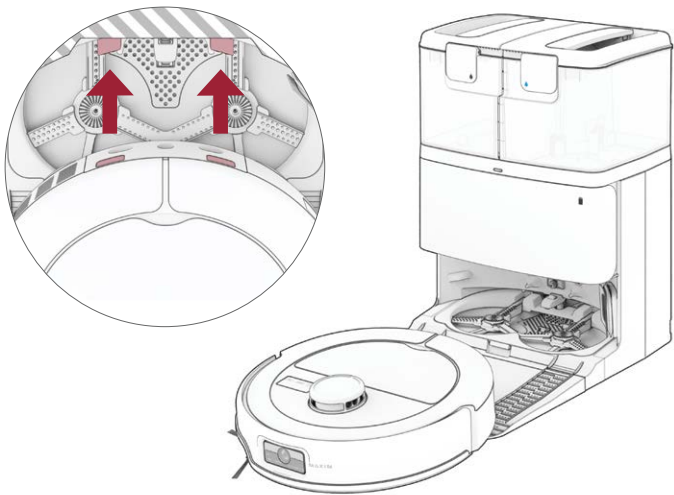

Quick Tip: Maxim comes with a partial charge, but we recommend charging him for up to 4 hours before his first cleaning cycle.

Download the bObsweep App

Connect Maxim to Wi-Fi to unlock his full suite of features and receive important software updates. Follow the instructions in the bObsweep app to connect Maxim to Amazon Alexa or Google Home devices for voice control.

Items You'll Need:




Smartphone



2.4GHz Wi-Fi connection


Swift Map™

Maxim maps the floor at first glance. Choosing Swift Map™ makes Maxim start a map-only run. Maxim returns to his charging station after mapping the entire floor. Leave doors open and remove clutter before initiating a Swift Map.

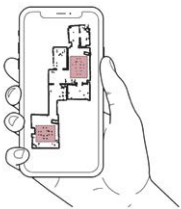

Quick Tip: For best results, remove mop attachments before starting a Swift Map™, if installed.


Open the bObsweep app, create your account, and follow instructions to connect your bot to Wi-Fi. Scan for a step-by-step video guide.

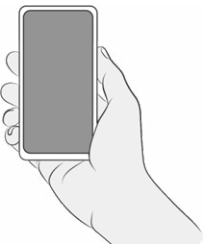

Let Maxim GO!

Maxim is now ready to clean. Clear away any clutter, cords, or loose objects, then press GO! on Maxim or in the app. He will automatically explore, map, and clean your floors in straight lines. At the end of the cleaning routine—or whenever needed—Maxim will return to his charging station to refill water, refresh his mops, or empty his dustbin.

Lifting & Moving

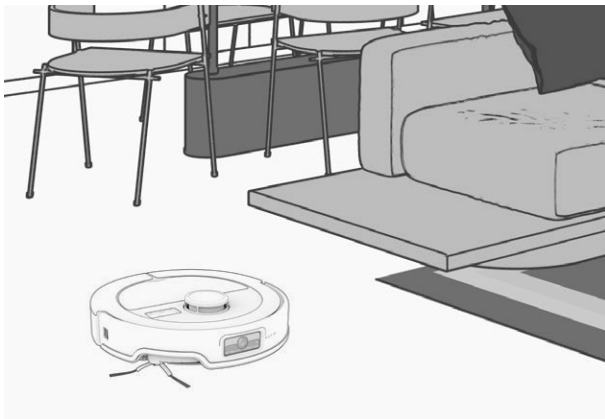

Avoid picking up Maxim while he is cleaning, as this may disrupt his map. Do not move the charging station after Maxim has completed mapping. If the station is moved, initiate a new Swift Map™ to remap the area.


As Maxim cleans, he simultaneously creates a map of the areas he can access and clean. You can view this map by tapping the Map button on the Control page of the bObsweep app. From there, you can customize the map, assign room names, and set cleaning schedules directly in the app. With the map and scheduling tools, you can set Maxim up once and enjoy weeks of hands-free clean home.



Cleaning Modes

Use 'Vacuum only' mode when mopping is not needed, and 'Vacuum & mop'—default mode—for homes that benefit from both suction and a fresh wipe. You can select your preferred mode in the bObsweep app or directly on Maxim before starting a cleaning session.

On the app

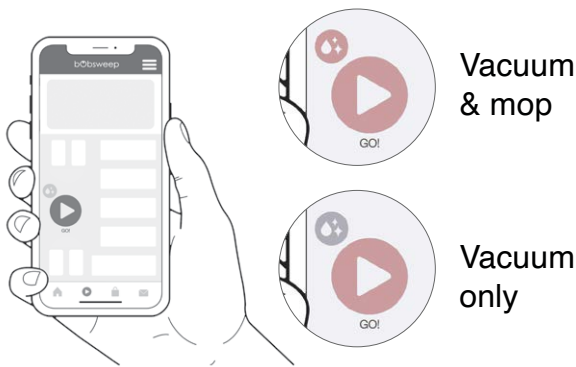

Mop On, tap GO!: Vacuum & mop
Mop Off, tap GO!: Vacuum only

Quick Tip: Turn mopping off anytime in the app under Settings > Cleaning Preferences > Mop Intensity.

On Maxim



Short press GO!: Vacuum & mop
Double-click GO!: Vacuum only

Quick Tip: Remove Maxim's mop attachments in Vacuum only mode.

Refresh Cycle

Depending on your vacuum and mop settings and the size of your space, Maxim may need to freshen up mid-cleaning. When this happens, Maxim will pause cleaning for a few minutes and return to his station to refill his water reservoir and refresh his mops. Choose the refresh cycle type that best suits your household, and set the desired water temperature for mop cleaning in the app.

Default, Light, or Heavy

Default Mode: Maxim decides when to refresh automatically.

Light Mode: Maxim focuses on faster cleaning and refreshes only after completing a full session. If his water runs out, he will pause to refill before continuing.

Heavy Mode: Maxim refreshes every 15 minutes for deeper cleaning performance.

Self-Emptying Frequency: Adjust how often Maxim empties his dustbin during the refresh cycle if you do not want him to self-empty every time he docks.



To change Maxim’s refresh cycle, open the bObsweep app and go to: Settings > Mop Auto-Clean. Scan for a step-by-step video guide of the charging station’s refresh and deep clean cycles.

Deep Clean Cycle

After each cleaning session, Maxim automatically returns to his charging station, empties his dustbin and begins the deep clean cycle, rinsing his mop cloths with heated water and detergent.

1. Mop washing takes anywhere from 2 to 6 minutes, depending on how dirty the mop cloths are. Maxim’s dirt sensors measure the soil level and automatically adjust the wash time as needed.
Important Note: Do not interrupt Maxim while the mops are being washed. It is normal to hear noises throughout this process as the mops and mop scrapers spin and water is pumped in and drained out.

2. After washing, Maxim enters the auto-drying phase where the station will proceed to dry the mop cloths by blowing heated air over them. This process takes about 4.5 hours.
Quick Tip: You may hear a low hum coming from the charging station while the dryer is active. If the default mode is too loud, switch to Quiet for a quieter drying operation in the app. Go to: Settings > Mop Auto-Clean > Air-dry.
3. Empty and wash the dirty water container before it becomes full. Once the container is full, water can no longer be drained. If stale water remains undrained in the tray, you will need to manually empty and clean it before the station can operate again.

4. If the tray contains water or debris, remove it and wash all its parts. Wipe the bottom of the station clean and dry. Ensure the dirty water extraction tube is free of obstructions and positioned correctly, perpendicular to the bottom of the charging station. For stubborn debris, clean the area with a sponge and mild soap.

Important Note: Leaving dirty water sitting in the container or tray is unhygienic, as it can produce odors and bacteria buildup. Clean with soap regularly and use warm water, soap, and a sponge to remove stubborn debris.

For Best Performance

To keep Maxim at optimal performance, follow these care and maintenance instructions.

Item	Part	Maintenance Frequency	Replacement Frequency
Maxim	Brushes	Weekly	Every 6 – 12 months
	Sensors	Monthly	
	Dustbin	Monthly	
	Filter	Weekly	Every 4 – 6 months
	Mop Cloths	Monthly	Every 2 – 3 months
	Front Wheel	Monthly	
	Battery		Every 24 – 36 months
Charging Station	Dirty Water Container	Monthly	
	Auto-Wash Tray	Monthly	
	Sensors	Monthly	
	Dust Bag		Every 1 – 3 months
	Clean Water Filter	Quarterly	Every 6 – 12 months

Quick Tips: Wipe clean the charging plates on Maxim and his station.

Regularly clear debris out of nooks and crannies on the robot and charging station.

Use tweezers to remove congestion and debris build from the brush ends and main and side brush compartments.

Use scissors or the included cleaning tool to cut hair wrapped around the brushes.


Scan for a step-by-step video guide:




Brushes

Clean the side and main brush on a weekly basis for best performance.


1. Pull up to remove the side brush.

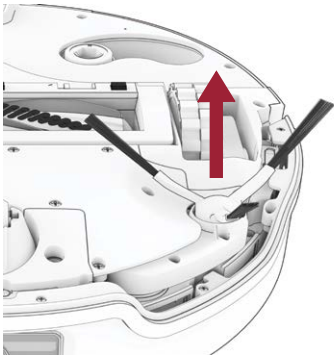


2. Remove debris from the side brush and its socket.

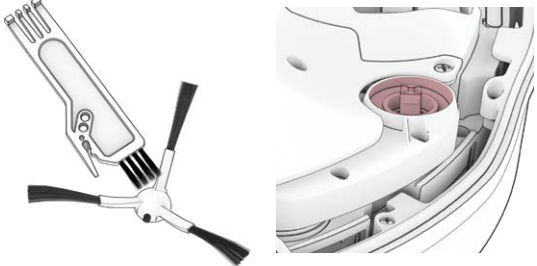

3. Pinch the tabs on the main brush gate and lift. Tilt the brush upward and slide it off the rod.

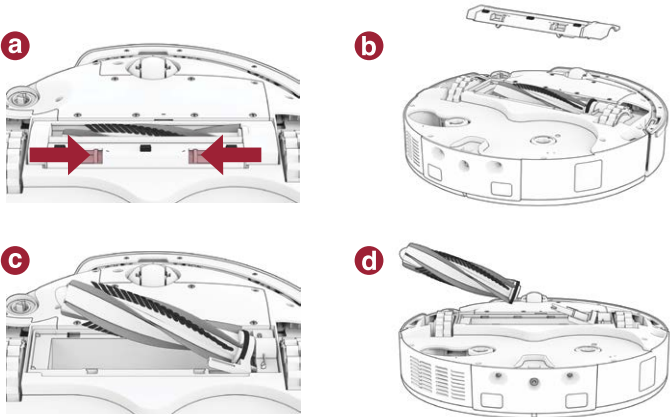


4. Clean the main brush and its components, including the main brush gate and brush compartment on Maxim.

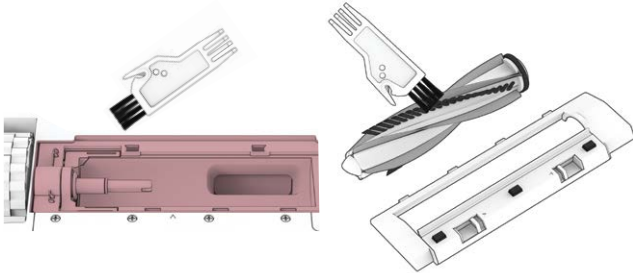


Sensors

Use a soft, clean, dry, lint-free cloth to wipe the sensors. Do not spray cleaning solution or water on the sensors or sensor openings.

1. Clean the 4 edge sensors, FloorSense sensor, wall follow sensor, and obstacle sensors.

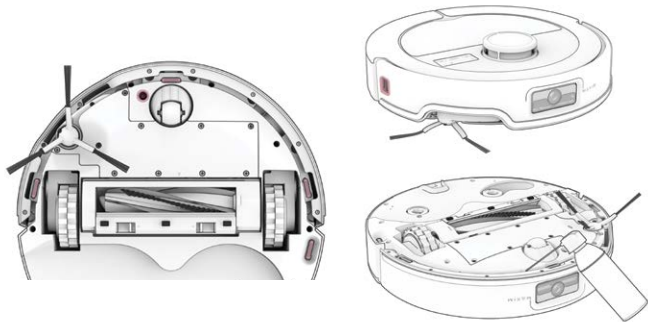


2. Wipe the charging plates and charging sensors on Maxim and his station.

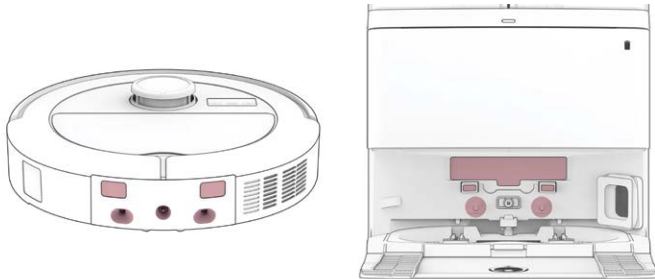

3. Wipe the metal connectors on the bot and wet mop attachments.




4. Wipe the VisiOn camera and the SLAM LiDAR. Check for debris and gently remove it to maintain clear vision and localization.

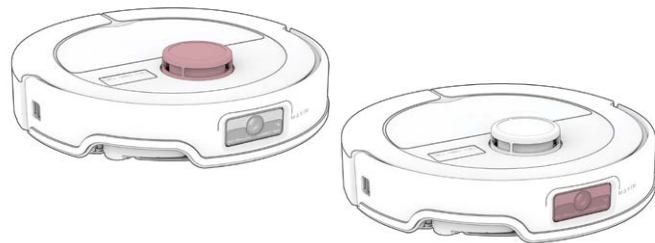


Important Note: Maxim's SLAM LiDAR is a sensitive sensor. Do not apply force, insert objects, or adjust the SLAM LiDAR. Do not sit on Maxim or place items on top of him.

Dustbin and Filter

1. Remove Maxim's top cover. Press the dustbin release tabs to remove the dustbin.

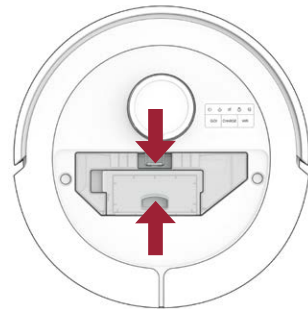


2. Remove the filter and dust it off using the cleaning tool. For heavy debris, use a suction device like a handheld vacuum.

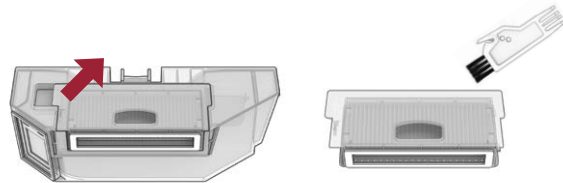


Important Note: The filter compartment is fixed and does not open.

3. Empty the contents of the dustbin and wipe the inside clean. You may also wash the dustbin. Allow it to dry completely before reinserting.

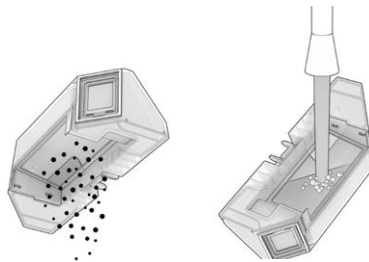


Important Note: The dustbin is not dishwasher safe.

4. Replace the filter and dustbin. Return Maxim's top cover to its position.

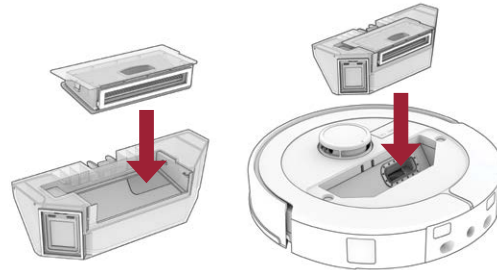


Mop Cloths


1. Remove the mop attachments and separate the mop cloths from the mop attachments.

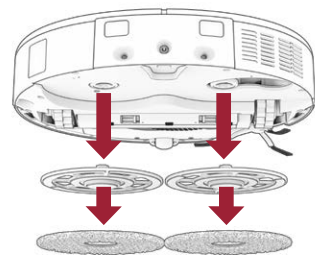


2. Shake off any loose dust or debris before washing. Wash the cloths by hand or in a washing machine with mild detergent. Air dry the mop cloths. Do not place them in a dryer, as the heat may damage the Velcro strips.

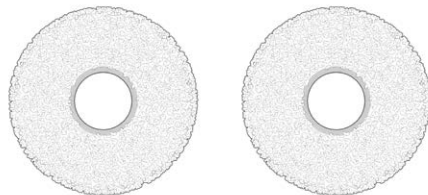

3. Use striped microfiber mops on hardwood floors and for light mopping. Use solid-color heavy-duty mops for extra scrubbing on textured floors like tile.

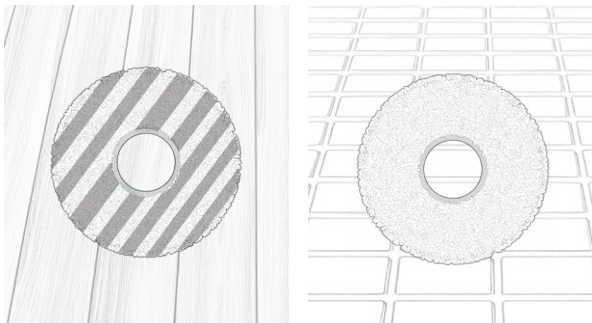


4. Attach the mop cloths back onto the mop attachments and connect the mop attachments to Maxim.

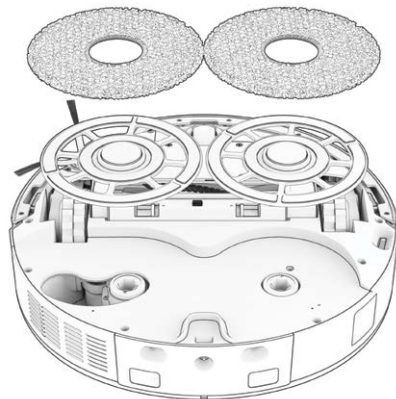

Front Wheel


1. Using a flat head screwdriver for leverage, grip the wheel firmly and pull. Remove debris from the wheel and its socket.

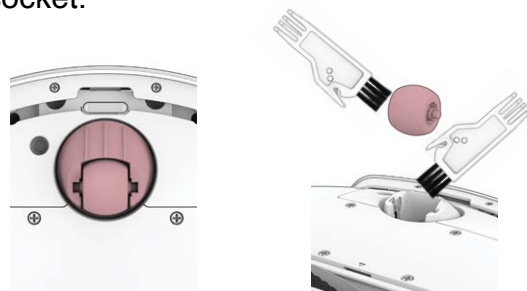


2. If there's debris inside the wheel's socket, open the wheel assembly to clean it. Rotate the socket to remove the two screws on the left and right sides.



3. Pry out the wheel assembly with the screwdriver to clean the wheel socket and all its components.

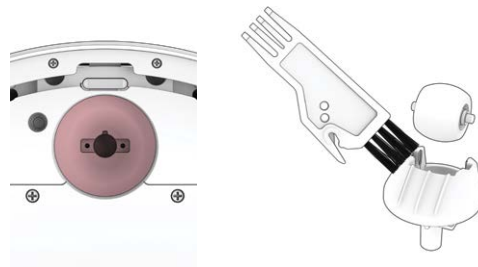


4. Replace the socket and screws when done. Press down to lock the wheel into place.

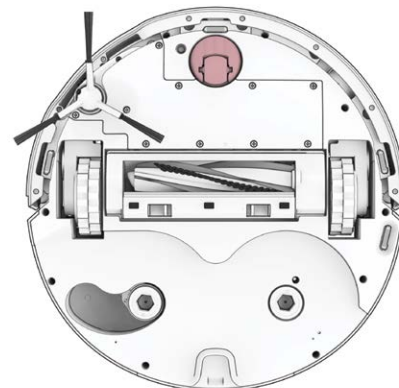


Battery

Press and hold the GO! button until Maxim is powered OFF before replacing the battery.


1. Use a Phillips head screwdriver to open the battery compartment's 10 screws.

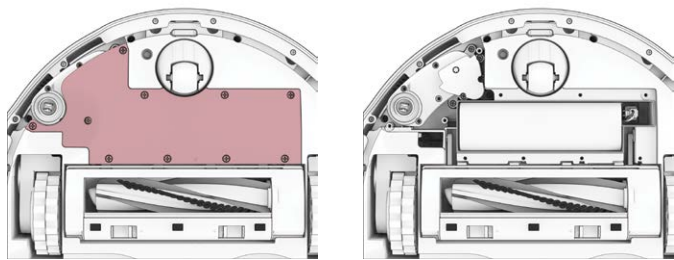

2. Unplug the battery and plug in a new battery.

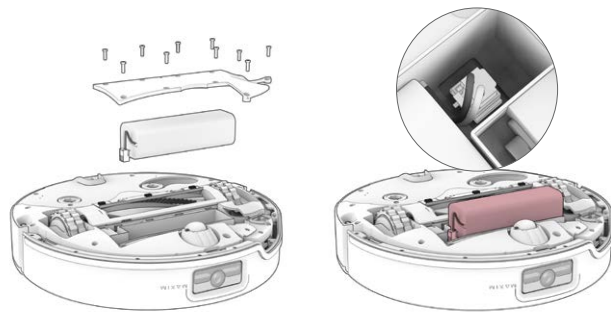

3. Slide the new battery into Maxim.

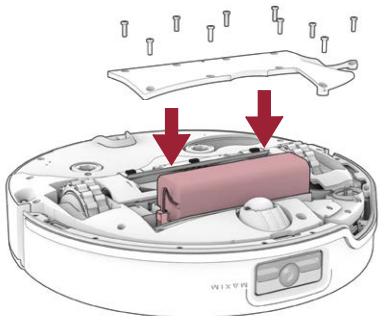

Important Note: High power mode significantly increases Maxim's energy use and can reduce its run time to roughly one-third to one-quarter of its maximum (advertised) working time.


4. Do not dispose of an old battery in household trash or curbside recycling. Used batteries must be recycled or handled through a proper hazardous-waste program. In the U.S. and Canada, you can bring your used battery to a participating Call2Recycle® drop-off location. To find a site near you, visit their battery-recycling locator or call 1-877-2-RECYCLE.

Local electronics retailers, municipal recycling centers, or household hazardous-waste programs may also accept Li-ion batteries.

Battery Conservation

High-power modes increase Maxim's battery consumption exponentially, reducing overall runtime. For everyday cleaning, use low-power modes to conserve energy and extend battery life.

Storing Maxim

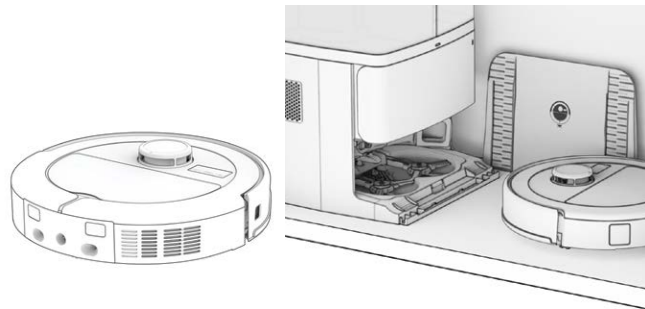

If you are not using Maxim for an extended period of time (over a month), power him OFF, remove his battery, and unplug his charging station. Store everything in a dry room, away from direct sunlight or extreme temperature.

Not using Maxim for a few weeks? Activate Low Power Standby (LPS) mode. To do so, place Maxim on his charging station. Press and hold the CHARGE button on Maxim for 5 seconds. You'll hear "low power mode", confirming Maxim is in LPS mode. To exit this mode, press GO! on Maxim while he's on the charging station, or remove him from the station.



Important Note: In this mode, Maxim is offline and the bObsweep app is not able to connect to him. Furthermore, any scheduled cleanings will be paused.

Charging Station LED Indicator

Light Status	Station Status	What to do
	Maxim docked, or station powered off	- When Maxim is successfully docked and there's no station trouble, the light on the station turns off to avoid unnecessary distractions. Maxim's charge status can be viewed on his display. - Alternatively, if Maxim is not docked and the light is off, the station has no power. Plug the charging station into a live 110 V indoor outlet. Do not use transformers or outdoor outlets.
	Ready	- Station is powered on and ready for Maxim to dock. - As soon as Maxim docks and starts charging, the blue light turns off. - If Maxim is docked on the station and the light is blue, adjust Maxim's position on the dock until the light goes off to ensure proper charging contact.
	Water container trouble	- Make sure the clean water container is filled and properly sealed. - Empty the dirty water container and reinstall it correctly.
	Tray trouble	Remove the charging station tray, empty any water and debris, wipe all parts dry, then reinstall.
	Dust bag not detected / dust bag opening closed	- Insert the dust bag fully into the slide and push the tab all the way down to open and align with the air pathway. - Place Maxim on the station and press Charge to begin self-emptying.
	Congestion in the air pathway	- Remove and open the dustbin; clear any heavy congestion. - Clean the Disposal Vent Aperture on the back of the dustbin; ensure the flap moves freely. - Dock Maxim and press Charge to self-empty. If the light still blinks: - Unplug the station. - Open the Air Pathway Access Window and remove any blockages. - Dock Maxim again and press Charge.
	Station overheated / hardware trouble	- Unplug and allow the station to cool down - Open and clean the station's air pathway and mop tray - If the issue persists, contact Customer Support.

Learn more about troubleshooting station issues:



Yellow Light





Red Light





Purple Light

Charging Station: Dust Bag

1. Pull the dust bag compartment panel toward you to remove it.
2. Slide the dust bag out by pulling the tab to seal it. Remove and discard the bag. Clean the disposal vent from end to end and remove any obstructions.

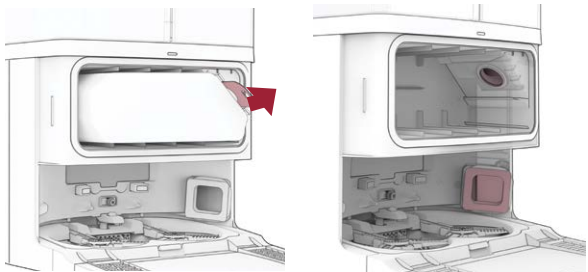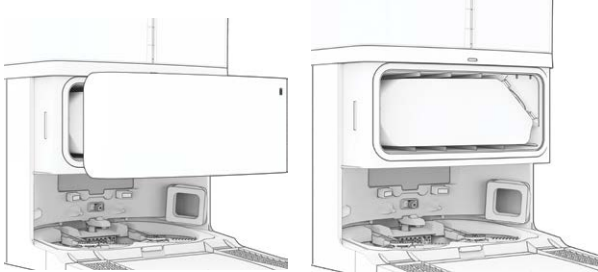


3. Install a new bag by sliding the card into the guide rails, then push the tab all the way in to ensure a secure fit.
4. Replace the dust bag compartment panel. The station's indicator light will turn blue (or remain off if Maxim is docked) to confirm it is ready for use.

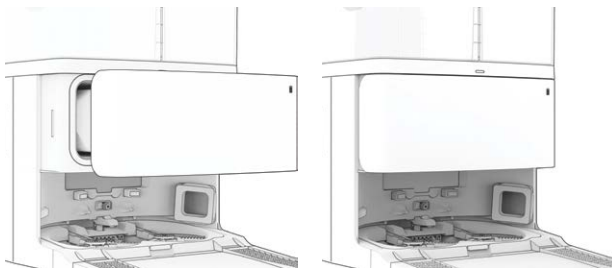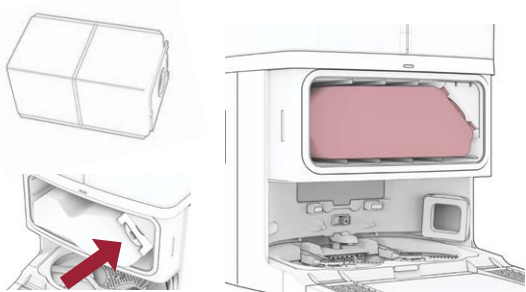


Charging Station: Clean Water Container

⚠ In hard-water areas, use distilled water to prevent scale on pumps, tubes, and motors.


1. Before lifting, test to ensure the container is shut tight. Lift the handle to remove the clean water container.

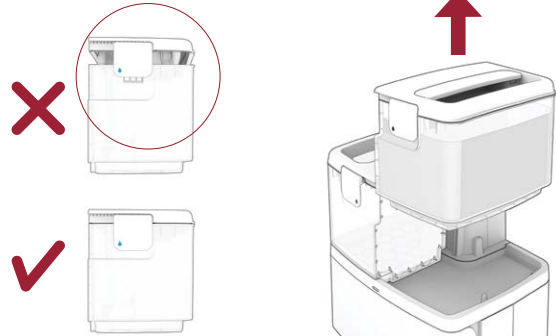


2. Empty the container. Wash the inside with warm water, mild soap, and a sponge. Rinse thoroughly.

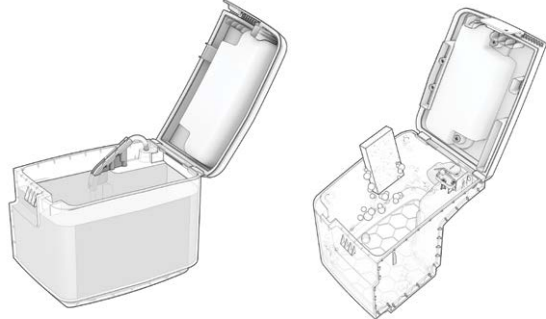

3. Allow the container to air dry. Close the lid and press down to lock the latch securely in place. Replace the container, moving it all the way down and leaving no gap in the front or back.

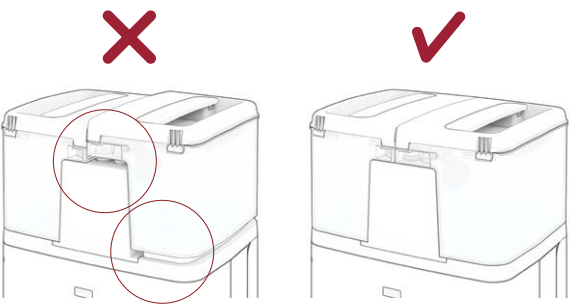


4. The station's indicator light will turn blue (or remain off if Maxim is docked) if everything is correctly installed and there is enough clean water to confirm it is ready for use.

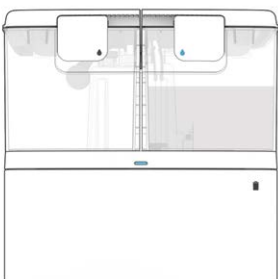


Charging Station: Clean Water Filter


1. If you're not using distilled water, wash and descale the clean-water filter every 3–6 months.

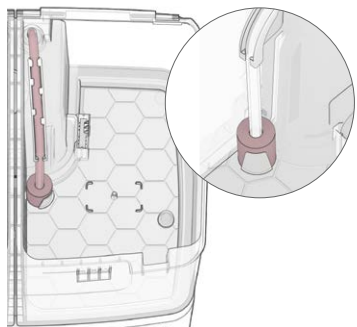


2. Open the container and unhook the clean water tube starting from the top of the container.

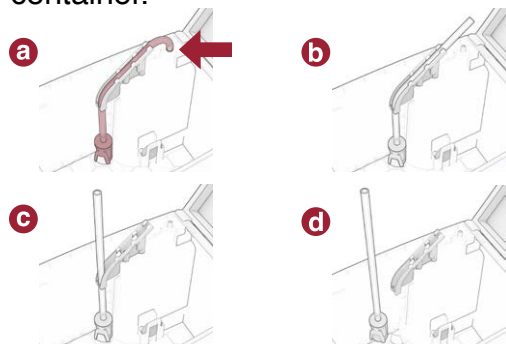

3. Wash the filter and tube with warm water to descale.

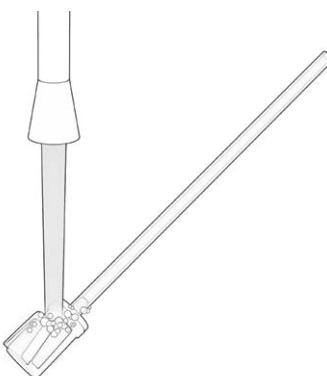


4. Put the filter back in place, reattach the tube by pushing it in until fully inserted, and tuck the tubing securely.

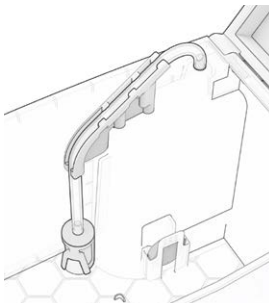


Charging Station: Dirty Water Container

⚠ Dirty water sitting in the container is unhygienic, as it can lead to odors and bacteria buildup.


1. Before lifting, test to ensure the container is shut tight. Lift the handle to remove the dirty water container.

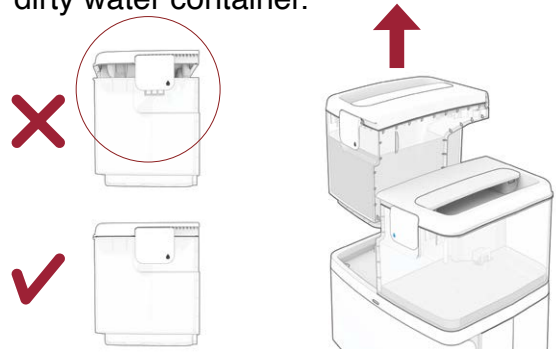


2. Pour out the contents. Wash the inside with warm water, mild soap, and a sponge. Rinse thoroughly.

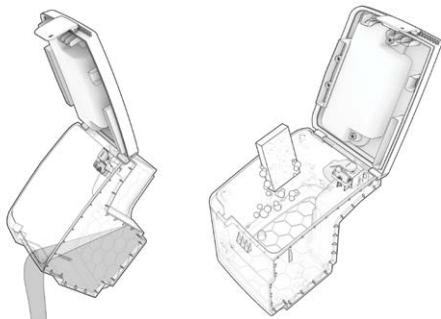

3. Allow the container to air dry. Close the lid and press down to lock the latch securely in place. Replace the container, moving it all the way down and leaving no gap in the front or back.

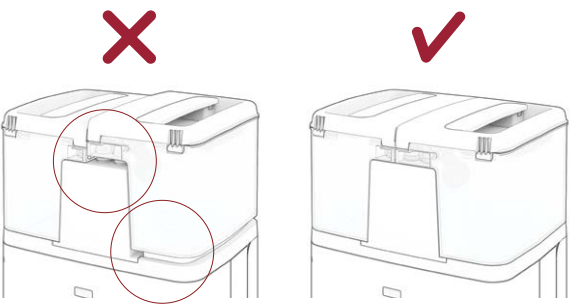


4. The station's indicator light will turn blue (or remain off if Maxim is docked) if everything is correctly installed and there is enough clean water to confirm it is ready for use.

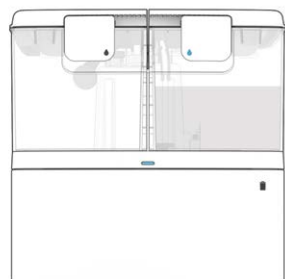


Charging Station: Tray

Clean the tray regularly to maintain hygiene and ensure reliable operation of the station.


1. Lift the tray out of the station using the tab at the front. Then, lift the drain out.

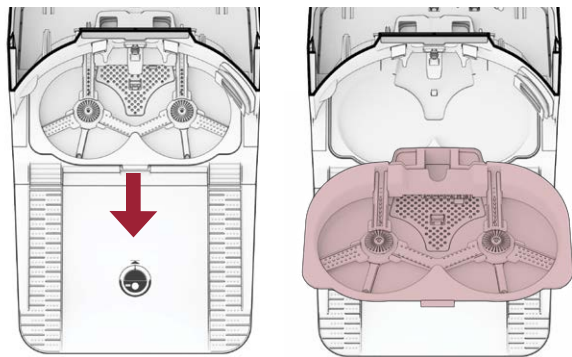


2. Wipe the bottom of the charging station. The dirty water extraction tube should be clean and properly positioned, perpendicular to the bottom of the station.

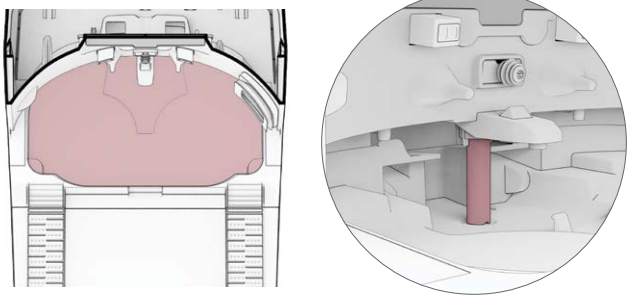

3. Separate and wash components of the tray with warm water, mild soap, and a sponge. Rinse thoroughly and allow them to dry completely before reassembly.

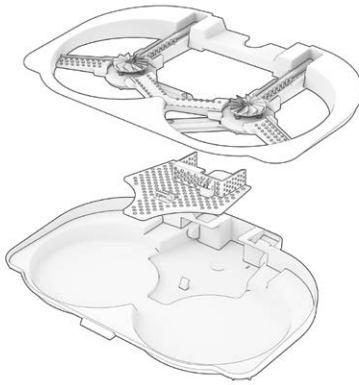

4. Reassemble the tray and place it back into the charging station, ensuring the dirty water extraction tube is straight inside the drain.

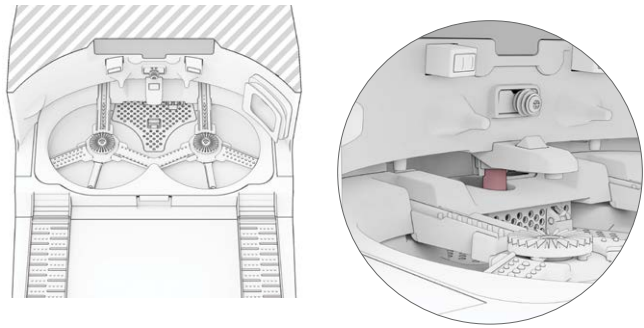

Troubleshooting

Whenever Maxim runs into trouble, he will stop and his trouble indicator will blink. Check the bObsweep app for trouble details.

Trouble	Solution
Battery	Low or disconnected battery. Check connection. Reset, and charge Maxim.
Left/Right Wheel	Left/Right wheel is jammed. Check for obstruction and clean.
Main Brush	Main brush is jammed. Remove and clean.
Side Brush	Side brush is jammed. Remove and clean.
EdgeReach™: Side Brush	Side brush extendable arm can't extend/retract. Remove the side brush and check for debris around the arm and clean it. If already clear, run a Home Checkup Motor Test.
Dustbin	Dustbin is disconnected or contact points are dirty. Clean contact points and reinsert.
Vacuum Motor	Debris is accumulated in the air vent or motor housing. Remove the dustbin. Then remove obstruction and debris from the vacuum motor's air vent and housing to allow free flow of air.
Camera	Camera component error. Reset Maxim (Power OFF and back ON).
Missing Left/Right Mop	One of the mop attachments is missing or disconnected. Ensure both mop attachments are connected. If already attached, remove and clean the contact points on both the bot and mop attachment(s), then reinstall. If the issue persists, restart the bot.
Left/Right Mop Movement	Left/right mop attachment can't move/rotate. Check for debris around the rotating mop and clean it. If already clear, run a Home Checkup Motor Test.
EdgeReach™: Mop	Mop's extendable arm can't extend/retract or the right mop attachment can't move/rotate. Check for debris around the rotating mop and clean it. If already clear, run a Home Checkup Motor Test.
Edge Sensors	Maxim is stuck near a cliff, is off ground, or the edge sensors are dirty. Move Maxim to safety and clean edge sensors. Small objects near the edge can cause a fall. Draw a NoSweep line or zone along the width of stairs to prevent a fall.
FloorSense	Wipe the FloorSense sensor window clean of debris and dust. Restart the bot.
Bumper	Bumper is dirty or jammed. Wipe and remove any obstruction on/under bumper.

Troubleshooting

Important Note: Software updates may change the exact trouble messages displayed on Maxim or the dock. Always check the bObsweep app for the most current message details and follow the troubleshooting guidance provided there.

Trouble	Solution
LiDAR Bumper	SLAM LiDAR's bumper is jammed. Check for obstruction and clean.
LiDAR	LAM LiDAR is not clean/lost visibility. Clean the SLAM LiDAR and move Maxim away from mirrors/metallic surfaces/walls and to the center of the room.
User Interface	Maxim's UI/USB port is not responding. Reset Maxim & ensure the USB port is empty.
Electronic	Electronic component error. Reset Maxim (Power OFF and back ON).
Stuck	Maxim is stuck. Clear away obstacles/clutter/wires & reset Maxim.
Navigation	Maxim is not able to navigate. Clear away any clutter/wires & reset Maxim.
Localization	Maxim can't self locate on map. Load the correct saved map/erase for remapping.
Settings	Current room settings don't match Maxim's. Change map settings/schedules.
Charging Station	Can't locate the charging station. Replug the charging station and charge Maxim.

⚠ The charging station is equipped with a thermal protector to prevent damage from overheating. When the protector is activated, the motor will stop running. If this occurs, unplug the station and allow it to cool for 30 minutes. Once cooled, inspect the station and remove any obstructions from the disposal vent, air vent, dirty water tube, dirty water container, and tray. After inspection and cleaning, plug the station back in.

⚠ Maxim is also equipped with safeguards to prevent damage from overheating. If Maxim becomes unresponsive, allow him to cool for 30 minutes. Once cooled, open the battery compartment and unplug the battery. Then remove the dustbin and inspect the vacuum motor opening and fan for any obstructions. Clean as needed before reassembling and powering Maxim back on.

Learn more about troubleshooting Maxim:



Home Checkup Test

If Maxim is not performing as well as he should, you can diagnose the problem with a simple home checkup test. Scan for a step-by-step Home Checkup Test video guide:

Important Note: Software updates may change the exact audio messages played on Maxim or the steps of the test. Always check Maxim’s support pages for the most current message details and test procedures.



To put Maxim in Checkup mode:

Press and hold the “GO!” “CHARGE” and “WI-FI” buttons simultaneously for a few seconds until the bot says: “Home Checkup Mode Activated”. In this mode, Maxim’s LiDAR sensor rotates.

To exit the Checkup mode:

Press the “GO!” “CHARGE” and “WI-FI” buttons together again. You’ll hear “Exiting Home Checkup Mode” and Maxim’s LiDAR sensor stops rotating.

Important Notes:

- If Maxim is left idle for over a minute, he’ll automatically exit the Home Checkup Test.
- To move between steps in the Checkup test, press the Wi-Fi button.
- To start / stop the tests in each step, press the GO! button until you hear “Begin Test” and “Stop Test”. Always stop a test before moving to the next step.

Step	Part(s) Tested	Description
1	Battery	After a full charge, test Maxim’s battery.
2	Edge Sensors	Test edge sensors individually.
3	Charging Station	Test charging sensors individually.
4	Bumpers, Wi-Fi, and Camera	Test the Wi-Fi module, touch sensors, and camera.
5	Motors (Wheels, Brushes, Vacuum, and Mops)	Test each of Maxim’s motors individually.
6	SLAM LiDAR, Charging and Self-Empty	Test Maxim’s SLAM LiDAR, charging contact points, and self-empty function.
7	Hard Resetting Maxim	Factory reset Maxim and erase all data.

Battery Safety and Shipping

Important Note:

Lithium-ion batteries and products that contain them are subject to strict transportation regulations. If you need to ship Maxim for service, travel with him, or transport him for any reason, please follow these instructions:

- Maxim MUST be powered OFF before shipping.
- To power off Maxim, remove him from the station and hold down the GO! button for 5 seconds. All indicators will turn off and Maxim will chime to confirm shutdown.
- Package Maxim securely before shipping to prevent damage.

For questions and further assistance, visit the bObsweep app and contact our Support team.


Contact Us

If you have any questions or concerns, please contact our helpful Support team at support@bobsweep.com or toll-free at 1-888-549-8847 | Hours: Monday – Friday, 9 a.m. – 5 p.m. Pacific Time.

Additional troubleshooting information and how-to guides can be found on the bObsweep app and at www.bobsweep.com/maxim-support.

Maxim won't turn ON no matter what.

If Maxim is not responding to his buttons, then his battery has likely drained too low for him to operate. Place him on his charging station for a full charge overnight. Ensure contact between the charging nodes on the back of Maxim's dustbin and the station. Scan for more tips.

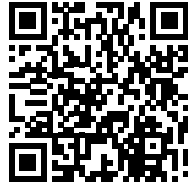

Maxim ran out of battery before he finished mapping.

Use the Swift Map feature on the bObsweep app to ask Maxim for fast mapping of the entire floor. If the floor is too large for Maxim to fully clean in one charge, toggle on Auto-Resume under **Settings > Cleaning Preferences** on the bObsweep app. Maxim will pickup where he left off after recharging.




Maxim is not picking up as well.

Maxim will have trouble picking up if his dustbin or vacuum motor is clogged, or if his main brush is clogged or tangled with hair. Remove and clean the main brush. Open the dustbin, and clean the dustbin and vacuum motor for free flow of air.



Maxim is not self-emptying.

Every time Maxim docks, a loud vacuuming process empties his dustbin into the station's dust bag. If Maxim's dustbin or the station's air passage gets clogged, contents cannot be vacuumed out. Remove and open the dustbin and empty its contents. Unplug the station and open the air passage to remove anything clogging it. Scan for instructions.

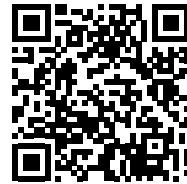

Maxim is having trouble finding his station.

Ensure the charging station's ramp is properly installed and nothing obstructs Maxim or the station. You may need to move the station to an accessible, central location. Place it on a hard, flat surface, away from stairs, direct sunlight, mirrors, and reflective surfaces. Make sure there's plenty of open space around it. Once the station is in its new spot, erase the old map and let Maxim remap the house from the new location.

Can I pick Maxim up?

It's not recommended to pick up or move Maxim during a cleaning session, as it can disrupt his localization and map. Additionally, once Maxim has mapped the environment, it's best not to relocate the charging station. If you do need to move it, be sure to erase the old map and allow Maxim to remap the house from the new location.

I can't connect Maxim to Wi-Fi.

Once Maxim is fully charged, you can connect him to a 2.4GHz Wi-Fi network. Bring Maxim and your phone close to your modem or router. Scan for step-by-step instructions.



Maxim is offline.

Maxim may be hibernating, getting weak Wi-Fi signal, or powered OFF. To bring Maxim back online, place him on the charging station and let him charge and power ON. Bring him closer to the router or modem where there is strong signal.

What map-related actions and edits can I make?

Maxim's map is fully customizable and easy to edit. Draw NoSweep and NoMop zones, divide, merge, and name rooms, and save or erase maps. Scan for step-by-step instructions.



Can Maxim clean my multi-floor house?

Maxim can save up to 3 different floor maps. Scan for step-by-step instructions.




Maxim stopped cleaning and the trouble indicator is flashing.

When Maxim is in trouble and needs your help, he will stop and the trouble indicator blinks. Open the bObsweep app and find the trouble details at the top of the Control page.

How can I diagnose Maxim's exact problem?

You can check Maxim's sensors, motors and more by running a Home Checkup Test. Scan for step-by-step instructions.

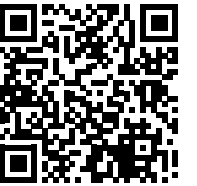

Maxim is getting stuck.

If Maxim repeatedly gets stuck or stops in certain areas, draw No-Sweep Zones on the map to help him avoid those trouble spots. Scan for step-by-step instructions.



Does Maxim work with Google and Alexa devices?

Yes! Maxim can be connected to Google Home and Alexa apps / devices. For more information, visit: bobsweep.com/maxim-support

MAXIM[®]

MANUEL DU PROPRIÉTAIRE



Félicitations!

Félicitations pour votre nouvel aspirateur intelligent! Maxim est maintenant à votre service. Pour profiter pleinement de ses performances, veuillez lire attentivement le Guide de démarrage rapide ainsi que le présent manuel.

Bienvenue dans la grande famille bObsweep et bon nettoyage!

Si vous avez des questions ou des préoccupations, n'hésitez pas à communiquer avec notre équipe de soutien à l'adresse suivante : **support@bobsweep.com** ou au **1-888-549-8847**.
Heures d'ouverture : du lundi au vendredi, de 9 h à 17 h (heure du Pacifique).

Table des Matières

51 Mise en route
Consignes de sécurité importantes
Déclaration de conformité
Nous contacté

61 Bien commencer
Qui est Maxim ?
Comment Maxim se déplace-t-il ?

89 Dépannage

93 FAQs

53 Contenu de
la boîte

64 Premier nettoyage
de Maxim
Installer la brosse latérale
Attacher les vadrouilles
Configurer la station de recharge
Allumer et charger Maxim
Télécharger l'application bObsweep
Laissez Maxim se mettre au travail
Modes de nettoyage et paramètres

91 Test de contrôle
à domicile

95 Contrat de licence
utilisateur

54 Anatomie
Maxim
Bac à poussière et filtre
Écran d'affichage et boutons
Station de recharge

75 Guides de
maintenance
Brosses
Capteurs
Bac à poussière et filtre
Linges de vadrouille
Roue avant
Batterie
Station de recharge

92 Sécurité et
expédition de
la batterie

Consignes de sécurité importantes

- Maxim (ci-après appelé Maxim, robot, appareil ou dispositif) n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques ou mentales réduites, ou manquant d'expérience et de connaissances, sauf sous la supervision étroite d'une personne responsable de leur sécurité.
- Maxim est composé de composants électroniques qui, dans de rares cas, peuvent présenter des risques de surchauffe, d'incendie ou d'autres dysfonctionnements. De plus, comme Maxim se déplace de manière autonome, son utilisation comporte un risque de collision avec des objets, des animaux domestiques ou des personnes. Il peut également arriver que de petits objets, comme des bijoux ou des cheveux, soient ramassés par inadvertance.
- Maxim n'est pas un jouet. Les jeunes enfants et les animaux doivent être surveillés pendant son fonctionnement.
- Soyez conscient que Maxim se déplace seul. Faites attention lorsque vous marchez dans la zone où il fonctionne afin d'éviter de marcher dessus ou de trébucher.
- Si Maxim ou sa station de charge est endommagé de quelque façon que ce soit, ne les utilisez pas. Communiquez avec notre équipe de soutien pour obtenir de l'aide.
- Ne laissez pas tomber Maxim. Un choc peut endommager le capteur SLAM LiDAR.
- N'utilisez pas Maxim à l'extérieur et ne le rangez pas dans une voiture.
- Ne l'exposez pas, ni sa station de charge, à des températures en dehors de 4 à 45 °C (39 à 113 °F), ni à l'humidité.
- Rangez et utilisez-le uniquement dans un environnement à température ambiante.
- Utilisez Maxim uniquement avec une prise électrique de 110-120 V. N'utilisez pas de convertisseur ou transformateur de tension.
- Remarque : L'utilisation de Maxim avec un convertisseur de tension annulera immédiatement la garantie. L'utilisation du robot à l'extérieur du pays où il a été acheté annule également la garantie.
- Maxim est livré avec un cordon d'alimentation approuvé pour l'Amérique du Nord et conçu pour être branché uniquement sur une prise domestique CA standard. N'utilisez aucun autre cordon ou multiprise.
- N'utilisez pas de cordons ou de chargeurs non autorisés. L'utilisation d'un chargeur non approuvé peut provoquer une surchauffe, de la fumée, un incendie ou une explosion de la batterie.
- Risque de choc électrique : utilisez uniquement à l'intérieur, dans un endroit sec. Ne touchez pas Maxim ou sa station de charge avec les mains mouillées. Utilisez-le uniquement sur des surfaces sèches. N'utilisez pas de prise ou de câble endommagé.
- La station de charge peut être protégée par un parasurtenseur en cas d'orage ou de fluctuation électrique.
- Ne tirez pas sur la station de charge par le cordon, ne fermez pas une porte dessus et ne le faites pas passer autour d'arêtes vives ou de coins. Gardez-le à l'écart des surfaces chaudes. Pour le débrancher, tenez la fiche, pas le cordon.
- Éteignez Maxim et débranchez-le lorsqu'il n'est pas utilisé ou avant d'effectuer un entretien.

- Ne démontez pas et ne manipulez pas la station de charge pendant qu'elle est branchée. Débranchez-la d'abord.
- Inspectez périodiquement le bloc-pile pour détecter tout signe de dommage ou de fuite. Ne rechargez pas une batterie endommagée ou qui fuit. Des fuites peuvent survenir en cas d'utilisation extrême ou de températures élevées.
- Si le liquide entre en contact avec la peau, rincez immédiatement à l'eau. S'il entre en contact avec les yeux, rincez-les abondamment avec de l'eau propre pendant au moins 10 minutes et consultez un médecin sans délai.
- Ne mutilez pas et n'incinerez pas la batterie, car elle pourrait exploser à haute température.
- Ne court-circuitiez pas la batterie en laissant des objets métalliques toucher les bornes, ni en l'immergeant dans un liquide. Évitez les chocs mécaniques.
- Ne jetez pas la batterie au feu. Les vieilles batteries doivent être recyclées de façon sécuritaire auprès d'un centre de recyclage local.
- Si le sol comporte des escaliers, placez des barrières physiques pour empêcher Maxim d'y accéder et assurer un fonctionnement sécuritaire.
- Si le sol comporte un balcon, placez également des barrières pour empêcher Maxim d'y accéder.
- Si le sol contient des appareils tels qu'une cuisinière, un ventilateur, un radiateur ou un humidificateur, retirez-les avant de faire fonctionner le robot. Le contact avec ces appareils peut causer des blessures, des accidents ou des dysfonctionnements.
- Si Maxim passe sur un cordon électrique et le tire, un objet peut tomber d'une table ou d'une étagère. Avant de démarrer le robot, ramassez les vêtements, papiers, cordons de stores, câbles d'alimentation et objets fragiles. Éteignez les chandelles et les radiateurs portatifs.
- N'utilisez pas Maxim pour ramasser des objets tranchants, du verre, ou des matières en combustion ou fumantes comme des cigarettes, allumettes ou cendres chaudes.
- N'utilisez pas Maxim dans des zones où il y a des prises électriques exposées au sol.
- À l'exception de l'accessoire de vadrouille humide, n'immergez aucune partie de Maxim dans l'eau ou tout autre liquide. Ne l'utilisez pas pour aspirer des liquides renversés. Ne laissez pas Maxim ou sa station devenir humides.
- Ne regardez pas directement la partie rotative émettrice (laser) du SLAM LiDAR.
- Pour votre sécurité, n'insérez pas d'outils, de doigts ou d'objets dans la partie rotative du SLAM LiDAR.
- N'utilisez pas Maxim sans sac à poussière ou sans filtres en place.
- Ne tentez pas de démonter ou d'ouvrir la station de charge, sauf selon les instructions du manuel d'utilisation. Les réparations doivent être effectuées uniquement par nos techniciens qualifiés.
- Ne laissez pas le SLAM LiDAR de Maxim exposé directement à la lumière du soleil ou à une lumière infrarouge.
- Effectuez l'entretien décrit dans ce manuel pour garantir le bon fonctionnement et la sécurité du robot et de sa station de charge.

Consignes de sécurité importantes

Lors de l'utilisation d'un appareil électrique, des précautions de base doivent toujours être respectées, notamment les suivantes :

WARNING – Pour réduire les risques d'incendie, de choc électrique ou de blessure : Utilisez uniquement selon les instructions de ce manuel. N'utilisez que les accessoires recommandés par le fabricant. N'utilisez pas l'appareil si le cordon ou la fiche est endommagé. Si l'appareil ne fonctionne pas correctement, a été échappé, endommagé, laissé à l'extérieur ou immergé dans l'eau, retournez-le à un centre de service. Ne tirez pas et ne transportez pas l'appareil par le cordon, ne vous servez pas du cordon comme poignée, ne fermez pas une porte sur le cordon et ne tirez pas le cordon autour d'arêtes ou de coins tranchants. Ne faites pas passer l'appareil sur le cordon. Gardez le cordon à l'écart des surfaces chaudes. Ne débranchez pas l'appareil en tirant sur le cordon. Pour débrancher, saisissez toujours la fiche, jamais le cordon. Ne manipulez pas la fiche ni l'appareil avec les mains mouillées.

Cet appareil est conçu pour une utilisation domestique à l'intérieur seulement. Il ne doit pas être utilisé à des fins commerciales ni à l'extérieur.

Pour réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si elle ne s'insère toujours pas, communiquez avec un électricien qualifié pour faire installer une prise appropriée. Ne modifiez en aucun cas la fiche.

Placez les cordons des autres appareils hors de la zone à nettoyer. N'utilisez pas l'aspirateur dans une pièce où un bébé ou un enfant dort. N'utilisez pas l'aspirateur dans une zone où il y a des chandelles allumées ou des objets fragiles sur le plancher à nettoyer. N'utilisez pas l'aspirateur dans une pièce où il y a des chandelles allumées sur des meubles que l'aspirateur pourrait heurter ou accrocher. Ne laissez pas les enfants s'asseoir sur l'aspirateur.

Déclaration de conformité

Cet appareil est conforme à la partie 15 des règlements de la FCC.

Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
 - (2) cet appareil doit accepter toute interférence reçue, y compris celles pouvant provoquer un fonctionnement indésirable.
- Le fabricant n'est pas responsable des interférences radio ou télévisuelles causées par des modifications non autorisées apportées à cet appareil. De telles modifications pourraient annuler le droit de l'utilisateur à faire fonctionner l'équipement.

Cet appareil a été testé et jugé conforme aux limites établies pour un appareil numérique de classe B, conformément à la partie 15 des règlements de la FCC. Ces limites visent à offrir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle.

Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence ; s'il n'est pas installé et utilisé conformément aux instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation donnée. Si cet appareil provoque des interférences nuisibles à la réception radio ou télévisuelle (ce qui peut être déterminé en allumant et en éteignant l'appareil), l'utilisateur est encouragé à essayer de corriger l'interférence en prenant l'une ou plusieurs des mesures suivantes :


- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil sur une prise située sur un circuit différent de celui du récepteur.
- Consulter le détaillant ou un technicien radio/télévision expérimenté pour obtenir de l'aide.

Nous contacté


Si vous avez des questions ou des préoccupations, veuillez communiquer avec notre équipe de soutien à l'adresse **support@bobsweep.com** ou sans frais au **1-888-549-8847** | Heures d'ouverture : du lundi au vendredi, de 9 h à 17 h (heure du Pacifique). Vous pouvez également trouver des informations supplémentaires de dépannage et des guides pratiques dans l'application bObsweep et sur le site **www.bobsweep.com/maxim-support**.

Lisez toutes les instructions avant d'utiliser Maxim. Conservez ces instructions.


Contenu de la boîte

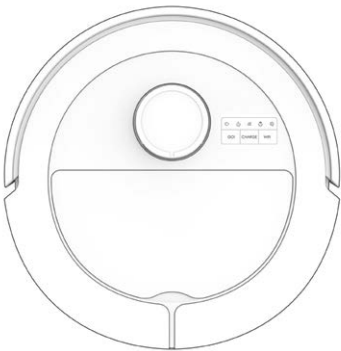

Maxim®

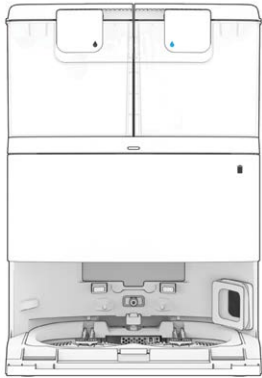

Station de recharge

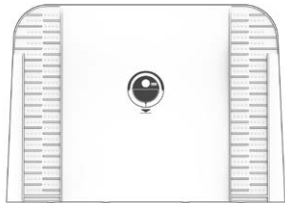

Rampe de station de recharge



Accessoire de vadrouille (2)



Linge de vadrouille en microfibre (2)



Linge de vadrouille robuste (2)



Filtre (de recharge)



Sac à poussière (de recharge)



Solution de nettoyage



Outil de nettoyage



Brosse laterale (2)

Anatomie

Maxim®


SLAM LiDAR

Capteur FloorSense™
Roue avant
Brosse laterale


Roue droite
Brosse principale
Volet de la brosse principale

Connecteur de vadrouille droite/bras de vadrouille EdgeReach™

Douille du bras de vadrouille EdgeReach™


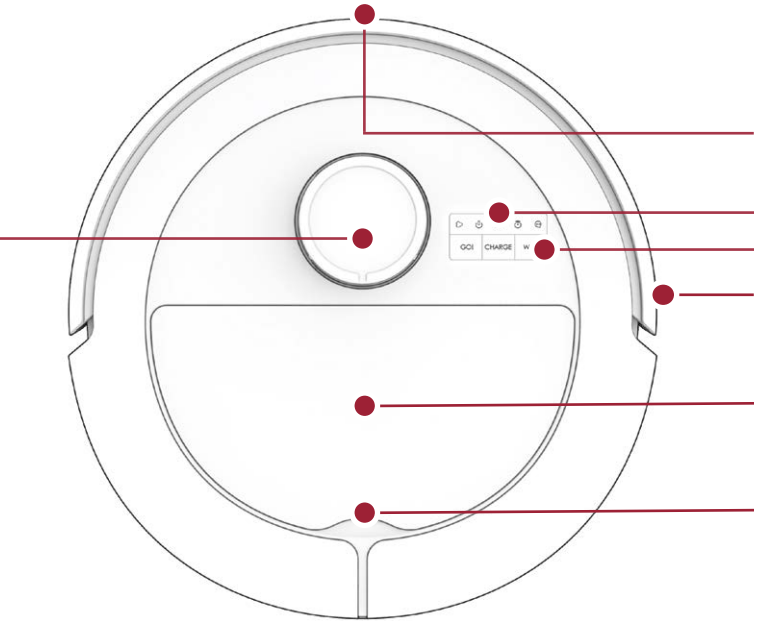


Camera VisiOn
Écran d'affichage
Bouttons
Capteur de suivi mural
Couvercle
Onglet



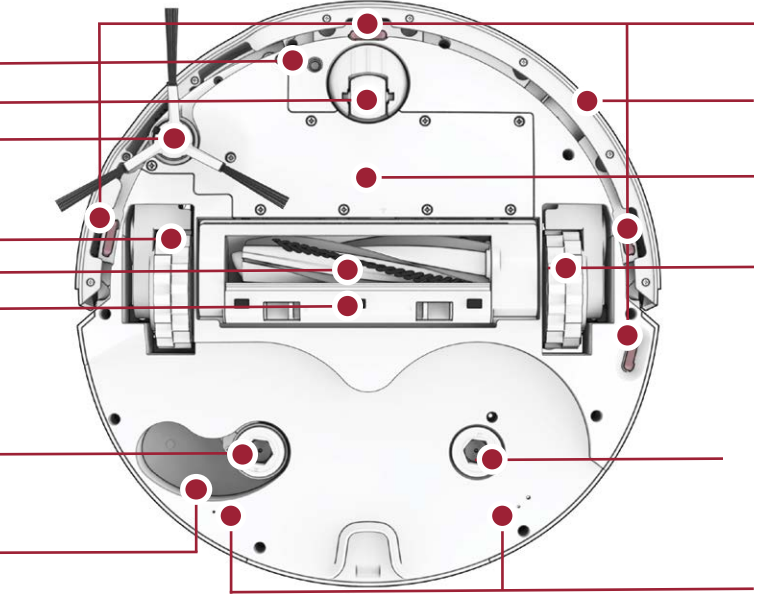


Capteur de bords
Haut-parleur
Batterie
Roue gauche
Connecteur de vadrouille gauche
Distributeur d'eau

Maxim[®]

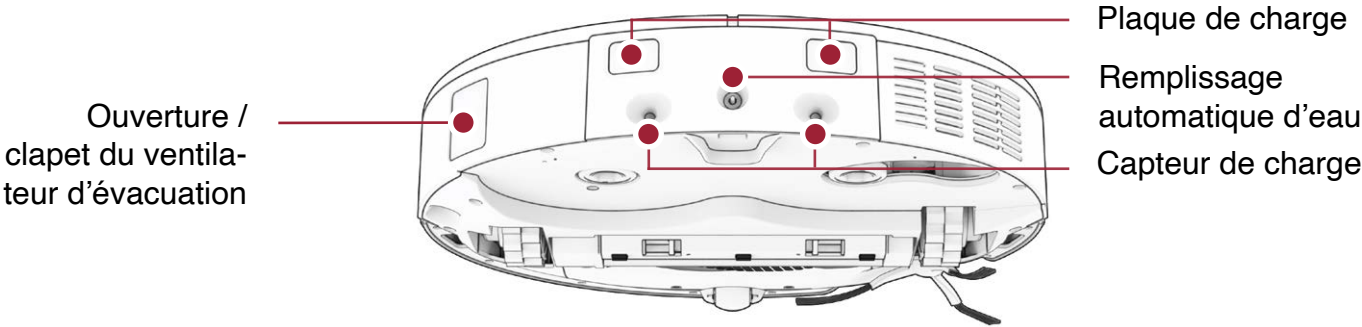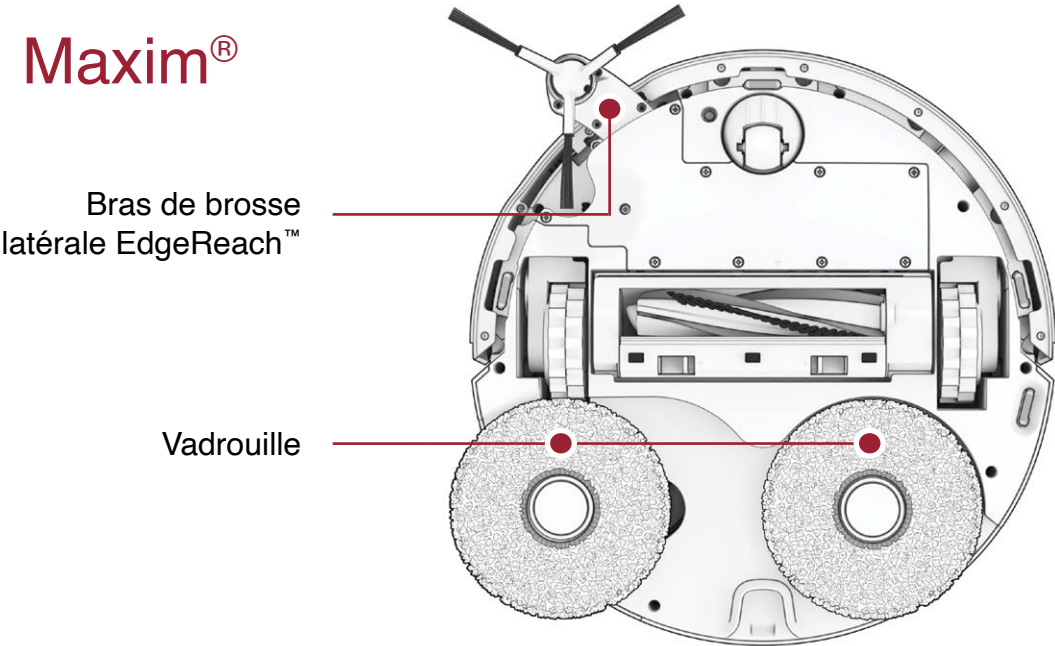

Bac à poussière et filtre

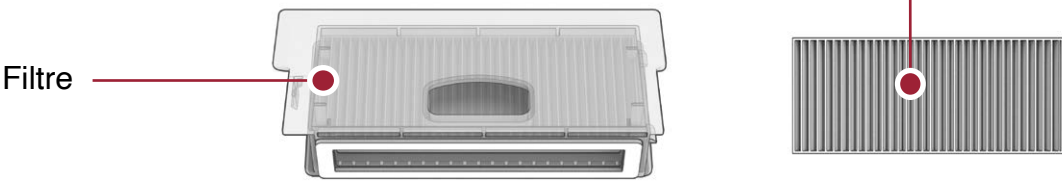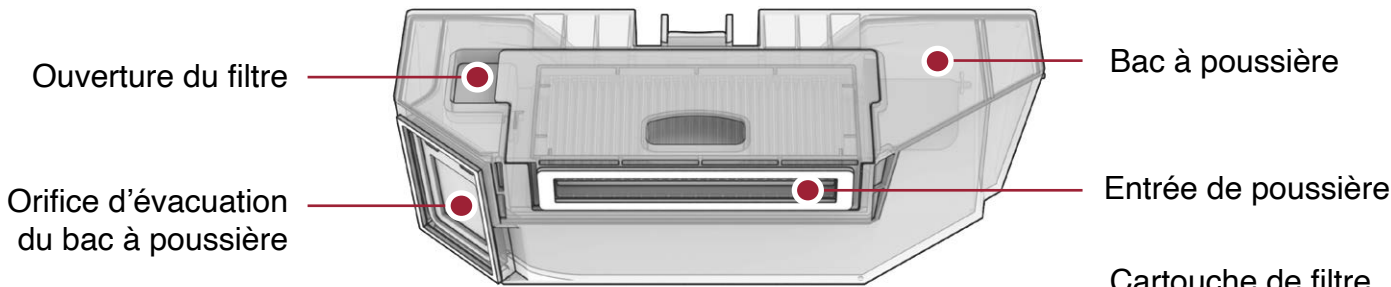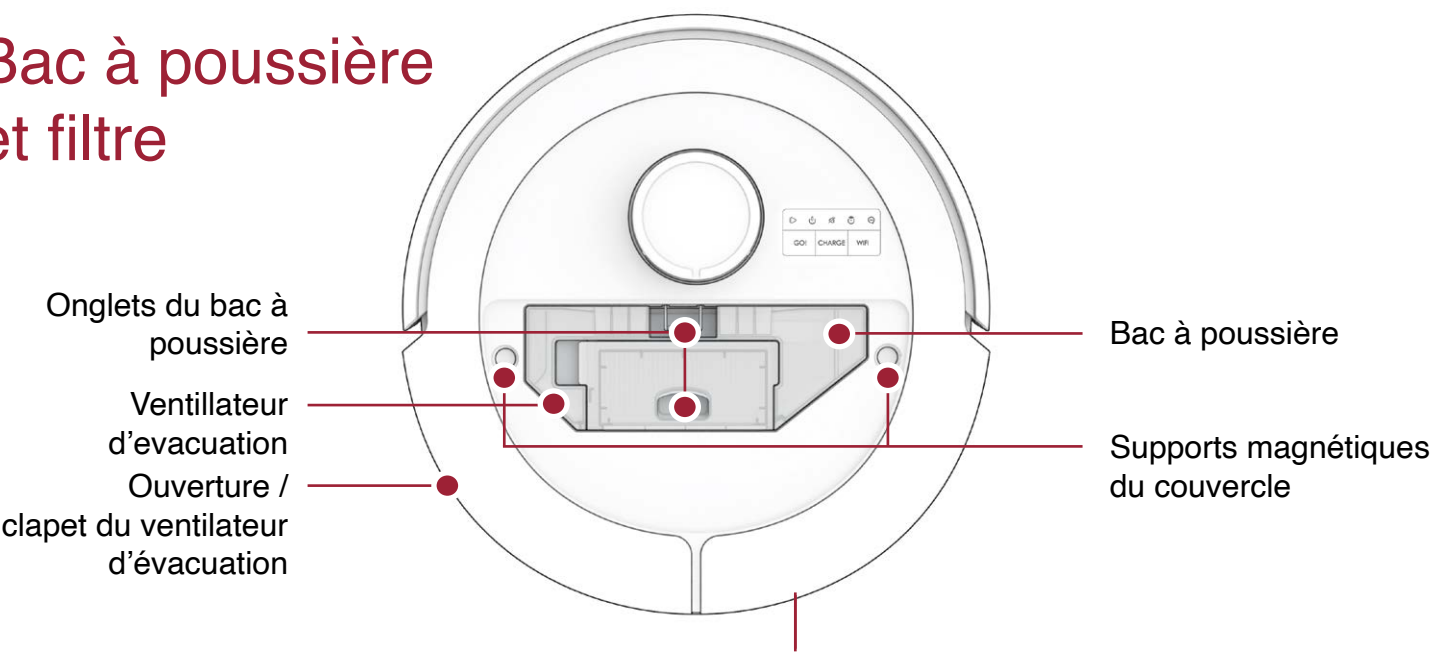

Écran d'affichage et boutons

Indicateur de PROBLÈME
Clignotant – Problème détecté.
Vérifiez l'application bObsweep

WI-FI
Lumière fixe – Connecté au Wi-Fi
Clignotant – Recherche du Wi-Fi

SON
Lumière fixe – Muet

CHARGE
Clignotement rapide - Batterie faible
Clignotement – Recherche de station
Clignotement lent – En charge
Lumière fixe – Charge complète

GO!
Lumière fixe - Nettoyage
Clignotant - En pause

WIFI

CHARGE

GO!

Wi-Fi
Lancer la recherche de Wi-Fi

CHARGE
Appui court –
Hors Station – Charger / Arrêter
Sur Station – Auto-vidage
Appui Long – Mode veille /
Basse consommation

GO!
Appui court simple –
Démarrer / Pause **Aspiration**
& **Vadrouille**
Double Appui Court –
Démarrer / Pause **Aspiration**
uniquement
Appui Long – Marche / Arrêt

Station de recharge

Loquet du réservoir d'eau sale

Flotteur d'eau sale

Reservoir d'eau sale

Indicateur LED

Couvercle du réservoir

Reservoir d'eau propre

Compartiment du sac à poussière


Rampe station de recharge

Orifice d'évacuation



Prise d'interieur

Corde

Station de recharge

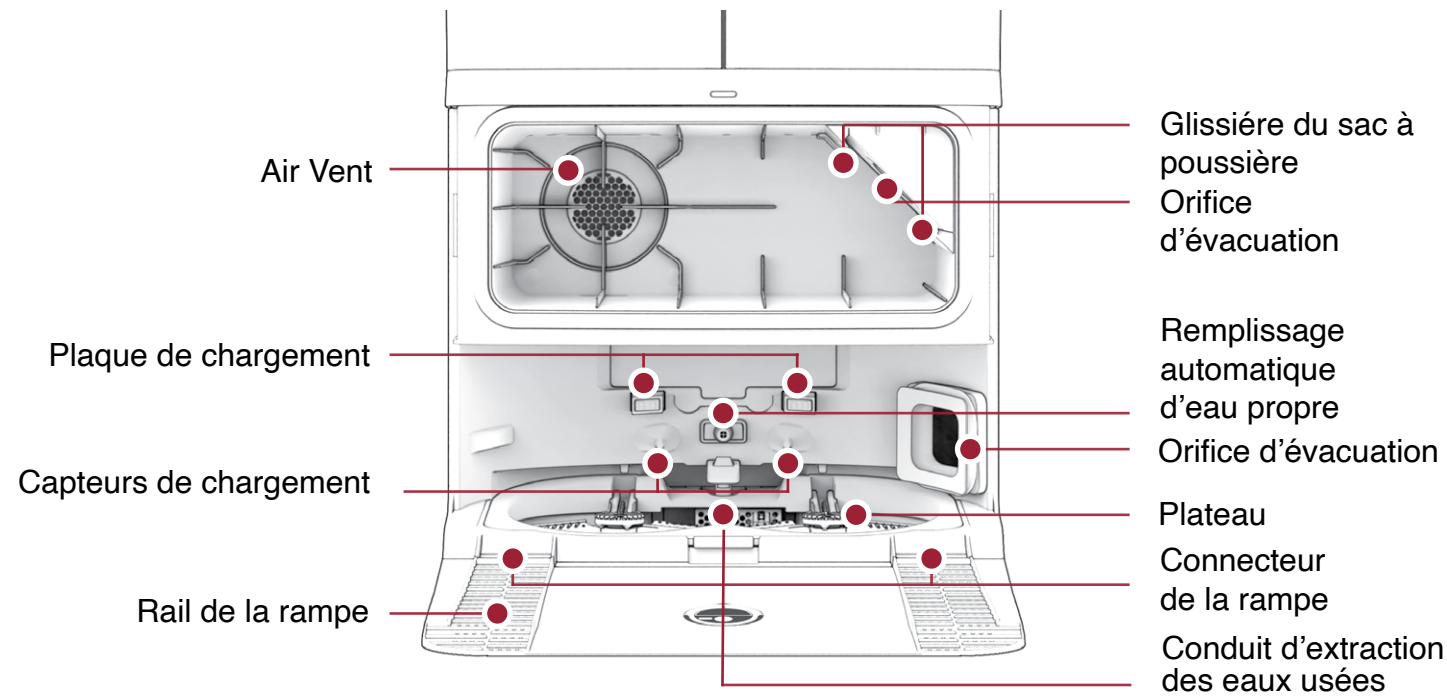

Station de recharge

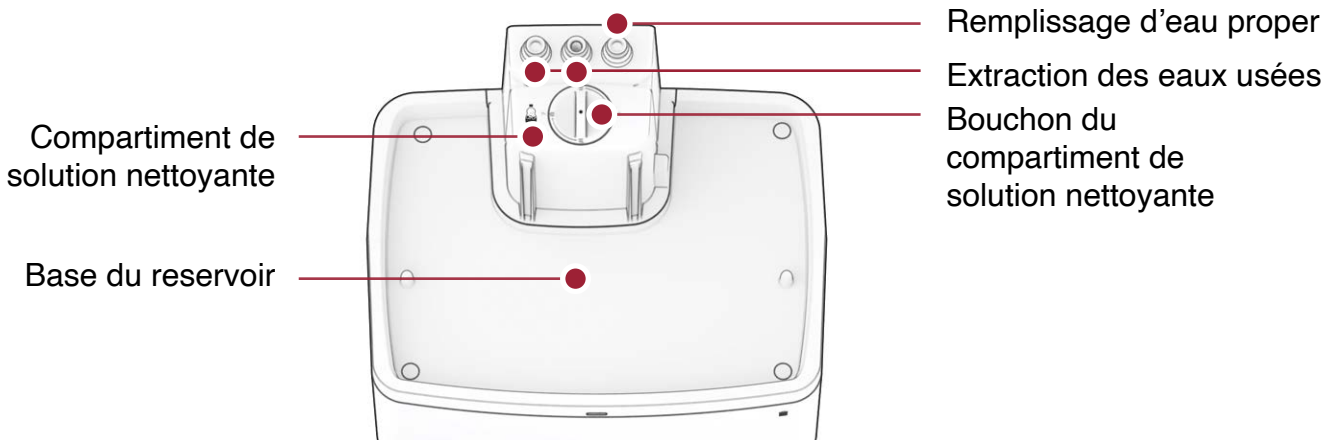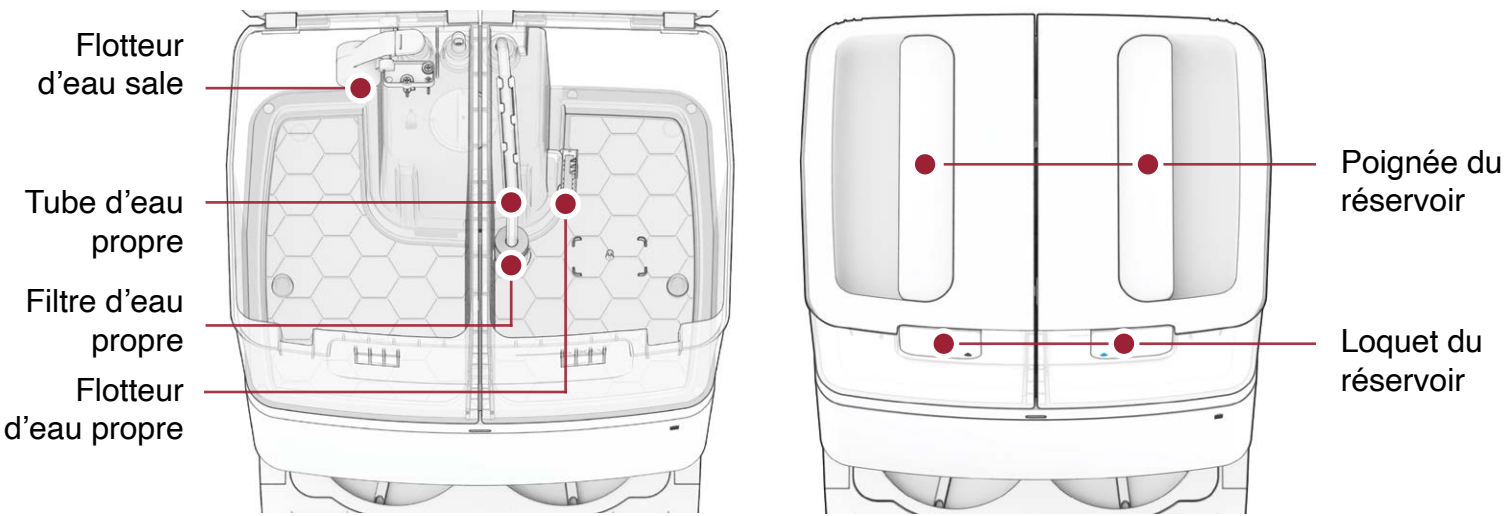

Qui est Maxim ?

Maxim est un aspirateur robot autonome, à votre service! Connectez Maxim au Wi-Fi et utilisez l'application bObsweep pour créer un plan de nettoyage personnalisé. Maxim nettoiera votre maison, à votre façon.

Comment Maxim se déplace-t-il ?

Maxim utilise une vision laser, un réseau de capteurs et une technologie de cartographie et de localisation de pointe **QSLAM®** pour détecter les murs, les meubles et les obstacles.

Pendant qu'il nettoie, Maxim crée simultanément une carte des zones auxquelles il peut accéder et qu'il peut nettoyer. Vous pouvez consulter cette carte en appuyant sur l'**icône Carte** dans l'application **bObsweep**, puis la personnaliser au besoin. Grâce à cette carte et aux outils de personnalisation de l'application, Maxim nettoie votre maison de façon efficace tout au long de son cycle complet.


Équipé de **deux vadrouilles rotatives**, Maxim aspire et lave en même temps, tout en évitant les tapis et carpettes. Ses **bras extensibles EdgeReach™** atteignent les coins étroits pour un nettoyage impeccable et en profondeur.

Une fois le nettoyage terminé, Maxim retourne à sa station de recharge pour vider son bac à poussière, ainsi que **laver et sécher ses vadrouilles**. Profitez d'un nettoyage entièrement automatisé et sans effort avec Maxim!

Découvrez la carte de Maxim et ses fonctionnalités :



Plus de vidéos et d'instructions :

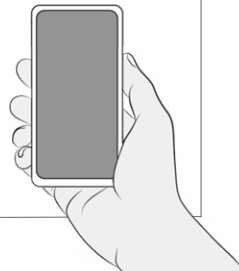

Qui est Maxim ?

Les meubles spécialisés, comme les chaises de bureau à roulettes ou les tabourets avec une base circulaire, peuvent demander un peu plus de temps à Maxim pour les contourner. Il peut rester coincé sur un rebord pendant quelques minutes, puis décider d'aller nettoyer ailleurs. Laissez-le poursuivre son travail et trouver son propre chemin.

Escaliers et bords

Retirez les petits objets comme les chaussures, jouets ou tapis près des escaliers. Maxim pourrait tomber en tentant de les éviter. Pour prévenir toute chute accidentelle causée par des objets laissés près des escaliers ou des rebords, dessinez une **zone NoSweep™** sur la carte afin de bloquer toute la largeur de l'escalier.

Zones NoSweep™

Maxim respecte vos limites et vos zones interdites! À l'aide de l'application bObsweep, dessinez des zones NoSweep™ sur la carte — parfait pour délimiter les zones restreintes ou difficiles d'accès. Maxim évitera ces zones, qu'il soit en mode aspiration, lavage ou les deux.

Tapis foncés

Si Maxim recule sans cesse ou qu'un message d'erreur s'affiche lorsqu'il est sur un tapis foncé, essayez de désactiver la détection des bords dans l'application :

Paramètres > Préférences de nettoyage > Détection des rebords.

Avertissement : Lorsque les capteurs de rebord sont désactivés, Maxim ne peut pas détecter les escaliers. Assurez-vous donc de dessiner une **zone NoSweep™** couvrant toute la largeur de l'escalier.

FloorSense™

Lorsque **FloorSense™** est activé (par défaut), Maxim détecte les tapis et soulève automatiquement sa vadrouille. Pour forcer le lavage d'une zone, désactivez FloorSense dans l'application : Paramètres > Préférences de nettoyage > FloorSense.

Attention : Maxim ne peut pas détecter les tapis ni les carpettes lorsque le capteur **FloorSense™** est désactivé.

Zones NoMop™

Si vous avez des zones **non recouvertes de tapis** que vous souhaitez faire **aspirer sans les laver**, dessinez une **zone NoMop™** sur la carte avant d'envoyer Maxim nettoyer.

Tapis shaggy

Maxim détecte et évite de laver les zones avec des tapis. Lorsque sa vadrouille est levée, il peut traverser des carpettes jusqu'à **1 po (2,5 cm)** de hauteur. Pour les tapis à poils longs de plus de 1 po, dessinez simplement une **zone NoSweep™** sur la carte pour empêcher Maxim d'y monter.

Grand espace

Si Maxim ne peut pas terminer le nettoyage en une seule charge, activez la fonction **Reprise automatique** dans l'application : Paramètres > Préférences de nettoyage > **Reprise automatique**. Maxim retournera à sa station pour se recharger, puis reprendra le nettoyage là où il s'était arrêté après la recharge.

EdgeReach™

Maxim est équipé de deux bras extensibles, l'un pour la brosse latérale et l'autre pour la vadrouille, lui permettant d'atteindre les coins

et de longer les murs. Pour activer cette fonction, ouvrez l'application bObsweep et allez dans : Paramètres > Préférences de nettoyage > EdgeReach. Vous pouvez activer la brosse latérale, le bras de vadrouille, ou les deux, selon vos besoins de nettoyage.

Detection d'objets

Activez la caméra VisiOn de Maxim pour lui permettre de détecter les petits objets de faible hauteur et de les marquer directement sur la carte. Pour activer la détection d'objets, allez dans : Paramètres > Préférences de nettoyage > Détection d'objets.

Puissance d'Aspiartion

Par défaut, Maxim nettoie en mode basse puissance écoénergétique, offrant un fonctionnement plus silencieux pour le nettoyage quotidien. Pour profiter de la puissance d'aspiration maximale de 20 000 Pa, sélectionnez le mode Élevé dans l'application. Notez que Maxim consommera davantage de batterie en mode Élevé.

Intensité de Lavage

Définissez l'intensité de lavage dans l'application bObsweep : Paramètres > Préférences de nettoyage > Intensité de lavage. Une intensité plus élevée utilise plus d'eau, nécessite des remplissages plus fréquents et consomme davantage de batterie.

Cycle de Rafraichissement

Selon les réglages de l'aspirateur et du lavage, ainsi que la taille de la zone à nettoyer, Maxim peut avoir besoin d'un rafraîchissement en cours de nettoyage. Lorsqu'il en a besoin, Maxim fait une pause et retourne à sa station pour remplir son réservoir d'eau et rafraîchir ses vadrouilles. Choisissez le mode qui correspond le mieux à votre maison et définissez la température de l'eau utilisée pour le lavage dans l'application.

Cycle Nettoyage Profond

À la fin de chaque session de nettoyage, Maxim : Vide automatiquement son bac à poussière ; Nettoie en profondeur ses vadrouilles à l'aide

d'eau chauffée (60 °C / 140 °F) et de détergent; Puis les sèche complètement. Cela garantit des vadrouilles toujours propres et hygiéniques.

Intervals D'auto-vidage

Lorsque Maxim retourne à sa station, un bruit d'aspiration court mais puissant se fait entendre : il vide alors son bac dans le sac à poussière. Vous pouvez ajuster la fréquence d'auto-vidage dans l'application. Gardez en tête que si le bac devient trop plein, son contenu pourrait ne pas être complètement vidé. Pendant les premiers jours, laissez les vidages fréquents par défaut afin d'éviter que le bac ne se remplisse trop, assurant ainsi une bonne circulation d'air.

Maisons à plusieurs étages

Vous avez plus d'un étage à nettoyer? Aucun problème! Maxim peut gérer jusqu'à trois cartes d'étages différentes. Pour sauvegarder une carte, ouvrez le menu déroulant à côté de Carte en haut de la page, touchez « + », puis donnez un nom à votre carte.

Installer la brosse latérale

Installez la brosse latérale de Maxim pour l'aider à atteindre les coins et les rebords des pièces.


Pièce requise :




Brosse latérale

Avant d'utiliser Maxim

Retirez toutes les pièces de mousse protectrice et les pellicules invisibles sous Maxim, sur son pare-chocs et sur la station de recharge avant l'utilisation.

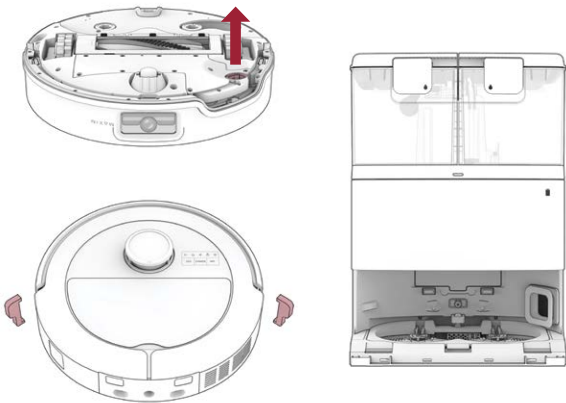

Placez la brosse latérale sur l'emplacement vide de Maxim. Appuyez fermement jusqu'à ce qu'elle s'enclenche et se verrouille.

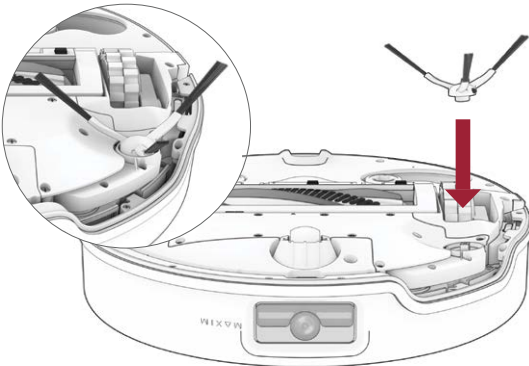

Premier nettoyage de Maxim


Attacher les vadrouilles

Fixez les accessoires de vadrouille de Maxim ainsi que les vadrouilles


Pièces requises :  Accessoire de vadrouille (x2)  Linge de vadrouille (x2)

Avant d'utiliser Maxim

Regardez à l'intérieur des réservoirs de la station de recharge et retirez tout sachet anti-humidité avant la première utilisation.

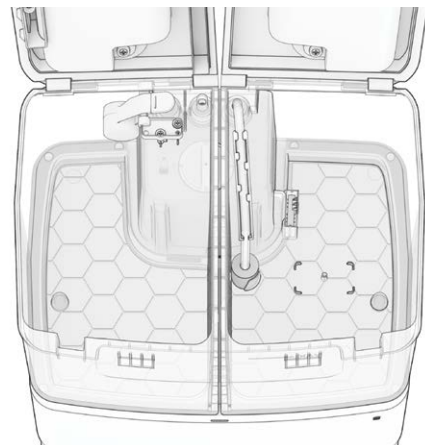

Placez les linges de vadrouille sur les accessoires de vadrouille et fixez-les du côté Velcro. Ensuite, insérez les accessoires de vadrouille dans les fentes de connexion situées sous Maxim. Les aimants se connecteront automatiquement et maintiendront les supports bien en place.

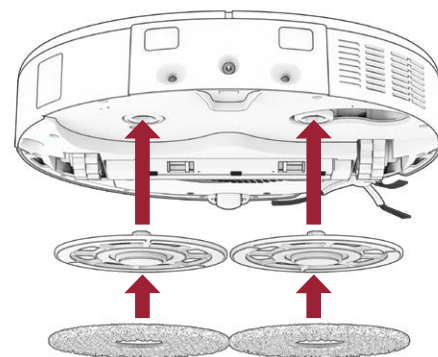

Premier nettoyage de Maxim

Configurer la station de recharge

Une lumière directe du soleil, des surfaces brillantes ou des objets réfléchissants peuvent interférer avec les signaux d'amarrage de Maxim. Installez la station dans un endroit central, à l'écart des fenêtres non couvertes, miroirs et objets réfléchissants.


Pièces requises :  Station de recharge  Rampe station de recharge

Placement

Placez la station de recharge dans un endroit central avec un signal Wi-Fi fort, sur une surface dure et uniforme, à l'écart des rebords ou des escaliers, et en laissant suffisamment d'espace autour pour faciliter l'amarrage.



Alignez la rampe avec l'avant de la station de recharge, puis appuyez fermement jusqu'à ce qu'elle s'enclenche et se verrouille en place.

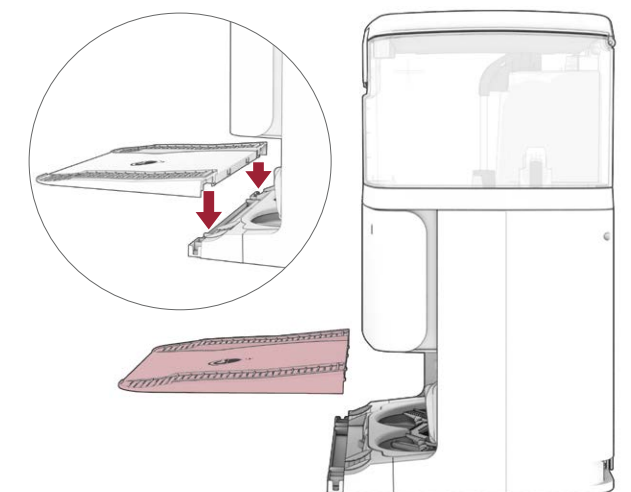


Premier nettoyage de Maxim


Ajouter la solution nettoyante

Versez directement la solution nettoyante compatible dans le compartiment à l'intérieur de la station de recharge.


1. Soulevez et retirez les réservoirs à l'aide de la poignée.

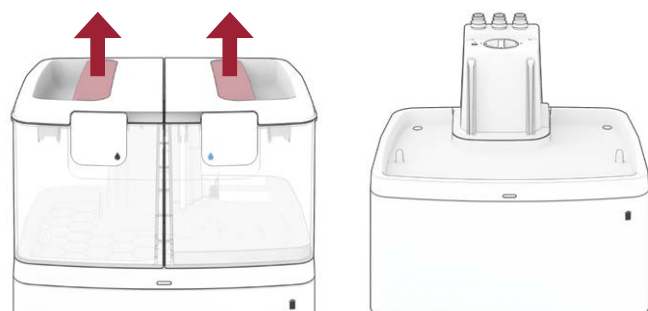

2. Tourner le bouchon dans le sens antihoraire pour ouvrir.

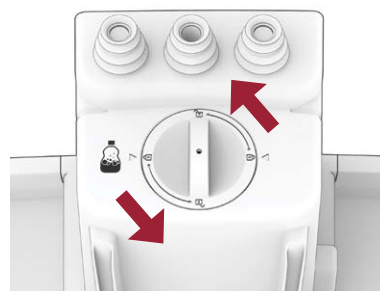


3. Verser la solution de Maxim et fermer le bouchon (sens horaire).

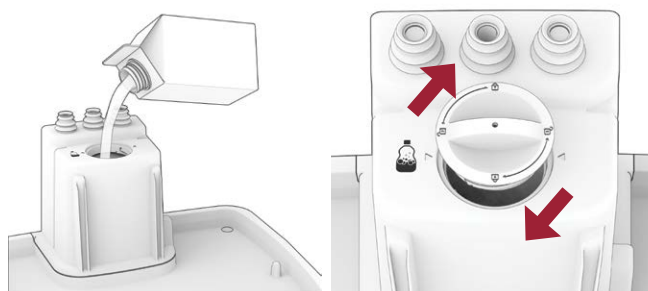

4. Réinstaller le réservoir d'eau sale sur la station.

Astuce : Seules certaines solutions nettoyantes peuvent être utilisées en toute sécurité avec Maxim. Les solutions compatibles sont disponibles sur le site bobsweep.com/maxim-parts, ou dans la section boutique de l'application bObsweep.

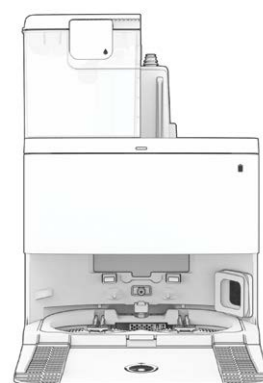


Premier nettoyage de Maxim

Ajouter de l'eau


Utiliser de l'eau distillée dans les régions à eau dure.

1. Tirer le loquet vers le haut pour ouvrir.


Remarque importante : ne forcez pas. Le loquet est fixe et ne se soulève ni ne s'ouvre par charnière.

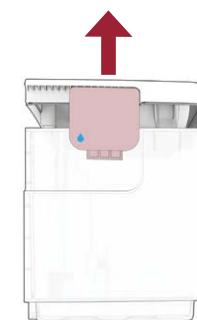


2. Remplir jusqu'à la ligne de remplissage maximale.

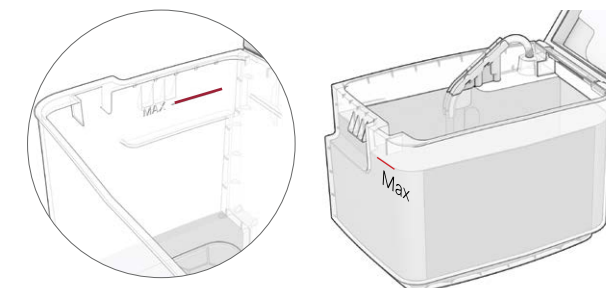

3. Fermer, appuyer pour verrouiller et vérifier que le réservoir est bien fermé.

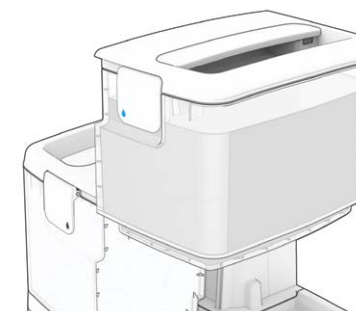


4. Le voyant LED de la station s'allume en bleu pour confirmer qu'elle est prête à accueillir Maxim et que le robot est bien fixé sur la station.

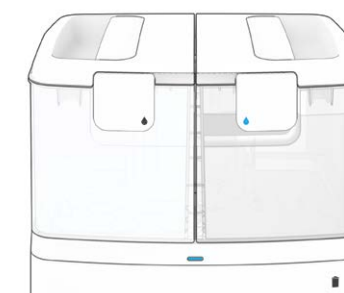

Allumer et charger Maxim

Appuyez et maintenez le bouton GO! enfoncé jusqu'à ce que l'écran s'allume. Maxim émet un signal sonore pour confirmer qu'il est allumé. Appuyez sur le bouton CHARGE de Maxim pour l'envoyer à sa station de recharge.

Pièces requises :




Station de recharge

Indicateur de charge



- Batterie faible : clignote rapidement.
- Recherche station : clignote.
- En charge : clignote lentement.
- Charge complète : voyant blanc.

Pour charger Maxim manuellement, placez-le devant la station de recharge et faites-le glisser vers l'avant jusqu'à ce que les connecteurs métalliques de charge soient alignés. Pour retirer Maxim manuellement, faites-le glisser vers vous, puis soulevez-le de la station.

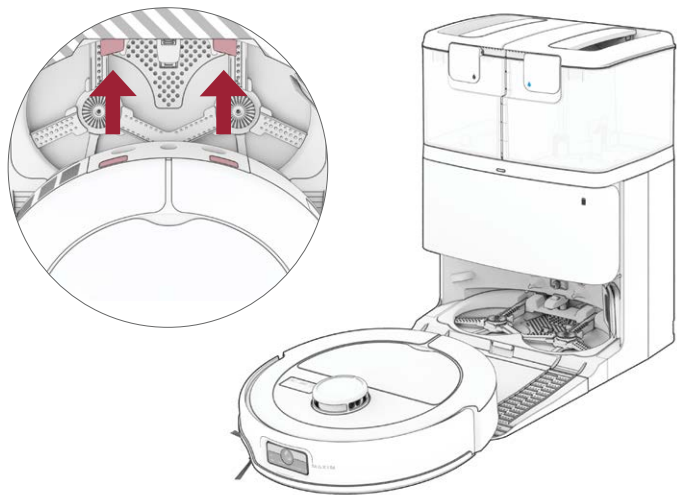

Astuce rapide : Maxim est livré avec une charge partielle, mais nous recommandons de le recharger pendant environ 4 heures avant son premier cycle de nettoyage.

Telecharger l'application bObsweep

Connecter Maxim au Wi-Fi pour toutes les fonctions et mises à jour. Compatible avec Alexa et Google Home via l'application bObsweep.

Pièces requises :




Smartphone



Connection Wi-Fi 2.4GHz


Swift Map™

Maxim cartographie le plancher dès son premier passage. En sélectionnant Swift Map™, Maxim effectue un cycle de cartographie seulement. Il retourne ensuite à sa station de recharge une fois le plan complet établi. Avant de lancer un Swift Map, laissez les portes ouvertes et retirez tout encombrement.

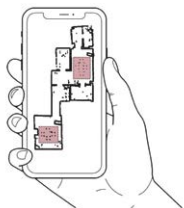

Astuce rapide : pour de meilleurs résultats, retirez les accessoires de vadrouille avant de lancer un Swift Map™ s'ils sont installés.


Ouvrir l'app bObsweep, créer un compte et connecter le robot au Wi-Fi. Balayer le code pour la vidéo guide.

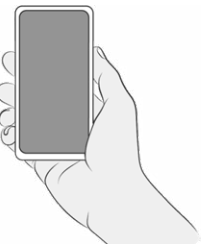

Laissez Maxim se mettre au travail

Maxim est maintenant prêt à nettoyer. Débarrassez la zone de tout encombrement, cordon ou objet lâche, puis appuyez sur GO! sur Maxim ou dans l'application. Il explorera automatiquement votre maison, cartographiera et nettoiera vos planchers en lignes droites. À la fin du cycle de nettoyage — ou lorsque nécessaire — Maxim retournera à sa station de recharge pour remplir son réservoir d'eau, rafraîchir ses vadrouilles ou vider son bac à poussière.

Soulever & Déplacer

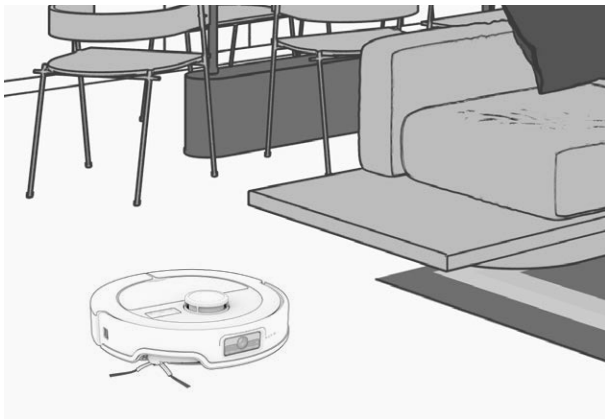

Évitez de soulever Maxim pendant qu'il nettoie, car cela pourrait perturber sa carte. Ne déplacez pas la station de recharge après que Maxim ait terminé la cartographie. Si la station est déplacée, lancez un nouveau SwiftMap™ pour cartographier à nouveau la zone.

Pendant que Maxim nettoie, il crée simultanément une carte des zones qu'il peut atteindre et nettoyer. Vous pouvez consulter cette carte en appuyant sur l'icône Carte dans l'application bObsweep. À partir de là, vous pouvez personnaliser la carte, nommer les pièces et programmer des horaires de nettoyage directement dans l'application. Grâce aux outils de cartographie et de planification, vous pouvez configurer Maxim une seule fois et profiter ensuite de plusieurs semaines de propreté sans effort.



Modes de nettoyages

Utilisez le mode « Aspiration seulement » lorsque la vadrouille n'est pas nécessaire, et le mode « Aspiration et vadrouille » — mode par défaut — pour les foyers qui profitent à la fois d'une bonne aspiration et d'un coup de vadrouille frais. Vous pouvez sélectionner le mode de votre choix dans l'application bObsweep ou directement sur Maxim avant de lancer une séance de nettoyage.

Sur l'application



Vadrouille On, Appui sur **GO!**:
Aspiration et vadrouille
Vadrouille Off, Appui sur **GO!**:
Aspiration seulement

Astuce rapide : désactivez la fonction de vadrouille à tout moment dans l'application, sous : Paramètres > Nettoyage.

Sur Maxim



Appui court GO!: Aspiration et vadrouille
Double-clic GO!: Aspiration seulement

Quick Tip: Retirez les accessoires de vadrouille de Maxim en mode Aspiration seulement.

Cycle de rafraîchissement

Selon vos réglages d'aspiration et de vadrouille ainsi que la taille de votre espace, Maxim peut avoir besoin de se rafraîchir en cours de nettoyage. Lorsque cela se produit, Maxim met le nettoyage sur pause pendant quelques minutes et retourne à sa station pour remplir son réservoir d'eau et rafraîchir ses vadrouilles. Choisissez le type de cycle de rafraîchissement qui convient le mieux à votre foyer et réglez la température de l'eau désirée pour le nettoyage des vadrouilles dans l'application.

Default, léger, ou intense

Mode par défaut :

Maxim décide automatiquement quand effectuer un rafraîchissement.

Mode léger :


Maxim privilégie un nettoyage plus rapide et se rafraîchit seulement après avoir terminé une session complète. S'il manque d'eau, il fera une pause pour remplir son réservoir avant de reprendre le nettoyage.

Mode intense :

Maxim se rafraîchit toutes les 15 minutes pour offrir une performance de nettoyage plus en profondeur.

Fréquence d'auto-vidage :

Ajustez la fréquence à laquelle Maxim vide son bac à poussière pendant le cycle de rafraîchissement si vous ne souhaitez pas qu'il s'auto-vide à chaque retour à la station.

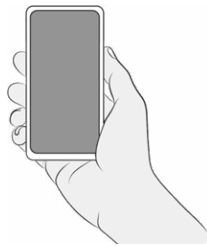

Balayer le code pour la vidéo des cycles rafraîchissement et Nettoyage en profondeur.

Cycle de nettoyage en profondeur

Après chaque séance de nettoyage, Maxim retourne automatiquement à sa station de recharge, vide son bac à poussière et commence le cycle de nettoyage en profondeur, rinçant ses chiffons de vadrouille avec de l'eau chauffée et du détergent.

1. Le lavage des vadrouilles dure entre 2 et 6 minutes, selon le degré de saleté des chiffons. Les capteurs de saleté de Maxim évaluent le niveau de salissure et ajustent automatiquement la durée du lavage au besoin.
Remarque importante : ne pas interrompre Maxim pendant le lavage des vadrouilles. Il est normal d'entendre différents bruits pendant ce processus, car les vadrouilles et les racloirs tournent, et l'eau est pompée et vidangée.

2. Après le lavage, Maxim passe à la phase de séchage automatique, durant laquelle la station sèche les chiffons de vadrouille en soufflant de l'air chaud dessus. Ce processus prend environ 3,5 heures.
Astuce rapide : vous pouvez entendre un léger bourdonnement provenant de la station pendant le séchage. Si le mode par défaut est trop bruyant, sélectionnez le mode Silencieux pour un séchage plus discret dans l'application : Paramètres > Nettoyage automatique des vadrouilles > Séchage à l'air.
3. Videz et lavez le réservoir d'eau sale avant qu'il ne soit plein. Une fois plein, l'eau ne peut plus être vidangée. Si de l'eau stagnante reste dans le plateau, vous devrez la vider et nettoyer manuellement le plateau avant que la station puisse fonctionner de nouveau.

4. Si le plateau contient de l'eau ou des débris, retirez-le et nettoyez toutes ses pièces. Essuyez et séchez le dessous de la station. Assurez-vous que le conduit d'extraction des eaux usées est dégagé et bien positionné, perpendiculaire au bas de la station de recharge. Pour les débris tenaces, nettoyez la zone avec une éponge et un savon doux.

Remarque importante : laisser de l'eau sale dans le réservoir ou le plateau est peu hygiénique, car cela peut entraîner la formation d'odeurs et de bactéries. Nettoyez régulièrement avec du savon et utilisez de l'eau tiède, du savon et une éponge pour éliminer les résidus tenaces.

Pour une performance optimale

Pour maximiser l'efficacité de Maxim, gardez sa station, ses brosses, ses filtres et ses capteurs propres.

Article	Pièce	Fréquence de maintenance	Fréquence de remplacement
Maxim	Brosses	Chaque semaine	Tous les 6 – 12 mois
	Capteurs de bords	Chaque mois	
	Bac à poussière	Chaque mois	
	Filtre	Chaque semaine	Tous les 4 – 6 mois
	Linge de vadrouille	Chaque mois	Tous les 2 – 3 mois
	Roue avant	Chaque mois	
	Batterie		Tous les 24 – 36 mois
Staton de recharge	Réservoir d'eau sale	Chaque mois	
	Plateau de lavage automatique	Chaque mois	
	Capteurs	Chaque mois	
	Sac à poussière		Tous les 1 – 3 mois
	Filtre d'eau propre	Trimestriel	Tous les 6 – 12 mois

- Astuces rapide:**
- Essuyez les plaques de charge sur Maxim et sur sa station pour les garder propres.
 - Nettoyez régulièrement les débris accumulés dans les recoins du robot et de la station de charge.
 - Utilisez une pince à épiler pour retirer les obstructions ou les amas de débris aux extrémités des brosses ainsi que dans les compartiments des brosses principale et latérale. Utilisez des ciseaux ou l'outil de nettoyage fourni pour couper les cheveux enroulés autour des brosses.


Scannez pour un guide vidéo étape par étape :




Brosses

Nettoyez la brosse latérale et la brosse principale chaque semaine pour maintenir une performance optimale.


1. Tirez vers le haut pour retirer la brosse latérale.

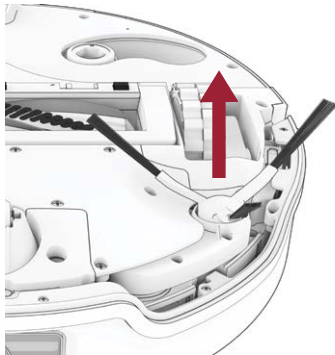


2. Retirez les débris de la brosse latérale et de sa prise.

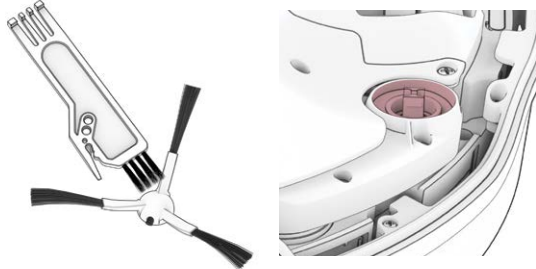

3. Pincez les languettes du volet de la brosse principale et soulevez-le. Inclinez la brosse vers le haut et faites-la glisser pour la retirer de la tige.

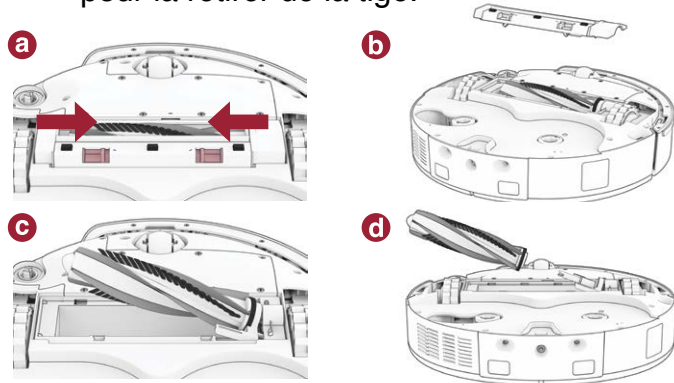


4. Nettoyez la brosse principale et ses composants, y compris le volet de la brosse principale et le compartiment de la brosse sur Maxim.

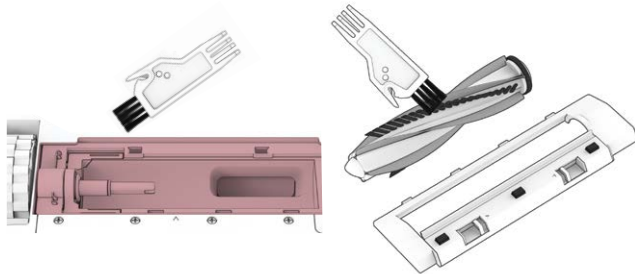


Capteurs

Utilisez un chiffon doux, propre, sec et non pelucheux pour essuyer les capteurs.
Ne vaporisez pas de solution nettoyante ni d'eau directement sur les capteurs ou leurs ouvertures.

1. Essuyez les 4 capteurs de bord et le capteur FloorSense.

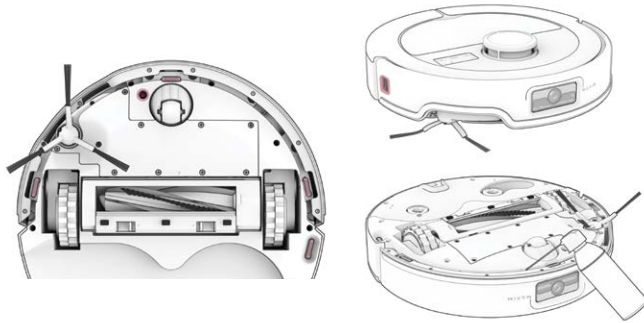


2. Essuyez les plaques de charge et les capteurs de charge sur Maxim et sur sa station.

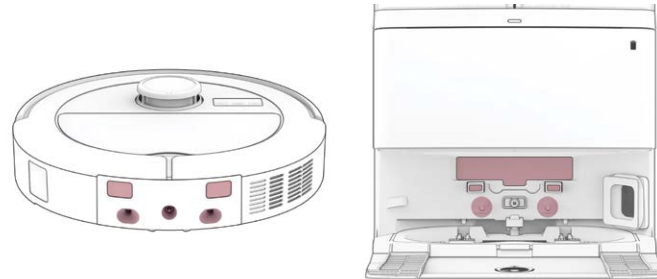

3. Essuyez les connecteurs métalliques sur le robot et les accessoires de vadrouille.




4. Essuyez la caméra VisiOn et le SLAM LiDAR. Vérifiez s'il y a des débris et retirez-les délicatement afin de maintenir une vision et une localisation claires.

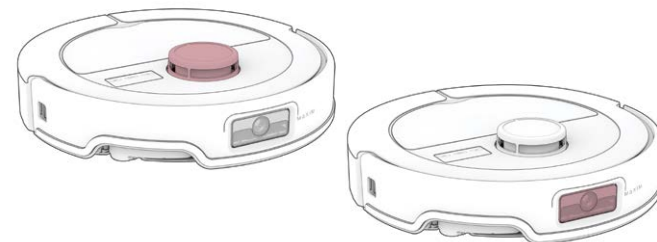


Remarque importante : le SLAM LiDAR de Maxim est un capteur très sensible. Ne forcez pas, n'insérez aucun objet et ne tentez aucun ajustement. Ne vous asseyez pas sur Maxim et n'y déposez aucun objet.

Bac à poussière et filtre

1. Retirez le couvercle supérieur de Maxim. Appuyez sur les onglets de déverrouillage du bac à poussière pour retirer le bac.

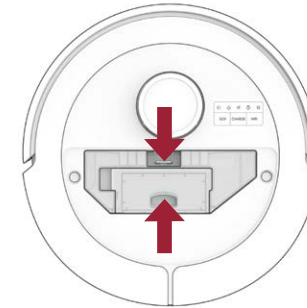


2. Retirez le filtre et dépoussiérez-le à l'aide de l'outil de nettoyage. Pour les débris plus tenaces, utilisez un appareil à succion, comme un aspirateur portatif.

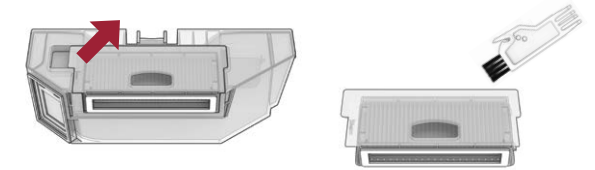


Remarque importante : le compartiment du filtre est fixe et ne s'ouvre pas.

3. Videz le contenu du bac à poussière et essuyez l'intérieur. Vous pouvez également laver le bac; assurez-vous qu'il soit entièrement sec avant de le remettre en place.

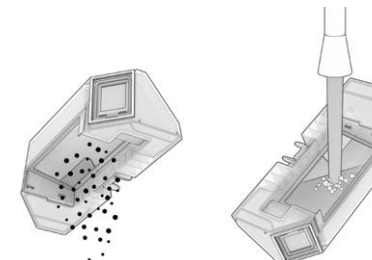


4. Remettez le filtre et le bac à poussière en place. Remplacez ensuite le couvercle supérieur de Maxim.

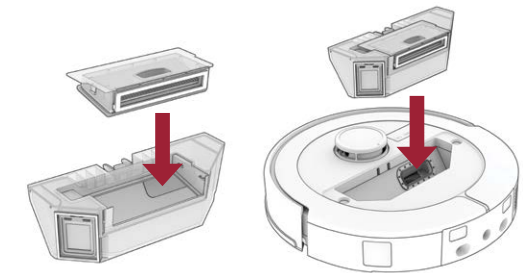


Remarque importante : le bac à poussière ne va pas au lave-vaisselle.

Linges de vadrouille


1. Retirez les accessoires de vadrouille et séparez les linges de vadrouille de leurs supports.

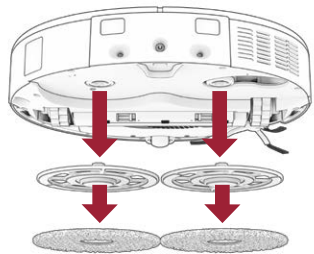


3. Utilisez les vadrouilles en microfibre rayée sur les planchers de bois franc et pour un nettoyage léger. Utilisez les vadrouilles robustes pour un frottage plus intense sur les surfaces texturées, comme les tuiles.

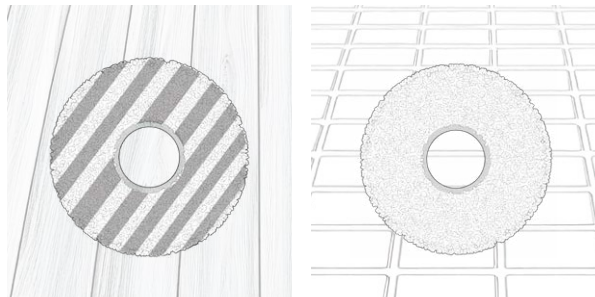

2. Secouez pour enlever la poussière ou les débris avant le lavage. Lavez les linges à la main ou à la machine avec un détergent doux. Laissez-les sécher à l'air libre. Ne les mettez pas dans la sècheuse, la chaleur pourrait endommager les bandes de Velcro.

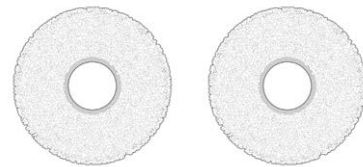


4. Remplacez les linges de vadrouille sur leurs supports et reconnectez les supports de vadrouille à Maxim.

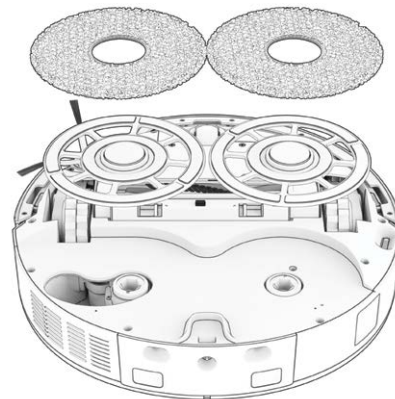


Roue avant

1. À l'aide d'un tournevis à tête plate pour faire levier, tenez fermement la roue et tirez. Retirez les débris de la roue et de sa prise.

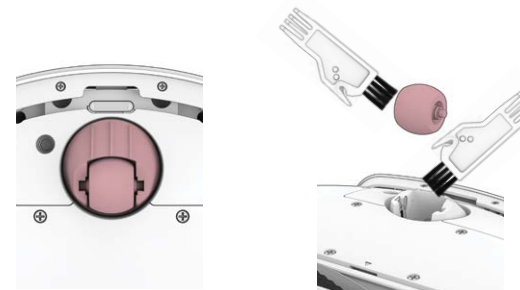


3. Faites levier pour retirer complètement l'assemblage de la roue afin de nettoyer la prise et toutes ses composantes.

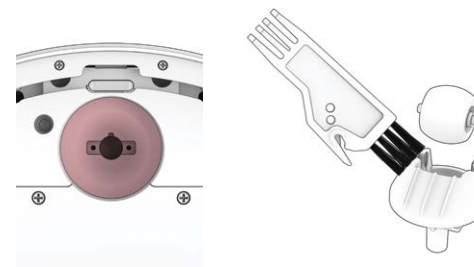

2. S'il y a des débris à l'intérieur de la prise de la roue, démontez l'assemblage de la roue pour le nettoyer. Faites pivoter la prise pour retirer les deux vis situées à gauche et à droite.




4. Remplacez la prise et les vis une fois le nettoyage terminé. Appuyez pour verrouiller la roue en place.

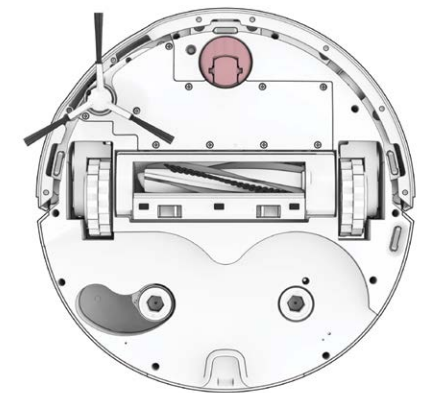


Batterie

Appuyez et maintenez le bouton GO! enfoncé jusqu'à ce que Maxim s'éteigne complètement avant de remplacer la batterie.


1. Utilisez un tournevis cruciforme pour retirer les 10 vis du compartiment de la batterie.

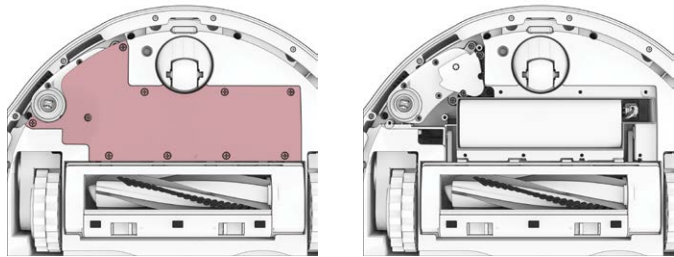

2. Débranchez la batterie et branchez-en une nouvelle.

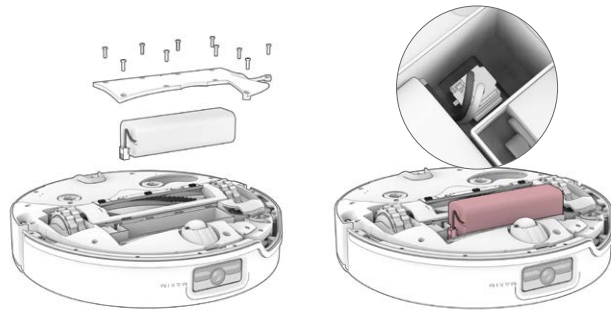

3. Faites glisser la nouvelle batterie dans Maxim.

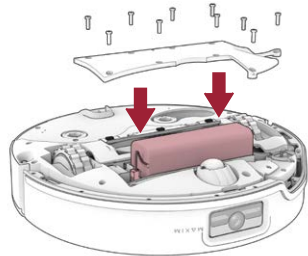

Remarque importante : le mode haute puissance augmente considérablement la consommation d'énergie de Maxim et peut réduire son autonomie à environ un tiers ou un quart de sa durée de fonctionnement maximale annoncée.

4. Ne jetez pas une batterie usagée aux ordures ni dans le bac de recyclage. Les batteries doivent être recyclées dans un centre approprié. Aux États-Unis et au Canada, apportez-la à un point de dépôt Call2Recycle® ou téléphonez au 1-877-2-RECYCLE pour trouver un lieu près de chez vous.


Les commerces d'électronique, les centres municipaux de recyclage ou les programmes locaux de gestion des déchets dangereux peuvent également accepter les batteries au lithium-ion.

Conservation de la batterie

Les modes à haute puissance augmentent considérablement la consommation de la batterie de Maxim, réduisant ainsi son autonomie. Pour le nettoyage quotidien, utilisez les modes à faible puissance afin d'économiser l'énergie et prolonger la durée de vie de la batterie.

Vous ne prévoyez pas utiliser Maxim pendant quelques semaines? Activez le mode Veille à faible consommation (LPS). Pour ce faire, placez Maxim sur sa station de recharge, puis appuyez et maintenez le bouton CHARGE sur Maxim pendant 5 secondes. Vous entendrez « mode faible consommation », confirmant que Maxim est en mode LPS. Pour quitter ce mode, appuyez sur GO! pendant que Maxim est sur sa station de recharge, ou retirez-le simplement de la station.

Rangement de Maxim

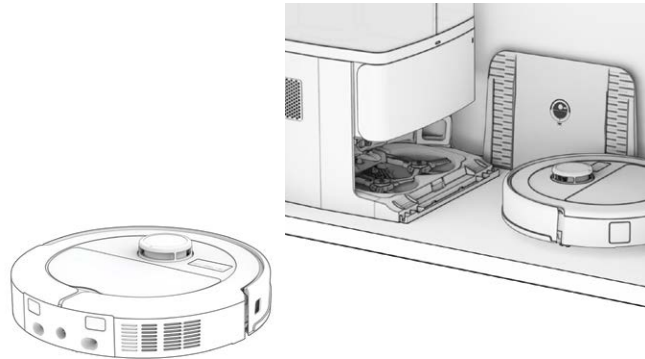

Si vous n'utilisez pas Maxim pendant une longue période (plus d'un mois), éteignez-le, retirez sa batterie et débranchez sa station de recharge. Rangez le tout dans une pièce sèche, à l'abri de la lumière directe du soleil et des températures extrêmes.





Remarque importante : dans ce mode, Maxim est hors ligne et les nettoyages planifiés sont suspendus.

Voyant LED de la station de recharge



Etata du voyant	Etat de la station	Que faire
	Maxim est arrimé ou la station est éteinte	- Lorsque Maxim est correctement arrimé et qu'aucun problème n'est détecté sur la station, le voyant de la station s'éteint afin d'éviter toute distraction inutile. L'état de charge de Maxim peut être consulté sur son écran. - À l'inverse, si Maxim n'est pas arrimé et que le voyant est éteint, cela signifie que la station n'est pas alimentée. Branchez la station de recharge dans une prise intérieure de 110 V fonctionnelle. N'utilisez pas de transformateurs ni de prises extérieures.
	Pret	- La station est sous tension et prête à accueillir Maxim. - Dès que Maxim s'arrime et commence à se recharger, le voyant bleu s'éteint. - Si Maxim est arrimé sur la station et que le voyant reste bleu, ajustez la position de Maxim sur le socle jusqu'à ce que le voyant s'éteigne afin d'assurer un bon contact de charge.
	Problème de réservoir d'eau	- Assurez-vous que le réservoir d'eau propre est rempli et bien scellé. - Videz le réservoir d'eau sale et réinstallez-le correctement.
	Problème de plateau	Retirez le plateau de la station de recharge, videz l'eau et les débris, essuyez toutes les pièces et réinstallez-le.
	Poussière non détecté / ouverture du sac à poussière fermée	- Insérez complètement le sac à poussière dans la glissière et poussez l'onglet vers le bas pour l'ouvrir et l'aligner avec le conduit d'air. - Placez Maxim sur la station et appuyez sur Charger pour lancer l'auto-vidange. En savoir plus sur le dépannage des problèmes de station :
	Obstruction dans le conduit d'air	- Retirez et ouvrez le bac à poussière; éliminez toute accumulation importante. - Nettoyez l'ouverture du conduit d'évacuation à l'arrière du bac à poussière et assurez-vous que le clapet bouge librement. - Placez Maxim sur la station et appuyez sur Charger pour lancer l'auto-vidange. Si le voyant clignote toujours : - Débranchez la station. - Ouvrez la fenêtre d'accès au conduit d'air et retirez toute obstruction. - Remplacez Maxim sur la station et appuyez sur Charger.
	Surchauffe de la station / défaillance matérielle	- Débranchez la station et laissez-la refroidir. - Ouvrez et nettoyez le conduit d'air ainsi que le plateau de vadrouille de la station. - Si le problème persiste, contactez le service client.

Station de recharge : sac à poussière

1. Tirez le panneau du compartiment du sac à poussière vers vous pour le retirer.
2. Faites glisser le sac à poussière en tirant sur la languette pour le sceller. Retirez et jetez le sac. Nettoyez l'orifice d'évacuation de bout en bout et retirez tout obstacle.

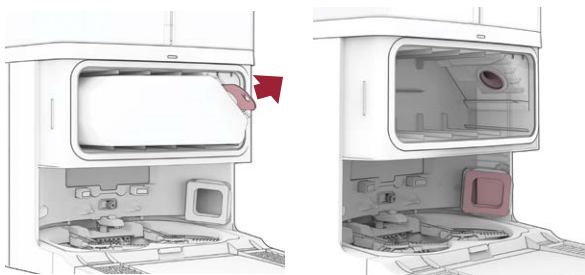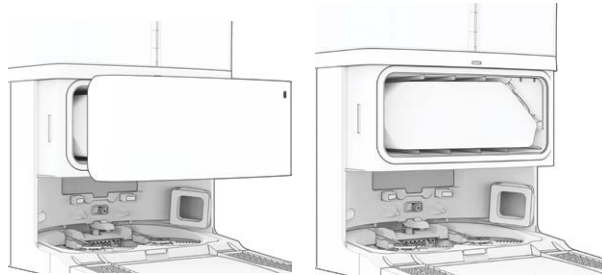


3. Installez un nouveau sac en faisant glisser la carte dans les rails de guidage, puis poussez la languette jusqu'au fond pour assurer un ajustement sécurisé.
4. Replacez le panneau du compartiment du sac à poussière. Le voyant de la station s'allumera en bleu (ou restera éteint si Maxim est en stationnement) pour confirmer qu'elle est prête à l'emploi.

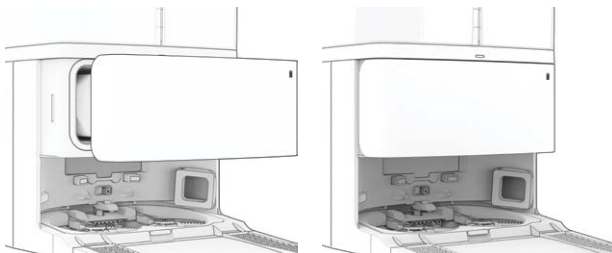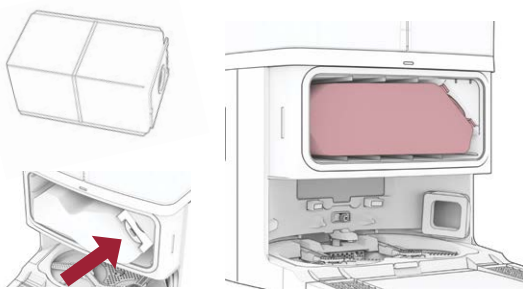


Station de recharge : réservoir d'eau propre

⚠ Dans les régions où l'eau est dure, utilisez de l'eau distillée afin d'éviter l'entartrage des pompes, des tuyaux et des moteurs.


1. Avant de soulever le réservoir, vérifiez qu'il est bien fermé. Soulevez la poignée pour retirer le réservoir d'eau propre.

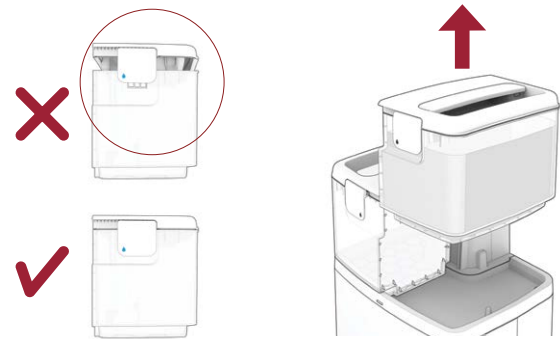


2. Videz le réservoir. Lavez l'intérieur à l'eau tiède avec un savon doux et une éponge. Rincez abondamment.

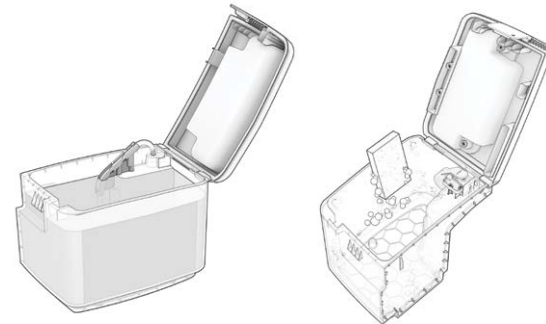

3. Laissez le réservoir sécher à l'air libre. Refermez le couvercle et appuyez fermement pour bien verrouiller le loquet. Remettez le réservoir en place en l'abaissant complètement, sans laisser d'espace à l'avant ou à l'arrière.

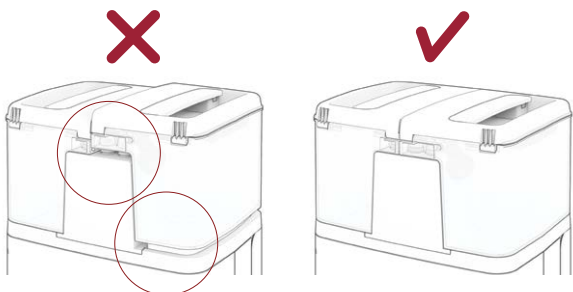


4. Le voyant de la station devient bleu (ou reste éteint si Maxim est sur la station) lorsque tout est correctement installé et qu'il y a suffisamment d'eau propre, ce qui confirme qu'elle est prête à l'utilisation.

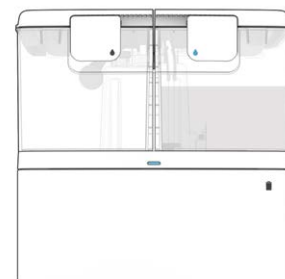


Station de recharge : filtre du réservoir d'eau propre


1. Si vous n'utilisez pas d'eau distillée, lavez et détartrez le filtre du réservoir d'eau propre tous les 3 à 6 mois.

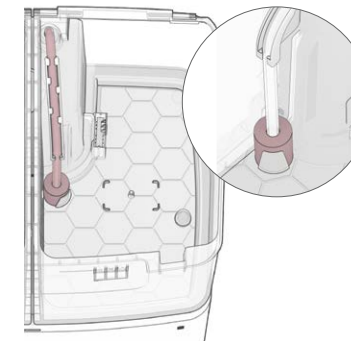


2. Ouvrez le réservoir et décrochez le tuyau d'eau propre en commençant par le haut du réservoir.

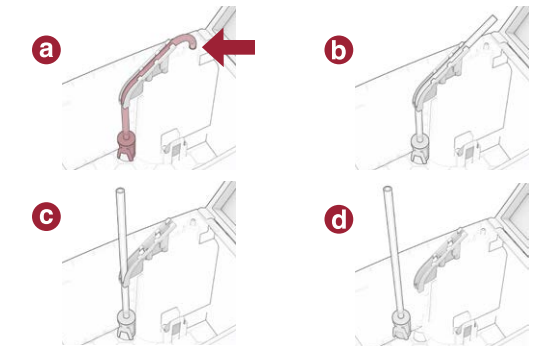

3. Lavez le filtre et le tuyau à l'eau tiède afin de les détartrer.

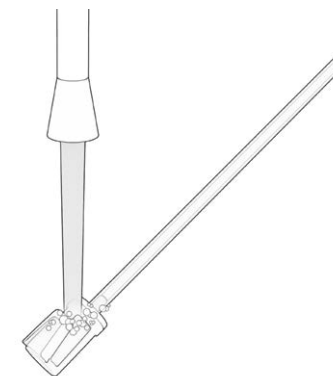


4. Remettez le filtre en place, rebranchez le tuyau en le poussant jusqu'à ce qu'il soit complètement inséré, puis rangez le tuyau de façon sécuritaire.

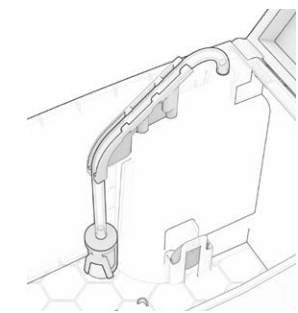


Station de recharge : réservoir d'eau sale

⚠ Laisser de l'eau sale dans le réservoir est peu hygiénique, car cela peut provoquer des odeurs et la formation de bactéries.


1. Avant de soulever, vérifiez que le réservoir est bien fermé. Soulevez la poignée pour retirer le réservoir d'eau sale.

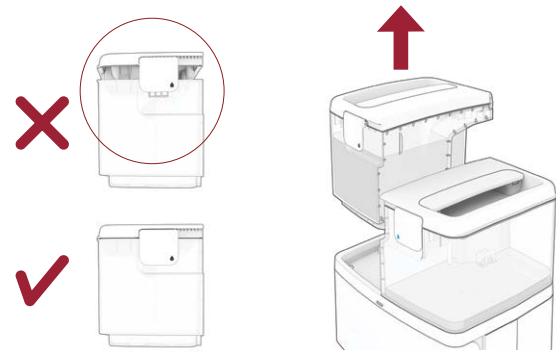


2. Videz le contenu. Lavez l'intérieur avec de l'eau tiède, du savon doux et une éponge. Rincez soigneusement.

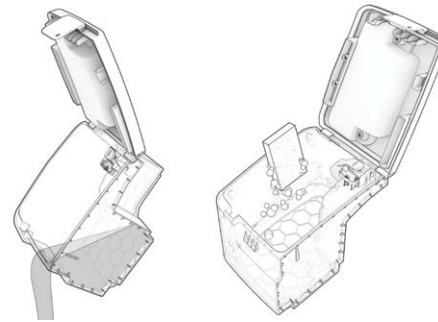

3. Laissez le réservoir sécher à l'air. Fermez le couvercle et appuyez pour verrouiller le loquet. Remplacez le réservoir en le poussant complètement vers le bas, sans laisser d'espace à l'avant ou à l'arrière.

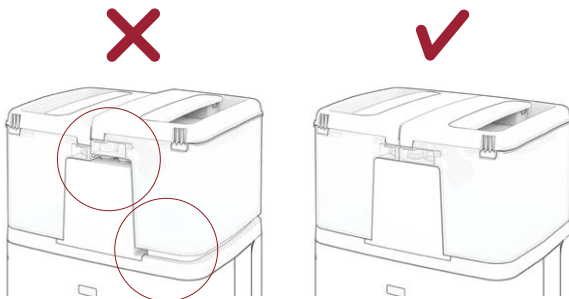


4. Le voyant de la station s'allumera en bleu (ou restera éteint si Maxim est en stationnement) si tout est correctement installé et qu'il y a suffisamment d'eau propre, confirmant que la station est prête à l'emploi.

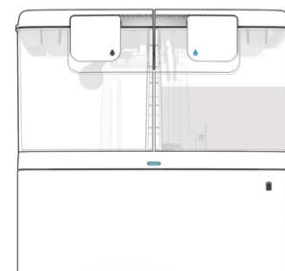


Station de recharge : plateau

Nettoyez régulièrement le plateau pour maintenir l'hygiène et assurer un fonctionnement fiable de la station.


1. Soulevez le plateau hors de la station à l'aide de la languette à l'avant. Ensuite, retirez le drain.

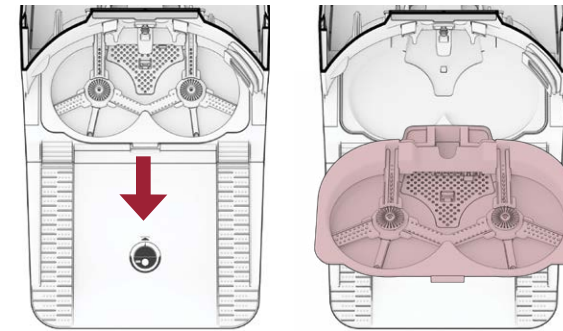


2. Essuyez le fond de la station de recharge. Le tuyau d'extraction de l'eau sale doit être propre et correctement positionné, perpendiculairement au fond de la station.

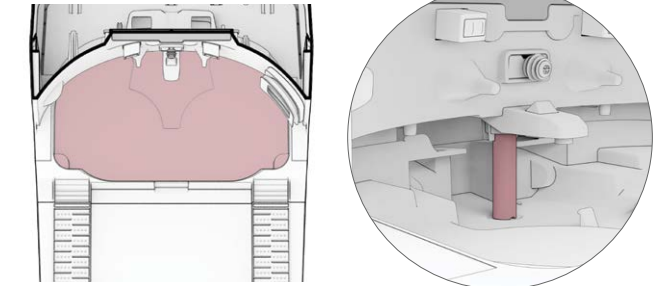

3. Séparez les composants du plateau et lavez-les à l'eau tiède avec un savon doux et une éponge. Rincez abondamment et laissez-les sécher complètement avant de les réassembler.

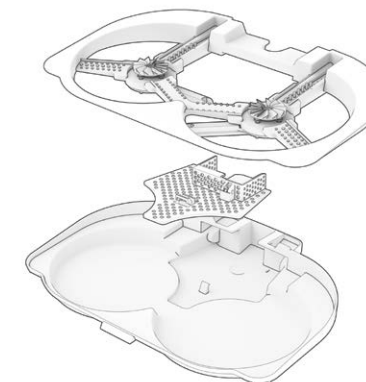

4. Réassemblez le plateau et remettez-le en place dans la station de recharge, en vous assurant que le tuyau d'extraction de l'eau sale est bien droit à l'intérieur du drain.

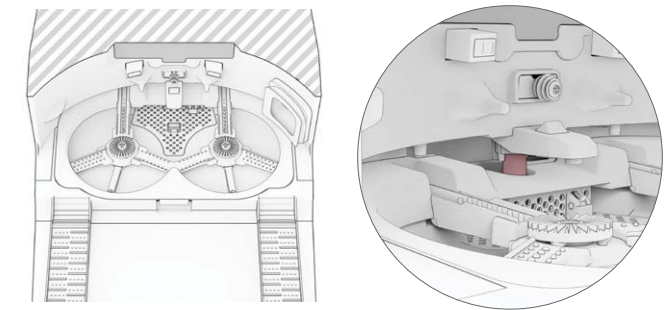

Dépannage

Chaque fois que Maxim rencontre un problème, il s’arrête et le voyant d’alerte clignote. Consultez l’application bObsweep pour obtenir les détails du problème.

Problème	Solution
Batterie	Batterie faible ou déconnectée. Vérifiez la connexion. Réinitialisez Maxim, puis rechargez-le.
Roue gauche/droite	La roue gauche/droite est bloquée. Vérifiez s’il y a une obstruction et nettoyez-la.
Brosse principal	La brosse principale est bloquée. Retirez-la et nettoyez-la.
Brosse laterale	La brosse latérale est bloquée. Retirez-la et nettoyez-la.
EdgeReach™ : Brosse latérale	Le bras extensible de la brosse latérale ne peut pas s’étendre ou se rétracter. Retirez la brosse latérale et vérifiez s’il y a des débris autour du bras, puis nettoyez-le. Si rien n’obstrue le bras, effectuez un test du moteur via le contrôle à domicile (Home Checkup).
Bac à poussière	Le bac à poussière est déconnecté ou les points de contact sont sales. Nettoyez les points de contact et réinsérez le bac.
Moteur d’aspiration	Des débris se sont accumulés dans la sortie d’air ou le boîtier du moteur. Retirez le bac à poussière, puis enlevez les obstructions et les débris de la sortie d’air et du boîtier du moteur afin de permettre une circulation d’air libre.
Caméra	Erreur du composant de la caméra. Réinitialisez Maxim (éteignez-le puis rallumez-le).
Vadrouille gauche/droite manquante	Un des accessoires de vadrouille est manquant ou déconnecté. Assurez-vous que les deux accessoires de vadrouille sont bien connectés. S’ils sont déjà attachés, retirez-les et nettoyez les points de contact sur le robot et sur les accessoires, puis réinstallez-les. Si le problème persiste, redémarrez le robot.
Mouvement de la vadrouille gauche/droite	L’accessoire de vadrouille gauche/droite ne peut pas bouger ou tourner. Vérifiez la présence de débris autour de la vadrouille rotative et nettoyez-les. Si rien n’obstrue le mécanisme, effectuez un test du moteur via le contrôle à domicile (Home Checkup).
EdgeReach™ : Vadrouille	Le bras extensible de la vadrouille ne peut pas s’étendre ou se rétracter, ou l’accessoire de vadrouille droit ne peut pas bouger ou tourner. Vérifiez la présence de débris autour de la vadrouille rotative et nettoyez-les. Si rien n’obstrue le mécanisme, effectuez un test du moteur via le contrôle à domicile (Home Checkup).
Capteurs de bord	Maxim est coincé près d’un ravin, n’est pas posé au sol, ou les capteurs de bord sont sales. Déplacez Maxim en lieu sûr et nettoyez les capteurs de bord. De petits objets près du bord peuvent provoquer une chute. Tracez une ligne ou une zone NoSweep le long de la largeur des escaliers pour prévenir toute chute.
FloorSense™	Essuyez la fenêtre du capteur FloorSense pour enlever les débris et la poussière. Redémarrez le robot.
Pare-chocs	Le pare-chocs est sale ou bloqué. Essuyez-le et retirez toute obstruction sur ou sous le pare-chocs.

Dépannage

Remarque importante : les mises à jour logicielles peuvent modifier les messages d’erreur affichés sur Maxim ou sa station.Vérifiez toujours l’application bObsweep pour obtenir les informations les plus récentes sur les messages et suivez les instructions de dépannage fournies.

Problème	Solution
Pare-chocs LiDAR	Le pare-chocs du SLAM LiDAR est bloqué. Vérifiez s’il y a une obstruction et nettoyez-le.
LiDAR	Le SLAM LiDAR est sale ou a perdu en visibilité. Nettoyez le SLAM LiDAR et déplacez Maxim loin des miroirs, des surfaces métalliques ou des murs, vers le centre de la pièce.
Interface utilisateur	Le port UI/USB de Maxim ne répond pas. Réinitialisez Maxim et assurez-vous que le port USB est vide.
Electronique	Erreur de composant électronique. Réinitialisez Maxim (éteignez-le, puis rallumez-le).
Coincé	Maxim est coincé. Dégagez les obstacles, le désordre ou les fils, puis réinitialisez Maxim.
Navigation	Maxim n’arrive pas à naviguer. Dégagez les fils ou les objets encombrants, puis réinitialisez Maxim.
Localisation	Maxim ne peut pas se localiser sur la carte. Chargez la carte enregistrée correcte ou effacez-la pour créer une nouvelle cartographie.
Paramètres	Les paramètres actuels de la pièce ne correspondent pas à ceux de Maxim. Modifiez les paramètres de la carte ou les horaires.
Station de recharge	Impossible de localiser la station de recharge. Rebranchez la station de recharge et rechargez Maxim.

⚠ La station de recharge est équipée d’un protecteur thermique pour prévenir les dommages causés par la surchauffe. Lorsque le protecteur est activé, le moteur s’arrête. Si cela se produit : débranchez la station et laissez-la refroidir pendant 30 minutes Une fois refroidie, inspectez la station et retirez tout obstacle dans l’orifice d’évacuation, le conduit d’air, le tube d’eau sale, le réservoir d’eau sale et le plateau. Après inspection et nettoyage, rebranchez la station.

⚠ Maxim est également équipé de dispositifs de protection contre la surchauffe. Si Maxim devient inactif ou ne répond plus : laissez-le refroidir pendant 30 minutes. Une fois refroidi, ouvrez le compartiment batterie et débranchez la batterie. Retirez le bac à poussière et inspectez l’ouverture du moteur de l’aspirateur ainsi que le ventilateur pour détecter tout obstacle. Nettoyez au besoin, puis réassemblez et rallumez Maxim.

En savoir plus sur le dépannage de Maxim :



Test de contrôle à domicile

Si Maxim ne fonctionne pas aussi bien qu'il le devrait, vous pouvez diagnostiquer le problème à l'aide d'un simple test de vérification à domicile. Balayez le code pour visionner une vidéo étape par étape du test de vérification.



Remarque importante : les mises à jour logicielles peuvent modifier les messages vocaux émis par Maxim ou les étapes du test. Consultez toujours les pages d'assistance de Maxim pour obtenir les informations les plus récentes sur les messages vocaux et les procédures de test.

Pour activer le mode Vérification :
Appuyez simultanément sur les boutons « **GO!** », « **CHARGE** » et « **WI-FI** » pendant quelques secondes, jusqu'à ce que le robot dise : « **Home Checkup Mode Activated.** » Dans ce mode, le capteur LiDAR de Maxim commence à tourner.

Pour quitter le mode Vérification :
Appuyez de nouveau sur les boutons « **GO!** », « **CHARGE** » et « **WI-FI** » en même temps. Vous entendrez : « **Exiting Home Checkup Mode.** », et le capteur LiDAR cessera de tourner.

Remarques importantes :

- Pendant le test, si Maxim reste inactif plus d'une minute, il quittera automatiquement le test.
- Pour passer d'une étape à l'autre, appuyez sur le bouton Wi-Fi.
- Pour démarrer ou arrêter un test à chaque étape, appuyez sur le bouton GO! jusqu'à entendre « **Begin test** » ou « **Stop test** ».
- Assurez-vous d'arrêter un test avant de passer à l'étape suivante.

Etape	Composant(s) testé(s)	Description
1	Batterie	Après une charge complète, testez la batterie de Maxim.
2	Capteurs de bords	Testez les capteurs de bord individuellement.
3	Station de recharge	Testez les capteurs de charge individuellement.
4	Pare-chocs, Wi-Fi et caméra	Testez le module Wi-Fi, les capteurs tactiles et la caméra.
5	Moteurs (roues, brosses, aspiration, vadrouille)	Testez chacun des moteurs de Maxim individuellement.
6	SLAM LiDAR, Charge et auto-vidage	Testez le SLAM LiDAR de Maxim, les points de contact de charge et la fonction d'auto-vidage.
7	Réinitialisation complète de Maxim	Rétablissez les paramètres d'usine de Maxim et effacez toutes les données.

Sécurité et expédition de la batterie

Remarque importante : les batteries au lithium-ion et les produits qui en contiennent sont soumis à des réglementations strictes de transport.

- Si vous devez expédier, transporter ou voyager avec Maxim, suivez ces directives :
- Maxim doit être éteint avant l'expédition.
 - Pour l'éteindre, retirez-le de la station et maintenez le bouton GO! enfoncé pendant 5 secondes.
 - Tous les voyants s'éteindront et Maxim émettra un son de confirmation.
 - Emballez Maxim solidement avant l'expédition pour éviter tout dommage.

Pour toute question ou assistance supplémentaire, consultez l'application bObsweep et contactez notre équipe de support.

Contactez-nous

Pour toute question ou assistance, communiquez avec notre équipe de soutien à : support@bobsweep.com ou sans frais au 1-888-549-8847 | Heures : du lundi au vendredi, de 9 h à 17 h (heure du Pacifique).

Des informations supplémentaires de dépannage et des guides d'utilisation sont disponibles dans l'application bObsweep et sur le site : www.bobsweep.com/maxim-support

FAQs

Si Maxim ne s'allume plus.

Si Maxim ne réagit pas à ses boutons, il est probable que sa batterie soit trop faible pour fonctionner. Placez-le sur sa station de recharge et laissez-le charger complètement pendant toute la nuit. Assurez-vous que les connecteurs à l'arrière du bac à poussière de Maxim sont bien en contact avec la station. Scannez le code pour obtenir plus de conseils.



Maxim s'est déchargé avant d'avoir cartographié.

Utilisez la fonction Cartographie rapide dans l'application bObsweep pour demander à Maxim de cartographier rapidement tout l'étage. Si l'étage est trop grand pour que Maxim puisse le nettoyer en une seule charge, activez l'option Reprise automatique sous Paramètres > Préférences de nettoyage dans l'application bObsweep. Maxim reprendra là où il s'était arrêté après s'être rechargé.




Maxim n'aspire pas aussi bien.

Maxim aura de la difficulté à aspirer si son bac à poussière ou son moteur d'aspiration est obstrué, ou si sa brosse principale est bloquée ou emmêlée avec des cheveux. Retirez et nettoyez la brosse principale. Ouvrez le bac à poussière et nettoyez le bac ainsi que le moteur d'aspiration pour assurer une circulation d'air libre.



Maxim ne se vide pas automatiquement.

Chaque fois que Maxim retourne à sa station, un fort bruit d'aspiration se fait entendre lorsque son bac à poussière est vidé dans le sac de la station. Si le bac à poussière de Maxim ou le conduit d'air de la station est obstrué, le contenu ne pourra pas être aspiré correctement. Retirez et ouvrez le bac à poussière pour le vider. Débranchez la station et ouvrez le conduit d'air afin de retirer tout ce qui pourrait le bloquer. Scannez pour obtenir les instructions détaillées.

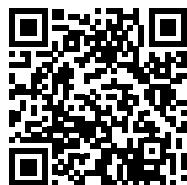

Maxim n'arrive pas à trouver sa station.

Assurez-vous que la rampe de la station de recharge est correctement installée et qu'aucun obstacle n'empêche Maxim ou la station de fonctionner. Il peut être nécessaire de déplacer la station dans un endroit central et facilement accessible. Placez-la sur une surface dure et plane, loin des escaliers, de la lumière directe du soleil, des miroirs et des surfaces réfléchissantes. Assurez-vous qu'il y ait suffisamment d'espace dégagé autour de la station. Une fois la station installée à son nouvel emplacement, effacez l'ancienne carte et laissez Maxim refaire la cartographie de la maison à partir du nouvel endroit.


Maxim a arrêté de nettoyer et l'indicateur de problème clignote.

Lorsque Maxim rencontre un problème et a besoin de votre aide, il s'arrête et l'indicateur de problème clignote. Ouvrez l'application bObsweep et consultez les détails du problème en haut de la page de contrôle.

FAQs

Je n'arrive pas à connecter Maxim au Wi-Fi.

Une fois que Maxim est complètement chargé, vous pouvez le connecter à un réseau Wi-Fi de 2,4 GHz. Amenez Maxim et votre téléphone près de votre modem ou routeur. Scannez pour obtenir les instructions étape par étape.

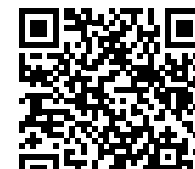

Maxim est hors ligne.

Maxim peut être en veille, recevoir un signal Wi-Fi faible ou être éteint. Pour le remettre en ligne, placez-le sur sa station de charge afin qu'il se recharge et s'allume. Approchez-le du routeur ou du modem pour un signal plus fort.

Quelles actions et modifications liées à la carte puis-je effectuer ?

La carte de Maxim est entièrement personnalisable et facile à modifier. Dessinez des zones NoSweep ou NoMop, divisez, fusionnez et nommez les pièces, et effacez ou enregistrez des cartes. Scannez pour obtenir des instructions étape par étape.



Maxim peut-il nettoyer plusieurs étages ?

Maxim peut enregistrer jusqu'à 3 cartes de plancher différentes. Scannez pour obtenir des instructions étape par étape.



Puis-je soulever Maxim ?

Il n'est pas recommandé de soulever ou de déplacer Maxim pendant une séance de nettoyage, car cela peut perturber sa localisation et sa carte. De plus, une fois que Maxim a cartographié l'environnement, il est préférable de ne pas déplacer sa station de recharge. Si vous devez la déplacer, assurez-vous d'effacer l'ancienne carte et laissez Maxim cartographier de nouveau la maison à partir du nouvel emplacement.

Comment puis-je diagnostiquer le problème exact de Maxim ?

Vous pouvez vérifier les capteurs, moteurs et autres composants de Maxim en lançant un test de diagnostic complet. Scannez pour obtenir des instructions étape par étape.



Maxim se coince.

Si Maxim se coince ou s'arrête de manière répétée dans certaines zones, dessinez des zones NoSweep sur la carte pour l'aider à éviter ces endroits problématiques. Scannez pour obtenir des instructions étape par étape.



Est-ce que Maxim est compatible avec Google et Alexa ?

Oui ! Maxim peut être connecté aux applications et appareils Google Home et Alexa. Pour plus d'informations, visitez : bobsweep.com/maxim-support

End User License Agreement

IMPORTANT - READ BEFORE USING. Do not use the robot (“Maxim”, “Max”, “Bot”, “Device”, or “bObsweep”) accompanying this license agreement (“Agreement”) until you have carefully read and agreed to the following terms and conditions.

By using the bObsweep, you agree to the terms of this End User License Agreement (“EULA”) and any amendment or addenda accompanying this Agreement. If you do not agree to the terms of this EULA, you may not use the bObsweep. The bObsweep contains an electronic and software interface that allows you to control or modify its behavior, and remotely monitor its sensors.

THIS IS A LEGAL AGREEMENT. BY ACCESSING AND USING THE PRODUCT AND PRODUCT SOFTWARE, YOU ARE ACCEPTING AND AGREEING TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT IN CONNECTION WITH THE ACCESS. YOU REPRESENT AND WARRANT THAT YOU HAVE THE RIGHT, AUTHORITY, AND CAPACITY TO ACCEPT AND AGREE TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT. YOU REPRESENT THAT YOU ARE OF SUFFICIENT LEGAL AGE IN YOUR JURISDICTION OR RESIDENCE TO USE OR ACCESS THE PRODUCT SOFTWARE AND TO ENTER INTO THIS EULA. IF YOU DO NOT AGREE WITH ANY OF THE PROVISIONS OF THESE TERMS, YOU SHOULD CEASE USING THE PRODUCT AND PRODUCT SOFTWARE.

Terms and Conditions

LICENSE: Subject to all of the terms of this Agreement, Bobsweep Inc. (“bObsweep”) grants to you one (1) revocable, royalty-free, personal, non-exclusive, non-transferable, non-assignable, non-commercial intellectual property license to use the Bobsweep software contained on the bObsweep (“Bobsweep Software”), including the protocol for communicating with the bObsweep Software, and to use the bObsweep.

NONCOMMERCIAL LICENSE: You may use the Bobsweep Software and the bObsweep only for personal, non-commercial, educational, and research purposes. The Bobsweep Software and the bObsweep may not be used for any other purpose, whether “for profit” or “not for profit.” Any work performed or produced using the bObsweep, including any software that you create for your bObsweep (“Your Software”), cannot be performed or produced for the benefit of other parties for a fee, compensation, or any other reimbursement or remuneration. A separate license is required for each additional use and/or individual user in all other cases. If you are an entity, Bobsweep grants you the right to designate one individual within your organization to have the sole right to use the Bobsweep Software and the bObsweep in the manner provided above.

RESTRICTIONS: You agree not to: (i) use or copy the Bobsweep Software or the bObsweep except as provided in this Agreement; (ii) rent or lease the Bobsweep Software or the bObsweep to any third party; (iii) assign this Agreement or transfer the Bobsweep Software or the bObsweep except as provided in this Agreement; (iv) modify, adapt, or translate the Bobsweep Software or the bObsweep in whole or in part except as expressly provided in this Agreement; (v) reverse engineer, reverse compile, or disassemble the Bobsweep Software or the bObsweep; or (vi) distribute, sublicense or transfer the source code form of Your Software and derivatives thereof to any third party except as provided in this Agreement.

YOUR SOFTWARE : Your Software is also subject to the following limitations: You (i) shall be solely responsible for any update or support obligation or other liability which may arise from your use or distribution, (ii) shall not make any statement that Your Software is “certified,” or that its performance is guaranteed, by Bobsweep, (iii) shall not use Bobsweep’s name

or trademarks, (iv) shall prohibit disassembly and reverse engineering of the bObsweep Software and the bObsweep, (v) shall not publish reviews of bObsweep products designated as beta without written permission from bObsweep, and (vi) shall indemnify, hold harmless, and defend bObsweep and its suppliers from and against any claims or lawsuits, including attorney’s fees, that arise or result from Your Software, including your use and your distribution.

TITLE: Title to the bObsweep Software remains with bObsweep or its suppliers. The bObsweep Software is licensed, not sold. Except as expressly provided herein, bObsweep does not grant any express or implied right to you under bObsweep patents, copyrights, trademarks, or trade secret information. You will not remove any copyright or patent notice from the bObsweep Software or the bObsweep.

ONE-TIME TRANSFER: The initial user of the bObsweep Software and the bObsweep may make a one-time permanent transfer of this Agreement, the bObsweep Software, and the bObsweep to another end user, provided that the initial user retains no copies of the bObsweep Software and the bObsweep. This transfer must include the bObsweep Software, the bObsweep, and all of the materials accompanying the bObsweep (including all component parts and printed materials, any upgrades, and this End User License Agreement document). The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the bObsweep Software and the bObsweep must agree to all the terms of this Agreement.

NO WARRANTY AND LIMITED REPLACEMENT: EXCEPT AS STATED IN THE LIMITED WARRANTY TO THE ORIGINAL PURCHASER, THE SOFTWARE AND THE BOBSWEEP ARE PROVIDED “AS IS” WITH NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY BOBSWEEP OR ITS AGENTS SHALL CREATE A WARRANTY.

If the Bobsweep Software or the bObsweep is found to be defective in material or workmanship under normal use for a period of one (1) year from the date of receipt, Bobsweep’s entire liability and your exclusive remedy shall be the replacement of the Bobsweep Software or the bObsweep. This offer is void if the defect results from accident, abuse, misapplication, or software that you developed for your bObsweep. Any updates or supplements to the Bobsweep Software or the bObsweep provided to you after the expiration of the one (1) year period are not covered by any warranty or condition, express, implied or statutory.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. LIMITATION OF LIABILITY: THE ABOVE REPLACEMENT PROVISION IS THE ONLY WARRANTY OF ANY KIND. BOBSWEEP OFFERS NO OTHER WARRANTY EITHER EXPRESS OR IMPLIED INCLUDING THOSE OF MERCHANTABILITY, NON INFRINGEMENT OF THIRD- PARTY INTELLECTUAL PROPERTY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER BOBSWEEP NOR ITS SUPPLIERS SHALL BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, VICARIOUS LIABILITY, CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THE BOBSWEEP SOFTWARE, THE BOBSWEEP, OR SOFTWARE THAT YOU DEVELOPED FOR YOUR BOBSWEEP, EVEN IF BOBSWEEP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS

PROHIBIT THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU UNAUTHORIZED USE: THE BOBSWEEP SOFTWARE AND THE BOBSWEEP ARE NOT DESIGNED, INTENDED, OR AUTHORIZED FOR USE IN ANY AERONAUTICAL, NUCLEAR, MEDICAL, LIFE SAVING OR LIFE SUSTAINING SYSTEMS, OR FOR ANY OTHER APPLICATION IN WHICH THE USE OF THE BOBSWEEP SOFTWARE OR THE BOBSWEEP COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

Should you use the Bobsweep Software or bObsweep for any such unintended or unauthorized use, you shall indemnify and hold harmless Bobsweep and its officers, subsidiaries and affiliates against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of product liability, personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Bobsweep was negligent regarding the design or manufacture of the Bobsweep Software, the bObsweep, or any part or portion thereof.

USER SUBMISSIONS: You agree that any material, information or other communication, including all data, images, sounds, text, and other things embodied therein, that you transmit or post to a Bobsweep website or provide to Bobsweep (“Communications”) will be considered non-confidential. Bobsweep will have no confidentiality obligations with respect to the Communications. You agree that Bobsweep and its designees will be free to copy, modify, create derivative works, publicly display, disclose, distribute, license and sublicense through multiple tiers of distribution and licensees, incorporate and otherwise use the Communications, including derivative works thereof, for any and all commercial or non-commercial purposes without the payment of any royalty to you, and that such license will survive the termination of this Agreement.

TERMINATION: This Agreement becomes effective on the date you accept this Agreement and will continue until terminated as provided for in this Agreement. You may terminate this Agreement voluntarily at any time. Bobsweep may terminate this Agreement at any time if you are in breach of any of its terms and conditions, and may refuse to license the Bobsweep Software or the bObsweep to you after termination. Upon termination by either party, you will immediately return to bObsweep or destroy the Bobsweep Software and the bObsweep and all your copies thereof. Articles 5 and 7 through 17 of this Agreement shall survive such termination. U.S. GOVERNMENT RESTRICTED RIGHTS: The Bobsweep Software and the bObsweep are provided with “RESTRICTED RIGHTS.” Use, duplication or disclosure by the Government is subject to restrictions set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor. Use of the Bobsweep Software or the bObsweep by the Government constitutes acknowledgment of Bobsweep’s rights in them.

NO EXPORT: You may not export the Bobsweep Software or the bObsweep in violation of applicable export laws.

INTERPRETATION PROVISION: The provisions of this Agreement are severable. If any provision of this Agreement is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not apply to this Agreement.

INTEGRATION: This Agreement represents the complete agreement concerning the subject matter hereof, and any and all understandings, conversations and communications, proposals, and counterproposals, oral and written (including any draft of this Agreement) are merged into and superseded by this Agreement and shall be of no force or effect, except as expressly provided herein. No such understandings, conversations, communications, proposals, counterproposals or drafts shall be

referred to in any proceeding concerning this Agreement. Further, no understanding contained in this Agreement shall be modified, altered or amended, except by a writing signed by the party against whom enforcement is sought.

ARBITRATION: All disputes relating to this Agreement (excepting any dispute relating to intellectual property rights) shall be subject to final and binding arbitration, with the losing party paying all costs of arbitration. Any arbitration relating to this Agreement shall be held in California, under the auspices of an arbiter selected by Bobsweep. Any litigation relating to this Agreement shall be subject to exclusive venue and jurisdiction in the federal and state courts of California, with the losing party responsible for costs, including without limitation, court costs and reasonable attorneys fees and expenses.

APPLICABLE LAWS: Any claim arising under or relating to this Agreement shall be governed by the internal substantive laws of the Commonwealth of California, without regard to its principles of conflict of laws. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded.