Emergency Exit Sign & Light Combo

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE. For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations.




CAUTION: The battery in this unit may not be fully charged. After electricity is connected to unit, let battery charge for at least 24 hours, then normal operation of this unit should take effect. To check, press the TEST button. The lamps on the unit should turn on.

IMPORTANT SAFEGUARDS: When using electrical equipment, basic safety precautions should always be followed, including the following:

• Do not use outdoors. Suitable for use in 0°C-40°C (32°F-104°F) indoor damp locations.

• Consult local building code for approved wiring and installation.
• Disconnect AC power before servicing and installation.
• Do not mount near gas or electric heaters.
• Do not use this equipment for anything other than its intended use.
• Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels.

• The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition.
• Any service on this equipment should be performed by qualified personnel only.
• Equipment should be mounted in locations and at heights where it will not be subject to tampering by unauthorized personnel.
• Use caution when servicing batteries.
• Cap unused wires with enclosed wire nuts or other approved method.

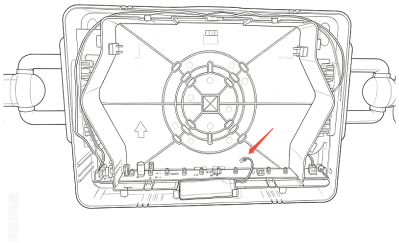

NOTE: Ensure the battery leads are connected prior to refitting the cover


INSTALLATION INSTRUCTIONS (Back Mount):
1. Remove EXIT stencil faceplate from housing.
2. Drill or knock out appropriate knockouts on back plate to fit junction box mounting points.
3. Drill or knock out center hole in back plate for EXIT supply wire leads.
4. Route EXIT supply wires through center hole of the back plate and make wiring connection.
Connect Black wire to L,connect white wire to N.
5. Secure back plate to junction box(hardware not included)
6. Remove knockout chevron(s) on faceplate
7. Connect battery only after continuous AC power can be provided to the unit.
8. Apply continuous AC power and press "TEST" button to check operation.


INSTALLATION INSTRUCTIONS (Top Mount):
1. Remove EXIT stencil faceplate from housing.
2. Place screws(provided) in holes on the canopy.
3. Remove the mounting hole plug located on the top of the housing.
4. Route EXIT supply wires through mounting hole in top of the housing. Route EXIT supply wires through mounting canopy. Dress wirescarefully through housing.
5. Route wires from junction box through metal mounting plate. Secure mounting plate to junction box(hardware not included).
6. Make wiring connection. Connect Black wire to L,connect white wire to N.
WARNING: Properly insulate the unused lead with a wire nut(provided) or other approved means.
7. Push wire connections through middle metal plate and into the J-Box.
8. Secure the canopy to the steel mounting plate with screws installed in step 2.
9. Remove knockout chevron(s)on faceplate, as needed.Secure EXIT stencil faceplate back onto housing.
10. Connect battery only after continuous AC power can be provided to the unit.
11. Apply continuous AC power and press "TEST" button to check operation.(See operation battery back- up for testing procedures)


Quick Guide of Testing the Light:

1.Power ON Status: Press the TEST button,emergency light will turn ON for 5 seconds,then turn OFF.

2.Power OFF Status: Press TEST button twice to turn on emergency light; Press twice again to exit.

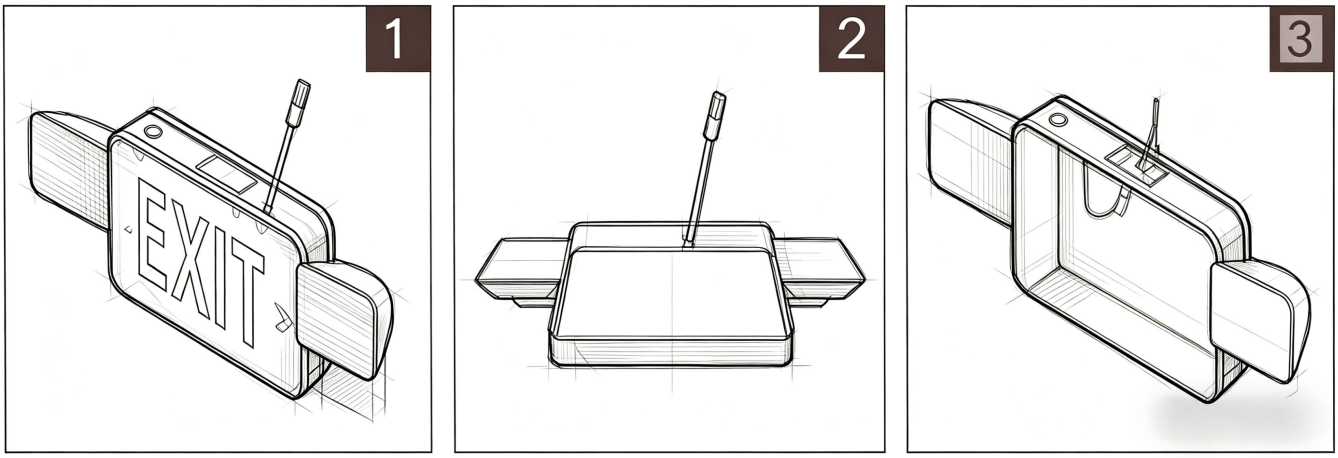

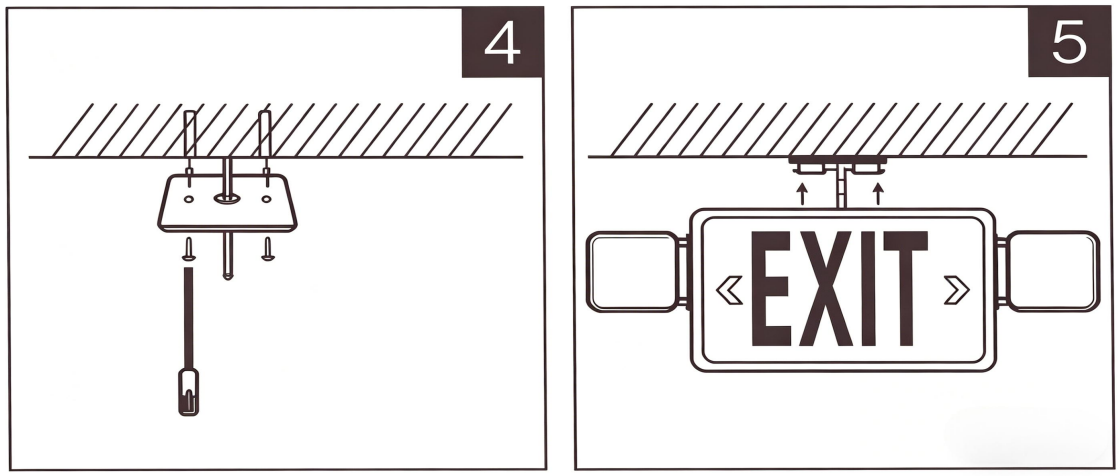

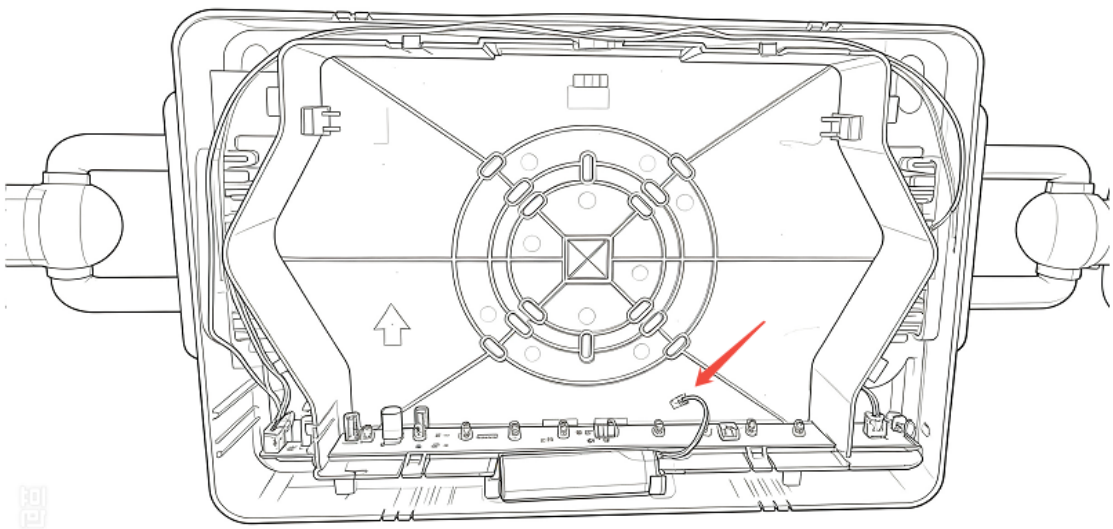

Ensure the battery lead is connected prior to refitting the cover