Assembly Instruction

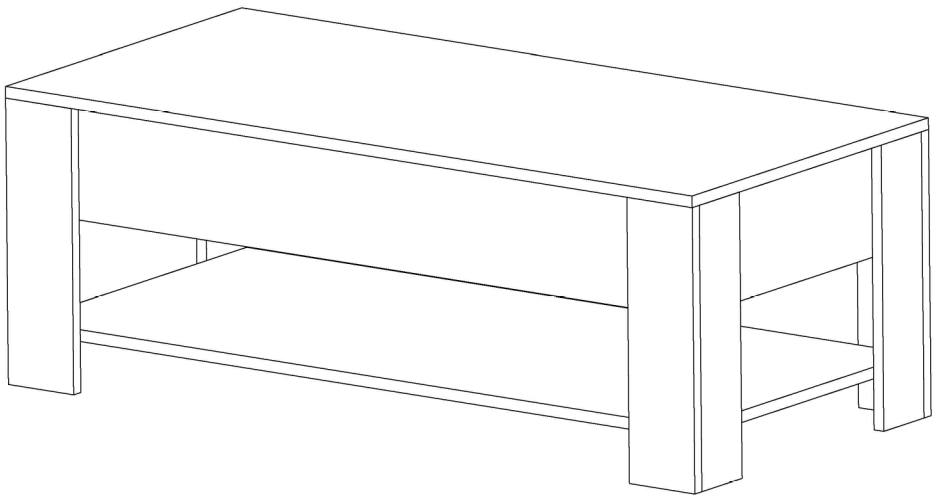

Hardware List

A X16	B X16	C X16
D  X28	E  X8	F X16
G 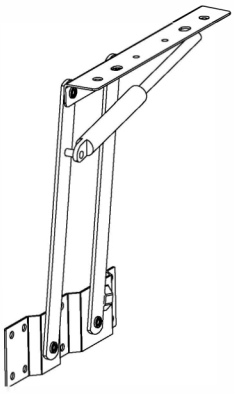 X1	H 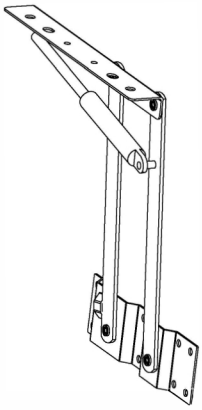 X1	

Parts List

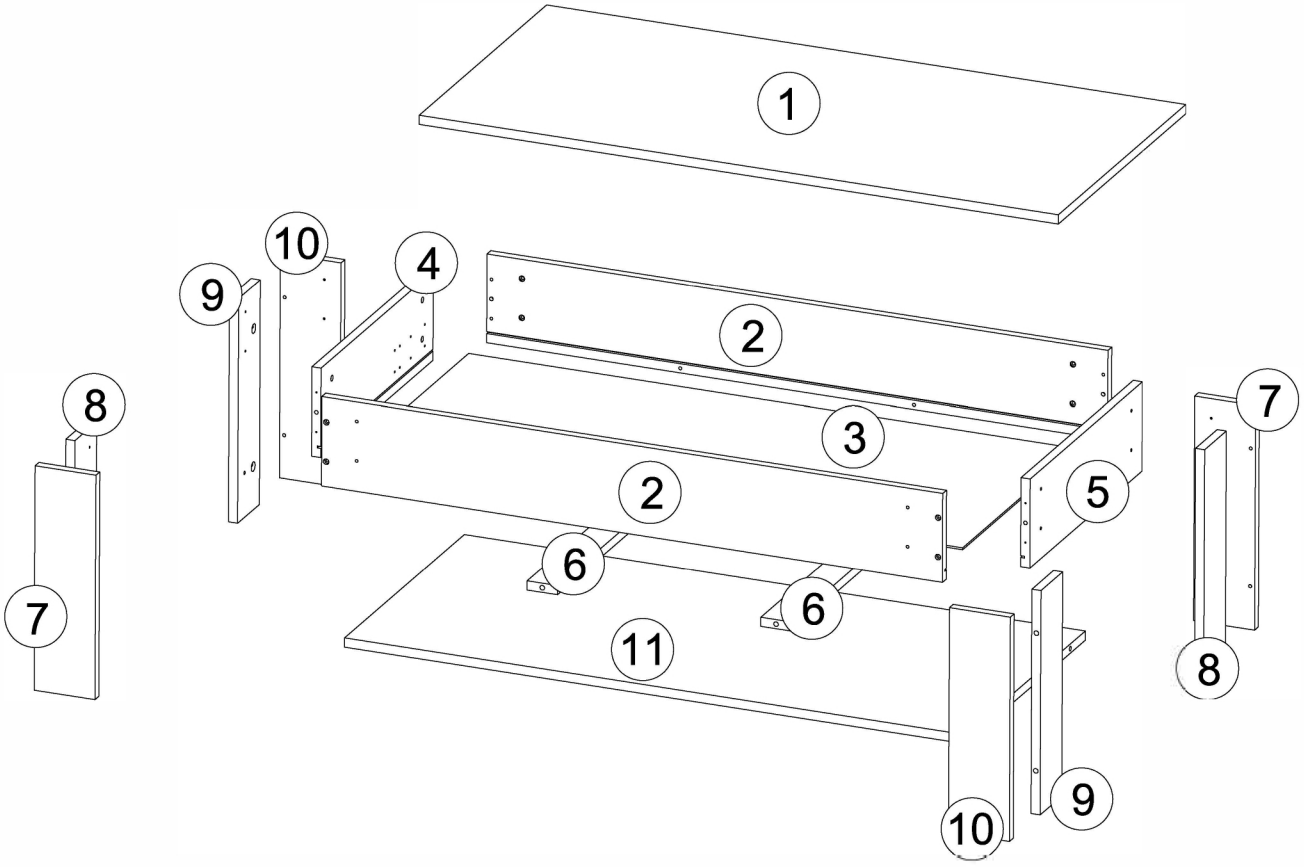

1

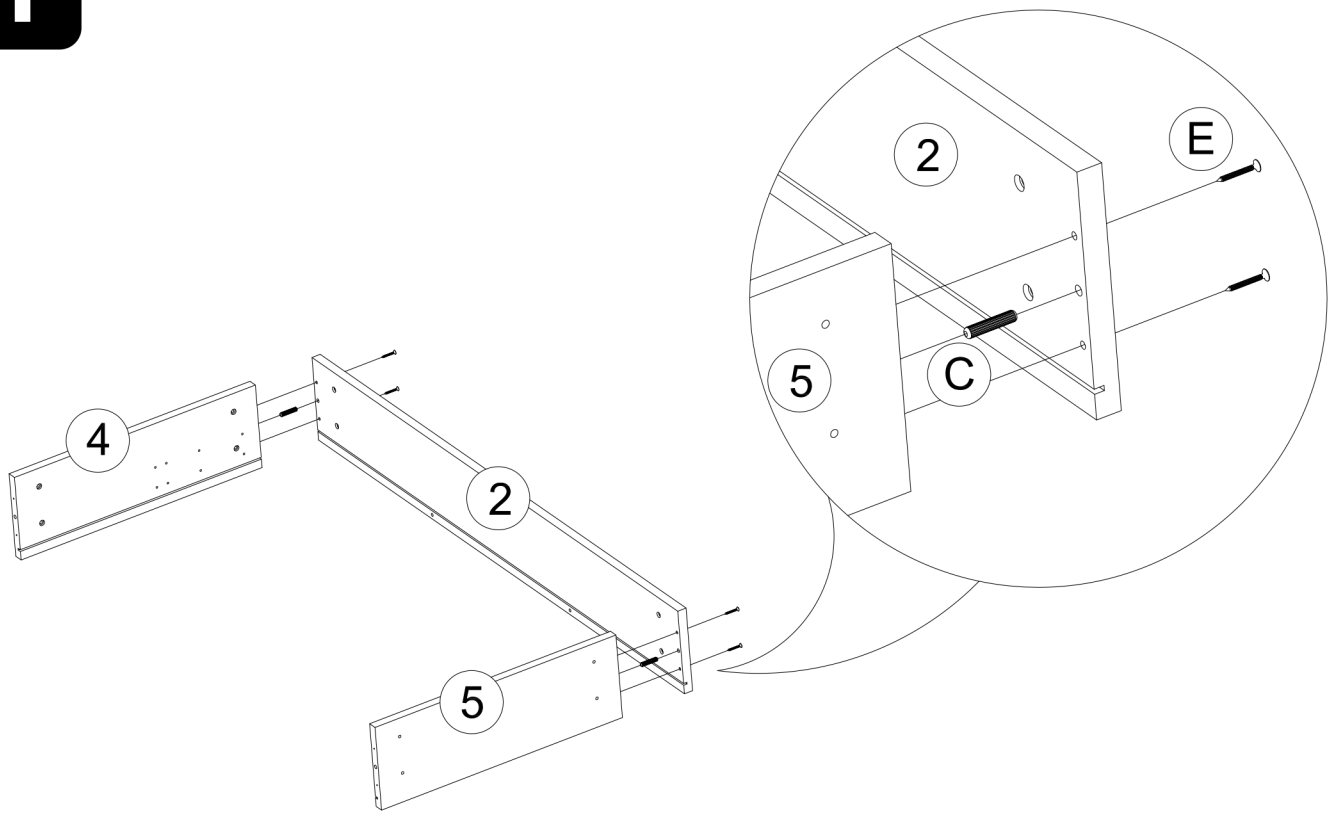

2

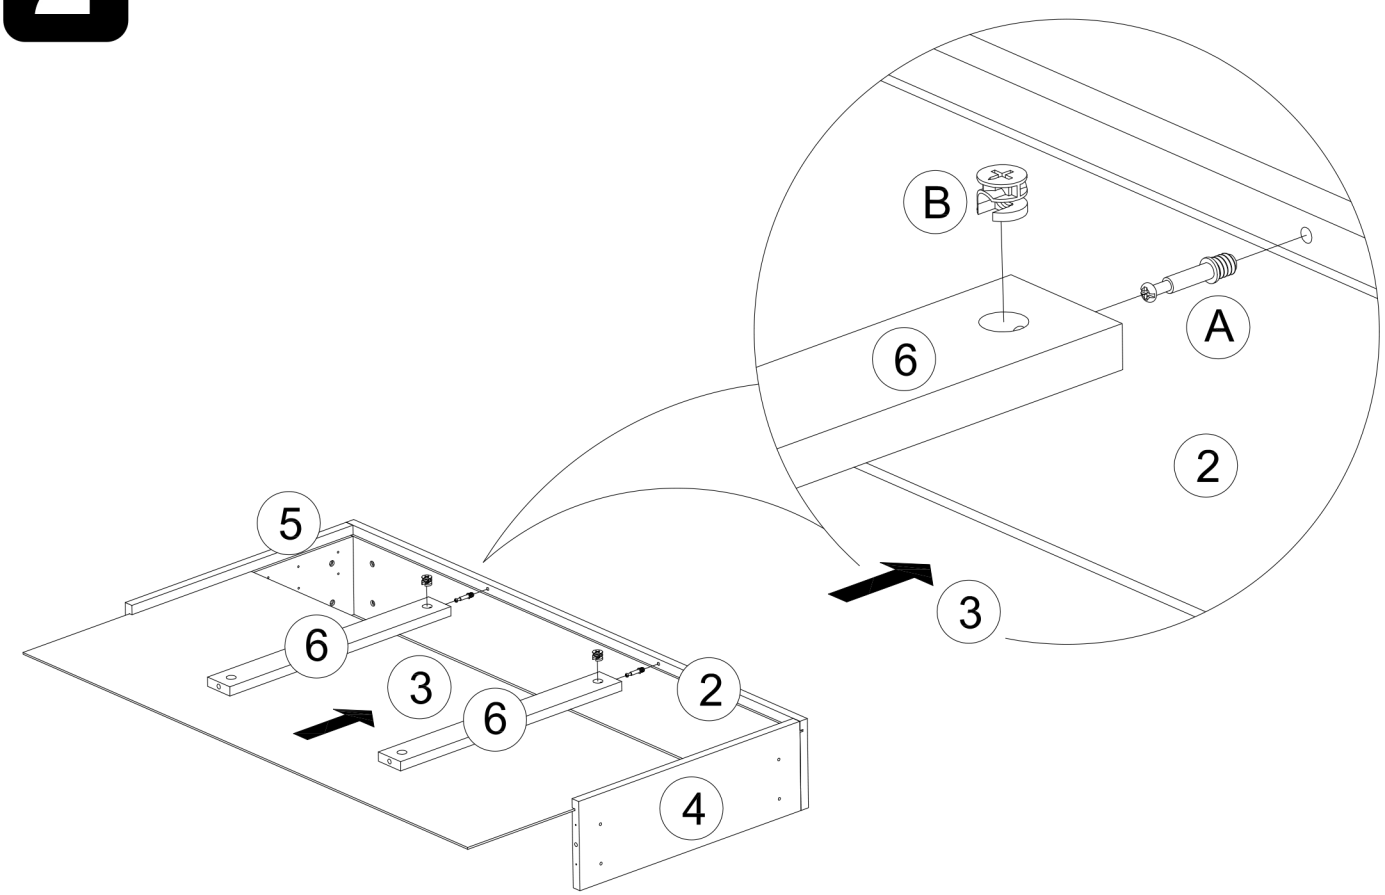

3

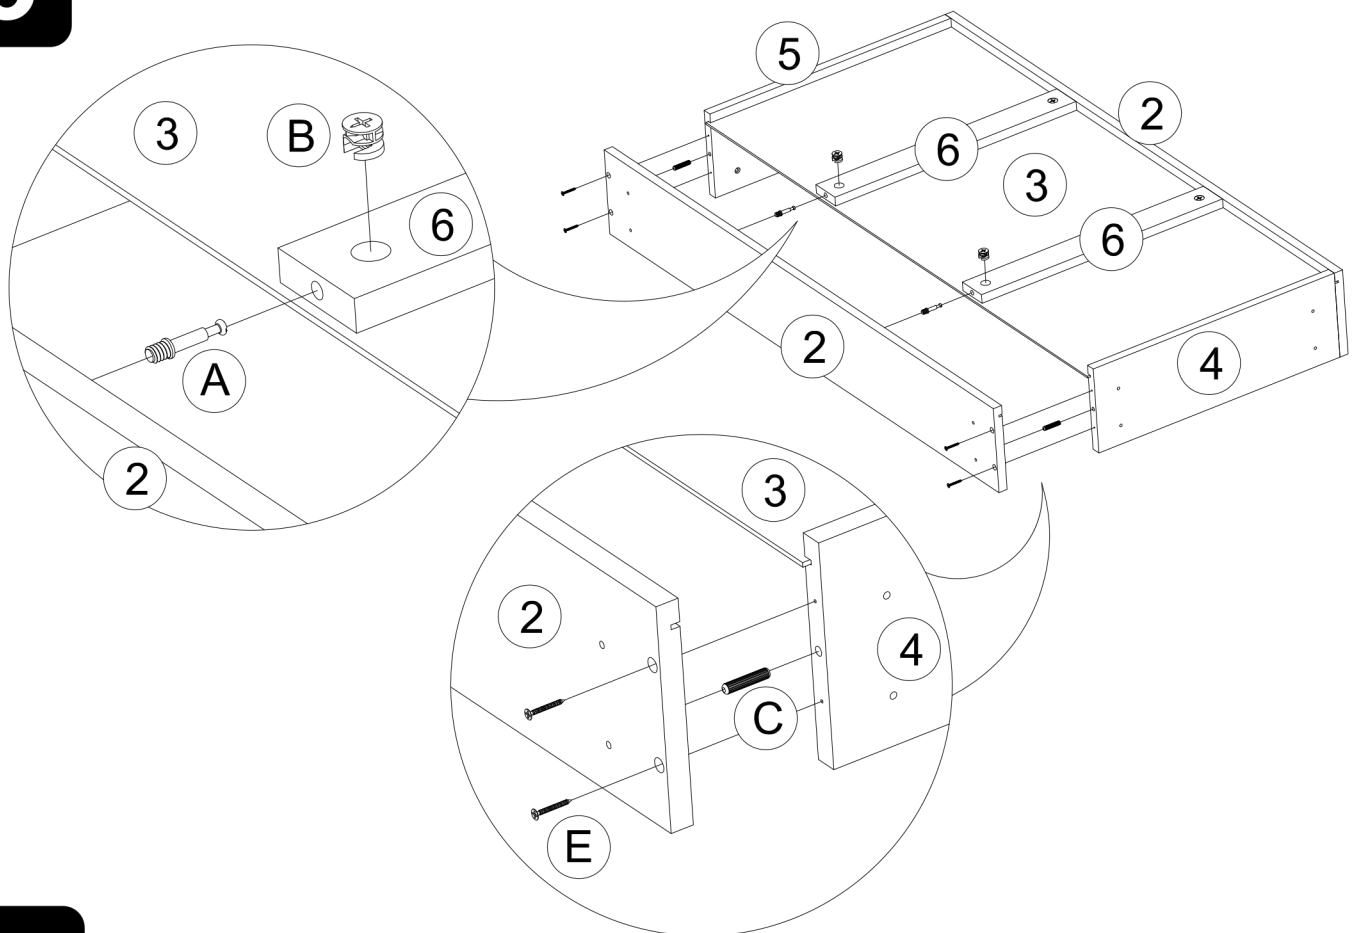

4

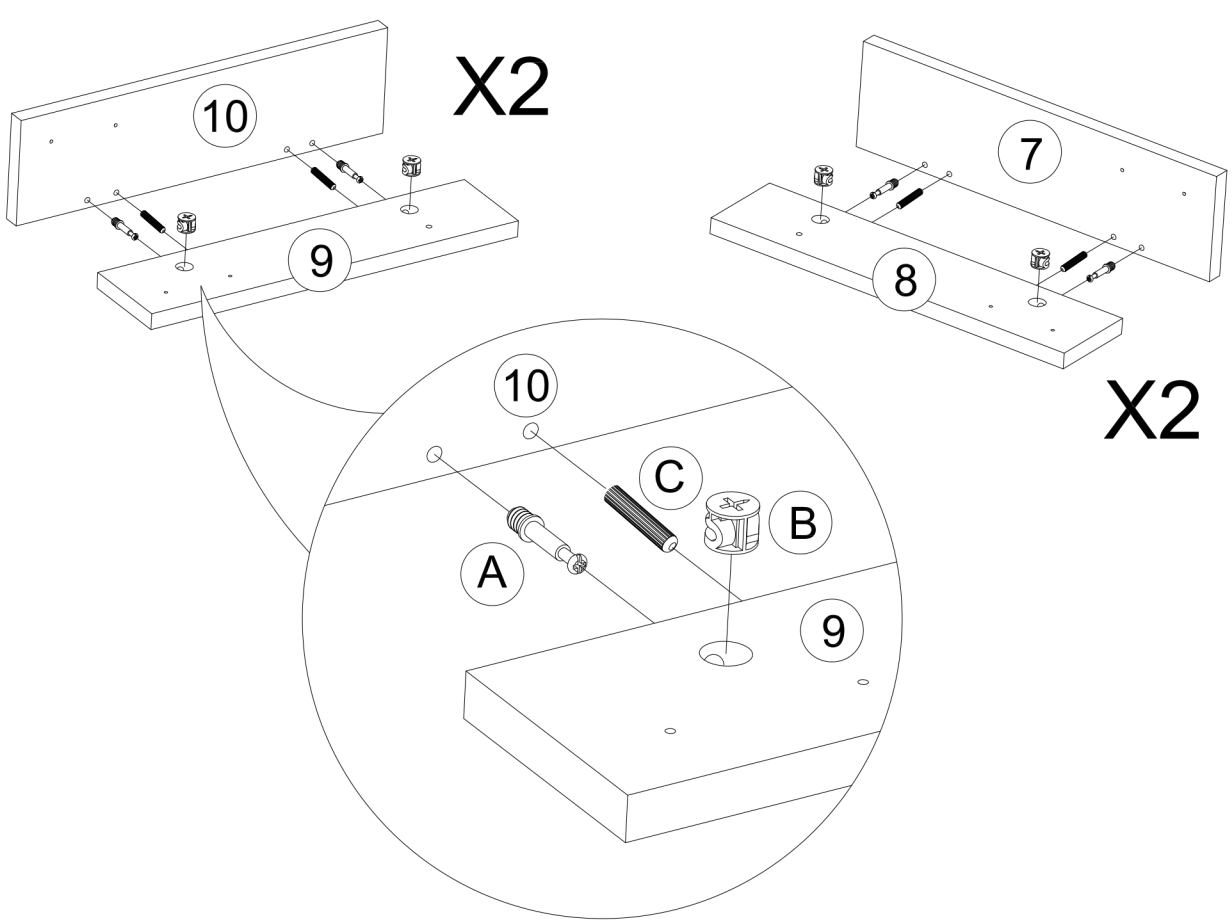

5

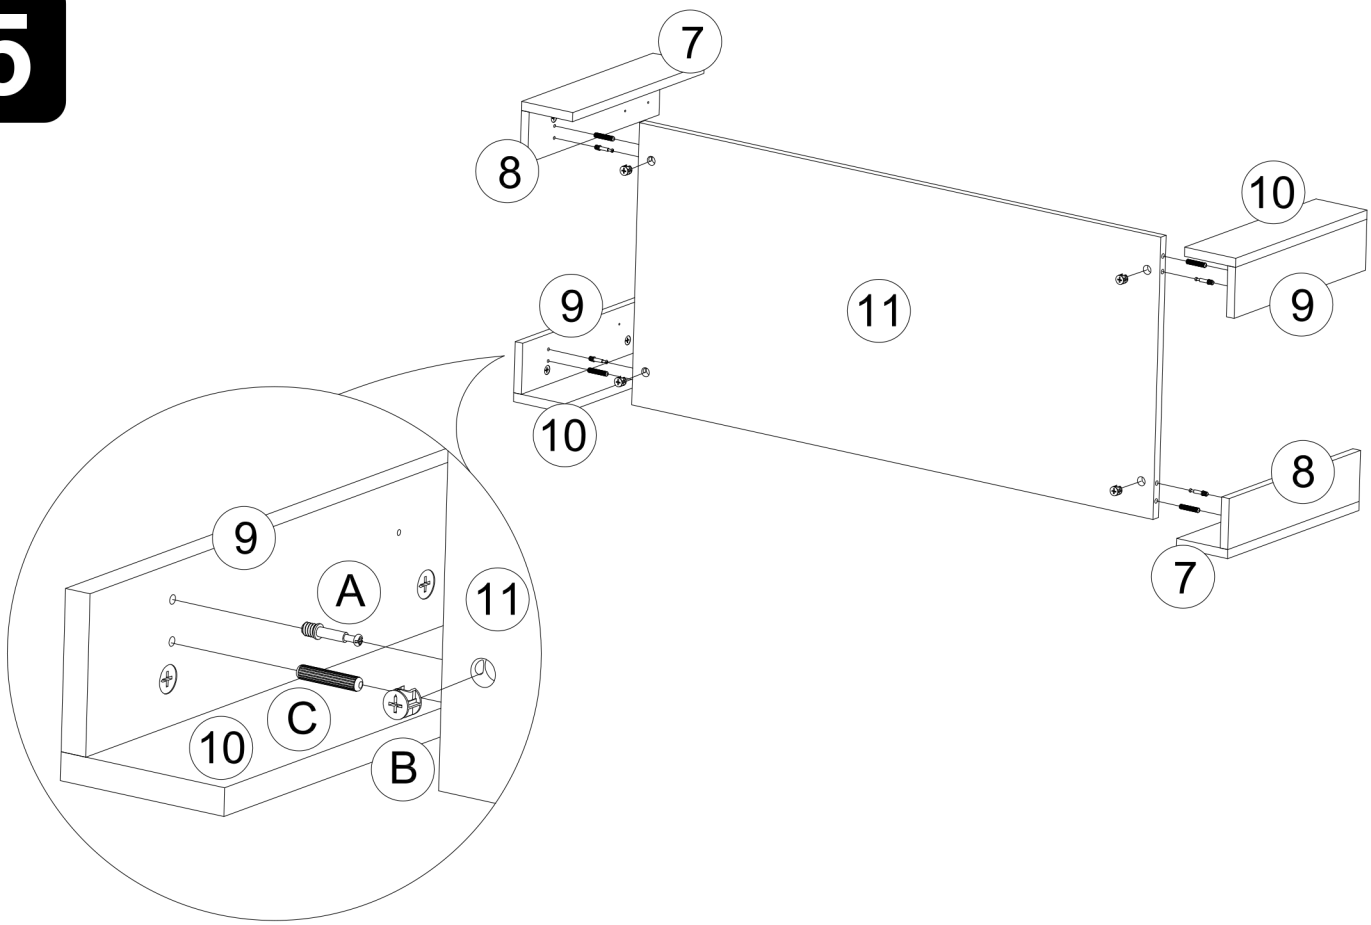

6

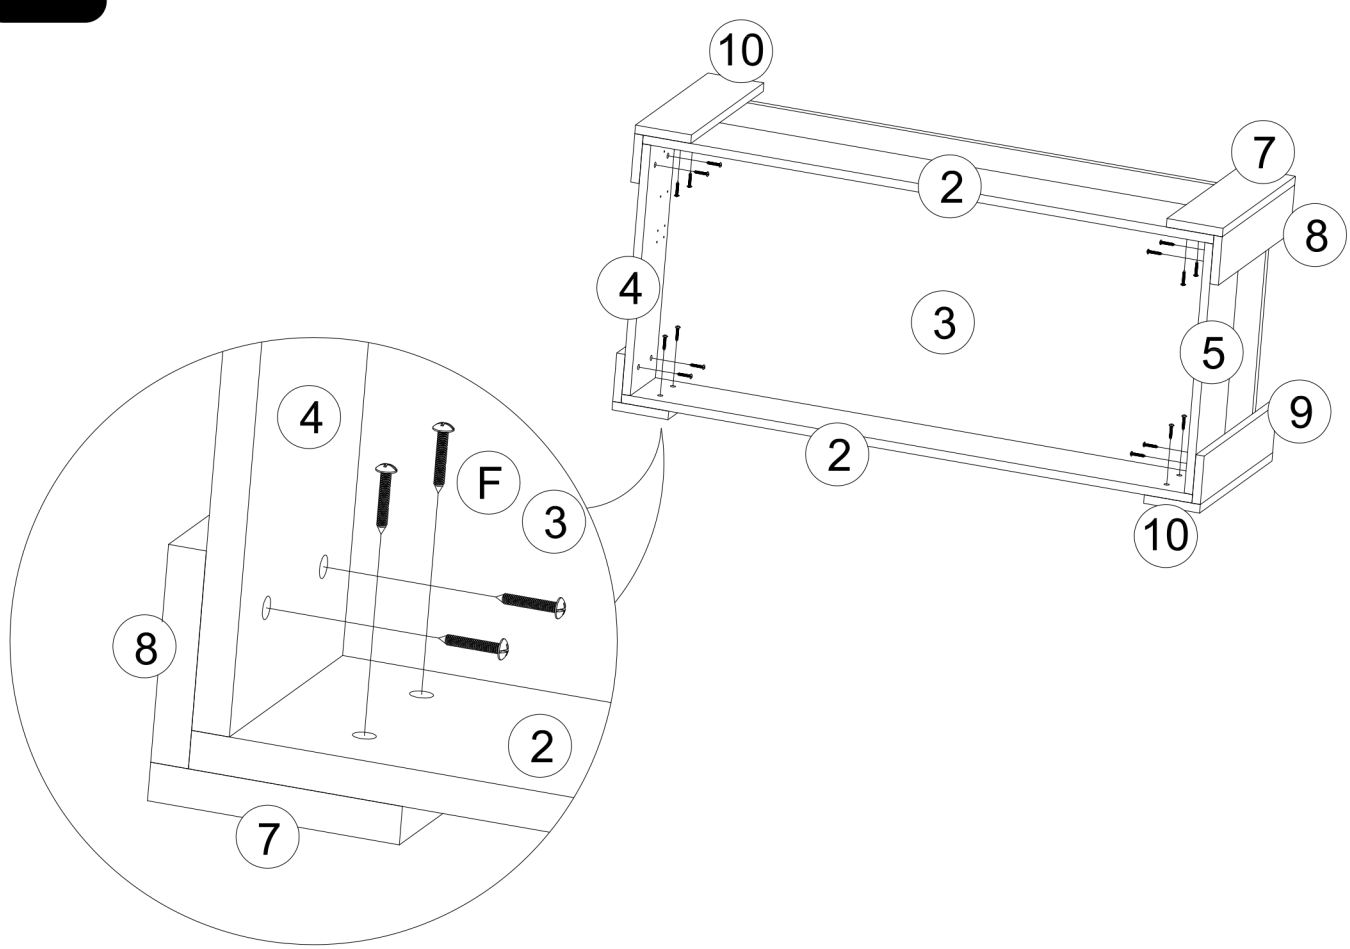

7

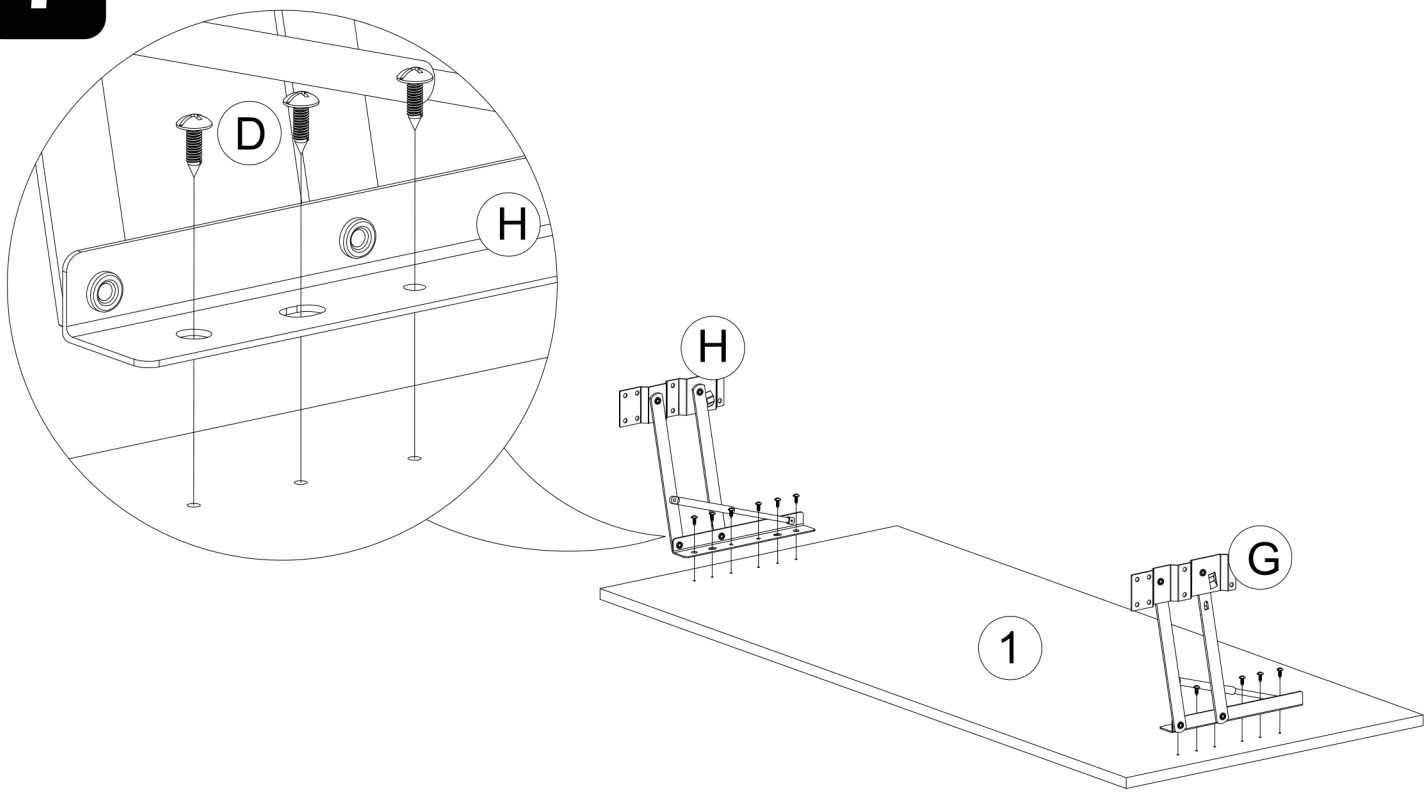

8

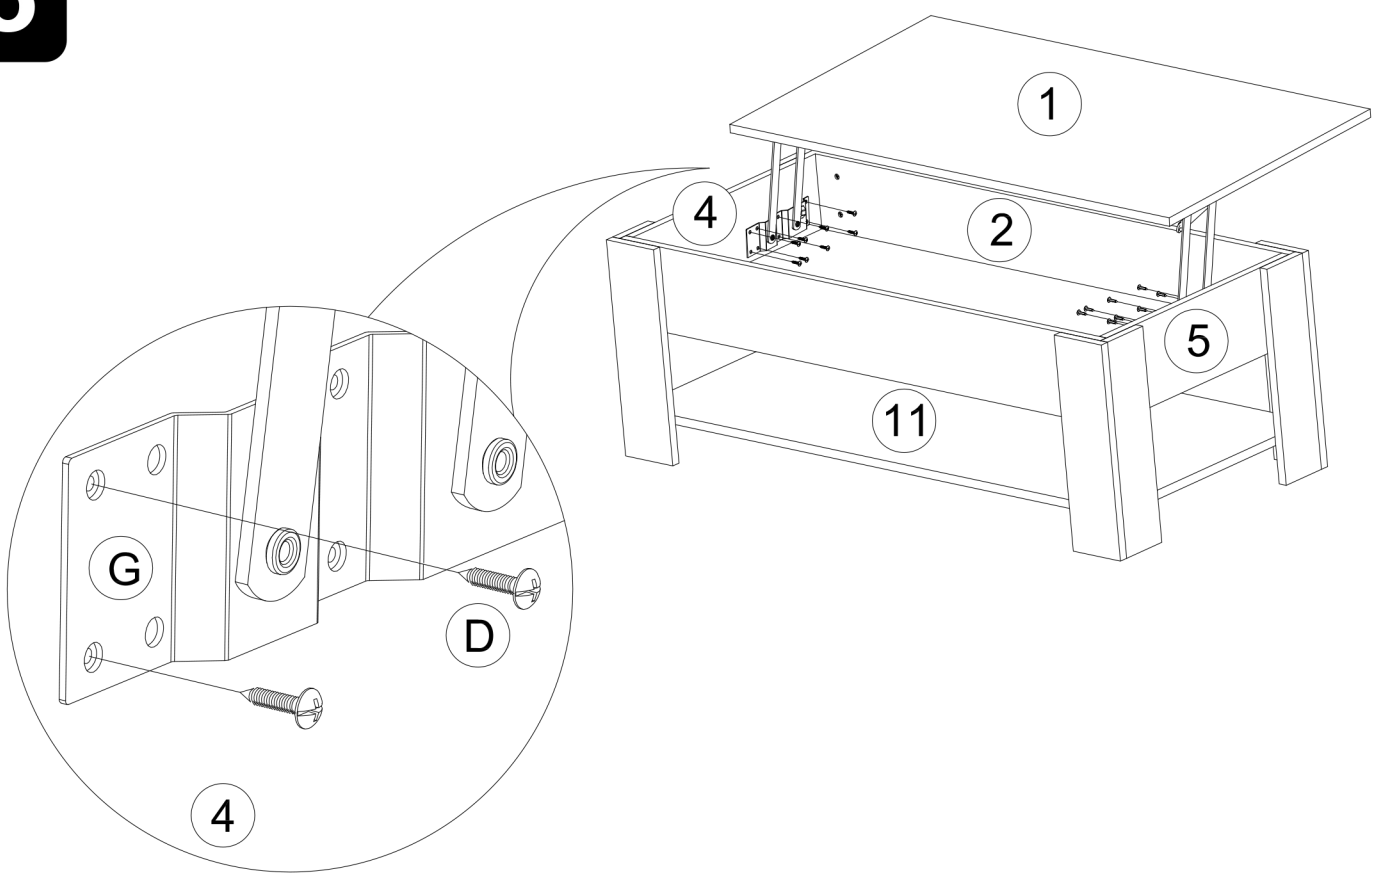

9

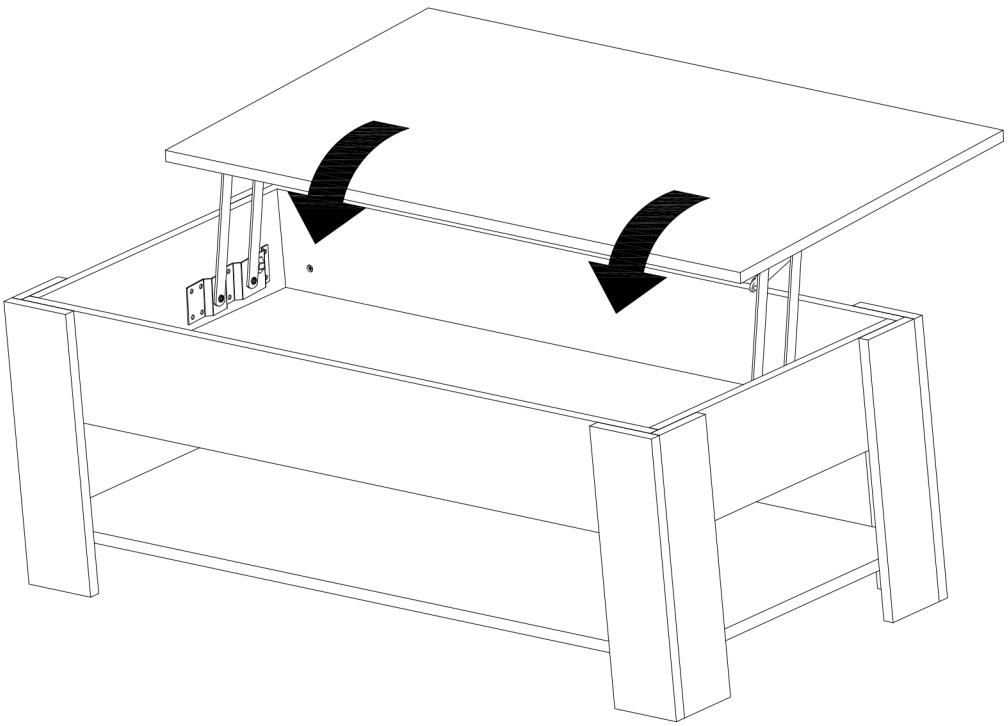
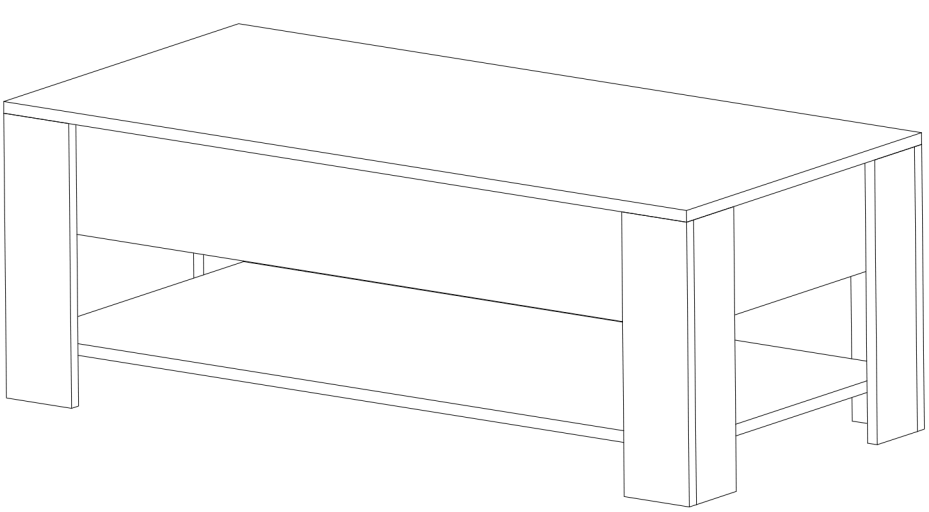
10