

IRON PIPE DUAL OUTLET STOP VALVE INSTALLATION INSTRUCTIONS




Installation Instructions:

1. Turn off water supply, and drain the line.
2. Disconnect supply line and remove existing valve.
3. Apply plumber's tape or compound to iron pipe threads and thread on valve.
4. Tighten with wrench and position valve to align with fixture.
5. Connect supply line to stop valve and fixture.
6. Turn on water and check connections.

Instrucciones de instalación:

1. Cierre el suministro de agua y drene la tubería.
2. Desconecte la tubería de suministro y retire la válvula existente.
3. Aplique compuesto o cinta adhesiva de fontanero a las roscas de la tubería de hierro y la rosca en la válvula.
4. Apriete con la llave y coloque la válvula en su lugar para alinearla con el accesorio.
5. Conecte la tubería de suministro para detener la válvula y el accesorio.
6. Abra el flujo de agua y revise las conexiones.

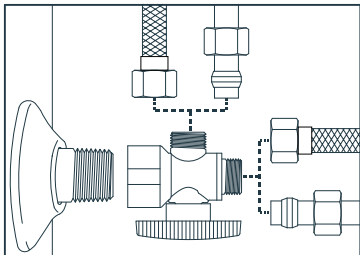

AN RWC BRAND
RWC

Distributed by
Reliance Worldwide Corporation®
1-877-700-4242