Blade change instructions
Lopper

NOTE: Do not discard any hardware while disassembling the tool. All pieces will be needed for reassembly.

CAUTION: For your protection, wear gloves, as well as ANSI-approved safety glasses during this operation.

Tools needed:
18 mm (3/4") wrench or socket wrench

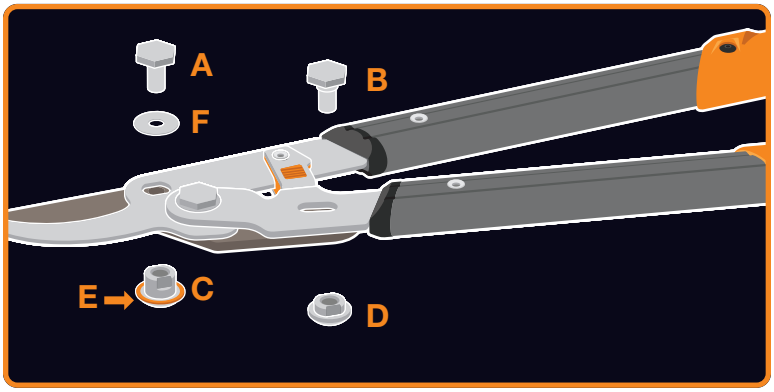

1. Lay the tool flat on your work surface with the blade on the bottom and the bolts facing up.
2. Completely remove the two bolts (A & B) that hold the blade onto the tool.
3. Flip the tool over and remove the corresponding nuts (C & D).
4. Remove dull, used blade.
5. Ensure the orange ring (E) is with its original nut (C) and insert both nuts (C & D) into the new blade.
6. Place blade back onto the handle. Nuts may need to be rotated in order to align with handle.
7. Push in nuts until fully inserted.
8. Flip over tool and screw in bolts (A & B), making sure to tighten bolt (A) first. Make sure the silver washer (F) is with its original bolt (A), and that the shouldered bolt (B) goes into the slot.
9. Tighten until blade is secure, ensuring it opens and closes comfortably.

FISKARS® PRO