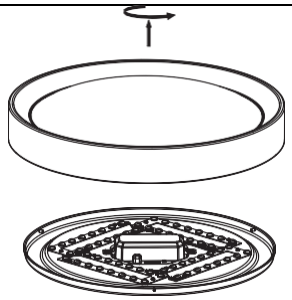
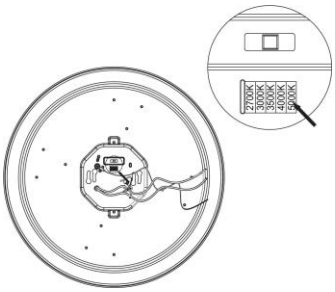
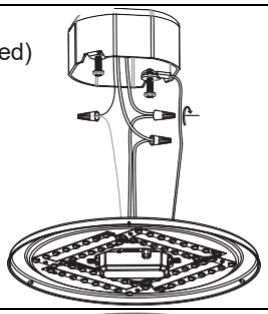
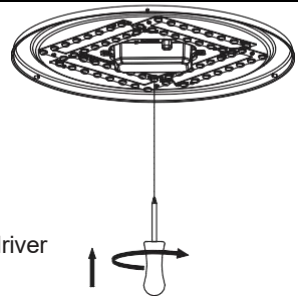
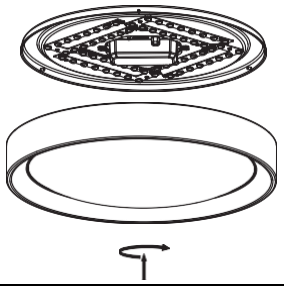
allen + roth

17-in Round LED Flushmount Ceiling Fixture with Uplight Quick Start Installation Guide

It is critical that you read the full set of warnings and instructions for safe use of the product.
Scan QR Code to access the complete installation instructions

	**Step 1: Turn off the circuit breakers and the wall switch to the supply line leads.** Remove the cardboard fillers from the back of the fixture. Remove diffuser by rotating the diffuser toward the OPEN direction from the housing assembly.
	**Step 2:** Select desired CCT setting on LED module - position switch to select LED color temperature of 2700K (warm), 3000K, 3500K, 4000K (cool) or 5000K (daylight)
Outlet box (Not provided) 	**Step 3:** Install the 2 mounting screws into the junction box. Use wire nuts to make the wire connections to the fixture.
 Phillips Screwdriver (Not provided)	**Step 4:** Rotate the housing assembly into keyhole's lock position. Secure the 2 screws with Phillips screwdriver.
	**Step 5:** Reinstall the diffuser back into the housing assembly by aligning the notches on the diffuser with the pin on the housing assembly, then secure it by rotating in the close direction until it stops and locks.

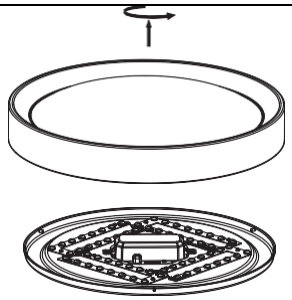
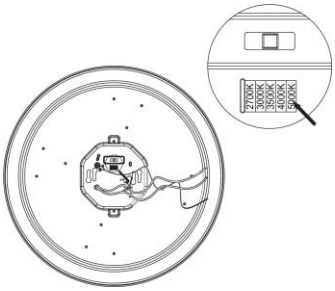
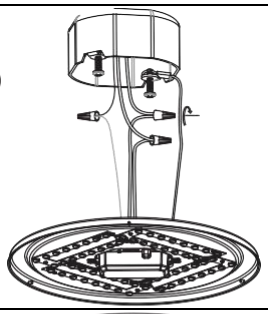


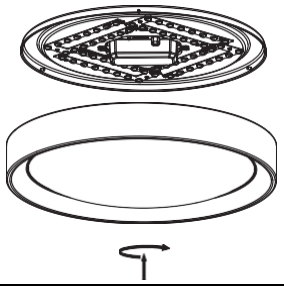
Thank you for purchasing this ALLEN + ROTH product.
Questions, problems or missing parts?
Before returning, contact us on:
866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

ITEM #8753106
MODEL #ADR 17IN 5CCT WH M4
SG26462

allen + roth

Guía de instalación rápida para lámpara de techo LED redonda de montaje al ras con luz ascendente de 43.18 cm

Es fundamental que lea todas las advertencias e instrucciones para el uso seguro del producto.
Escanee el código QR para acceder a las instrucciones de instalación completas.

	**Paso 1: corte la alimentación que va desde los interruptores de circuito y el interruptor de pared hacia los conductores de la línea de entrada.** Retire los rellenos de cartón de la parte posterior de la lámpara. Retire el difusor al girarlo hacia la dirección ABIERTA desde el ensamble de la carcasa.
	**Paso 2:** seleccione la configuración de CCT deseada en el módulo LED: coloque el interruptor para seleccionar una temperatura de color LED de 2700 K (cálida), 3000 K, 3500 K, 4000 K (fría) o 5000 K (luz de día).
Caja de salida (no se incluye) 	**Paso 3:** instale los 2 tornillos de montaje en la caja de conexiones. Utilice empalmes plásticos para realizar las conexiones de los cables a la lámpara.
 Destornillador Phillips (no se incluye) 	**Paso 4:** gire el ensamble de la carcasa a la posición de bloqueo de la ranura con forma de cerradura. Asegure los 2 tornillos con un destornillador Phillips.
	**Paso 5:** vuelva a instalar el difusor en el ensamble de la carcasa al alinear las muescas del difusor con el pasador del ensamble de la carcasa, y luego fíjelo al girar en la dirección de cierre hasta que se detenga y se bloquee.

Gracias por comprar este producto ALLEN + ROTH.
¿Preguntas, problemas o piezas faltantes?
Antes de volver a la tienda, póngase en contacto al:
866-439-9800, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este.

ARTÍCULO #8753106
MODELO #ADR 17IN 5CCT WH M4
SG26462