





INSTRUCTION MANUAL FOR TREE FUNCTIONS

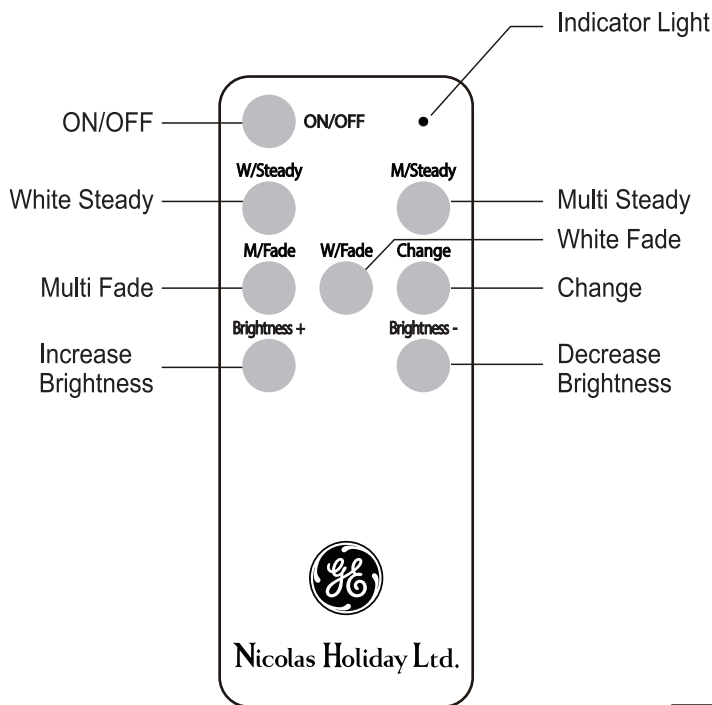

Remote Control includes 6 operating modes for Color & function Combinations.

- **10 Levels of brightness adjustment.**
- **Each Button corresponds to one Function.**

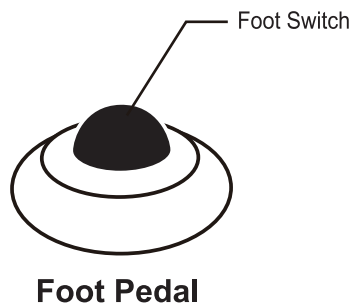

Function Order on Foot Pedal	Function Description
1	White Steady
2	White Fading
3	Multi Steady
4	Multi Fading
5	White/ Multi Change
6	Off

BATTERY CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries
- Do not mix old and new batteries. Always replace the whole set of batteries at once time.
- Batteries are to be inserted with the correct polarity (+and-).
- Exhausted batteries are to be removed from the product.
- Replace only with (2) AAA batteries.
- Batteries included
- Do not dispose of batteries in fire. Batteries may explode or leak.

For indoor use only


GE is a trademark of General Electric Company and is under license by Nicolas Holiday Limited

Questions, call customer service toll free at 1-877-398-7337 or visit us on web at www.geholidaylighting.com

NHL Model No. 23119LO
Foot Pedal: TS-FD06ARD-09
Remote Control: 25411
Printed in China
FP25




MANUAL DE INSTRUCCIONES DE LAS FUNCIONES DEL ÁRBOL

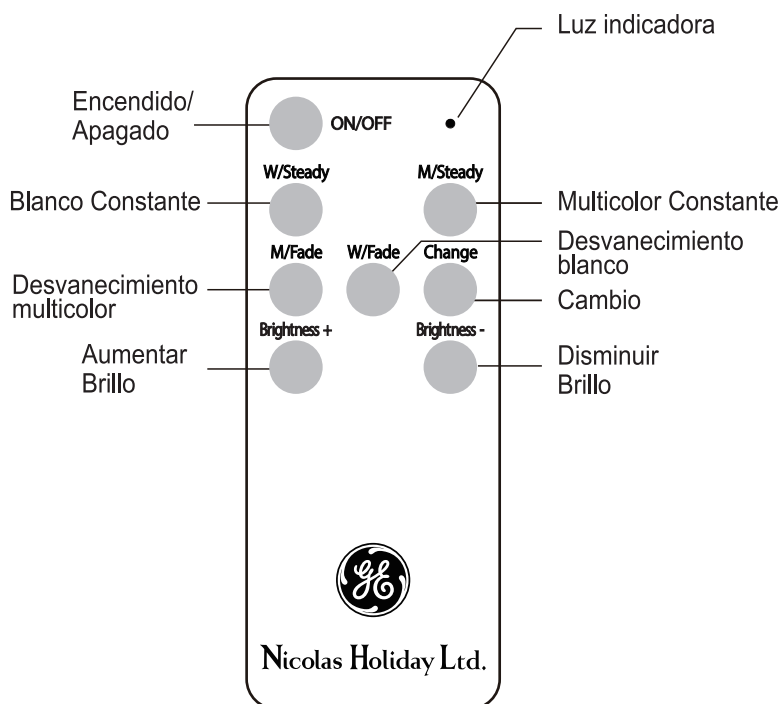

El control remoto incluye 6 modos de funcionamiento para combinaciones de colores y funciones.

- 10 niveles de ajuste de brillo.
- Cada botón corresponde a una función.

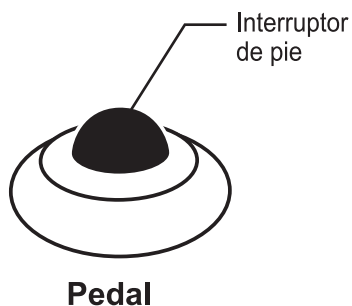

Pedido de funciones en el pedal	Descripción de funciones
1	Blanco Constante
2	Desvanecimiento blanco
3	Multicolor Constante
4	Desvanecimiento multicolor
5	Cambio a blanco/multicolor
6	Apagado

PRECAUCIÓN SOBRE LA BATERÍA:

- No deben recargarse las baterías que no estén creadas para tal fin.
- No mezcle los diferentes tipos de baterías, como alcalinas, cinc-carbono o recargables.
- No mezcle baterías antiguas con nuevas. Siempre reemplace todo el conjunto de baterías a la vez.
- Las baterías se deben insertar en la polaridad correcta. (+y-).
- Las baterías agotadas se deben retirar del producto.
- Reemplace solo con (2) baterías alcalinas AAA.
- Incluye baterías.

No incinere las baterías. Estas podrían explotar o filtrarse.

Sólo para uso en interiores

GE es una marca registrada de General Electric Company y se utiliza con licencia por Nicolas Holiday Limited

Si tiene preguntas, llame al número gratuito del Servicio al Cliente al 1-877-398-7337 o visítenos en el sitio web www.geholidaylighting.com

NHL Model No. 23119LO
Pedal: TS-FD06ARD-09
Control remoto: 25411
Impreso en China
FP25