

# COMPRESSION DUAL OUTLET STOP VALVE INSTALLATION INSTRUCTION




## Installation Instructions:

1. Turn off water supply, and drain the line.
2. Disconnect supply line and remove existing valve.
3. Slide compression nut and sleeve onto copper pipe.
4. Position valve to align with fixture, hand tighten then make 3/4 turn with wrench.
5. Connect supply line to stop valve and fixture.
6. Turn on water and check connections.

## Instrucciones de instalación:

1. Cierre el suministro de agua y drene la tubería.
2. Desconecte la tubería de suministro y retire la válvula existente.
3. Deslice la manga y la tuerca de compresión en la tubería de cobre.
4. Coloque la válvula en posición para alinearla con el accesorio, apriete con la mano y luego, con una llave, de 3/4 de vuelta.
5. Conecte la tubería de suministro para detener la válvula y el accesorio.
6. Abra el flujo de agua y revise las conexiones.

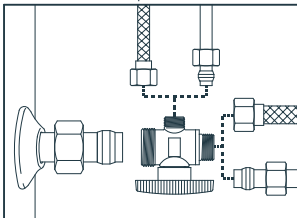

AN RWC BRAND

**RWC**

Distributed by  
Reliance Worldwide Corporation®  
1-877-700-4242