


IMPORTANT: The remote control included with this fan does not have dip switches. Please substitute the drawing below for Fig. 1 on page 14.

AUTOMATED LEARNING PROCESS/ACTIVATING CODE

⚠ CAUTION: The remote control transmitter (I) can be programmed to multiple receivers or fans. If this is *not* desired, turn wall switch off to any other programmable receiver or fan.

1. Remove battery cover from back side of remote control transmitter (I).

Install the 12-volt battery (K) and then replace battery cover on remote control transmitter (I).

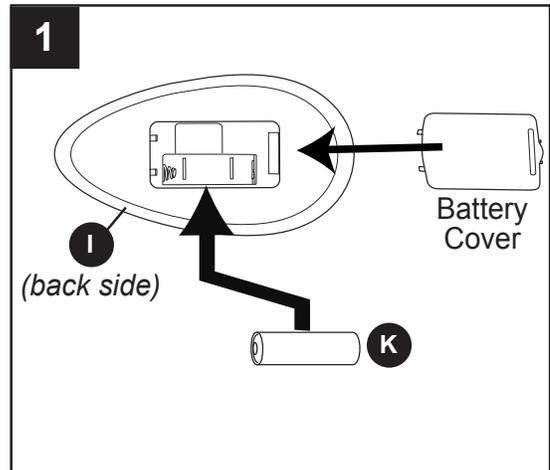

IMPORTANTE: El control remoto incluido con este ventilador no tiene conmutadores de las unidades. Favor de sustituir el dibujo a continuación por la Fig. 1 en la página 32.

PROCESO DE APRENDIZAJE AUTOMATIZADO/ACTIVACIÓN DEL CÓDIGO

⚠ PRECAUCIÓN: El transmisor del control remoto (I) se puede programar para varios receptores o ventiladores. Si usted *no* desea hacer esto, desactive el interruptor de pared para cualquier otro receptor o ventilador programable.

1. Retire la cubierta de la batería desde la parte posterior del transmisor del control remoto (I).

Instale la batería de 12 voltios (K) y luego vuelva a colocar la cubierta de la batería del transmisor para control remoto (I).

