





# INSTRUCTION MANUAL FOR TREE FUNCTIONS

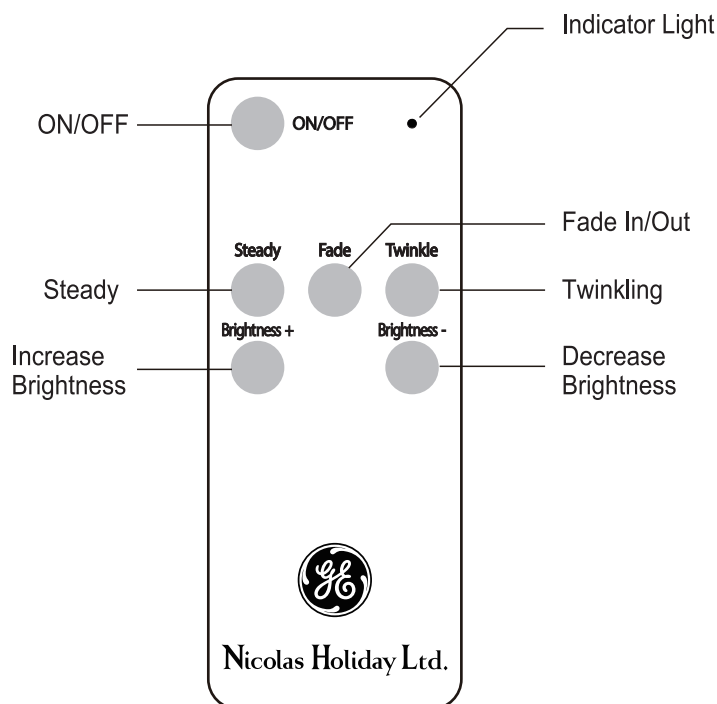

## Remote Control for 4-Functions of Single Color Product

- Remote Control includes 4 operating Functions.
- Each Button corresponds to one Function.

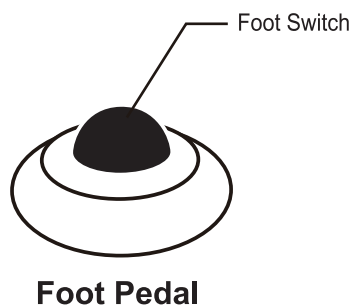

| Function Order on Foot Pedal | Function Description |
|------------------------------|----------------------|
| 1                            | Steady               |
| 2                            | Fade In/Out          |
| 3                            | Twinkling            |
| 4                            | Off                  |

### BATTERY CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries
- Do not mix old and new batteries. Always replace the whole set of batteries at once time.
- Batteries are to be inserted with the correct polarity (+and-).
- Exhausted batteries are to be removed from the product.
- Replace only with (2) AAA batteries.
- Batteries included
- Do not dispose of batteries in fire. Batteries may explode or leak.

### For indoor use only


GE is a trademark of General Electric Company and is under license by Nicolas Holiday Limited

Questions, call customer service toll free at 1-877-398-7337 or visit us on web at [www.geholidaylighting.com](http://www.geholidaylighting.com)

NHL Model No. 24109LO 24129LO  
Foot Pedal: TS-FS04ARD-09 TS-FS04ARD-17  
Remote Control: 25412 25413  
Printed in China  
FP25




## MANUAL DE INSTRUCCIONES DE LAS FUNCIONES DEL ÁRBOL

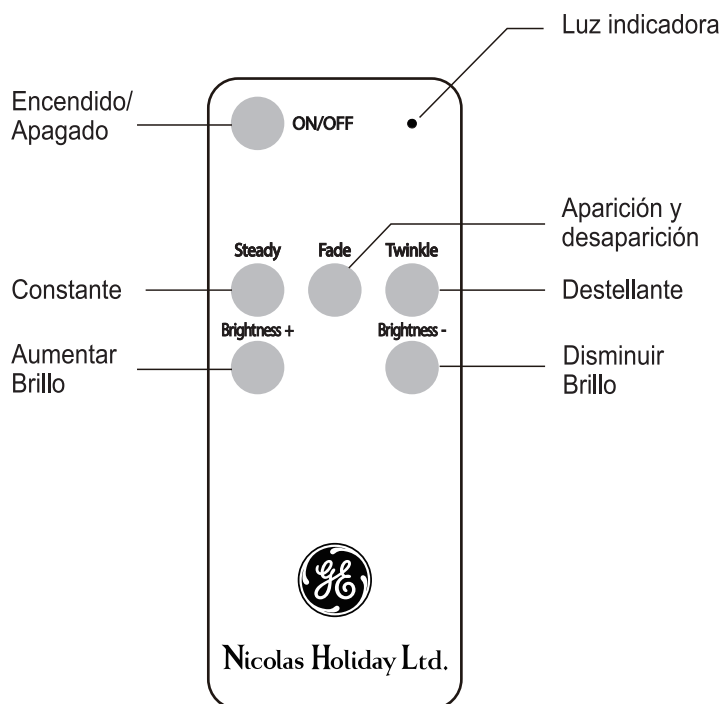

### Control remoto para 4 funciones de producto de un solo color

- El control remoto incluye 4 funciones operativas.
- Cada botón corresponde a una función.

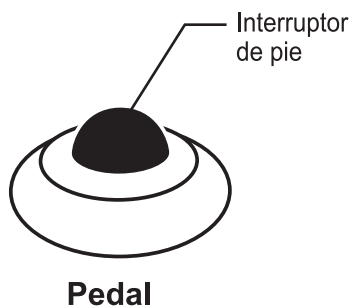

| Pedido de funciones en el pedal | Descripción de funciones |
|---------------------------------|--------------------------|
| 1                               | Constante                |
| 2                               | Aparición y desaparición |
| 3                               | Destellante              |
| 4                               | Apagado                  |

### PRECAUCIÓN SOBRE LA BATERÍA:

- No deben recargarse las baterías que no estén creadas para tal fin.
- No mezcle los diferentes tipos de baterías, como alcalinas, cinc-carbono o recargables.
- No mezcle baterías antiguas con nuevas. Siempre reemplace todo el conjunto de baterías a la vez.
- Las baterías se deben insertar en la polaridad correcta. (+y-).
- Las baterías agotadas se deben retirar del producto.
- Reemplace solo con (2) baterías alcalinas AAA.
- Incluye baterías.

No incinere las baterías. Estas podrían explotar o filtrarse.

### Sólo para uso en interiores

GE es una marca registrada de General Electric Company y se utiliza con licencia por Nicolas Holiday Limited

Si tiene preguntas, llame al número gratuito del Servicio al Cliente al 1-877-398-7337 o visítenos en el sitio web [www.geholidaylighting.com](http://www.geholidaylighting.com)

NHL Model No. 24109LO 24129LO  
Pedal: TS-FS04ARD-09 TS-FS04ARD-17  
Control remoto: 25412 25413  
Impreso en China  
FP25