
ITEM #9142648
MODEL #CL19-120

12V CORDLESS LED WORK LIGHT

ATTACH YOUR RECEIPT HERE

PROJECT SOURCE

PROJECT SOURCE and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

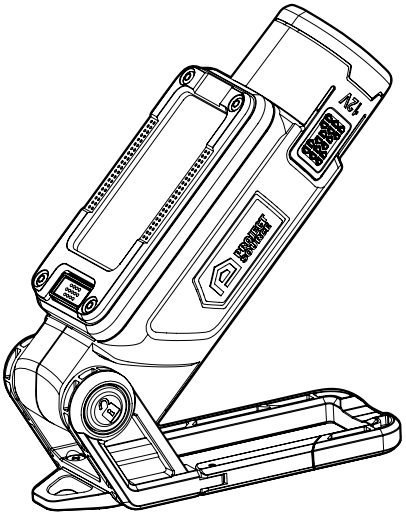

Serial Number _____

Purchase Date _____

Thank you for purchasing the PROJECT SOURCE product.
Questions, problems or missing parts?
Before returning, contact us on:
866-389-8827, 8 a.m. - 8 p.m., EST, Monday - Sunday.

DF26558


TABLE OF CONTENTS

Product Specifications 2
Package Contents 3
Symbols 4
Safety Information 5
Preparation 7
Assembly Instructions 7
Operating Instructions 8
Care and Maintenance 9
Troubleshooting 10
Warranty 11

PRODUCT SPECIFICATIONS

SPECIFICATIONS	
Rated voltage	12 V d.c.
Max. Brightness	800 lm
Operating Temperature	14°F+104°F (-10°C+40°C)
Rotation Angle	0° to 180°
Battery Pack Model	BAT200-120
Battery Type	Lithium
Battery Voltage	12 V ⎓
Battery Pack Rated Capacity	2.0 Ah 24 Wh
Battery Charger Model	WJ-Y300502000W

PACKAGE CONTENTS

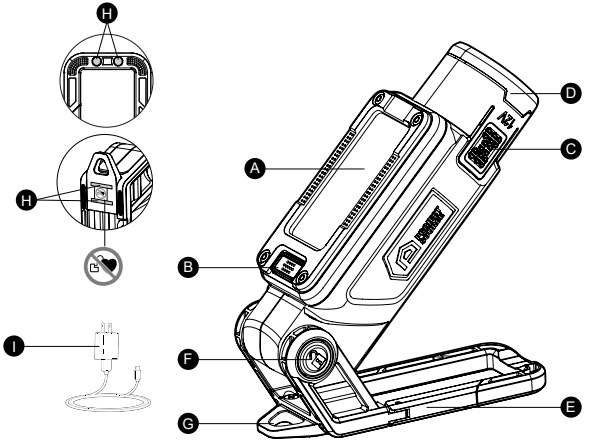

Part	Description	Quantity	Part	Description	Quantity
A	LED light	1	F	Angle adjustment button	1
B	On/Off button	1	G	Hanging hole	1
C	Battery pack release button	2	H	Magnetic mounts	4
D	Battery pack	1	I	Charger	1
E	Hook (for hanging and storage)	1			

⚠ WARNING

- Remove the tool from the package and examine it carefully. Do not discard the carton or any packaging material until all parts have been examined.
- If any part of the tool is missing or damaged, do not attach the battery pack or use the tool until the part has been repaired or replaced. Failure to heed this warning could result in serious injury.

⚠ SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product more safely and effectively.

SYMBOLS	EXPLANATION
	TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL.
	DO NOT EXPOSE TO RAIN.
	DO NOT STARE INTO LIGHT.
	CHARGE THE BATTERY ONLY INDOORS.
	DISCONNECT BATTERY BEFORE MAINTENANCE.
	SGS US Q-MARK (801852): THIRD-PARTY SAFETY CERTIFICATION BY SGS NRTL, COMPLIANT WITH US POWER TOOL SAFETY STANDARDS FOR US MARKET ACCESS.
	NO ACCESS FOR PEOPLE WITH IMPLANTED CARDIAC PACEMAKERS.

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOLS	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

⚠ WARNING

- To avoid serious personal injury, do not attempt to use this product until you have read this owner's manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this owner's manual, do not use this product. Call **866-389-8827** for assistance.

⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

General Product Safety Warnings

Know the Tool

To operate this tool, carefully read this manual and all labels affixed to the tool before using it. Keep this manual available for future reference.

Important

This tool should be serviced only by a qualified service technician.

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

- When using product, additional precautions and basic precautions should always be followed, including the following:

⚠ WARNING

- Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **To reduce the risk of injury, close supervision is necessary when a product is used near children.**
- **Do not contact hot parts.**
- **Only use attachments recommended or sold by the manufacturer.**
- **Do not use in the rain. Do not expose product to rain or snow.**
- **Do not store in direct sunlight or in a vehicle.**
- **To reduce the risk of electrical shock, do not put product in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink.**

⚠ WARNING

- Do not use magnet for horizontal overhead mounting.

- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliances that have the switch on invites accidents.**
- **Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.**
- **Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.**
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.**
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.**
- **Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.**

⚠ SAFETY INFORMATION

- **Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion. The temperature of 130 °C can be replaced by the temperature of 265°F.**
- **Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.**
- **Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.**
- **Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.**
- **Do not put fingers or hands into the product.**
- **Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.**
- **Do not use the product in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.**
- **Do not disassemble the product. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.**
- **Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.**
- **Switch off the product when not in use.**
- **Use only with Listed/Certified Information Technology (Computer) Equipment or ITE power supply or Class 2 Power Unit.**
- **Read all the instructions before using the product.**

SAVE THESE INSTRUCTIONS

⚠ WARNING (PROPOSITION 65)

California Proposition 65 Warning
This product may contain chemicals like lead (found in battery terminals or solder) ,cadmium, or phthalate which are known to the State of California to cause cancer and birth defects or other reproductive harm.
For more information, go to www.P65Warnings.ca.gov.

FCC SAFETY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

PREPARATION

This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you still have questions or an unresolved issue after going through this troubleshooting guide, or just want to speak to a PROJECT SOURCE product expert, please call our PROJECT SOURCE customer service department at **866-389-8827.**

PREPARATION

Know Your Work light

Before attempting to use the work light, familiarize yourself with all of its operating features and safety requirements.

⚠ WARNING

- Do not allow familiarity with the tool to cause carelessness. Remember that one careless moment is enough to cause severe injury. Before attempting to use any tool, be sure to become familiar with all of the operating features and safety instructions.
- Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

ASSEMBLY INSTRUCTIONS

Exposure to fire or temperature above 130 °C (265°F) may cause explosion.


- **Follow all charging instructions and do not charge the battery pack or product outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

  Use only PROJECT SOURCE 12-volt batteries (BAT200-120).
  Use only PROJECT SOURCE 12-volt chargers (WJ-Y300502000W).

ASSEMBLY INSTRUCTIONS

1a. To Attach Battery Pack


a. Align the raised portion on the battery pack with the grooves on the bottom of the tool, then slide the battery pack onto the tool, as shown.
b. Ensure that the battery-release buttons on the battery pack snap into place and the battery pack is secured to the tool before beginning operation.

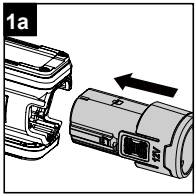

NOTICE: When placing the battery pack on the tool, be sure that the raised rib on the battery pack aligns with the groove on the tool and the latches snap into place properly. Improper assembly of the battery pack can cause damage to internal components.

1b. To Detach Battery Pack

a. Press the battery release buttons (C) from both sides. This will cause the battery pack to rise out of the product.
b. Pull forward on the battery pack to remove it from the tool.

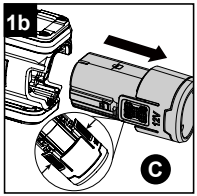


⚠ WARNING

- Battery tools are always in operating condition. Therefore, always turn off the light when the light is not in use or when carrying the tool at your side.

OPERATING INSTRUCTIONS

2. ON/OFF Switch

a. To turn the work light ON, press the ON/OFF switch (B). The work light will be turned on at maximum brightness.
b. To reduce the brightness, press the ON/OFF switch again.
c. Each press cycles brightness: High, Medium, Low, then turns off.

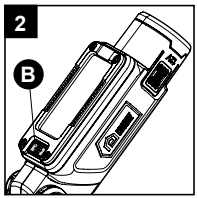


⚠ WARNING

- Do not continue to press the ON/OFF switch after the work light has automatically switched off. The battery can be damaged.
- When the battery is low, the work light will still cycle through high, medium, and low brightness levels before turning off. Charge the battery to avoid battery damage.

OPERATING INSTRUCTIONS


3. Swiveling the Light Head

The light head can be swiveled (F) vertically a maximum 180°, in 36-degree steps.

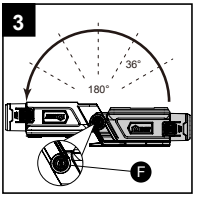


4. Hook

The work light is equipped with a hook, allowing it to be carried directly or secured to an object using the handle.

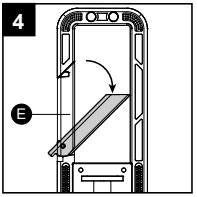

5. Magnetic Application

You can use the magnetic mounts (H) to attach the work light to ferrous surfaces. Do so carefully in order to avoid having the light fall.

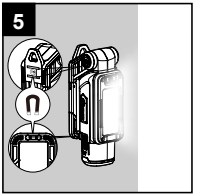

CARE AND MAINTENANCE

1. Examining the batteries and the battery charger

Carefully inspect the batteries, battery charger, and connection cord of the battery charger for any signs of damage, such as cracks or broken parts. Replace if necessary.

2. Cleaning the product

- Remove the batteries.
- Before cleaning or performing any maintenance, remove the battery from the work light. For safe and proper operation, always keep the tool and its ventilation slots clean.
- Always use only a soft, dry cloth to clean the plastic transparent cover, never use detergent or alcohol. Always wear safety goggles when cleaning tools with compressed air.

TROUBLESHOOTING

3. Cleaning the battery pack and the battery charger

- Make sure that the battery pack and the battery charger and battery compartment are all clean and dry before you plug the battery pack into the battery charger.
- Clean the battery terminals with a soft and dry cloth.
- Clean the surface of the battery pack and the battery charger with a soft and dry cloth.

TROUBLESHOOTING

If you still have questions or an unresolved issue after going through this troubleshooting guide, or just want to speak to a PROJECT SOURCE product expert, please call our PROJECT SOURCE customer service department at **866-389-8827.**

⚠ WARNING

- Press the ON/OFF button to switch off the light, and remove battery from the tool before performing troubleshooting procedures.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The work light does not work.	Low battery charge.	Charge the battery.
	The light has stopped working to protect internal circuits.	Turn off the light, wait for the tool and battery to cool down, then start the tool again.
	A single battery is installed.	Plug PROJECT SOURCE 12 V batteries
	The trigger is defective.	Return to place of purchase or return the product to a repair center or call customer service department at **PROJECT SOURCE (866-389-8827).**
	The PCB board is defective.	

WARRANTY

2-YEAR LIMITED WARRANTY

This PROJECT SOURCE 12V LED work light is warranted to the original purchaser from the original purchase date for two (2) years subject to the warranty coverage described herein.

This PROJECT SOURCE 12V LED work light is warranted for the original user to be free from defects in material and workmanship.

If you believe that the PROJECT SOURCE 12V LED work light is defective at any time during the specified warranty period, simply call our Warranty service **(866-389-8827)** along with proof of purchase.

This warranty is void if: defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; the damage is due to normal wear, damage is due to abuse (including overloading of the tool beyond capacity), improper maintenance, neglect or accident; or the damage is due to the use of the tool after partial failure or use with improper accessories or unauthorized repair or alteration.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Replacement parts are not covered under warranty.

Printed in China