ASSEMBLY&INSTALLATION

Please read carefully and save these instructions,as you may need them a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.
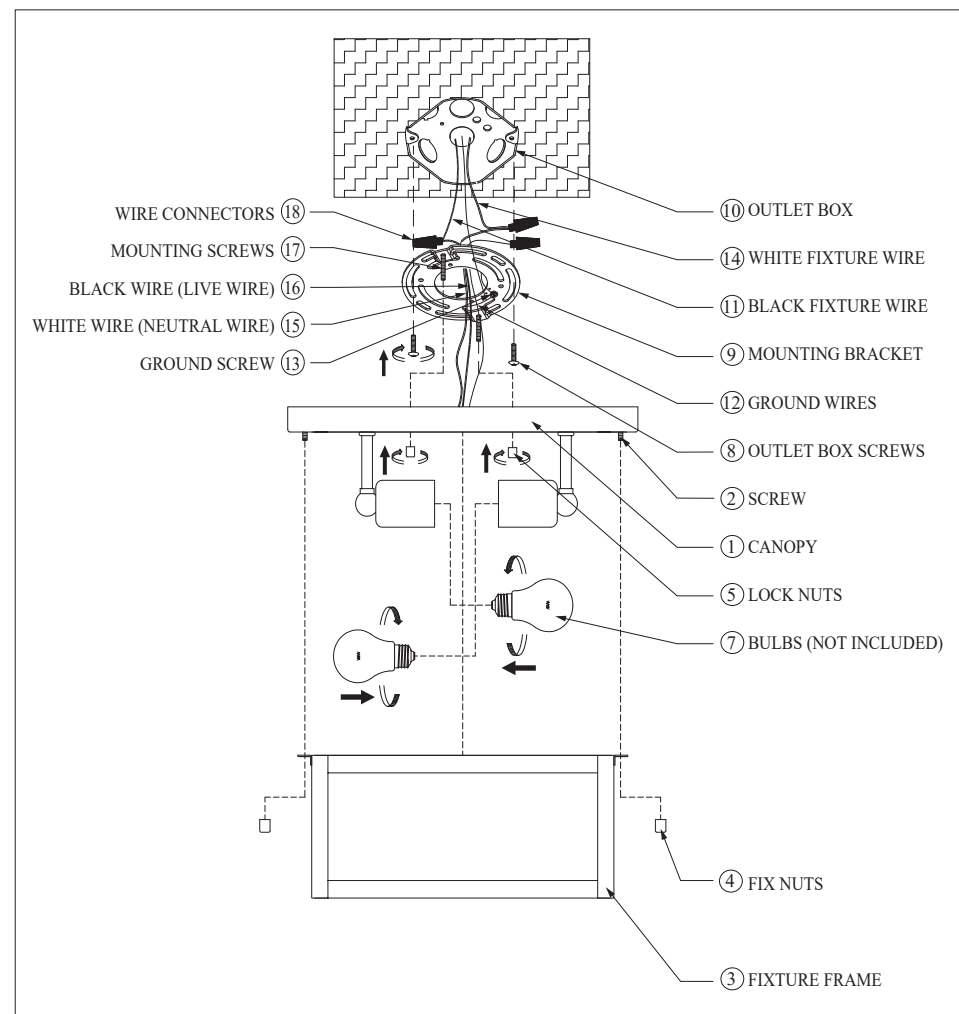
ASSEMBLY AND INSTALLATION

1. Carefully unpack the fixture, lay out all parts on a clean surface.

2. Thread the mounting Screws (17) into mounting holes on mounting bracket (9). (to be fully tightened later)

3. Fasten the mounting bracket (9) onto the outlet box (10) by using provided 2 outlet box screws (8).

4. Tie ground wires (12) from outlet box and from fixture to the ground screw (13) on the mounting bracket (9). Connect white wire (14) from fixture to white supply wire (15) from supply circuit. Connect black wire (11) from fixture to black supply wire (16) from supply circuit. Cover connections by using provided wire connectors (18).

5. Place the canopy (1) to the outlet box (10). Allow the heads of mounting screws (17) come out through the canopy (1). Screw the lock nuts (5) onto the mounting screws (17) unti the canopy is held firmly against the ceiling.

6. Install the bulbs (7 Not included). Make sure they do not exceed the maximum wattage specified on the fixture's wattage rating label.

ASSEMBLY AND INSTALLATION (CONT.)

7. Place the fixture frame (3) over the the canopy (1). Align the screw (2) on the canopy (1) to protrude throught the holes on top of the fixture frame (3). Secure the canopy (1) into place by screwing the two fix nuts (4) onto the two protuding screws (2).

8. Turn on the power.

INSTALLATION IS NOW COMPLETED

WIRE CONNECTORS (18)
MOUNTING SCREWS (17)
BLACK WIRE (LIVE WIRE) (16)
WHITE WIRE (NEUTRAL WIRE) (15)
GROUND SCREW (13)
(10) OUTLET BOX
(14) WHITE FIXTURE WIRE
(11) BLACK FIXTURE WIRE
(9) MOUNTING BRACKET
(12) GROUND WIRES
(8) OUTLET BOX SCREWS
(2) SCREW
(1) CANOPY
(5) LOCK NUTS
(7) BULBS (NOT INCLUDED)
(4) FIX NUTS
(3) FIXTURE FRAME

ITEM NO.: 4202, 4122