

PRIMO[®]
Smart Touch
Water
Dispenser



CLEAN, MODERN,
COMPLEMENTS YOUR LIFESTYLE

B275

Smart Touch Water Dispenser #601324-C B275

The clean, modern silhouette of the Smart Touch Water Dispenser perfectly complements your kitchen and lifestyle. Welcome to smart and simple design, where with the light touch of a button, you can dispense three temperatures of water. Cold, hot or cool – you choose whatever temperature you need.

FEATURES



- CONVENIENCE SWITCHES** – On/off switches for heating and cooling are located on the back of the dispenser.
- COLD WATER ICON** – Touch to unlock, then touch dispense control to dispense cold water. For non-stop dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop. Light illuminates green when water is cooling. Light turns off when water is fully chilled.
- COOL WATER ICON** – Touch to unlock, then touch dispense control to dispense cool water. For non-stop dispensing, touch and hold icon for three seconds.
- HEATING ICON** – Touch and continuously hold to unlock and touch dispense control to dispense hot water. Release dispense control to stop dispensing. Light illuminates red when water is heating. Light turns off when water is fully heated. (NOTE: As a child safety feature, holding both the touch dispense control and the heating icon is **required at all times** when dispensing hot water)
- DISPENSE CONTROL** – Touch to dispense hot or cold water after hot or cold control has been unlocked. Release to stop dispensing. Touch and hold cool or cold water icon for three seconds for non-stop dispensing. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.
- EMPTY BOTTLE LIGHT** – Blinks orange when the bottle is empty and needs to be replaced.
- PROBE ASSEMBLY** – Probe pumps water from the bottle into the hot and cold tanks.
- PROBE HANGER** – Rest probe assembly on the hanger (located inside the cabinet door) to keep it clean while replacing bottles.
- DRIP TRAY** – Removable and dishwasher-safe.
- WATER BOTTLE** – Not included. Uses 3 and 5-gallon bottles. Visit PrimoWater.com to find Primo® water at the store nearest you.

WARNINGS & SAFETY PRECAUTIONS

To reduce risk of injury and property damage, user must read this entire guide before assembling, installing & operating dispenser.

Failure to execute the instructions in this manual can cause personal injury or property damage. Models that heat water dispense at very high temperatures. Failure to use properly can cause personal injury.

When operating this dispenser, always exercise basic safety precautions, including the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- This dispenser is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Never use any liquid in the dispenser other than known and microbiologically safe bottled water.
- For indoor use only. Keep water dispenser in a dry place away from direct sunlight. Do NOT use outdoors.
- Install and use only on a hard, flat and level surface.
- Do NOT place dispenser into an enclosed space or cabinet.
- Do NOT operate dispenser in the presence of explosive fumes.

- Position back of dispenser no closer than 4 inches from wall and permit free airflow between wall and dispenser. There must be at least 4 inches clearance on the sides of the dispenser to permit airflow.
 - The dispenser is intended to be plugged into a ground fault interrupting receptacle.
 - Do not use an extension cord with your water dispenser.
 - Always grasp plug and pull straight out from outlet. Never unplug by pulling on power cord.
 - Do NOT use dispenser if cord becomes frayed or otherwise damaged.
 - To protect against electric shock, do NOT immerse cord, plug, or any other part of dispenser in water or other liquids.
 - Ensure dispenser is unplugged prior to cleaning.
 - Never allow children to dispense hot water without proper and direct supervision. Unplug unit to prevent unsupervised use by children.
 - Do not dispense hot water if water bottle is empty.
 - Please contact us at 844-23-PRIMO for troubleshooting assistance.
- Note: This dispenser performs best in elevations below 6,000 ft. Using this dispenser in elevations above 6,000 ft may decrease the performance and the product life of this dispenser. For more specific information, please contact customer service at 844-23-PRIMO.

QUICK START GUIDE


- Place the dispenser on a level floor surface in the desired location in your home. Product is intended for indoor use only. [Note: Do NOT plug power cord into wall outlet until instructed.]




- Position dispenser so the back is at least 4 inches from wall and there are at least 4 inches of clearance on both sides.




- Clean probe with a damp cloth and dish soap. (Visit PrimoWater.com for detailed cleaning instructions.) Place probe assembly on hanger inside door to keep it clean.

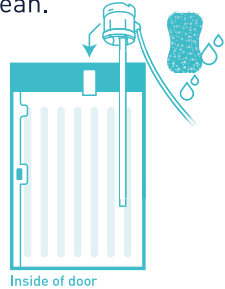

- Grab a bottle of Primo® water (sold separately) and fully remove the cap. Insert probe assembly into bottle. Press firmly to secure assembly over bottle opening. For 3-gallon bottles, squeeze the tabs on the top of the probe assembly to separate the probe cap from the collar and press the collar securely over the bottle opening.

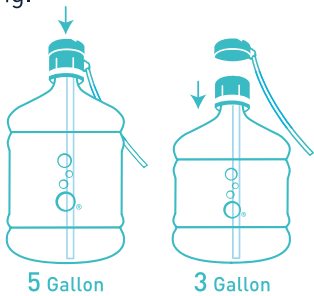

- Slide bottle inside the cabinet and close cabinet door. [Note: Water will not pump from bottle unless door is fully closed.]

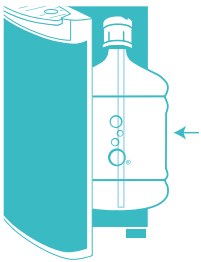


- Plug dispenser into a ground fault circuit interrupting (GFCI) outlet. You will hear the dispenser begin to pump water to fill the internal hot and cold reservoirs.



- Turn on desired functions by flipping the switches on the back of the dispenser to the ON position.

Green – chills water
Red – heats water

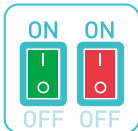

- Once the dispenser has stopped filling the internal reservoirs, dispense and dispose at least 1 quart (approximately 2 pint glasses) of water from the cold, cool, and hot spouts.



- Your water will be ready to dispense fully chilled in approximately 1 hour or piping – hot in approximately 12 minutes.



- Register your dispenser at PrimoWater.com to activate your warranty, which runs for 1 year from date of purchase.

Primo® Pre-Filled Exchange Water or Self-Service Refill Water from Primo® & Glacier® (sold separately)



Available at thousands of locations nationwide. Learn more at PrimoWater.com/locations.

OPERATING INSTRUCTIONS

1. Water will take approximately 1 hour after initial set up to become completely chilled. Cooling light will turn off once the water has been fully chilled.
2. Touch the cold water icon to unlock, then touch dispense control to dispense cold water.
3. For non-stop dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.

1. Touch the cool water icon to unlock, then touch dispense control to dispense cool water.
2. For non-stop dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.

1. Water will take approximately 12 minutes after initial set up to reach its hottest temperature. Heating light will turn off once the water has been fully heated.
2. Touch and CONTINUOUSLY HOLD the hot water icon to unlock, then touch dispensing control to dispense hot water. Release to stop dispensing.

Touch and hold the hot and cold icons for three seconds to lock the touch controls. All icons will flash three times, indicating unit is locked and no water can be dispensed. If controls are

Primo Water North America, 200 Eagles Landing Boulevard, Lakeland, FL 33810

1. Open dispenser cabinet door and slide empty bottle out of cabinet.
2. Remove probe assembly from the empty bottle and place it on the probe hanger.
3. Set empty bottle aside.
4. Remove the entire plastic cap from the new bottle.
5. Place probe into the new bottle and slide the collar it clicks into place. Press on the top of the probe until tube touches the bottom of the bottle. For 3-gallon bottles, squeeze the tabs on the top of the probe assembly to slide the probe cap from the collar and press the collar into the bottle opening.
6. Slide the bottle into the cabinet and close the door.

For best taste, performance, and hygiene, clean your cabinet, controls, bottle probe and spout each time you replace your water bottle. Use a clean, soft cloth and food grade sanitizer or bleach. Empty and clean drip tray as needed. Clean the cold reservoir at least once every 3 months. Visit **PrimoWater.com** for detailed cleaning instructions.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PARA REEMPLAZAR EL BOTELLÓN

funcionamiento normal.

unidad está desbloqueada y que el dispensador reanudará su

Todos los iconos titilarán tres veces, lo cual indica que la

y sostengas los iconos de agua caliente y fría por tres segundos.

iconos titilarán tres veces. Para desbloquear la función, presione

y que no se pueden dispensar agua. Si se tocan los controles, los

empezará a parpadear. Para prevenir el congelamiento o

sobrecalentamiento, el dispensador no calentará ni enfriará

agua cuando la luz del botellón está parpadeando. Reemplaze

el botellón tan pronto como sea posible para permitir

Dispensador De Agua Smart Touch

Dispensador De Agua Smart Touch

La silueta impecable y moderna del Dispensador de Agua Smart Touch complementa su cocina y estilo de vida a la perfección. Bienvenido al diseño simple e inteligente con el que podrá dispensar tres temperaturas de agua con el presione ligero de un botón. Fria, caliente o fresca: usted elige la temperatura que necesita.

CARACTERÍSTICAS

- INTERRUPTORES PRÁCTICOS** – Los interruptores de encendido y apagado para calentar y enfriar se encuentran ubicados en la parte posterior del dispensador.
- ÍCONO DE AGUA FRÍA** – Presione para desbloquear, luego presione el control del suministro para dispensar agua fría. Para dispensar agua continuamente, presione y sostenga el icono por tres segundos. El control del suministro brillará en forma intermitente. Presione el control del suministro para comenzar a dispensar agua; presione nuevamente para detenerlo. La luz se ilumina con un color verde cuando el agua se está enfriando. La luz se apaga cuando el agua está totalmente enfriada.
- ÍCONO DE AGUA FRESCA** – Presione para desbloquear, luego presione el control del suministro para dispensar agua fresca. Para dispensar agua continuamente, presione y sostenga el icono por tres segundos.
- ÍCONO PARA CALENTAR** – Presione y sostenga para desbloquear y presione el control del suministro para dispensar agua caliente. Libere el control del suministro para detenerlo. Se ilumina una luz roja cuando el agua se está calentando. La luz se apaga cuando el agua está totalmente caliente. (NOTA: como medida de protección infantil, es necesario presionar el control del suministro táctil y el icono para calentar al mismo tiempo cuando se dispensa agua caliente).

- CONTROL DEL SUMINISTRO** – Presione para dispensar agua caliente o fría luego de desbloquear el control de agua caliente o fría. Libere el botón para detener el suministro. Presione y sostenga el icono de agua fría o caliente por tres segundos para dispensar agua continuamente. El control del suministro brillará en forma intermitente. Presione el control del suministro para comenzar a dispensar agua; presione nuevamente para detenerlo.
- LUZ DE BOTELLÓN VACÍO** – Titila en color naranja cuando el botellón está vacío y se lo debe reemplazar.
- CONJUNTO DEL TUBO SURTIDOR** – El tubo surtidor bombea agua desde el botellón hacia los tanques de agua caliente y fría.
- COLGADOR DEL TUBO SURTIDOR** – Coloque el tubo surtidor en el colgador (ubicado dentro de la puerta del gabinete) para mantenerlo limpio cuando cambie el botellón.
- BANDEJA DE GOTEO** – Extraíble y puede lavarse en el lavaplatos.

Visite PrimoWater.com para buscar su agua Primo® en la tienda más cercana.

ADVERTENCIAS Y PRECAUCIONES DE SEGURIDAD

Para reducir el riesgo de lesiones y daños materiales, el usuario debe leer completamente esta guía antes de ensamblar, instalar y operar el dispensador. El no seguir las instrucciones de este manual puede causar lesiones personales o daños materiales. Los modelos que calientan agua la dispensan a temperaturas muy altas.

El uso inapropiado puede causar lesiones personales.

Al operar este dispensador, siempre siga las precauciones básicas de seguridad, entre las cuales están las siguientes:

- Antes de usarlo, este dispensador debe estar ensamblado e instalado correctamente según las instrucciones de este manual.
 - Este dispensador está diseñado para dispensar agua solamente. NO lo use con otros líquidos. NO lo use para otros propósitos. Nunca use ningún otro líquido en este dispensador que no sea agua embotellada conocida y microbiológicamente segura.
 - Sólo debe usarse en interiores. Mantenga el dispensador de agua en un lugar seco lejos de la luz solar directa. NO lo use en exteriores.
 - Instalelo y úselo solamente sobre una superficie dura, plana y nivelada.
 - NO coloque el dispensador en un espacio cerrado ni gabinete.
 - NO opere el dispensador en presencia de vapores explosivos.
- Coloque la parte trasera del dispensador a una distancia de por lo menos 4 pulgadas (10 cm) de la pared y permita que circule el aire entre la pared y el dispensador. Debe haber por lo menos un espacio de 4 pulgadas a cada lado del dispensador para permitir el flujo de aire.
- El dispensador está diseñado para enchufarse en un enchufe con circuito de falla a tierra.
 - No use una extensión eléctrica con el dispensador de agua.
 - Siempre jale el enchufe para desconectarlo del tomacorriente. Nunca desenchufe jalando el cordón eléctrico.
 - NO use el dispensador si el cordón eléctrico está gastado o dañado.
 - Para protegerse contra choque eléctrico, NO sumerja el cordón, el enchufe ni ninguna otra parte del dispensador en agua u otros líquidos.
 - Asegúrese de que el dispensador esté desenchufado antes de limpiarlo.
 - Nunca permita que los niños dispensen agua caliente sin la adecuada y directa supervisión. Desenchufe la unidad para evitar que los niños la usen sin supervisión.
 - No dispense agua caliente si el botellón está vacío.
 - Sirvase llamarnos al 844-23-PRIMO para obtener ayuda con la resolución de problemas.
- Nota: Este dispensador trabaja mejor en elevaciones menores a 6000 pies (1,828 metros) de altura. Usar este dispensador en elevaciones mayores a 6,000 pies (1,828 metros) de altura puede afectar el desempeño y la vida del producto. Para más información, contacta atención al cliente al 844-23-PRIMO.

GUÍA PARA INICIO RÁPIDO


1. Coloque el dispensador sobre el piso nivelado en el lugar seleccionado de su casa. El producto fue diseñado solo para uso en interiores. [Nota: NO enchufe el cable de alimentación en la toma eléctrica de pared hasta recibir instrucciones].




2. Posicione el dispensador de modo que la parte posterior tenga al menos una distancia de 4 pulgadas (10 cm) de la pared y al menos 4 pulgadas a ambos lados




3. Limpie el tubo surtidor con un paño empapado y jabón para platos. (Visite PrimoWater.com para leer las instrucciones detalladas sobre la limpieza). Coloque el conjunto del tubo surtidor sobre el colgador dentro de la puerta para mantenerlo limpio.

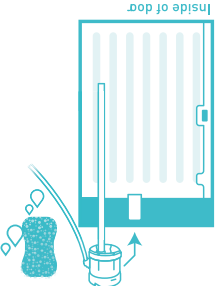

4. Tome un botellón de agua Primo® [se vende separadamente] y retire completamente la tapa. Inserte el tubo surtidor dentro del botellón. Presione firmemente para asegurar el tubo surtidor sobre la abertura del botellón. Para botellones de 3 galones, apriete las lengüetas situadas en la parte superior del tubo surtidor para separar la tapa del tubo del collarín y presione el collarín con firmeza sobre la abertura del botellón.

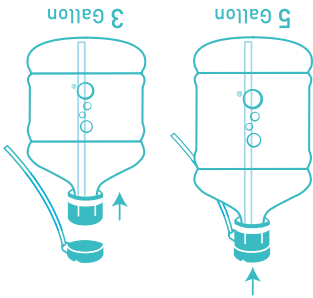


5. Deslice el botellón dentro del gabinete y cierre la puerta del gabinete y cierre la puerta del botellón a menos que la puerta esté completamente cerrada].

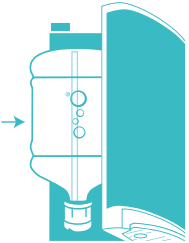

6. Enchufe el dispensador en un tomacorriente siglas en inglés). Oirá que el dispensador empieza a bombear agua para llenar los tanques internos de agua caliente y fría.



7. Active las funciones deseadas colocando los interruptores situados en la parte trasera del dispensador en la posición ON (activado).

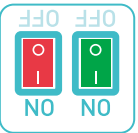

Verde: enfría el agua
Rojo: calienta el agua

8. Después que el dispensador haya terminado de llenar los tanques internos, dispense y deseche por lo menos 1 cuarto de galón (aproximadamente 2 pintas o 946 ml) de agua por los surtidores de agua fría, fresca y caliente.



9. El agua estará lista para dispensar completamente fría en aproximadamente 1 hora o extremadamente caliente en aproximadamente 12 minutos.



10. Regístre su dispensador en PrimoWater.com para activar su garantía de un año a partir de la fecha de compra.

Agua Primo® del programa de descuento a cambio de botella o de autoservicio de resutido de agua de Primo® & Glacier® (de venta por separado)



Disponible en miles de ubicaciones en todo el país. Conozca más en PrimoWater.com/locations.

PRIMO[®]
Dispensador
De Agua
Smart Touch



LIMPIO, MODERNO,
COMPLEMENTA SU ESTILO DE VIDA
B275