


Tools Required:

Herramientas Requeridas:




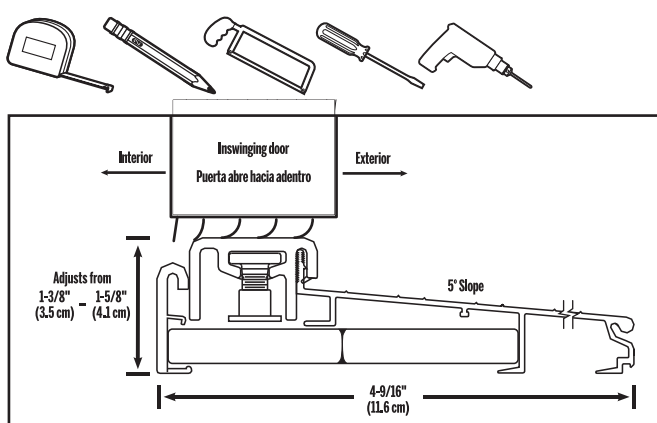


INSTRUCTIONS:

1. Before starting installation, remove adjustable cap from threshold. (Insert screwdriver under end of cap and pry cap up). Measure width of doorway. Cut threshold and adjustable cap to length with a hacksaw.
2. Install threshold with adjustable cap located directly below door (fasteners included). Plastic or lead anchors required for installation on concrete (not included). It may be necessary to trim the door stop molding when installing threshold.
3. Slide one T-nut into track and align with hole in adjustable cap. Screw bolt into T-nut until bottom of bolt is flush with top of adjustable cap. Screw the bolts into the T-nuts an additional 1/8" upward through the hole so the bottom of the bolt keeps the T-nut aligned with the hole and prevents it from sliding out of place.
4. Snap adjustable cap onto threshold. Turn screws (two turns at a time) to raise cap to desired height. Be sure all screws are in contact with the threshold base. Insert caps over adjusting screws. An under door seal or door sweep is recommended for a weathertight seal.

INSTRUCCIONES:

1. Antes de empezar la instalación, remueva la capa ajustable del umbral. (Inserte el desarmador debajo de la punta de la capa hacia arriba). Mida el ancho de la entrada. Corte el umbral y la capa ajustable al largo necesario con una sigueta.
2. Instale el umbral con la capa ajustable situada directamente debajo de la puerta (sujetadores provistos). Se requieren anclas de plomo o plástico para instalación sobre concreto. Puede ser necesario recortar el tope de la moldura de la puerta al instalar el umbral.
3. Deslice una tuerca en T en el riel y alinéela con el agujero en la tapa ajustable. Atornille el perno en la tuerca en T hasta que la parte inferior del perno esté a ras con la parte superior de la tapa ajustable. Atornille los pernos en las tuercas en T 1/8" hacia arriba a través del agujero para que la parte inferior del perno conserve la tuerca en T alineada con la retención y evite que se desplace fuera de lugar.
4. Encaje la capa ajustable al umbral. Remueva de los orificios las capas que cubren los tornillos ajustables. Gire los tornillos (dos veces a la vez) para levantar la capa a la altura deseada. Asegurese que los tornillos están en contacto con la base del umbral. Se recomienda el uso de una base para puerta o barredora para obtener un sello a prueba del clima.

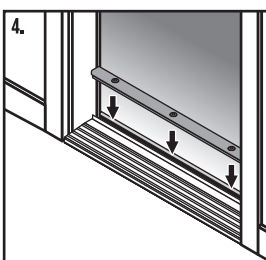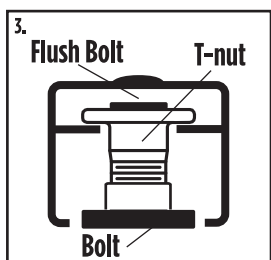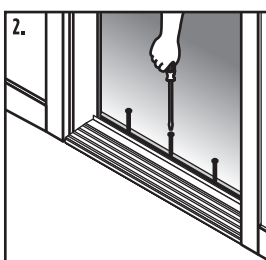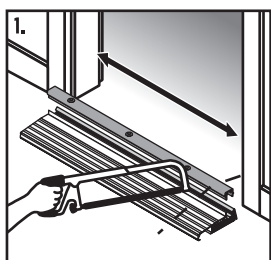

QUESTIONS? | PREGUNTAS?

800.654.8454

MDBUILDINGPRODUCTS.COM

