




Thank you for selecting Globe as your lighting choice for your home. With proper care, this product will provide years of pleasure and enjoyment. Carefully follow the instructions in order to ensure that this product functions safely and properly for years to come.

DUSK TO DAWN OR SWITCH ACTIVATED LED SECURITY LIGHT


SPECIFICATIONS:

Voltage: 120 VAC ~ 60Hz
Wattage: 24W LED
Lumen: 2000LM
Color temperature: 4000K
Suitable for Wall or Eave mount


THIS PACKAGE INCLUDES:

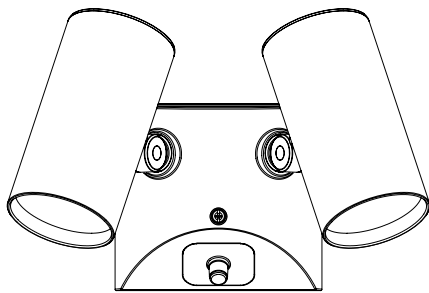


1x – Light fixture



2x – Mounting screws (AA)



1x – Mounting bracket



2x – Mounting screws (BB)



1x – Silicone plug




1x – Mounting bolt (CC)



1x – Photocell cap

TOOLS REQUIRED (NOT INCLUDED):

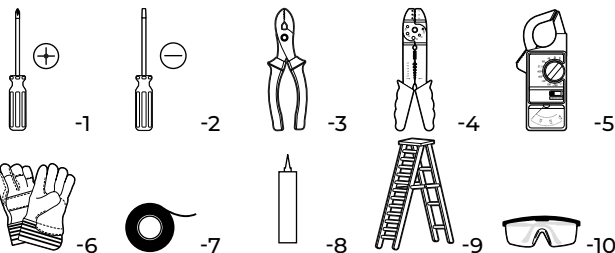

1	Phillips screwdriver
2	Flathead screwdriver
3	Pliers
4	Wire strippers/cutters
5	Circuit tester

6	Work gloves
7	Electrical tape
8	Silicone sealant
9	Ladder
10	Safety goggles

SAFETY INFORMATION:



This light fixture requires 120-volts AC.
Some codes require installation by a qualified electrician.

WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is OFF at the light fixture.

WARNING: Risk of fire. Do not aim the lamp head at a combustible surface within 3 ft. (0.91 m).

WARNING: Risk of fire. Keep the lamp head at least 2 in. (51 mm) from combustible materials.

CAUTION: Burn hazard. Allow the light fixture and the lamp head to cool before touching.


CAUTION: Do not cut any wires with factory installed wire connectors or remove the wire connectors.

NOTICE: Do not connect this light fixture to a dimmer switch or timer.


INSTALLATION:

1. DETERMINING THE MOUNTING LOCATION.

- Determine the mounting location.
- Position the light fixture heads in the general direction of the desired light coverage.

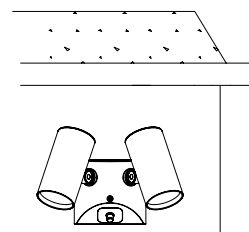

WALL MOUNT

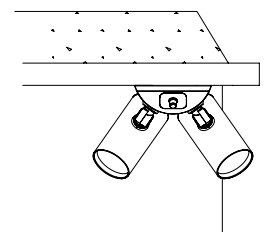


EAVE MOUNT

INSTALLATION:

2 REMOVING THE MOUNTING PLATE.


NOTE: This fixture comes with a mounting plate (C) pre-assembled on the light fixture (B) for shipping.

- Unscrew the mouning bolt (A) connecting the light fixture (B) to the mounting plate (C) and remove the mounting plate (C).

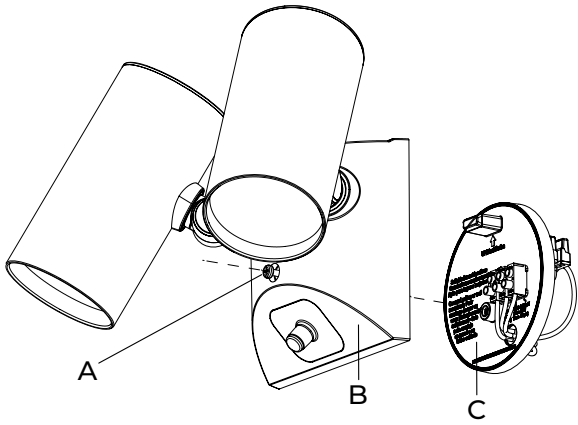

3. PREPARING THE LIGHT FOR MOUNTING.


- Determine the mounting location wall or eave mount.
- Position the lamp heads (A) in the general direction of the desired light coverage.

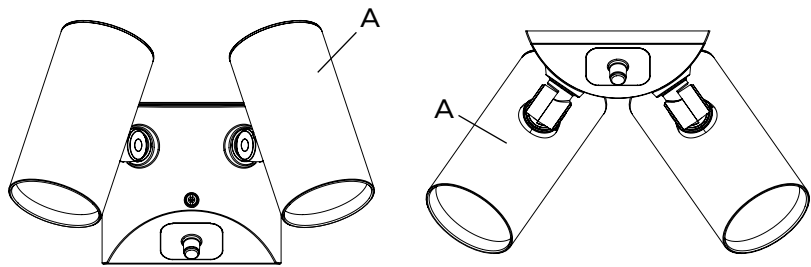

4. INSTALLING THE MOUNTING BRACKET.


WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.

- Install the mounting bracket (EE) with the stamped symbol “FRONT” facing away from the junction box. Use the mounting bracket screws (AA or BB) that best fit the junction box.
- Firmly pull on the mounting bracket to verify it is securely mounted to the junction box.

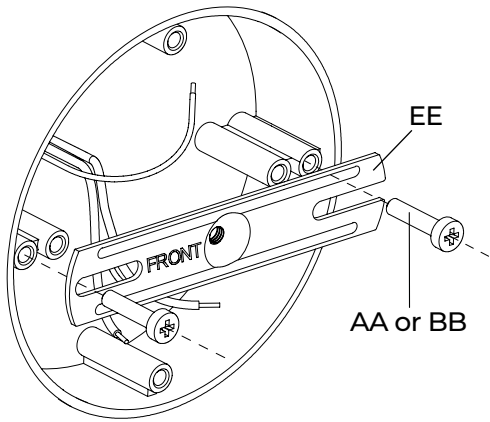

5. INSTALLING THE MOUNTING BRACKET.

- Connect the green ground wire on the fixture to the house ground wire on the fixture using the pre-installed connector.
- Insert the white “Neutral (N)” wire from the house with the white wire on the fixture using the pre-installed connector.
- Insert the black “Line (L)” wire from the house with the black wire on the fixture using the pre-installed connector.
- Place the mounting plate (C) against the junction box.
- When mounting to a wall, the “UP” arrow must point upward.
- When mounting to an eave, the “UP” arrow must point toward the building.
- Insert the mounting bolt (A) through the mounting plate (C) center hole and thread it into the center hole of the mounting bracket (EE). Tighten the bolt (A) .
- Firmly pull on the mounting plate (C) to verify it is securely attached to the mounting bracket (EE).

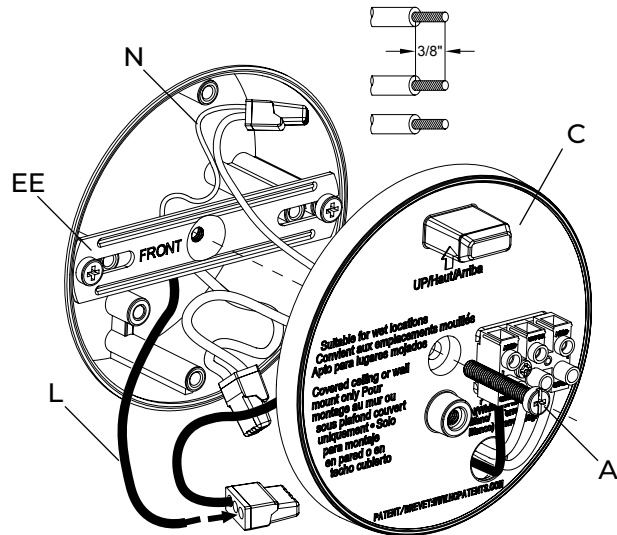


INSTALLATION:

6. ATTACHING THE LIGHT FIXTURE.

NOTE: The three pins on the rear of the light fixture must be inserted into the terminal block for the light to work.


- Align the bottom edge of the light fixture (B) with the bottom edge of the mounting plate (C). Tilt the light fixture (B) toward the mounting plate (C), making sure the light fixture (B) is centered on the mounting plate (C).
- Tighten the mounting screw (A) securely to the mounting plate (C). Do not overtighten.
- Insert silicone plug (D).

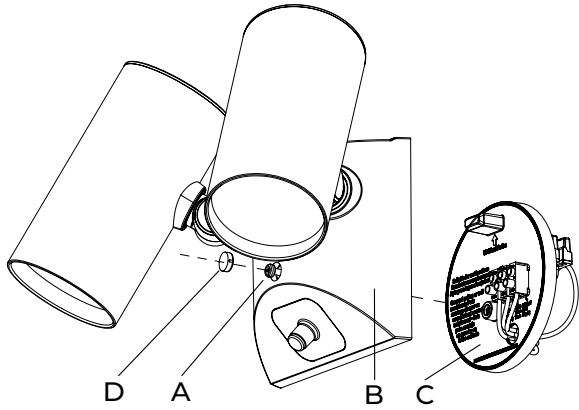

7. CAULKING AROUND THE LIGHT FIXTURE.

WARNING: Failure to completely caulk around the light fixture’s mounting base could result in water seepage into the light fixture and/or junction box.

- Caulk around the light fixture with silicone sealant (not included).

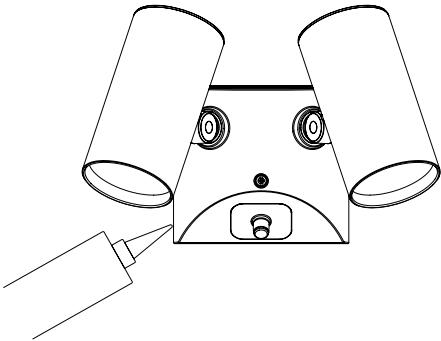


OPERATION:

1. ADJUSTING THE LAMP HEADS.


WARNING: Risk of fire. Keep the lamp heads at least 2 in. (51 mm) from combustible materials.

- Turn the power on at the circuit breaker or fuse and turn on the wall switch.
- If needed, gently grasp the lamp heads (A) and tilt them up or down or side to side to adjust the light coverage area.

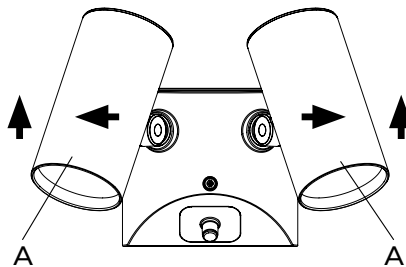

2. CONVERTING FROM DUSK TO DAWN TO SWITCH ACTIVATION.

- To convert the fixture from Dusk to Dawn to Switch activation, cover the photocell (E) with the included plastic photocell cap (F).
- Turn the switch ON to ensure the light is functioning properly.

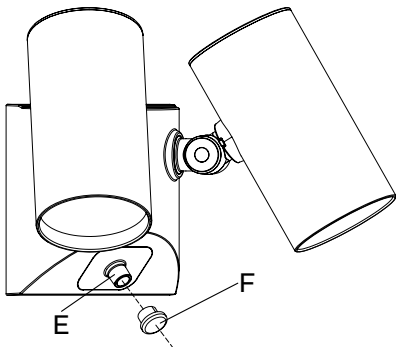

CARE AND CLEANING:

- To prolong the original appearance, clean with clear water and a soft, damp cloth only.
- Do not use paints, solvents, or other chemicals on this light fixture. They could cause a premature deterioration of the finish. This is not a defect in the finish and will not be covered by the warranty.
- Do not spray with a hose or power washer.

TROUBLE SHOOTING GUIDE:

Problem	Possible cause	Solution
Light will not come ON.	- The fuse is blown or the circuit breaker is turned OFF. - Daylight turn-off (photocell) is in effect. - The circuit wiring is incorrect, if this is a new installation.	- Replace the fuse or turn the circuit breaker ON. - Recheck after dark. - Verify the wiring is correct.
Light turns OFF too late when Dawn Daylight arrives.	The light fixture may be installed in a relatively dark location.	Relocate the light fixture.
Light stays ON continuously.	- The light fixture is wired through a dimmer or timer. - The light fixture is on the same circuit as a motor, transformer, or fluorescent bulb. - Something is blocking or covering the photocell. - The photocell cap has been installed on the photocell which allows the light to stay on during daytime with power switch ON.	- Do not use a dimmer or timer to control the light fixture. Replace the dimmer or timer with a standard ON/OFF wall switch. - Install the light fixture on a circuit without motors, transformers, or fluorescent bulbs. - Clean the photocell area. - Remove the photocell cap from the photocell.

Since 1932, Globe has taken pride in offering products of the highest quality, and a level of service unparalleled in the industry. Should you encounter any difficulties, have any questions or simply wish to offer us your valuable feedback, you may contact us in the following ways: Toll Free Telephone: 1-888-543-1388 (North America Only) / E-Mail: info@globe-electric.com / Mail: Globe Electric Customer Service Department, 150 Oneida, Montreal, Quebec, Canada H9R 1A8 / Please visit our website to discover other quality Globe products: <http://www.globe-electric.com>

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Responsible party:

Globe Electric
2264 East 6th Street
San Bernardino, CA 92410
www.globe-electric.com




Gracias por haber escogido las lámparas Globe para su hogar. Con un cuidado adecuado, este producto le proporcionará una iluminación agradable y placentera.Siga atentamente las instrucciones para que este producto funcione de manera segura y adecuada durante años.

LUZ DE SEGURIDAD LED DE NOCHE A MAÑANA O ACTIVACIÓN DE INTERRUPTOR

ESPECIFICACIONES:

Voltaje: 120 VAC ~ 60Hz
Potencia: 24 vatios LED
Lúmenes: 2000LM
Temperatura de color: 4000K
Apto para montaje en pared y en alero


ESTE PAQUETE INCLUYE:

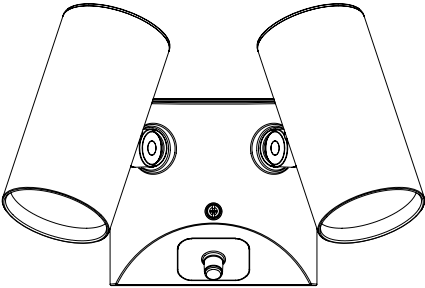

1x – Aparato de luz



2x – Tornillos de montaje (AA)



1x – Soporte de montaje



2x – Tornillos de montaje (BB)



1x –Empaque silicona



1x – Perno de montaje (CC)



1x – tapa de la fotocélula

HERRAMIENTAS NECESARIAS (NO INCLUIDAS)



1



2



3



4



5



6



7



8



9



10


1	Destornillador Phillips
2	Destornillador de cabeza plana de 1/8 de pulgada
3	Alicates
4	Peladores/cortadores de cables
5	Probador de circuitos

6	Guantes de trabajo
7	Cinta aislante
8	Sellador de silicona
9	Escalera
10	Gafas de seguridad


INSTALACIÓN:

1. DETERMINACIÓN DEL SITIO DE MONTAJE.

- Determine el sitio de montaje.
- Coloque los cabezales de la lámpara (A) en la dirección general de la cobertura de luz deseada.



MONTAJE DE PARED




MOTAJE EN ALERO

INSTALACIÓN:

2. QUITAR LA PLACA DE MONTAJE.


NOTA: Este artefacto viene con una placa de montaje (C). Está preensamblada en la lámpara (B) para su envío.

- Desatornille el tornillo (A) que conectan la lámpara (B) a la placa de montaje (C) y retire la placa de montaje (C).

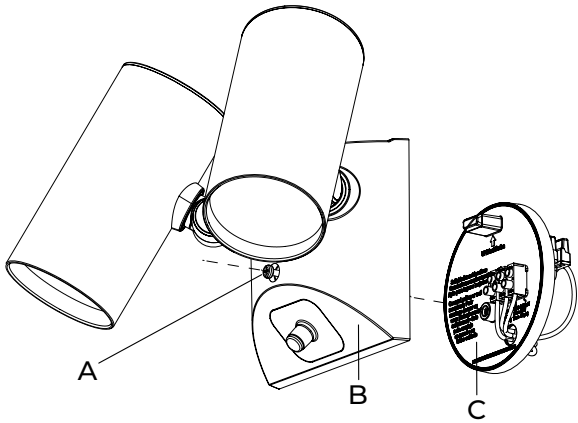

3. PREPARACIÓN DE LA LUZ PARA EL MONTAJE.


- Determine la ubicación de montaje en la pared o en el alero.
- Coloque los cabezales de las lámparas (A) en la dirección general de la cobertura de luz deseada.

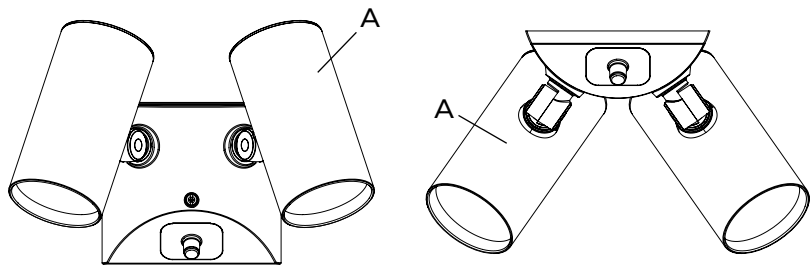

4. INSTALACIÓN DEL SOPORTE DE MONTAJE.


ADVERTENCIA: Apague la alimentación en el disyuntor o fusible. Coloque cinta sobre el interruptor del disyuntor y verifique que la energía esté apagada en la lámpara.

- Instale el soporte de montaje (EE) con el símbolo estampado “FRONT” de espaldas a la caja de conexiones. Utilice los tornillos del soporte de montaje (AA o BB) que mejor se ajusten a la caja de conexiones.
- Tire firmemente del soporte de montaje para verificar que esté montado de forma segura en la caja de conexiones.

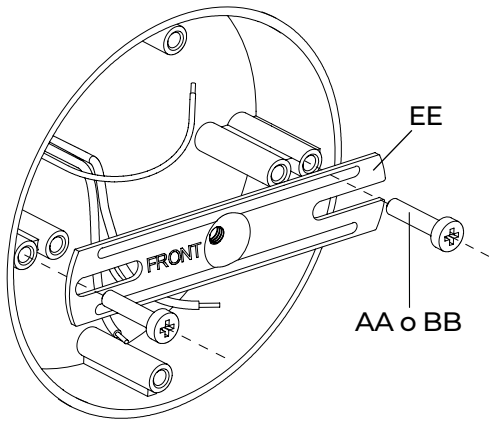

5. INSTALACIÓN DE LA PLACA DE MONTAJE.

- Conecte el cable verde del artefacto al cable de tierra de la casa en el artefacto usando el conector preinstalado.
- Inserte el cable blanco “Neutro (N)” de la casa con el cable blanco en el artefacto usando el conector preinstalado.
- Inserte el cable negro “Línea (L)” de la casa con el cable negro en el dispositivo usando el conector preinstalado.
- Coloque la placa de montaje (D) contra la caja de conexiones.
- Al montarlo en una pared, la flecha “ARRIBA” debe apuntar hacia arriba.
- Al montarlo en un alero, la flecha “ARRIBA” debe apuntar hacia el edificio.
- Inserte el perno de montaje (A) a través del orificio central de la placa de montaje (C) y enrósquelo en el orificio central del soporte de montaje (EE). Apriete el perno (A).
- Tire firmemente de la placa de montaje (C) para verificar que esté bien sujeta al soporte de montaje (EE).

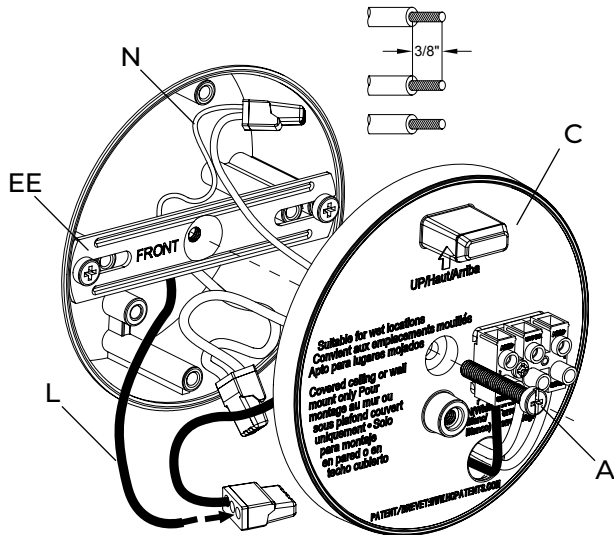


INSTALACIÓN:

6. INSTALACIÓN DE LA LÁMPARA.

NOTA: Las tres clavijas en la parte posterior de la lámpara deben insertarse en el bloque de terminales para que la luz funcione.


- Alinee el borde inferior de la lámpara (B) con el borde inferior de la placa de montaje (C). Incline la lámpara (B) hacia la placa de montaje (C), asegurándose de que la lámpara (B) esté centrado en la placa de montaje (D).
- Apriete el tornillo de montaje (A) firmemente a la placa de montaje (C). No apriete demasiado.
- Insertar tapón de silicona (D).

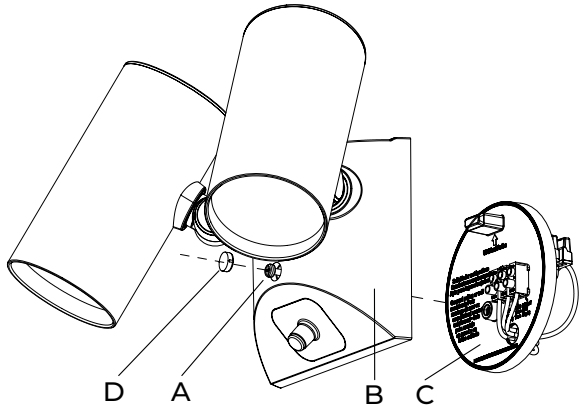

7. CALAFATEO ALREDEDOR DE LA LÁMPARA.

ADVERTENCIA: No sellar completamente alrededor de la luz. La base de montaje del accesorio podría provocar la filtración de agua en la lámpara y/o la caja de conexiones.

- Calafatee alrededor de la lámpara con sellador de silicona (no incluido).

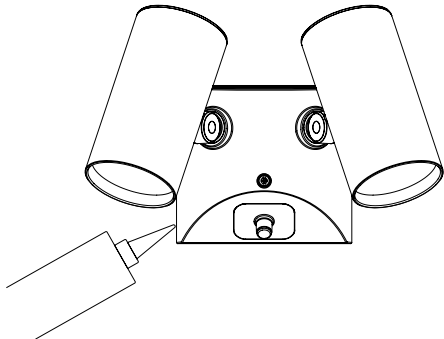


OPERACIÓN:

1. AJUSTE DE LOS CABEZALES DE LAS LÁMPARAS.


ADVERTENCIA: Riesgo de incendio. Mantenga los cabezales de las lámparas al menos a 2 pulgadas (51 mm) de materiales combustibles.

- Encienda la alimentación en el disyuntor o fusible y encienda el interruptor de pared.
- Si es necesario, agarre suavemente los cabezales de las lámparas (A) e inclínelos hacia arriba, hacia abajo o de lado a lado para ajustar el área de cobertura de la luz.

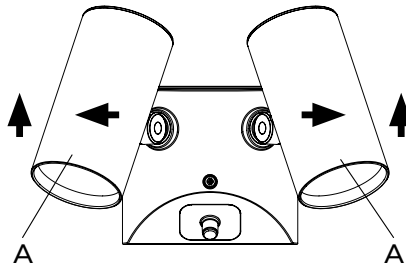

2. CONVERSIÓN DE NOCHE A MAÑANA A ACTIVACIÓN DE INTERRUPTOR.

- Para convertir la luminaria de noche a mañana a activación por interruptor, cubra la fotocélula (E) con la tapa de plástico de la fotocélula (F) incluida.
- Encienda el interruptor para asegurarse de que la luz funciona correctamente.

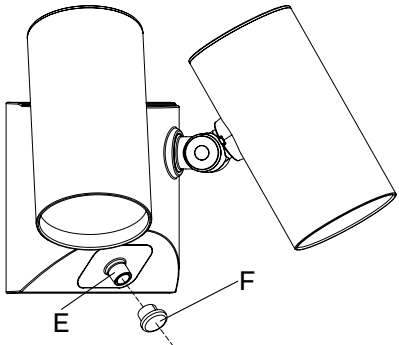

CUIDADO Y LIMPIEZA:

- Para mantener la apariencia original, limpie solamente con agua limpia y un paño húmedo y suave.
- No use pinturas, solventes ni otros químicos en este aparato de luz. Podrían ser la causa de una prematura deterioración del acabado. Esto no es un defecto del acabado y no será cubierto por la garantía.
- No rocíe con manguera ni con una lavadora eléctrica.

ANÁLISIS DE AVERÍAS:

Problema	Causa	Solución
<i>La lámpara no se enciende.</i>	1. El fusible está quemado o el disyuntor está desconectado. 2. El apagado de la luz diurna (fotocélula) está vigente. 3. El cableado del circuito es incorrecto, si esta es una instalación nueva.	1. Cambie el fusible o conecte el disyuntor. 2. Vuelva a revisar al amanecer. 3. Verifique que el cableado esté correcto.
<i>La luz se apaga demasiado tarde cuando amanece.</i>	1. La lámpara puede estar instalado en un sitio relativamente oscuro.	1. Reubica la lámpara.
<i>Las luces permanecen encendidas constantemente.</i>	1. La lámpara está cableado a través de un reductor de luz o de un temporizador. 2. El aparato de luz está en el mismo circuito que un motor, transformador o tubo fluorescente. 3. Algo bloquea o cubre la fotocélula. 4. La tapa de la fotocélula se ha instalado en la fotocélula que permite que la luz permanezca encendida durante el día con el interruptor de encendido en "ON".	1. No use un reductor de luz o un temporizador para controlar la lámpara. Cambie el reductor de luz o el temporizador por un interruptor de pared estándar de encendido/apagado. 2. Instale el aparato de luz en un circuito sin motores, transformadores o tubos fluorescentes. 3. Limpie la zona de la fotocélula. 4. Retire la tapa de la fotocélula.

Desde 1932, Globe tiene a bien ofrecer productos de iluminación de la mayor calidad y un servicio sin igual en su ámbito. Para cualquier dificultad o pregunta, o simplemente si desea hacernos llegar sus comentarios, no dude en ponerse en contacto con nosotros: Teléfono sin cargo de larga distancia: 1-888-543-1388 (Norteamérica únicamente) / Correo electrónico / Mensajes de texto: info@globe-electric.com / Correo: Globe Electric, Servicio de atención al cliente, 150 Oneida, Montreal, Quebec, Canada H9R 1A8 / Visite nuestro sitio web para descubrir otros productos Globe de calidad: www.globe-electric.com

Este aparato cumple con la Parte 15 de las Reglas de la FCC. La operación está sujeta a las dos siguientes condiciones: (1) este aparato no puede causar interferencias perjudiciales y (2) este aparato debe aceptar cualquier interferencia recibida, incluyendo una interferencia que pueda causar un funcionamiento indeseado.



ADVERTENCIA: Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para utilizar el equipo.

Nota: Este equipo ha sido probado y se lo encontró que cumple con los límites para un dispositivo digital de Clase B, de acuerdo con la parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se lo instala y usa de acuerdo con las instrucciones, puede causar interferencia dañina a las comunicaciones de radio. Sin embargo, no hay garantía de que la interferencia no ocurra en una instalación en particular. Si este equipo causa interferencia dañina a la recepción de radio o televisión, lo que se puede determinar apagando y encendiendo el equipo, se recomienda que el usuario intente corregir la interferencia mediante una o más de las siguientes medidas:

Reoriente o reubique la antena receptora. Aumente la separación entre el equipo y el receptor. Conecte el equipo a un tomacorriente en un circuito diferente al que está conectado el receptor. Para recibir ayuda consulte con el distribuidor o con un técnico experto en radio / TV.

Entidad Responsable de la FCC:

Globe Electric

2264 East 6th Street

San Bernardino, CA 92410

www.globe-electric.com