



Model 99363

Weight (± 2lbs): 2.9 (1.3 kg)

ONE YEAR WARRANTY

This product is warranted to the original purchaser by Casablanca Fan Company/Hunter Fan Company against defects in material and workmanship for one (1) year from date of purchase. During the warranty period, we will repair or, at our option, replace a defective product at no charge. For information on how to obtain service, contact the Casablanca/Hunter Service Department by calling our toll-free number at 888-830-1326. Damage to the product caused by mishandling, improper installation or modification is not covered by this warranty. This warranty is given in lieu of all other warranties expressed or implied. Some states do not allow limitations of time on an implied warranty, therefore the above limitations may not apply in every case. This warranty states specific legal rights which may vary from state to state.

Read and Save These Instructions

This product conforms to UL Standard 507

⚠ WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Note: Any changes or modifications to the transmitter or receiver not expressly approved by Hunter Fan Company may void one's authority to operate this remote control.

If you have problems installing or operating your light kit, do not return this product to the dealer. Call our Consumer Affairs Hotline. 888-830-1326

Installation

1 Turning off the power


Ensure the power is OFF at the outlet box and wall switch location before proceeding with installation.



To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.


2 Removing bottom cap

Remove the two screws securing the bottom cap to the bottom of the fan.

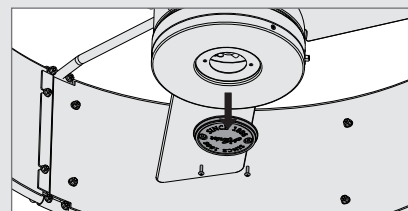


3 Wiring the Light Kit

Using the single pin connectors, connect the black or blue wire from the fan to the black wire from the light kit. Connect the white wire from the fan to the white wire from the light kit. Push the excess wiring into the light kit.

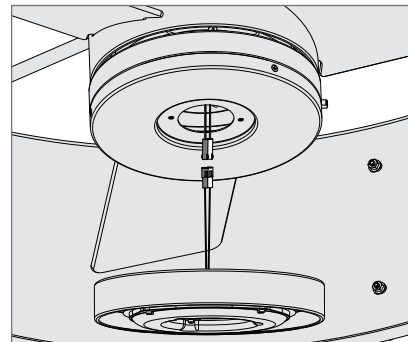


4 Installing the Light Kit

Using the two screws from the light kit hardware bag, install the screws through the two screw holes in the light and into the fan.

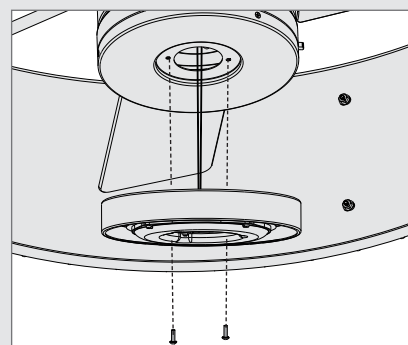

5 Installing the Glass

Align the notches in the outer rim of the globe with the tabs on the light kit assembly. Carefully lift the globe up inside the light fixture as far as it will go. Rotate the globe in a clockwise direction until it is held tightly in place by the three tabs.

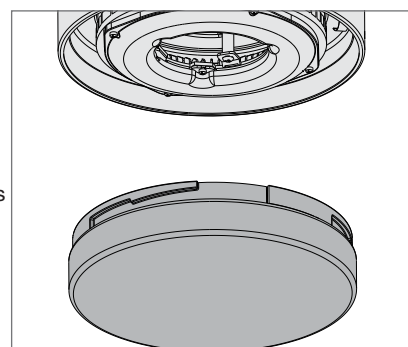

Troubleshooting

- Make sure the power switch is on.
- Check the circuit breaker to ensure the power is turned on.
- Check the pin connections in the light kit.
- Refer to the fan manual for locating the fan's wiring instructions. Verify that the wiring is connected correctly.



Modelo 99363

Peso (± 2lbs): 2.9 lbs (1.3 kg)

GARANTÍA DE UN AÑO

Este producto está garantizado para el comprador original por Casablanca Fan Company/Hunter Fan Company contra defectos de material y mano de obra durante (1) año a partir de la fecha de compra. Durante el período de garantía, repararemos o a nuestra discreción reemplazaremos sin cargo cualquier producto defectuoso. Para más información acerca de cómo acceder al servicio, póngase en contacto con el Departamento de Servicio de Casablanca/Hunter a través de nuestro número gratuito 888-830-1326. Los daños al producto producidos por mal uso, instalación inadecuada o modificación no están cubiertos por esta garantía. Esta garantía se otorga en remplazo de cualquier otra garantía expresa o implícita. Algunos estados no permiten limitaciones de tiempo en una garantía implícita; por lo tanto, puede que las limitaciones anteriores no correspondan en todos los casos. Esta garantía establece derechos legales específicos que pueden variar de estado a estado.

LEA Y GUARDE ESTAS INSTRUCCIONES

Este producto se ajusta al Estándar 507 UL.

⚠ ADVERTENCIAS

Este dispositivo cumple con la parte 15 de las reglas FCC. La operación está sujeta a las dos siguientes condiciones: (1) este dispositivo no puede causar una interferencia perjudicial, y (2) este dispositivo debe tolerar cualquier interferencia recibida, incluyendo interferencias que puedan causar una operación no deseada.

Este dispositivo cumple con la norma RSS-210 de Industry Canada. La operación está sujeta a las dos siguientes condiciones: (1) este dispositivo no puede causar interferencia, y (2) este dispositivo debe tolerar cualquier interferencia, incluyendo interferencias que puedan causar la operación no deseada del mismo.

Este equipo se ha probado y cumple con los límites para un dispositivo digital clase B, de acuerdo con la Parte 15 de las reglas FCC. Estos límites están diseñados para proporcionar una protección razonable contra la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede radiar energía de radio frecuencia, y si no se instala y usa de acuerdo con las instrucciones, puede causar interferencia perjudicial a la comunicación por radio. Sin embargo, no hay garantía de que no pueda producirse interferencia en una instalación en particular. Si este equipo causa alguna interferencia perjudicial a la recepción de radio o televisión, lo que puede determinarse apagando y encendiendo el equipo; el usuario debe tratar de corregir la interferencia aplicando una o más de las medidas siguientes: Reoriente o reubique la antena receptora, aumente la separación entre el equipo y el receptor, conecte el equipo a una salida de un circuito diferente al circuito en que está conectado el receptor. Consulte con su representante de ventas o con un técnico experimentado de radio/TV. Nota: Cualquier cambio o modificación al transmisor o al receptor no aprobados expresamente por Hunter Fan Company puede anular la autorización para operar este control remoto.

Si tiene problemas para instalar o hacer funcionar su juego de luz, no devuelva este producto al distribuidor.

**Llame a nuestra línea directa de asuntos del consumidor.
888-830-1326**

Instalación

1 Desconecte la energía


Asegúrese de que la alimentación esté **DESCONECTADA** antes de continuar con la instalación.



Para evitar posibles choques eléctricos, antes de instalar su ventilador, desconecte la alimentación apagando los interruptores automáticos que alimentan a la caja de salida asociados con el interruptor de pared.


2 Quitar la tapa

Quite los tornillos de la tapa

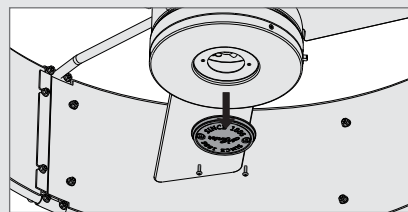


3 Cableado del kit de luz

Conecte el cable blanco del ventilador al cable blanco del conjunto de luz. Luego, conecte el cable azul del ventilador al cable negro del conjunto de luz. Baje el conjunto de luces LED hasta los postes de la caja.

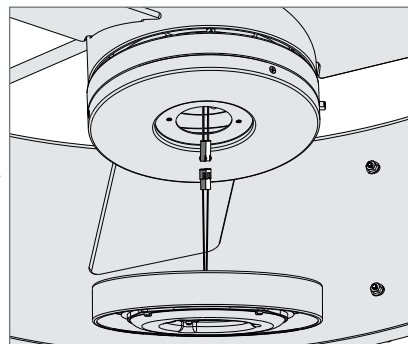


4 Instale el conjunto de luz

Instale los tornillos del conjunto de lámparas, encontrado en la bolsa de herrajes, a través de la lámpara y hacia ventilador de techo.

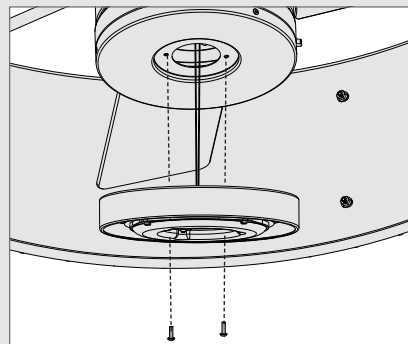

5 Instale de la pantalla

Ubique las muescas del borde externo de la pantalla de vidrio de modo que se alineen con las pestañas en la superficie interna del borde del artefacto de iluminación. Levante cuidadosamente la pantalla dentro del artefacto de iluminación tanto como sea posible. Gire la pantalla en sentido horario hasta que esté sujeta firmemente.

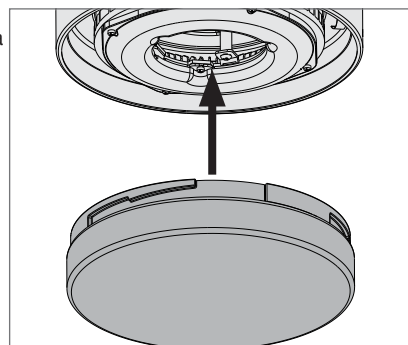

LOCALIZACIÓN DE FALLAS

- Asegúrese de que el interruptor esté encendido.
- Verifique el interruptor termomagnético para asegurarse que está encendida la alimentación eléctrica.
- Verifique que las conexiones de pin estén en el conjunto de lámparas.
- Consulte el manual del ventilador para ubicar las instrucciones de cableado del ventilador. Verifique que el cableado esté conectado correctamente.