
ADIRoffice

DIGITAL DEPOSITORY SAFE

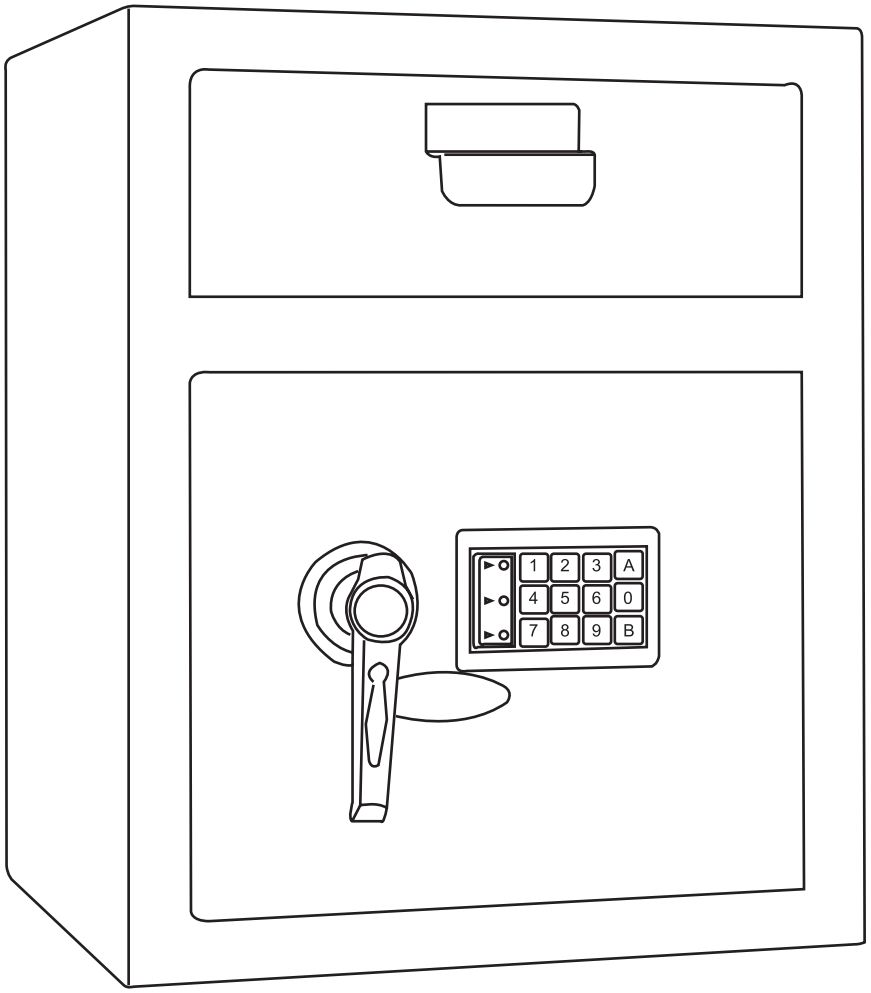

USER GUIDE

SKU: ADI670-200-SERIES

ADIRoffice

Thank you for your purchase.

AdirOffice maintains a strong practice of ongoing development of products and commercial research.

We understand starting and maintaining a business is expensive enough. We can help you make it cost effective and beautiful. Plus, our expert team makes sure everything you need works as efficiently as possible.

Table of Contents

4 Features

4 Specifications

5 Setting Up Your Lock

7 Important Information & Safety Information


8 Warranty

9 Notes

Features


- Digital entry eliminates the need for making multiple key copies.
- Easy to operate and program.
- An easy access deposit slot makes it simple to leave deposits at the end of the day.
- Front loading drop model is fitted with a Sawtooth edge tilting baffle plate to ensure that contents cannot be "fished out".
- Opens with secret PIN code or included keys (2 FREE KEYS).
- Code can be changed infinitely.
- Simple programmable Electronic Lock with buzzer and LED. 3 to 6 numbers.
- Runs on AA size (1.5V) batteries (included).
- Pre-drilled holes inside the safe with fixing bolts allowing anchoring.
- Powder coated interior and exterior.
- Constructed of extra thick I I gauge solid steel.
- Inside tamper-proof hinges.
- Gray carpet mat padding on inside bottom.
- Anchor bolts are included.



Specifications

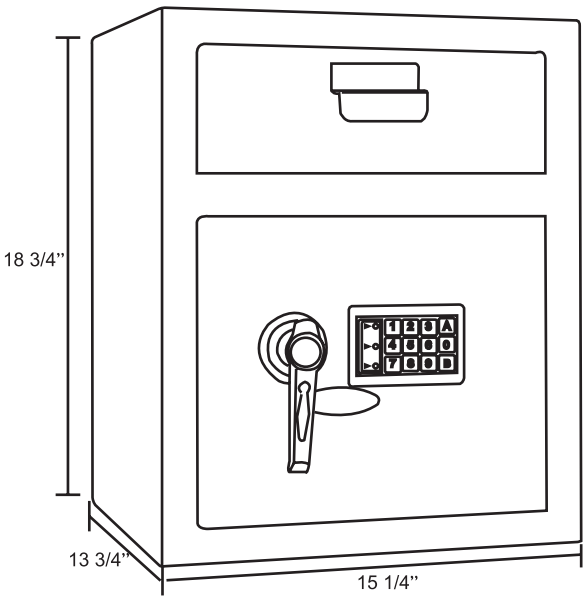

External Total Dimensions	18 3/4"H x 15 1/4" W x 13 3/4"D
Interior Total Dimensions	18 1/2"H x 15"W x 12"D
Color	Black
Drop Slot	12 1/2" x 4" on top safe
Weight	58 lbs.

Setting Up Your Lock

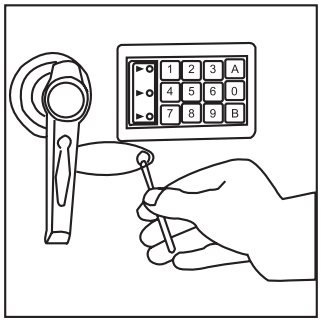

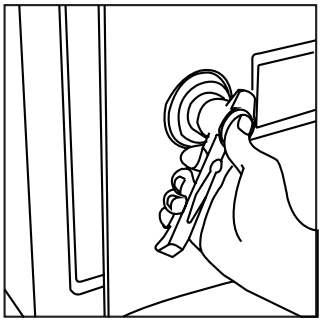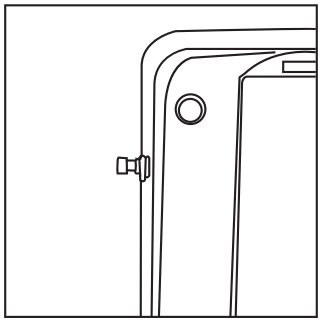Opening the Safe for the First Time

A. Open the emergency lock cover.

B. Insert the key and turn counter-clockwise until it stops.

C. Turn the handle clockwise to open the safe.

Installing Batteries

A. Open the battery compartment cover located on the inside cover of the door.

B. Install four AA batteries.

C. Close the battery compartment cover.

Setting and Changing Personal Code

A. Open the door and press the red button at the rear of the door.

- **a.** The yellow light will flash.

B. Set a personal code, input a 3-6 digit set of numbers.

C. Press “A” or “B” to confirm.

- **a.** The yellow light will turn off, indicating the code was entered successfully.
- **b.** Use the same procedure to change the code.

D. Test your code before closing the door.

Using your Personal Code to Open the Safe

A. Input your 3-6 digital personal code then press "A" or "B" to confirm.

B. When the green light flashes, turn the handle clockwise to open the safe.

Wrong Code Protection

A. If you enter a wrong code 3 times the keypad will lock for 20 seconds.

a. If another 3 incorrect attempts are made, the system will lock for 5 minutes. Operation can resume after 5 minutes.

Emergency System

A. If you forget your code or the batteries expire, you can use the emergency override key to open the safe.

B. Open the emergency lock cover.

C. Insert the override key and turn counter-clockwise to the end.

D. Turn the handle clockwise to open the safe.

Low Battery Warning

A. A red light will flash when opening the door if the battery is low, Replace with two AA alkaline batteries.

Important Information & Safety Information

Key Replacement

In order to replace the safe's key in the event that is lost you will need the safe's "Key Code." This code can be found on the lock in the key hole which behind of the "emergency lock cover" and reads "H####." Please use the space provided below to copy the key code for safe keeping.


Key Code: _____

Important Warnings

DO NOT keep your emergency override keys inside the safe.

GUN WARNING: This product is not intended for the secure storage of all materials, items such as firearms, other weapons, ammunition, combustible materials, or medication should NOT be stored in this unit. Your safe is only part of your total security protection.


We recommend that you store your safe in closet, offices, basements, bedrooms, any other location that are convenient for you but out of direct line of sight from prying eyes. The location of the safe does not affect the safe's ability to protect your valuables inside.

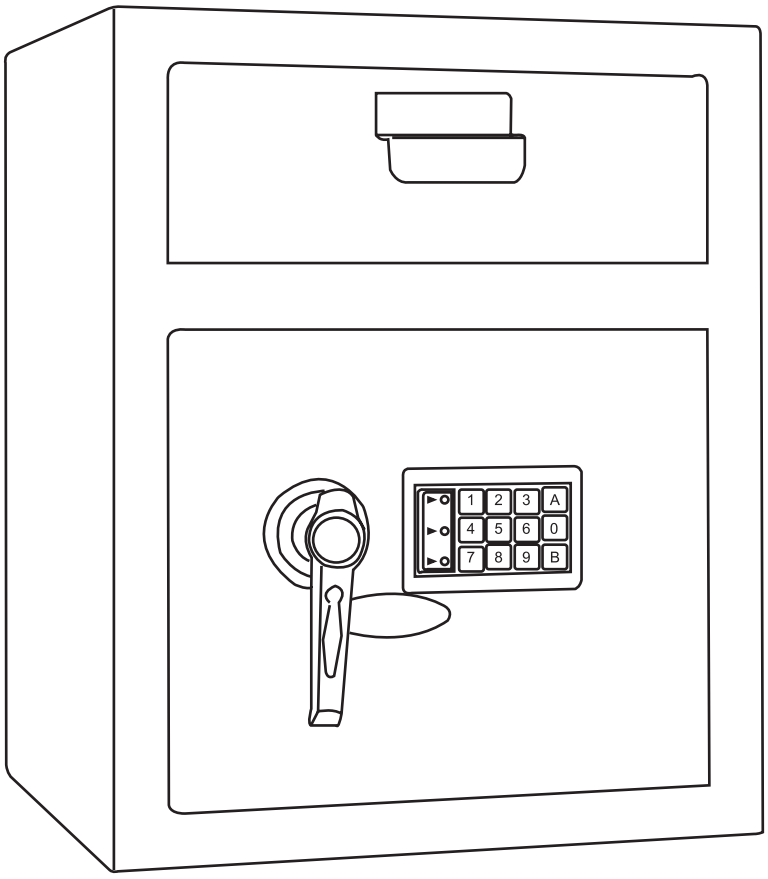

Warranty

1. Adir Corp (the "Company" or "Tiger Companies") warrants to the purchaser that the product will be free from defects in workmanship and materials for a period of 1 year from the date of purchase. The warranty period is not extended if we repair, replace, exchange, or provide a refund for the product (as determined in our sole discretion). We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.
2. These warranties are not assignable or transferable to any other person, including, without limitation, any subsequent owner or other transferee of the product.
3. This Warranty does not apply to: (a) damage caused by misuse, tampering, abuse, neglect, or accident; (b) damage caused by improper installation, modification, or service; (c) alteration of the serial number; or (d) use that violates the instructions furnished by the Company will void this warranty.
4. The sole responsibility of the Company shall be limited to (a) the repair or replacement (in its sole discretion) of any component of the product which fails to conform to this; (b) a refund the purchase price of such product (in its sole discretion), at no cost to the purchaser for the period of the warranty, or (c) an exchange for a similar product, comparable in function and price.
5. Contact the Company directly at 1-(800)-805-1790 to obtain service under this warranty. If it becomes applicable to send a defective product to the Company, a Return Authorization Number must first be obtained from the Company. In order to obtain service under this warranty, purchaser may be required to provide the Company with the following items (a) proof of purchase, (b) photographs and or videos (of the damage, and (c) a written testimonial describing the defect.
6. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
7. The Company will not assume any responsibility for any loss or damage incurred in shipping and or delivery.
8. The product(s) must be returned within 14 calendar days of receiving the return authorization from the Company and must include the original proof of purchase for the warranty to be honored.
9. Any implied warranties that the purchaser may have are limited to the duration of the warranties described above. There are no further warranties that extend or apply beyond the face hereof, and the Company expressly disclaims and excludes any and all warranties of merchantability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
10. THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND THE COMPANY'S ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE LIMITATION MAY NOT APPLY TO YOU.
11. This warranty gives you specific legal rights, and you may also have additional rights which vary from state to state.

Notes

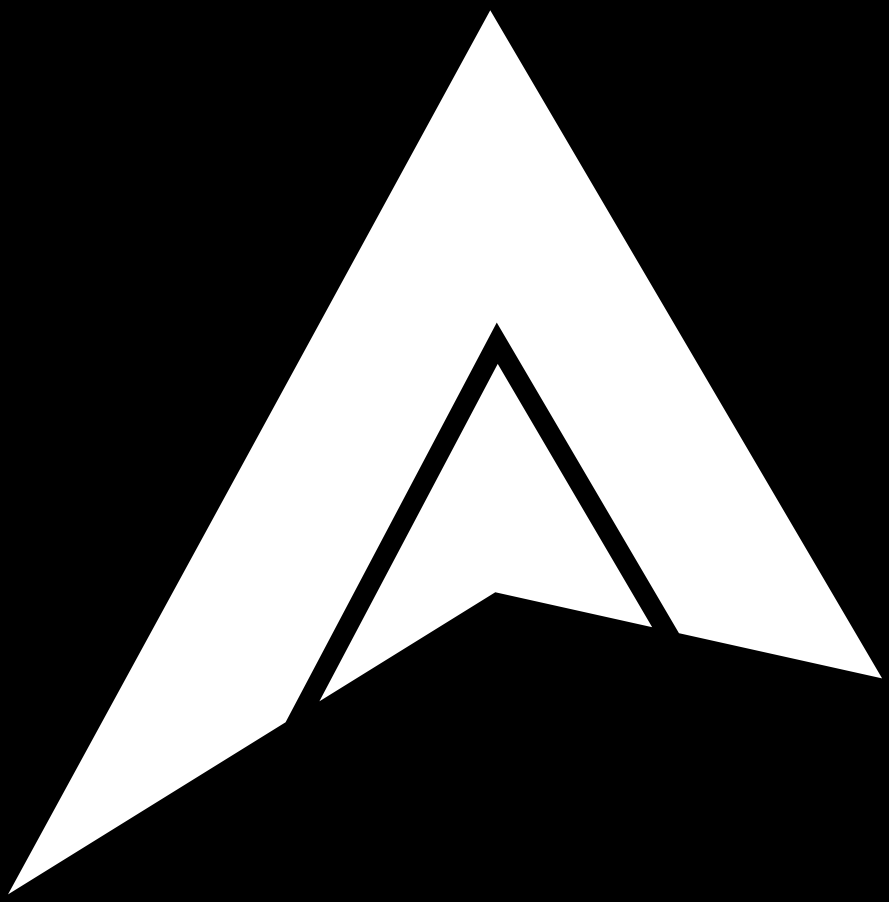

ADI670-200-SERIES

© 2025 Adir Corp

adircorp.com