加湿器 JSQ01 说明书 143X210mm 2026.06.04-YHB

Water circulation ultrasonic air humidifier

User Guide



MODEL NO: JSQ01

Thank you for Choosing us!

Your support means the world to us.
We hope you enjoy our product as much as we did creating it.

READ AND SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

CONTENTS

1 IMPORTANT SAFETY INSTRUCTIONS 1-2
2 KNOWING YOUR HUMIDIFIER 3
3 USING YOUR HUMIDIFIER 4-7
4 CLEANING AND MAINTENANCE 8
5 TROUBLE-SHOOTING 8-9
6 CUSTOMER CARE 10

IMPORTANT SAFETY INSTRUCTIONS 1

SAFETY PRECAUTIONS

IMPORTANT INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines:


1. Only use the humidifier as described in this manual.
2. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
3. Do not use the humidifier in wet environments.
4. Do not open the base or remove the water level sensor for self-servicing.
5. Before adding water, cleaning the humidifier, or removing the humidifier base from the water tank, be sure to unplug the plug from the power outlet.
6. When cleaning, please avoid water from inside the appliance.
7. When not in use, turn the humidifier off and disconnect from power by removing the plug from the outlet.
8. Do not let water flow into the body from the air outlet. Please do not turn the appliance over when it is electrified and there is water inside to avoid burning the internal electronic components.Do not separate the water tank from the base during work, and do not touch the water and parts in the base.
9. Always make sure to place the humidifier on a flat, level surface before operation.
10. Please do not replace the power cord without authorization. If there is any abnormal phenomenon, please pull out the plug immediately and contact the manufacturer or after-sales customer service.
11. Only fill the water tank with clean water. Never fill the water tank with any other liquids.
12. Please do not disassemble, repair or transform this product without authorization.
13. Do not touch the atomizer by hand when starting the machine to avoid danger.
14. Do not place the humidifier near sources of heat, such as stove tops, ovens, or radiators.
15. Do not use other items as replacement parts for this product.
16. Do not cover the nozzle while the humidifier is on. Doing so may damage the humidifier.
17. Please unplug the power plug when it is thunderstorm or not used for a long time.

18. If the power cord is damaged, in order to avoid danger, it must be replaced by the maintenance department designated by the manufacturer or similar professionals.
19. Do not immerse the humidifier base, power cord, or plug in water.
20. It is forbidden to inject water into the mist outlet and air outlet.
21. Please place the humidifier 2 meters away from furniture and electrical appliances to avoid moisture.
22. Please keep away from heat source and avoid direct sunlight.
23. Do not inject hot water above 40 ℃（104℉） into the water tank and water tank to avoid damaging the machine.
24. When the room temperature is lower than 0 ℃ (32℉) , please pour out the water in the water tank and water tank, so as to avoid freezing and damage to the machine.
25. Please use it at normal room temperature (5 ℃ - 40 ℃) （41℉-104℉）.
26. Household use only.
27. Please do not put metal products, chemicals, detergents into the water tank, or there will be bad atomization.
28. Please turn off the power and pull out the plug before pouring out the water in the sink. If the humidifier wants to move, clean and add water, the power must be turned off and the power plug must be pulled out. The machine can not be moved at will during operation.
29. Do not handle the power cord or plug with wet hands. Keep the plug and power cord away from liquids.
30. Keep the humidifier out of reach from children.
31. Supervise children when they are near the humidifier.
32. Children should not clean or perform maintenance on the humidifier without supervision.
33. Children should be supervised to ensure that they do not play with the humidifier.
34. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
35. Ensure that the plug fits properly into a polarized socket.
36. CAUTION :This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.

READ AND SAVE THESE INSTRUCTIONS

KNOWING YOUR HUMIDIFIER 2

MACHINE INTRODUCTION

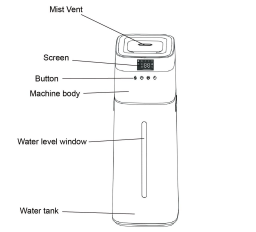

TECHNICAL PARAMETERS

Model	JSQ01
Rated Voltage	100-240V~
Frequency	50/60Hz
Rated Power	24W

USING YOUR HUMIDIFIER 3

WATER TANK FILLING INSTRUCTIONS

- When using the machine for the first time, place it on a horizontal surface, inject an appropriate amount of clean tap water or purified water into the water tank, unplug the power plug when adding water, and be careful not to exceed the highest water level marked on the water tank.
- Place the hood on the water tank. Then plug the power plug of the machine into the socket. Before powering on, ensure that the operating voltage of the machine is consistent with the voltage used.
- Do not move the humidifier while the product is running. Before moving the humidifier, please stop using it, turn off the power switch, unplug the power plug, and let the entire machine move together to avoid the humidifier not working properly and causing malfunctions.
- Note: Please add clean tap water or purified water below 40 ℃（104℉）.

Instructions for use and installation



1. Separate the machine body and mist vent outlet together from the product and place them aside.
2. Pour water into the water tank, and pay attention not to be higher than (Maximum water level)



3. Mount the machine, gently press it flat to ensure a tight connection of the water pipes, then plug in the power cord and start the machine

PANEL DESCRIPTION/SETTINGS



Power button

- After connecting the power supply, touch the power button, the screen will light up, and the machine will work. Touch the power button again, and the humidifier will stop working.
- **Note:** During first use,the humidifier may take30-45 seconds to start misting.

Fog volume button

- Press this button to switch between low fog, medium fog, and high fog.
- Long press "Ⓜ" to activate sleep mode. At this point, the indicator light "" on the screen will light up, the brightness displayed on the screen will dim, the button sound will turn off.

Timing button

- The timer can be set for 1-12 hours in increments of1 hour. The screen displays the set time.The humidifier will shut down automatically when the time reaches the set value.

Constant humidity button

- Press this button to turn on the constant humidity mode, and the "" indicator light will light up on the screen, displaying the set humidity value.
- The humidity value can be set between 45% to 95%. In the constant humidity mode, when the environment humidity is lower than the set humidity, medium gear humidification is activated. When the environment humidity is equal to or greater than the set humidity, the atomization stops.
- In constant humidity mode, when the set value is higher than the current environmental humidity, a red light will be displayed. When the set value is equal to the current environmental humidity, a blue light will be displayed. When the set value is lower than the current environmental humidity, a green light will be displayed.

Water shortage indicator light

- When the product is first filled with water and then starts running, the water shortage indicator light will start flashing, indicating that water is being filled. When the water level returns to normal, the water shortage indicator light will turn off.
- When in a water outage state, the water shortage indicator light will remain constantly on. After adding water, restart the machine to restore normal operation.
- NOTE: When adding water, turn off the device and unplug the power plug. Be careful not to exceed the highest water level marked on the water tank.

Child lock


- Press the remote control "" to activate/deactivate the child lock function. After activating the child lock, all buttons will be locked. At this point, the "" indicator light will light up.

Indicator light

- When the product is in operation and the environmental humidity is lower than 34%, the indicator light will be red. When the environmental humidity is between 34% and 67%, the indicator light will be blue. When the environmental humidity is greater than 67%, the indicator light will be green.

REMOTE CONTROL: USER INSTRUCTION

Due to transportation safety reasons, batteries are not included in the packaging. Please prepare 2 pieces of 1.5V AAA batteries by yourself.

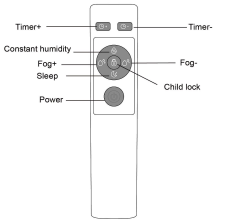

REMOTE CONTROL: INSTALLATION/REPLACEMENT OF BATTERIES

1. Flip the back of the remote control, hold and slide down the back cover of the remote control.
2. Insert 2 AAA batteries following the indications of the polarity symbols (+ and -) inside the battery compartment.

NOTES:

1. The remote control must be pointed towards the remote sensor on the control panel.
2. Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.
3. If not in use for a long time, please remove the batteries to prevent battery leakage from damaging your remote control.
4. Do not allow water or liquid to enter the remote control.
5. Do not dispose of batteries in fire, batteries may explode or leak.
6. Do not mix old and new batteries.
7. Dispose of the used batteries at appropriate recycling points or in accordance with local regulations.

CLEANING AND MAINTENANCE 4

CLEANING AND MAINTENANCE

- Please regularly clean the water tank, sink, and atomizer, and unplug the power plug before cleaning.
- Do not use hard objects when cleaning to avoid damage to parts.
- Please replace the aged water in the water tank frequently to keep the inside of the humidifier clean.
- Before cleaning the product, you must pull out the power plug and stop working, or there may be short circuit or electric shock.
- When cleaning the host and the entire display panel, please wipe them with a clean cloth. It is strictly prohibited to clean the host with water. Do not immerse the host in water to prevent short circuits due to water ingress.
- Except for the host and the entire display panel, other parts of the product can be cleaned with water and wiped dry with a clean cloth.
- Please do not use metal brush, nylon brush, detergent, diluent, volatile oil and other cleaning products to clean the product, or it may damage the surface structure of the product or affect the humidification effect.
- The inside of the water tank can be cleaned by adding appropriate amount of washing powder, washing liquid and 40 ℃（104℉）warm water. The water outlet is sealed, soaked for 10 - 15 minutes, and then washed with clean water. The outside of the water tank can be directly wiped with a wet cloth.
- Please use mild cleaning agents and a soft cloth or sponge to clean and maintain the product.
- Please wipe the dirt on the power cord with dry soft cloth.
- Please store the machine in a dry and ventilated place.
- Note: Do not allow water to contact the air outlet.

TROUBLESHOOTING 5

TROUBLESHOOTING

Problem	Possible Causes	Solution
The humidifier cannot be turned on,or accidentally shut down.	Power cord is not properly plugged in or the outlet has no power.	Try other sockets, make sure they have power, and connect the power cord correctly to the power socket.

Abnormal noise.	There is too little water in the water tank.The placement surface is not smooth.	Add water to the water tank and place the humidifier on a sturdy and stable surface. NOTE: When adding water, turn off the device and unplug the power plug. Be careful not to exceed the highest water level marked on the water tank.
Little or no mist comes out.	The water tank is empty.	Fill up the water tank and adjust the mist level to maximum.
	The constant humidity mode is turned on.	In constant humidity , the humidifier will stop misting when the target humidity level is reached. Increase the target humidity or manually select a mist level (see constant humidity, page 6).
	There are too many scales or impurities in the water of the atomizer.	Clean the atomizer and replace the clean water.
	First time adding water for use.	After turning on the humidifier, wait for 30-45 seconds. During the first use andafter cleaning or storage, the humidifier may take 30-45 seconds to start fogging.
	There are foreign objects in the air inletoutlet or nozzle of the host.	Check if there are any abnormal blockages in the inletoutlet and nozzle of the host.
Water shortage alert.	There is no water in the water tank.	Add water to the water tank and restart the machine.
	Abnormal water shortage protection function.	Check if the water shortage protection float in the working water tank of the host can float up and down normally.

Fault types and possible causes are not limited to the above. If the issue persists or new problems arise after following the above steps, contact our after-sales email for further assistance.

CUSTOMER CARE 6

WARRANTY AND SERVICE

Thank you for your purchase!
Our goal is to ensure your 100% satisfaction with our warranty service!
This appliance comes with a 12 month warranty, starting from the date of initial purchase. During the 1 year warranty period, we will provide free service for any quality issues, installation problems, and missing parts.

Service Guarantee
All of our items are brand new and in excellent condition, In the event that the product you received does not meet this standard, please contact us.

Sincerely At Your Service
Your shopping experience is very important to us! If you are unsatisfied with our service with purchases, please feel free to let us know. We will always be here to offer you the best service and get your satisfaction.

The warranty will not apply in cases of

- Accident, misuse, or repairs performed by unauthorized personnel.
- Tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been perform ed by a repair person not authorized by.
- This warranty does not cover filters, wear from normal use.

We are here to provide assistance
For any questions, please contact our customer service email to get extra after -sale service.
Email: Aftermarket311@gmail.com

ENVIRONMENT

CORRECT DISPOSAL OF THIS PRODUCT:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Dear Customer,Thank you for choosing our product!If you encounter any issues during installation or use, please feel free to contact us via email. After-sales service email: kettek2023@outlook.com Our customer service team promises to respond within 24 hours and will be happy to assist you. Your satisfaction is our top priority, and we are always here to help.