

EN ZIRCON® SuperScan™ H2 Advanced Stud Finder

BEFORE YOU BEGIN

ZIRCON® STUD FINDERS WORK BY SENSING DENSITY CHANGES BEHIND THE WALL. OTHER OBJECTS CAN BE DETECTED, ESPECIALLY IF THEY ARE VERY CLOSE TO THE WALL. **DO NOT ASSUME THAT EVERYTHING DETECTED IS A STUD.**

- Always use a new 9V alkaline battery with an extended expiration date at least 3 years beyond the current date. Match battery direction to the image inside of battery cavity.
- Do not rely exclusively on the tool to locate items behind a surface. Use other information to help locate such items before penetrating the surface, including construction plans, visible points of entry of pipes, wiring into walls such as in a basement, and standard stud-spacing practices.
- Always start your scan in Target Control™ (TC™) mode, which scans through standard single layer drywall up to 3/4" (19 mm) deep.
- Always scan for studs at several different heights on the wall and mark the location of every target indicated by the stud finder. This is called "mapping the wall." Pipes and other objects will likely not give consistent readings from floor to ceiling, as a stud would.
- Studs normally run from floor to ceiling, except above and below windows and above doors.
- Readings should always be consistent and repeatable.
- Zircon® stud finders are recommended for interior use only.
- Other objects commonly contained in walls, floors, or ceilings are water pipes (plastic and metal), gas lines, firestops, and electrical wiring.
- Sensing depth and accuracy can vary depending on scanning environment conditions, such as mineral content, moisture, texture, and consistency of the wall materials.
- Depending on the proximity of electrical wiring or pipes to the wall surface, tool may detect them in the same manner as studs.

Caution should always be used when nailing, cutting, or drilling in walls, floors, and ceilings that could contain these items. Use extreme caution under these circumstances or whenever live AC wiring is present.

- Studs are normally spaced 16" or 24" (40 cm or 60 cm) apart on center, are normally 1 1/2" (38 mm) wide, and may be separated by firestops. Anything closer together, or of a different width, may not be a stud.

IMPORTANT: Trust but Verify is a technique that can help indicate "safe-to-drill" zones to minimize hitting existing metals on a stud, such as nails, screws, and protector plates. When the Crosshairs show in TC™ mode, run tool vertically up and down the stud. The stud indicators (Crosshairs, Edge Indicators, Target Indicator Bars, Target Spotlight, and SpotLite® Pointer) will all turn off over screws and other metal, then turn on again when the stud is free from metal. The "safe-to-drill" zones are typically between adjacent drywall screws, nails, or protector plates, assuming the builder properly installed metal protector plates on the stud, and over plumbing and electrical. If stud indicators do not disappear when running vertically up and down the object in TC™ mode, the absence of drywall screws, nails, and protector plates indicates this could be a non-metallic object such as plastic plumbing or PEX tubing, and should not be mistaken for a stud.

TROUBLESHOOTING & CONSTRUCTION TIPS


SITUATION	LIKELY CAUSE	SOLUTION
Tool detects objects other than studs in StudScan mode or finds more objects that look like studs than should be there.	Electrical wiring and metal or plastic pipes may be near, or touching, the back of the wall surface.	<ul style="list-style-type: none"> • Check for other studs equally spaced to either side at 16" or 24" (40 cm or 60 cm) and check for the same stud at spots directly above or below the first scan area. • Standard studs measure approximately 1 1/2" (38 mm) between edges. Anything smaller or larger is likely not a stud (unless near a door or window).
Studs are continuously detected near windows and doors.	Multiple studs are in use.	Double and triple studs are sometimes used around doors and windows. Headers are used above them. Detect outer edges so you know where to begin.
	Wires deeper than 2" (50 mm) from the surface might not be detected.	If there is an outlet switch, turn it to ON position while scanning, but turn OFF when working near the wires. Use extra caution if the area has plywood, thick wood backing behind drywall, or walls that are thicker than normal.
Electrical wires suspected but none detected.	Wires may not be live.	Plug a lamp into the outlet and turn it on to test whether wires are live.
LCD screen flashes continuously when trying to find stud.	Tool is experiencing oversaturation of exposure to metal.	Switch to TC™ or StudScan mode to lessen sensitivity to metal. NOTE: Tool may not beep over studs 1" (25 mm) or deeper when doing this.
Low Battery Indicator on.	Low battery.	Install a new 9V alkaline battery with an extended expiration date.
Low Battery Indicator flashes and tool does not operate.	Dead battery.	Install a new 9V alkaline battery with an extended expiration date.

Scan QR code for more information.

Visit www.zircon.com for the most current instructions.



FCC Part 15 Class B Registration Warning: This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

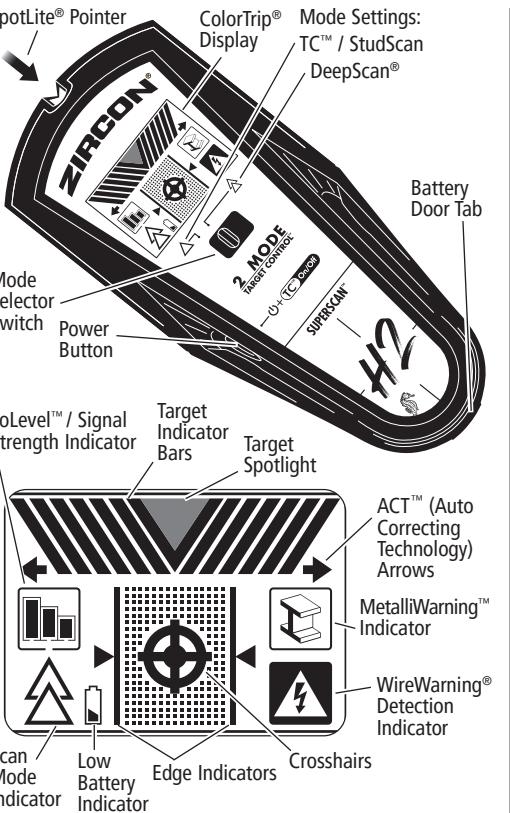

WARNING Tool may not detect AC activity if wires are more than 2" (50 mm) behind the scanned surface, in concrete, encased in conduit, behind a plywood shear wall or metallic wall covering, or if moisture is present in the environment or scanned surface.

INSTALL 9-VOLT BATTERY

Always use a new 9V alkaline battery with an extended expiration date at least 3 years beyond current date. Match battery direction to image inside battery cavity.

WARNING Do not rely exclusively on tool to locate items behind a surface. Use other information to help locate items before penetrating the surface, including construction plans, visible points of entry of pipes, wiring into walls, such as in a basement, and standard stud-spacing practices.

SELECT MODE / POWER UP

Move Mode Selector Switch to desired mode: TC™ / StudScan, and DeepScan®. To activate tool, press and hold Power Button. Device shuts off 1–2 seconds after Power Button is released.

FIND A CLEAN WOOD STUD IN TARGET CONTROL™ (TC™) MODE

TC™ is designed to detect wood studs during scanning. For best results, hold tool as shown and move slowly when scanning. **Do not touch surface during calibration or scan.**

1. Set mode to TC™ / StudScan switch.

2. Hold tool flat against wall, then press and hold Power Button.

(Figure A) Device will calibrate in 1–2 seconds. Proper calibration is confirmed by a short beep, a flicker of SpotLite® Pointer, and a flash of icons. If a calibration error occurs, all icons will flash continuously.

NOTE: Screen will have a pale blue backlight in TC™ mode.

DO NOT MOVE TOOL DURING CALIBRATION.

3. While holding down Power Button, slide tool slowly along wall. When tool finds edge of a stud, Edge Indicator shows.

4. Continue sliding. When tool finds center of a stud, Crosshairs show and SpotLite® illuminates. Mark spot where stud was found.

5. Tool automatically recalibrates when in use. If the two ACT™ arrows appear on LCD, tool was calibrated over a stud, then moved away. This is ACT™ (Auto Correcting Technology) in action.

NOTE: LoLevel™ Indicator will display rapidly cascading bars when device senses a sustained weak signal, indicating a false positive object may be present.

6. Use the **Trust but Verify** technique for finding drywall screws or nails up and down stud to confirm that you have located a wood stud. Other objects, such as plastic plumbing pipes, do not contain nails or drywall screws. (See important note under BEFORE YOU BEGIN for more information on this procedure.)

WIREDWARNING® DETECTION

The Zircon® WIREDWARNING® DETECTION continuously detects and alerts for live, unshielded AC (alternating current) wires in any mode. When live AC voltage is detected, warning indicator appears and screen starts flashing red until tool is moved sufficiently away from the live wire. When calibration begins over an AC wire in any mode, AC icon will flash.

Use extreme caution under these circumstances or whenever live AC wiring is present.

FIND A STUD IN STUDSCAN MODE (TC™ OFF)

1. Set mode to TC™ / StudScan switch.
2. Hold tool flat against wall, **press Power Button, release it, then press it again**, holding it down the second time. Device will calibrate in 1–2 seconds. A short beep confirms that calibration is complete. If a calibration error occurs, all icons will flash continuously.

NOTE: Tool is in StudScan mode (TC™ off) when LCD backlight is off. When TC™ mode is off, metal objects may be indicated as a stud and Signal Strength Indicator will have steady strength bars.

DO NOT MOVE TOOL DURING CALIBRATION.

3. While holding down Power Button, slide tool slowly along wall. When tool finds edge of a stud, Edge Indicator shows.

4. Continue sliding.

When tool finds center of a stud, Crosshairs turn on, SpotLite® illuminates, and a beep sounds. (Figure D)

Mark spot where stud was found.

5. Tool automatically recalibrates when in use. If the two ACT™ arrows appear on LCD, tool was calibrated too close to a stud, then moved away. This is ACT™ (Auto Correcting Technology) in action. (Figure E)

To return to TC™ mode, release and press Power Button again. When the display is backlit pale blue, you are back in TC™ mode.

SCAN IN DEEPSCAN® MODE

DeepScan® mode is used to scan for deeper studs or for use with thicker walls. It can detect studs up to 1 1/2" (38 mm) deep.

1. Set mode to DeepScan®.

2. Repeat steps 2–4 under STUDSCAN MODE section.

NOTE: When scanning on thicker surfaces, device may not find edges on surfaces thicker than 3/4" (19 mm).



Figure D



Figure E

WARNING DO NOT ASSUME THERE ARE NO LIVE ELECTRICAL WIRES IN THE WALL. DO NOT TAKE ACTIONS THAT COULD BE DANGEROUS IF THE WALL CONTAINS A LIVE ELECTRICAL WIRE. ALWAYS TURN OFF THE ELECTRICAL, GAS, AND WATER SUPPLIES BEFORE PENETRATING A SURFACE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY OR PROPERTY DAMAGE.

WORKING WITH DIFFERENT MATERIALS

Wallpaper Tool functions normally on walls covered with wallpaper or fabric, unless the materials are metallic foil, contain metallic fibers, or are still wet after application. Wallpaper may need to dry for several weeks after application.

Freshly painted walls It may take a week or longer to dry after application.

Lath and plaster This tool is not designed to scan over lath and plaster.

Highly textured walls or acoustic ceilings

When scanning a ceiling or wall with an uneven surface, place thin cardboard on the surface to be scanned and scan over the cardboard in DeepScan® mode.

Wood flooring, subflooring, or gypsum drywall over plywood sheathing Use DeepScan® mode and move the tool slowly. This tool cannot scan for wood studs and joists through carpet and padding.

NOTE: Sensing depth and accuracy can vary depending on scanning environment conditions such as mineral content, moisture, texture, and consistency of the wall materials.

Electrical wiring and pipes Depending on the proximity of electrical wiring or pipes to the wall surface, tool may detect them in the same manner as studs.

Caution should always be used when nailing, cutting, or drilling in walls, floors, and ceilings that may contain these items.

Studs Studs are normally spaced 16" or 24" (40 cm or 60 cm) apart on center and are 1 1/2" (38 mm) wide.

Anything closer together, or of a different width, may not be a stud.

LIMITED LIFETIME WARRANTY
Zircon Corporation ("Zircon") warrants to the original purchaser (or original user by gift) that this product will be free from defects in materials and workmanship for its useful life (not to exceed twenty years from date of purchase). This warranty is limited to the electronic circuitry of the product, and specifically excludes consumable parts, including batteries, and software, even if packaged with the product. Defects caused by abuse, modification, handling contrary to these instructions, other unreasonable use, or neglect are not covered under this warranty. No liability is accepted for normal wear and tear and minor defects which do not detract from the function of the product.

THIS LIMITED LIFETIME WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ZIRCON BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT. NO OTHER REPRESENTATIONS OR CLAIMS OF A SIMILAR NATURE WILL BIND OR OBLIGATE ZIRCON.
Some states do not allow limitations on certain implied warranties and/or the limitation on incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This Limited Lifetime Warranty applies only to products purchased within the United States of America (USA) and Canada. For warranty applicable to products purchased in all other geographical areas, see www.zircon.com/warranty.

Customer Service: 1-800-245-9265 or 1-408-963-4550

Monday–Friday, 8:00 a.m.–5:00 p.m. PST

www.zircon.com • info@zircon.com

©2020 Zircon Corporation • P/N 71666 • Rev A 11/20

ACT, ColorTrip, DeepScan, LoLevel, MetalliWarning, SpotLite, SuperScan, Target Control, TC, WireWarning, and Zircon are trademarks or registered trademarks of Zircon Corporation.

ANTES DE EMPEZAR

LOS DETECTORES DE VIGAS ZIRCON® FUNCIONAN AL DETECTAR CAMBIOS DE DENSIDAD DETRÁS DE LA PARED. SE PUEDEN DETECTAR OTROS OBJETOS ESPECIALMENTE SI ESTÁN MUY CERCA DE LA PARED. **NO SUPONGA QUE TODO LO DETECTADO ES UNA VIGA.**

- Siempre utilice una batería alcalina nueva de 9V con una fecha de vencimiento extendida superior a 3 años de la fecha actual. Haga coincidir la dirección de la batería con la imagen dentro del compartimento de la batería.

- No confie exclusivamente en la herramienta para localizar objetos detrás de la superficie. Utilice información adicional para ayudar a localizar los objetos antes de penetrar la superficie. La información incluye planos de construcción, puntos visibles de entrada de las tuberías y el cableado en las paredes, como en un sótano, y las separaciones estándar entre las vigas.

- Siempre inicie su escaneo en el modo Target Control™ (TC™) el cual escanea a través de paneles de yeso de una sola capa hasta $\frac{3}{4}$ " (19 mm) de profundidad.

- Siempre escanea por vigas a diferentes alturas de la pared y marque la ubicación de cada objeto detectado. Esto se llama "mapeo de la pared." Las tuberías y otros objetos probablemente no den lecturas consistentes desde el piso hasta el techo, como lo haría una viga.

- Las vigas normalmente están colocadas verticalmente desde el piso hacia el techo, excepto arriba y debajo de las ventanas, y arriba de las puertas.

- Las lecturas siempre deben ser consistentes y repetibles.

- Los detectores de vigas Zircon® son recomendados sólo para el uso interior.

- Otros objetos comunes en paredes, pisos o techos son tuberías de agua, líneas de gas, barrera cortafuego, y cableado eléctrico.

- La profundidad y precisión de detección pueden variar dependiendo de las condiciones ambientales del escaneo, como el contenido mineral, la humedad, la textura, y consistencia de las paredes.

- Dependiendo de la proximidad de conexiones eléctricas o tuberías a la superficie de la pared, la herramienta puede detectarlos de la misma manera que las vigas. **Es necesario tener precaución siempre al clavar, cortar o taladrar en paredes, pisos, y cielos rasos que puedan contener estos elementos. Tenga extrema precaución bajo estas circunstancias o siempre que haya cableado AC* activo presente.**

- Las vigas suelen tener una separación de 16" ó 24" (40 cm ó 60 cm) entre los centros de las vigas, y un ancho de $\frac{1}{2}$ " (38 mm), y quizás estén separadas por barrera cortafuego. Todo lo que no esté instalado a esa separación o que sea de un ancho diferente puede que no sea una viga.

IMPORTANTE: Confiar, pero Verificar es una técnica que puede ayudar a indicar las zonas "seguras para perforar" para minimizar topar con metales existentes en una viga, como clavos, tornillos y placas protectoras. Cuando el Punto de Mira se muestre en TC™, mueva la herramienta verticalmente hacia arriba y hacia abajo de la viga. Los indicadores de vigas (Punto de Mira, Indicador de Bordes, Barras de Indicador de Objetivo, Objetivo Spotlight, y Apuntador SpotLite®) se apagaran todos sobre tornillos y otros metales, luego se encenderán de nuevo cuando la viga esté libre de metal. Las zonas "seguras para perforar" están usualmente adyacentes a tornillos, clavos y placas protectoras para paneles de yeso, asumiendo que el constructor instaló placas protectoras metálicas en la viga y sobre plomería y electricidad correctamente. Si los indicadores de las vigas no desaparecen cuando mueve verticalmente hacia arriba y hacia abajo del objeto en el modo TC™, la ausencia de tornillos, clavos o placas protectoras para paneles de yeso indica que podría tratarse de un objeto no metálico como plomería de plástico o tubería PEX, y no debe confundirse con una viga.

CONSEJOS ÚTILES & CONSEJOS PARA CONSTRUCCIÓN

SITUACIÓN	CAUSAS PROBABLES	SOLUCIONES
La herramienta detecta otros objetos además de vigas en el modo StudScan y encuentra más objetos que parecen vigas de las que deberían estar allí.	El cableado eléctrico y los tubos de metal/plástico pueden estar cerca, o tocando, la superficie posterior de la pared.	• Verifique que no haya otras vigas espaciadas en ambos lados a intervalos de 16" ó 24" (40 cm ó 60 cm), o busque la misma viga en las zonas directamente arriba o debajo de la primera área de escaneo. • Las vigas estánndar miden aproximadamente 1½" (38 mm) de ancho. Qualquier cosa más pequeña o grande es probable que no sea una viga (a menos que esté cerca de la puerta o ventana).
Lectura constante de vigas cerca de ventanas y puertas.	Múltiples vigas están alrededor.	Alrededor de las puertas y ventanas se encuentran generalmente vigas dobles o triples. Los canales transversales están sobre ellos. Detecte los bordes externos para que sepa donde comenzar.
Se supone que hay cables eléctricos, pero no encuentra ninguno.	Es posible que los cables ubicados a mayor profundidad de 2" (50 mm) de la superficie no se puedan detectar. Puede que los cables no estén activos.	Si hay un interruptor de tomacorriente, asegúrese de que esté ENCENDIDO mientras esté realizando el escaneo, pero APÁGUELO cuando trabaje cerca de los cables eléctricos. Tenga especial cuidado si el área tiene madera contrachapada, madera gruesa de soporte detrás de paneles de yeso o paredes que son más gruesas de lo normal. Enchufe una lámpara en el tomacorriente y enciéndala para comprobar si los cables eléctricos están activos.
La pantalla LCD parpadea continuamente mientras trata de encontrar una viga.	La herramienta está experimentando una sobresaturación de exposición al metal.	Cambie al modo TC™ o StudScan para disminuir la sensibilidad al metal. NOTA: La herramienta no puede emitir un tono sobre vigas a 1" (25 mm) o más profundas al hacer esto.
El Indicador de Batería Baja está encendido.	Batería baja.	Instale una nueva batería alcalina de 9V con una fecha de vencimiento extendida.
El Indicador de Batería Baja parpadea y el detector no funciona.	Batería sin carga	Instale una nueva batería alcalina de 9V con una fecha de vencimiento extendida.



Escanee el código QR para obtener más información.

Visite www.zircon.com para obtener las instrucciones más actualizadas.



Advertencia de Registro de la Parte 15 del FCC Clase B: Este aparato cumple con las reglas Parte 15 de la FCC. Su operación está sujeta a las siguientes dos condiciones: (1) este aparato no puede causar interferencia dañina, y (2) este aparato debe aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda causar la operación no deseada.



ADVERTENCIA Es posible que la herramienta no detecte la actividad de AC* si los cables están a más de 2" (50 mm) detrás de la superficie escaneada, en concreto, encerrados en un conducto, detrás de una pared de corte de madera contrachapada o un revestimiento de pared metálico, o si hay humedad en el ambiente o la superficie escaneada.

INSTALAR BATERÍA DE 9 VOLTIOS

Siempre utilice una batería alcalina nueva de 9V con una fecha de vencimiento extendida superior a 3 años de la fecha actual. Haga coincidir las direcciones de la batería con la imagen dentro del compartimento de la batería.

NOTA: la herramienta está en modo StudScan (TC™ apagado) cuando la luz de fondo de la pantalla está apagada. Cuando el modo TC™ está apagado, los objetos metálicos pueden indicarse como una viga y el Indicador de Intensidad de Señal tendrá barras de intensidad estables.

NO MUEVA LA HERRAMIENTA DURANTE LA CALIBRACIÓN.

- Con el Botón de Encendido presionado, deslice la herramienta lentamente por la pared. Cuando la herramienta encuentra el borde de la viga, aparece el Indicador de Borde.
- Continúe deslizando. Cuando la herramienta encuentra el centro de una viga, se enciende el Punto de Mira, el SpotLite® se iluminará y un tono corto sonará. **(Figura D)** Marque el lugar donde se encontró la viga.

ENCONTRAR UNA VIGA DE MADERA LIBRE EN EL MODO TARGET CONTROL™ (TC™)

TC™ está diseñado para detectar vigas de madera durante el escaneo. Para obtener mejores resultados, sostenga la herramienta como se muestra y muévalo lentamente al escanear. **No toque la superficie durante la calibración o el escaneo.**

- Establezca el modo TC™ / StudScan, o DeepScan®.
- Sostenga la herramienta plano contra la pared, luego presione y mantenga presionado el Botón de Encendido. El dispositivo se apagará en 1-2 segundos después de liberar el Botón de Encendido.

Con Tecnología Revolucionaria Target Control™ (TC™)
Tecnología TC™ está diseñado para encontrar vigas de madera mientras filtra (rechaza) los objetos metálicos o de señal baja falsos positivos, como tuberías, conductos, flejes, soportes o tuberías de plástico para agua. Con el modo TC™, los usuarios pueden utilizar la técnica **Confiar, pero Verificar** para identificar zonas "seguras para perforar" entre tornillos, clavos y placas protectoras adyacentes para paneles de yeso.

3 modos de escaneo:
• **Target Control™ (TC™)** ubica el centro, los bordes y la dirección de las vigas de madera (sin tener en cuenta el metal) hasta $\frac{3}{4}$ " (19 mm) de profundidad. **La pantalla LCD estará iluminada con una luz azul claro.** En el modo TC™, el Indicador LoLevel™ muestra objetos de señal baja (débil), como tuberías de plástico para agua, desaguajes de alcantarillado de plástico, o vigas más profundas de $\frac{3}{4}$ " (19 mm). En comparación con las señales de las vigas, el Indicador LoLevel™ puede ayudar a diferenciar las vigas de los falsos positivos.

• **StudScan** localiza el centro, los bordes y la dirección de ambas vigas de madera y metal hasta una profundidad de $\frac{3}{4}$ " (19 mm). **La pantalla LCD no se iluminará en este modo.** En el modo StudScan, el Indicador de Intensidad de la Señal utiliza el mismo icono que el Indicador LoLevel™. Cuando TC™ está apagado, una señal fuerte se indica mediante barras completas de intensidad de señal.

• **DeepScan®** localiza el centro, bordes, y la dirección de las vigas (de madera y metal) hasta 1½" (38 mm) de profundidad. **La pantalla LCD se iluminará con una luz verde.**

NOTA: TC™ y StudScan utilizan la misma configuración, pero funcionan distinto. StudScan detecta cualquier objeto sólido durante el escaneo, mientras que TC™ detecta solo vigas de madera e ignora el metal. Usted puede distinguir entre los dos modos por la luz azul claro en la pantalla LCD en el modo TC™. El modo StudScan no tiene luz de fondo.

El Indicador MetalliWarning™ se mostrará cuando sea detectado metal o esté peligrosamente cerca en los modos TC™, StudScan y DeepScan®.

DETECCIÓN WIREWARNING®

La Detección WireWarning® automáticamente detecta y alerta al usuario sobre cableado AC* activo sin aislamiento en todos los modos. Cuando se detecta voltaje AC* activo, aparece el indicador de advertencia y la pantalla comienza a parpadear en rojo hasta que la herramienta se aleja lo suficiente del cable activo. Cuando la calibración comienza sobre un cable AC* activo en cualquier modo, el icono de AC* parpadeará. **Tenga extrema precaución bajo estas circunstancias o siempre que haya cableado AC* activo.**

NOTA: El Indicador LoLevel™ mostrará barras en cascada rápidamente cuando el dispositivo detecte una señal débil constante, lo que podría indicar un falso positivo de que puede haber un objeto.

6. Utilice la técnica de **Confiar, pero Verificar** para encontrar tornillos o clavos para paneles de yeso arriba y debajo de la viga para confirmar que ha localizado una viga de madera. Otros objetos, como tuberías de plomería de plástico, no contienen clavos ni tornillos para paneles de yeso. (Consulte la nota importante en ANTES DE EMPAZAR para obtener más información sobre este procedimiento).

LOCALIZAR UNA VIGA EN MODO STUDSCAN (TC™ APAGADO)

- Establezca el modo TC™ / StudScan.
- Sostenga la herramienta plano contra la pared, presione el **Botón de Encendido, suéltelo, luego presiónelo nuevamente**, manteniéndolo presionado por segunda vez. El dispositivo se calibrará en 1-2 segundos. Un tono corto confirma que la calibración está completa. Si se produce un error de calibración, todos los iconos parpadean continuamente.

NOTA: la herramienta está en modo StudScan (TC™ apagado) cuando la luz de fondo de la pantalla está apagada. Cuando el modo TC™ está apagado, los objetos metálicos pueden indicarse como una viga y el Indicador de Intensidad de Señal tendrá barras de intensidad estables.

NO MUEVA LA HERRAMIENTA DURANTE LA CALIBRACIÓN.

- Con el Botón de Encendido presionado, deslice la herramienta lentamente por la pared. Cuando la herramienta encuentra el borde de la viga, aparece el Indicador de Borde.

- Continúe deslizando. Cuando la herramienta encuentra el centro de una viga, el SpotLite® se iluminará y un tono corto sonará. **(Figura D)** Marque el lugar donde se encontró la viga.

SELECCIONAR MODO / ENCENDIDO**MODO DE SELECCIÓN****ENCENDIDO****DESENCENDIDO****ACTIVACIÓN DE LA CALIBRACIÓN****DESENCALIBRACIÓN**

<