Model No.: DC1173-7B/62

Ceiling Fan

Installation Manual

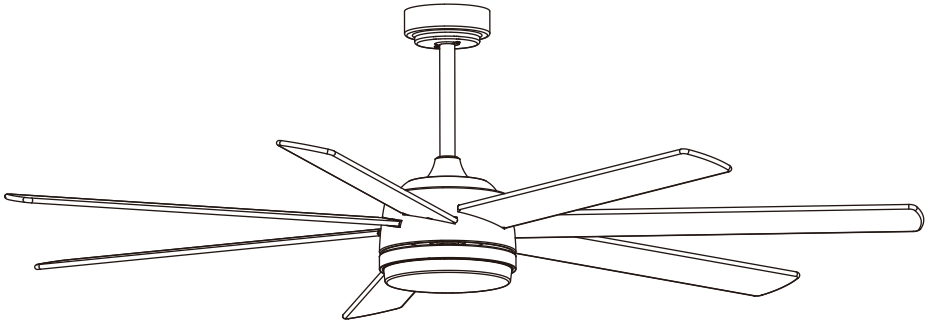

THANK YOU

We appreciate the trust and confidence you have placed in us through the purchase of this ceiling fan.We strive to continually create quality products designed to enhance your home.Thank you for choosing us!

Visit www.pmwfan.com for further assistance.

DIMENSIONS

- First, check the room size, and then ensure there is at least 30 inches (76 centimeters) of clearance or space between the fan and any walls or other obstacles that the fan blades might hit to optimize airflow. After installation,please verify blades are at least 7.5 feet (2.3 meters) above the ground.

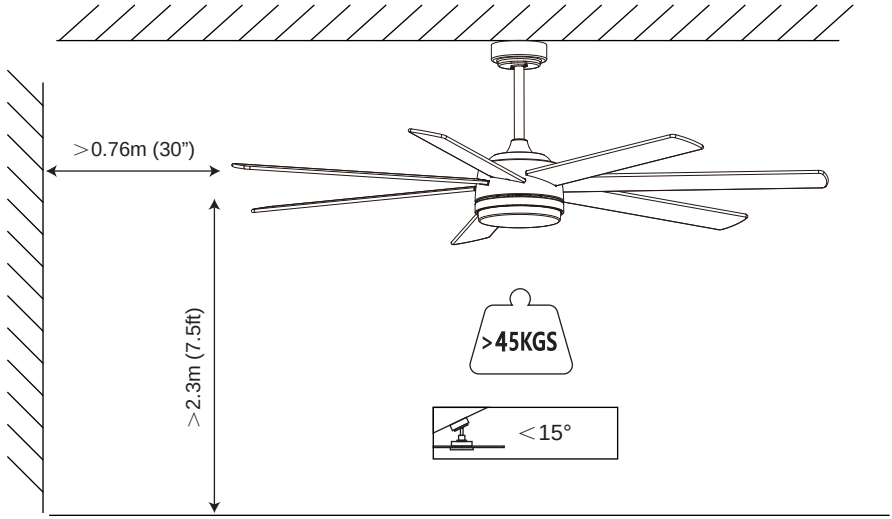

TOOLS REQUIRED



Step ladder



pliers



Phillips screwdriver



Flat blade screwdriver



Electrical tape



tape measure

PACKAGE LIST

Unpack your fan and check the contents. You should have the following:


1. Bracket

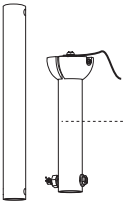
2. Downrod


3. Canopy

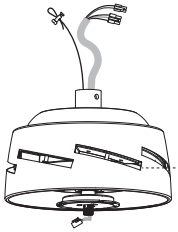
4. Body/motor


5. Coupling cover


6. Light kit


7. Light cover

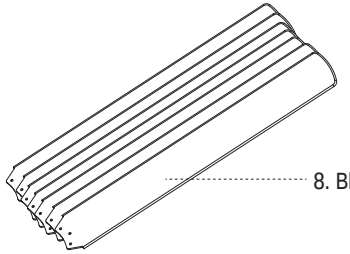
8. Blades

Remote control unit

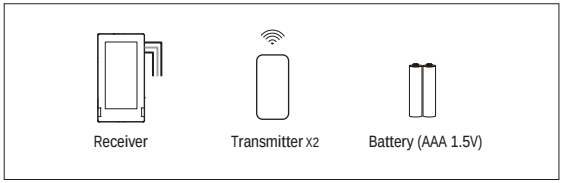

Blade balance kit

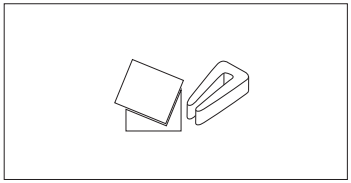

Hardware bag

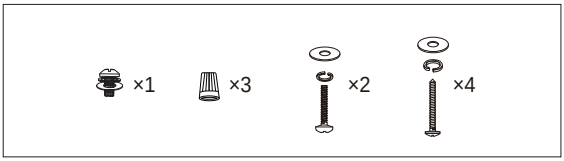

Instruction manual

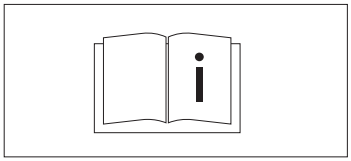

- Note: The illustrations in this manual are for explanatory purposes only and may not correspond to actual units.

Addressing Fan Wobbling Issues During Operation

If the fan body wobbles during Operation, this is not an indication of a fault (even if it wobbles a few centimeters). To reduce it,you can tum off the fan andthen:

1. Check if all the blades are properly secured by tightening the screws.

2. Check the distance between each blade and the ceiling. Measure the distance to the celing as shown in the image.If there is a change and you have already tightened the screws, ensure that all blades are the same shape. If any blade appears noticeably different, it could cause wobbling during operation. If you've completed these steps and the wobbling still persists, use the provided balancing kit for dynamic balancing, as follows.

(1) Turn the fan on to its highest speed to maximize the wobble.

(2) Turn off the fan. Select one blade and place a clip on it (see image 2), clipping it to the edge of the blade.

(3) Turn the fan on and set it to the highest speed, checking whether the wobble improves or worsens. If there is no improvement, move the clip to another blade. Repeat this process to determine which blade can reduce the wobble.

(4) Once the blade is determined, leave the clip on it and adjust the clip forward or backward on this blade until the best position is found that provides the most effective result.

(5) Finally, remove the clip and place one of the balance weights on the upper centerline of the blade where the clip was located.

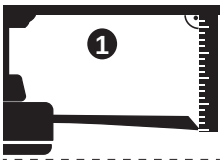

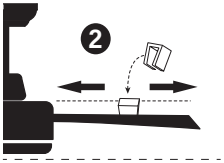

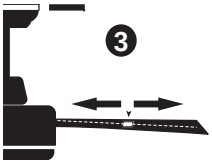

Ceiling Fan

Questions, problems, missing parts? Before returning to the store,
visit www.pmwfan.com for further assistance.
Retain this manual for future use.

Manufacturer: Zhongshan Miaowang Electrical Appliance Co., Ltd.
Address: Building C, No.10, Qingfu Road, Henglan Town, Zhongshan City, Guangdong Province,CN
Website: www.pmwfan.com
Tech Support Telephone: +12092272409
Tech Support Email Address: support@pmwfan.com