

Questions, problems, missing parts? Before returning to the store please contact our Customer Service

- **service@alphamarts.com** •

1-877-606-2818


PREMIUM HOME SOLUTION

VALUABLE DURABLE ENJOYABLE

BELIEVE WHAT YOU GET
Believe What You Get

USE AND CARE GUIDE

GA025-BR/GA025-BL

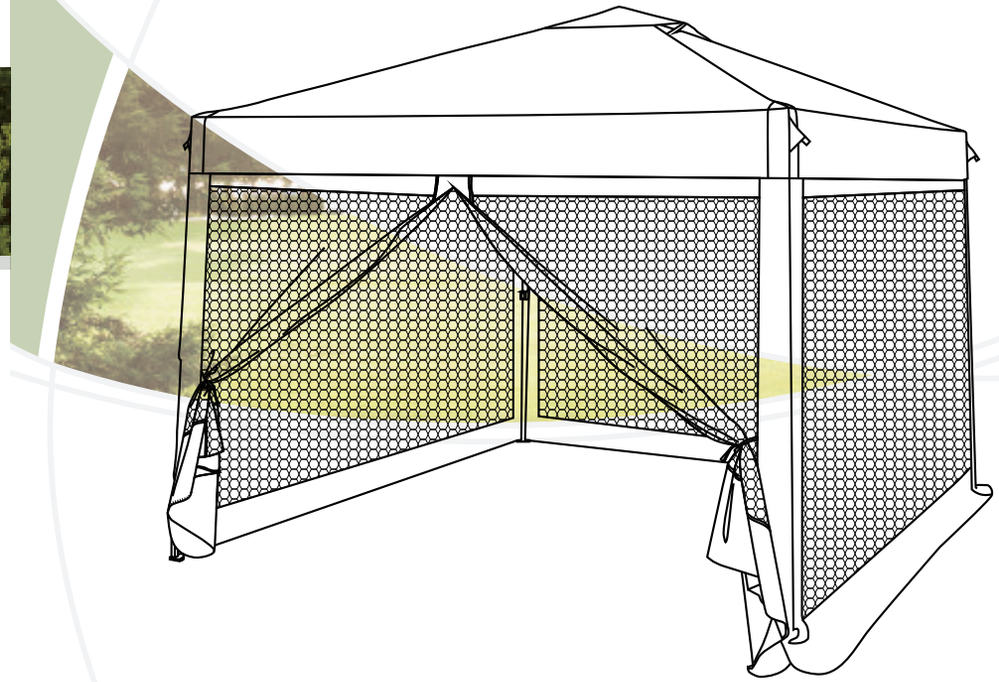

Questions, problems, missing parts? Before returning to the store please contact our Customer Service

- **service@alphamarts.com** •

THANK YOU

We appreciate the trust and confidence you have placed in us through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing us!

Table of Contents

Table of Contents 2
Safety Information 2
Warranty 2
Troubleshooting Guide 3
Introduction 3
Pre-assembly 4-5
Assembly 6-7
De-assembly 8
Maintenance 9

Safety Information

- This recreational item is not intended for use as a permanent structure.
- This tent/shelter has been developed and is intended to provide protection from sun and light rain. This product is NOT WATERPROOF.
- DO Not use any gas or flame sources under or near this product.
- Excess water build-up can cause the frame system to became unstable, and collapse, causing injury.
- Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc.
- This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury.
- This product is not a toy, this product is not designed for use by children without adult supervision.Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belonging or similar valuables.

⚠ WARNING:
KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC!

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Warranty

LIMITED WARRANTY

This warranty is a limited warranty, and applies to the original purchase is required. This is a residential warranty and does not apply to commercial use. This collection carries a (1) year limited warranty and is valid from original date of purchase to the original owner (proof of purchase required).

WHAT IS COVERED

We warrant the frame to be free of Manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive.
In addition, purchased parts are not covered under this warranty.
We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Troubleshooting Guide

Problem	Solution
1.Condensation	This is caused by lower temperatures on outside of product combined with body heat on inside of product. when this occurs, avoid touching walls to reduce contact leakage. Leaving doors and windows open will reduce condensation.
2.Mildew	To avoid mildew, never store your product wet or damp. However, if mildew occurs, use a soft bristle brush or sponge with mild soap to clean. Let dry in the sunlight and apply seam sealer compound on inside seams.
3.Repairing a Tear	For small tears use a self-adhesive patch kit. We recommend a repair shop for larger tears.
4.Faulty Zipper	All of our tents come with self-repairing nylon coil zippers. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper. Local awning and upholstery repair shops may be able to assist you.
5.Floor Condensation (Only applicable on products with floor)	To prevent floor condensation use a ground cloth. Placing a ground cloth under your product will prolong its life. Ground cloth size should be slightly than product floor size.

Introduction

- We advise you to assemble this product at least once at home before going on a trip. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself up setting up in the dark and adverse weather conditions.
- Get the most enjoyment from your product by reading this owner's manual thoroughly; then follow our camping suggestions outlined below. Note the symbols we use and why.


Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.


NOTE: Identify all parts packed in the carton against the parts list.
Remove all the protective material carefully and DO NOT use a knife to prevent scratching the canopy.

PACKAGE CONTENTS


A X1

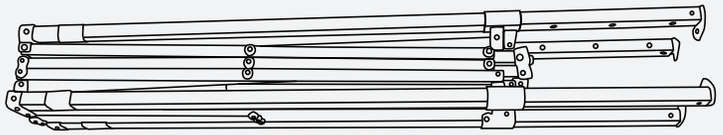


B X1

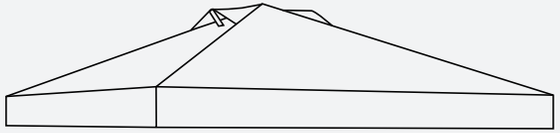

C X2

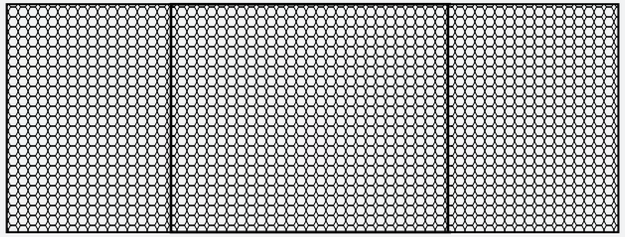

D X1

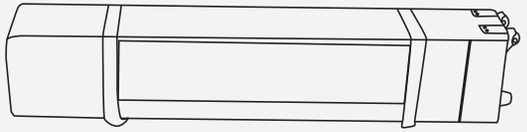


Pre-assembly (continued)

E X8




F X4

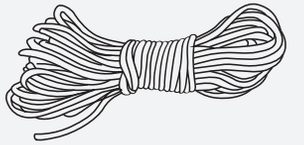

G X4




H X4

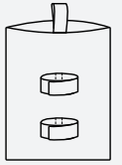

NOTE: Hardware not shown to actual size.

Assembly


1

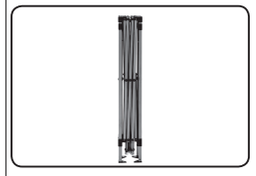


Stand the instant canopy frame upright in the center desired set-up location. Gently pull the outer frame legs partially extended with a second person assisting.

2

Lift frame into a proper position by expanding the truss bars, then place the canopy top cloth fabric onto and cover the frame completely. Be careful not pinch fingers or hands as you lift and step backwards slowly.

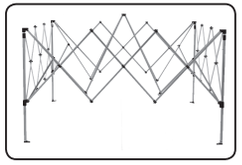

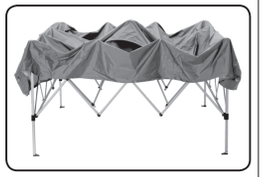

3



Continue to expanding the frame until fully extend, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

4

At each corner of the canopy frame, secure the canopy fabric top with adhesive (velcro) strip, and fixed all adhesive strips (velcro) on the frame. The canopy can be adjusted in three heights. You can adjust the height which you need.








5







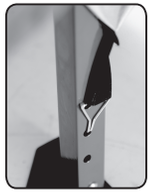

Secure your desired mosquito net to the edge of the top fabric canopy with adhesive strips(velcro), and two nets are connected by zipper. Attach the fabric to the bottom of the four legs with the hooks that come with fabric.

Assembly

6



Stake (E) down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.


7

Measure out from the leg to a proper distance and secure the four nails to ground at a 45 degree angle. Tie the another end of each rope to the corner of canopy fabric top. Make sure the guy ropes have the proper tension via adjusting buckle(G).





8

The use method of adjusting buckle (G).

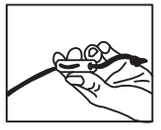




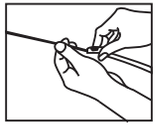

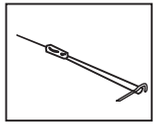


9

After filling the sandbags, add sandbags to the four legs to increase the stability of the canopy.

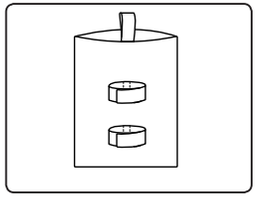

De-assembly

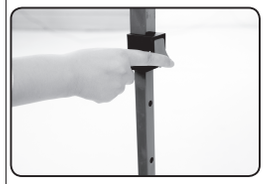


1

Push each push pin height adjuster on each leg and shorten the frame to its original height prior to extending the legs during set-up.

2

Disengage locking button at each corner of the frame.



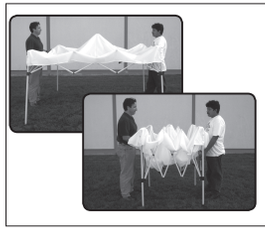

3

Hold the middle frame section with a second person assisting on two sides of the frame. Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame. Secure the frame firmly for storage.

4

Completely fold the frame securely with or without the canopy attached (it is recommended to remove the canopy top).





5

Place the frame into the unzipped carry bag slowly until canopy fits comfortably. Zip the storage bag completely shut.

Maintenance

Not complying with these warning will void your instant canopy warranty!

- Do not set-up or leave your instant canopy assembled in rain, hail, sleet, snow, drizzle, lighting, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use tie-downs, stakes or weight bags to secure your instant canopy in windy conditions. Commercial stake kits and weight bags to needs to be purchased as accessories separately.
- Always follow directions when setting-up your instant canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove canopy top from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the canopy top in a washing machine-serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on a cloth and gently clean top by hand, then rinse off with a garden hose.
- Do not use detergent by hand cleaner if top has custom silk-screened graphics.
- Allow top to dry completely before storing.
- Keep your canopy off of steep slopes and inclines.
- Do not use your instant canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your instant canopy unattended.