STANDARD

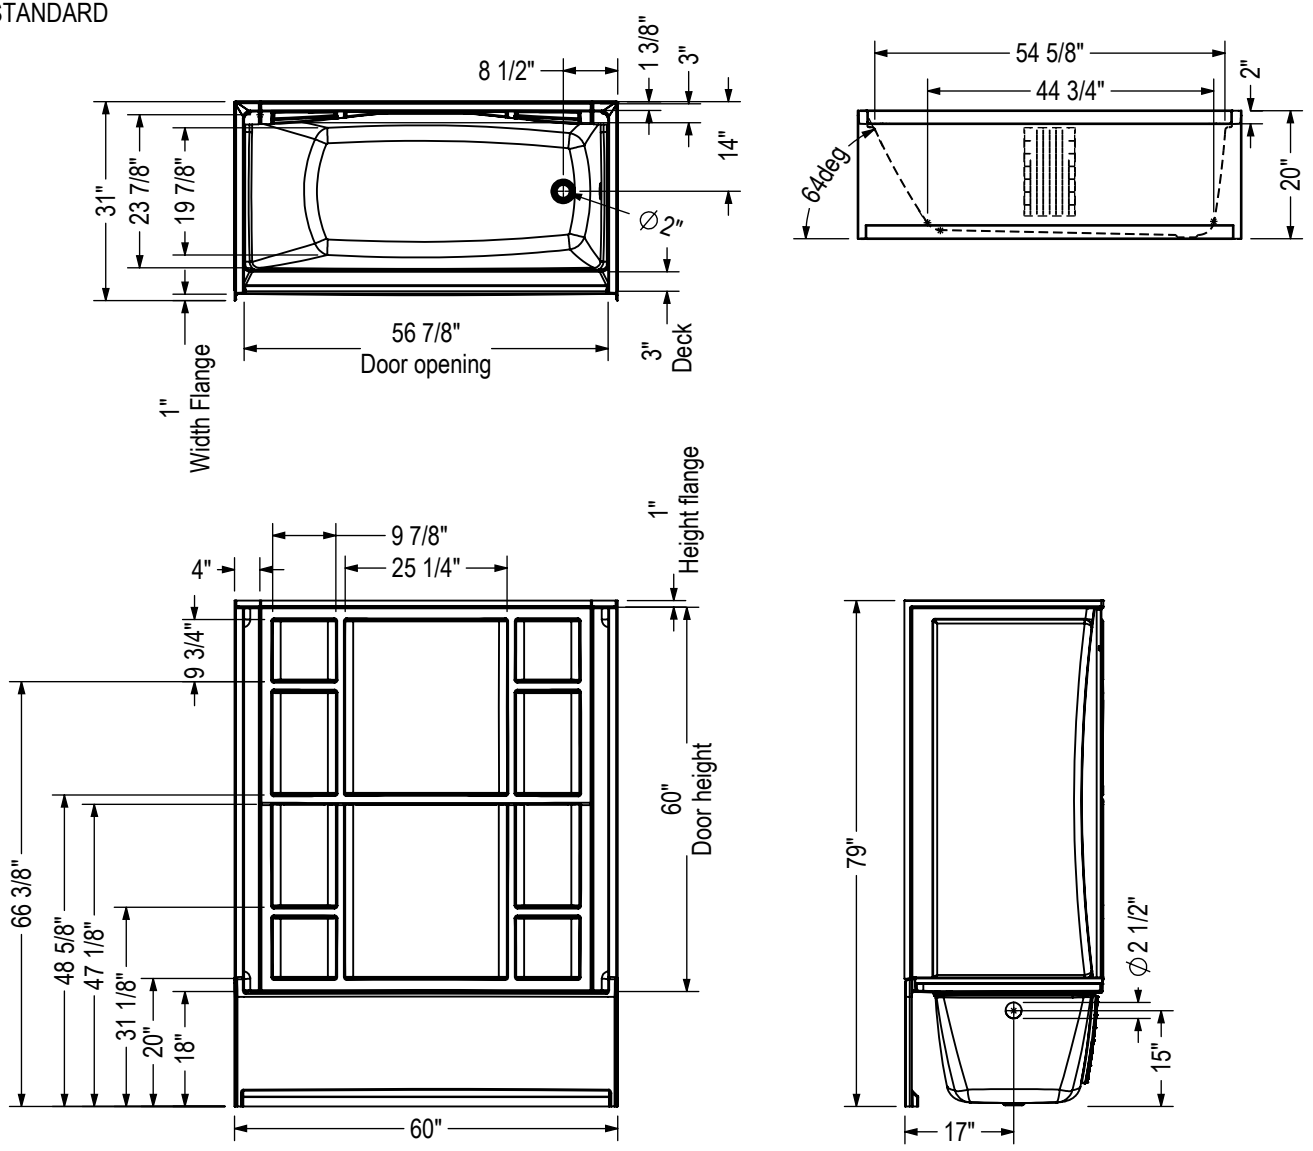

- Dimensions are approximate. Unit dimensions must be checked before installation.
- Installation must be done according to the manufacturer's instructions.