INSTRUCTIONS

8^2 INFLATABLE TENT
CQ0039

SIZE

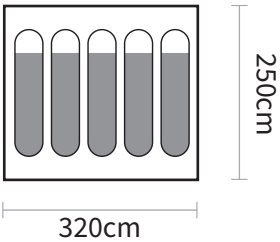

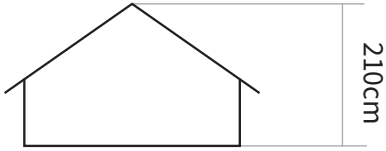

ACCESSORY

Tent*1

Storage bag * 1

Steel Nail*14

Pressure limiting pump*1

INSTALLATION STEPS

01

Take out the tent and spread it flat on the ground. Secure the four corners with four ground nails.

02

Adjust the inflatable valve to the closed state, connect the pump tothe air valve, and inflate the first air column to 80%

03



Inflate the other column to saturation, then fill the first column to 100%.

04

After setting up the tent, please tighten the wind rope and secure the ground nails in a timely manner