XODO®



Smart Floodlight Pro-Cam E8

Quick Installation Guide

1. Package Includes:

Open the package, then make sure the Smart Floodlight Pro-Cam (device) include the following accessories.



1x User Manual



1x Smart Floodlight Device



4x Mounting Screws



4x Screw Sleeves



3x Electrical Caps




2x Screw covers



4x Spacers

WARNING This manual is for information purpose only. Working with electricity can be dangerous unless proper safety precautions are taken.
If you are not comfortable or are inexperienced with the processes and tools described in this manual, we recommend that you hire a licensed electrician.

2. Mounting Wall Bracket Configuration

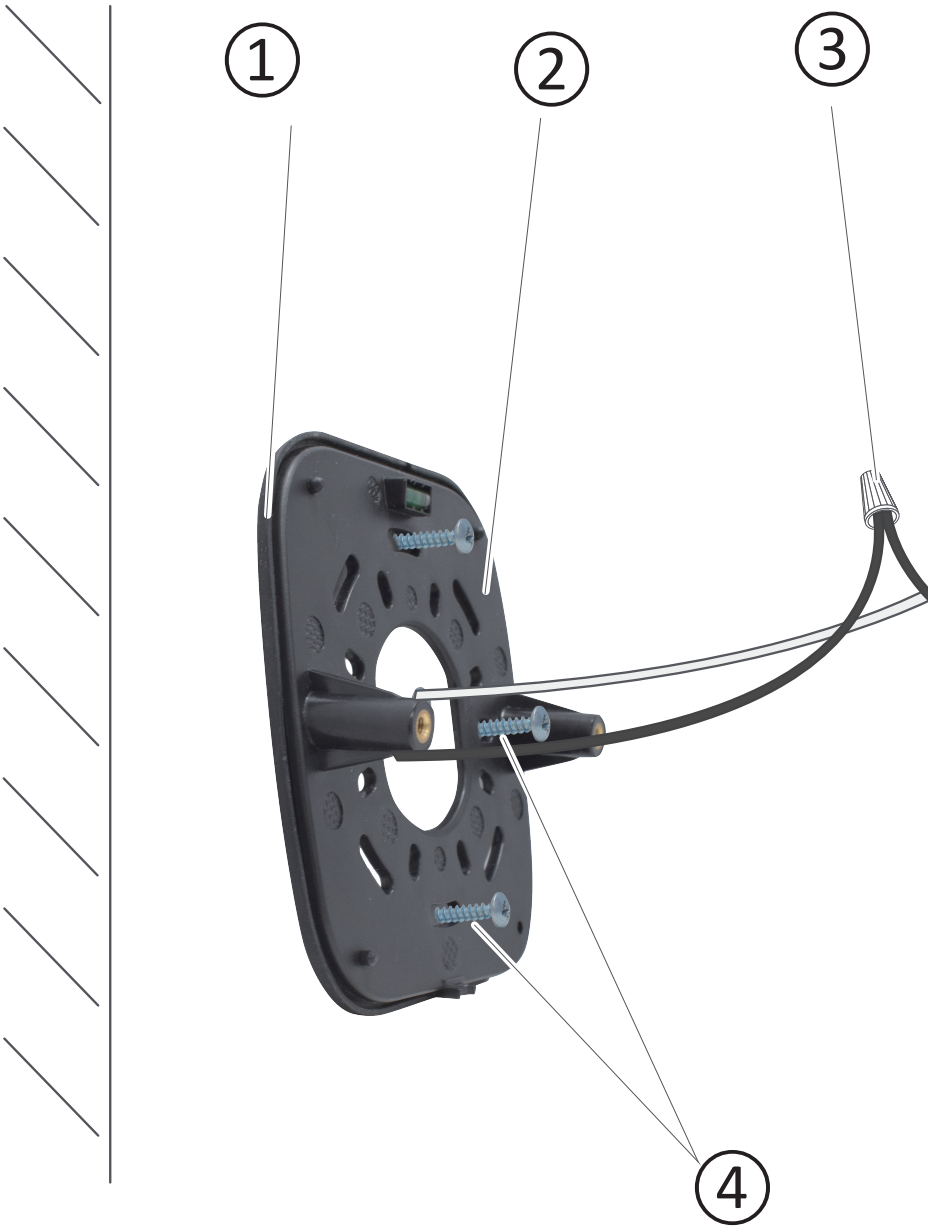

① Waterproof rubber gasket

② Mounting Bracket

③ Electric Caps

④ Mounting Screws





⑤ Light Adjustment Knob

⑥ LED Light


⑦ Camera Lock Collar

⑧ Motion Detector (for lights)


⑨ Camera

3. Recommendations Height Requirements

Floodlight Pro-Cam E8

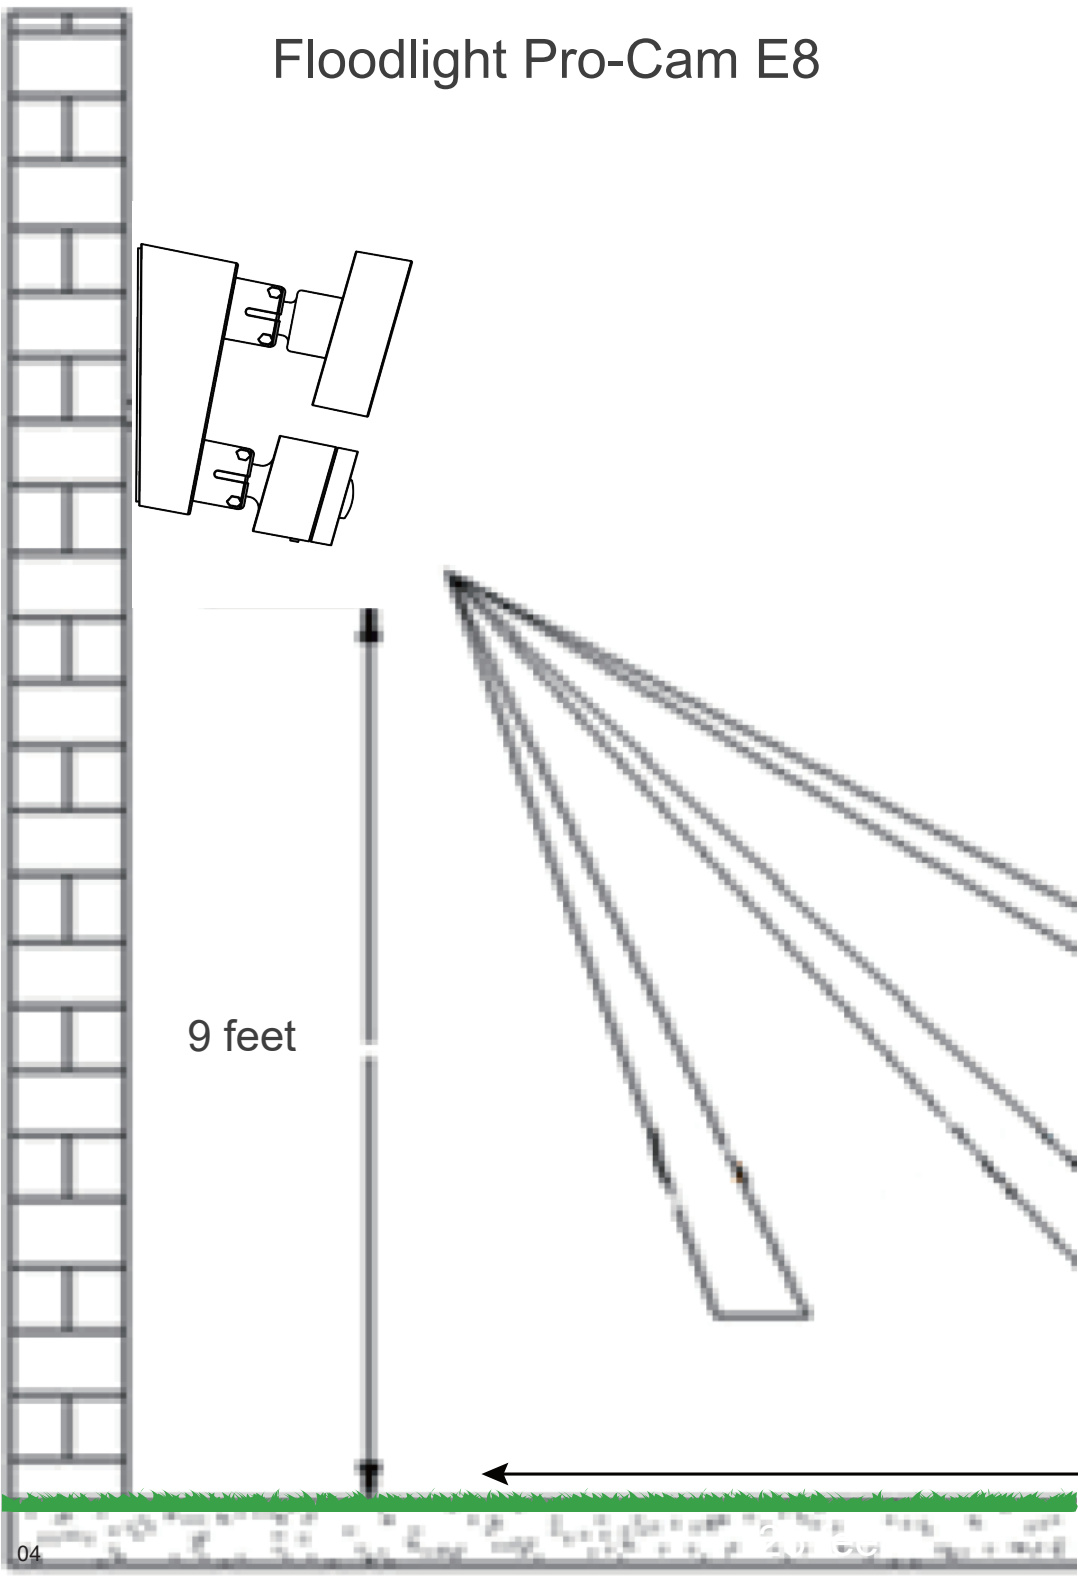

When mounted at 3 meters off the ground, with the motion detector about 26 degree to the ground, the detect human-sized objects distance up to 8 meters.

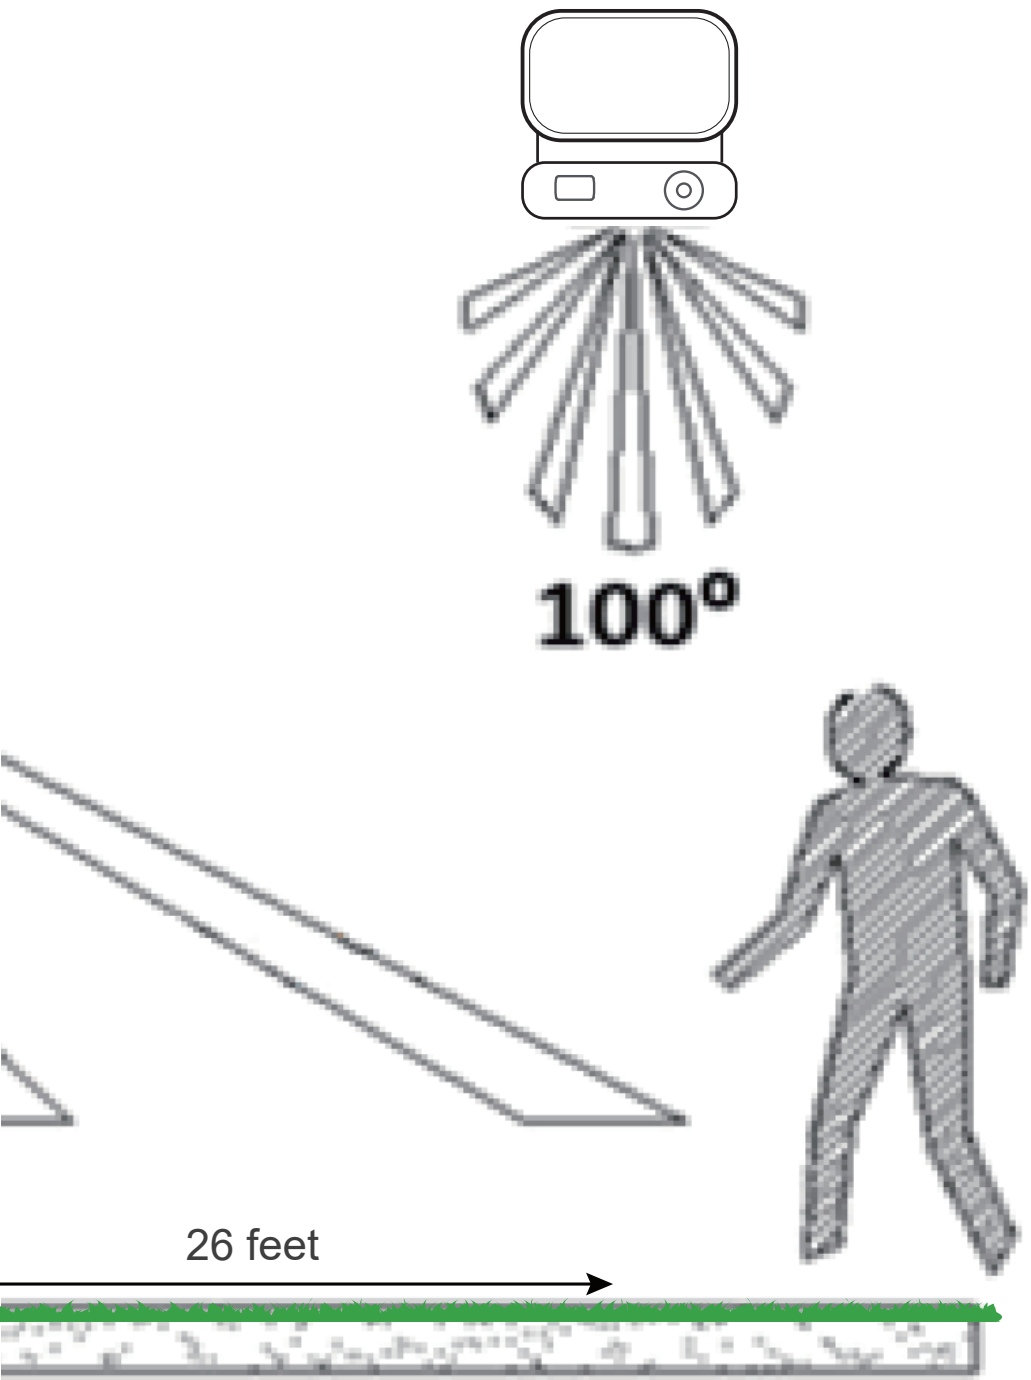

Step 1 - Shut Power Off at the Fusebox

If you don’t know where your breaker is or how to turn off power to the floodlight circuit, consult with a licensed electrician.



Please switch it from [ON] to [OFF]



WARNING: Risk of electrical shock

- **Disconnect power at the circuit breaker before installing.**
- **Verify that the supply voltage is correct.**
- **Connect fixture to a 110VAC ~ 240VAC 50/60 Hz power source.**
- **Properly ground fixture.**
- **Always follow code standards when installing wired connections.**
- **Installation and wiring must be performed by a licensed electrician.**

CAUTION: Risk of fire

- **Do not install near combustible or flammable surfaces.**

NOTICE

- **Do not connect this light fixture to a dimmer switch or timer.**

Step 2 - Mounting Bracket Removal:

1 Remove both bracket mounting screws as shown in diagram




2 Remove the mounting bracket.




Step 3 - Install the Bracket Weather Resistant Rubber Gasket

Please make sure that the bracket gasket is completing sealed around the base of the mount.

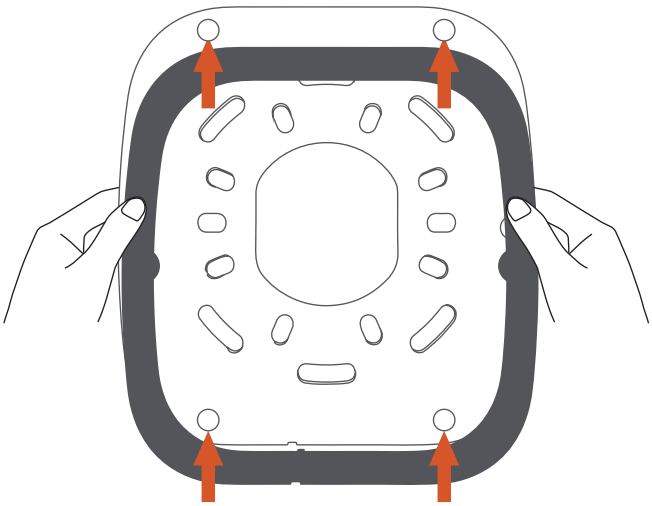

Step 4 - To Determine the Placement


Once you have determine the correct placement for your floodlight, begin the process of mounting the bracket to the structure.

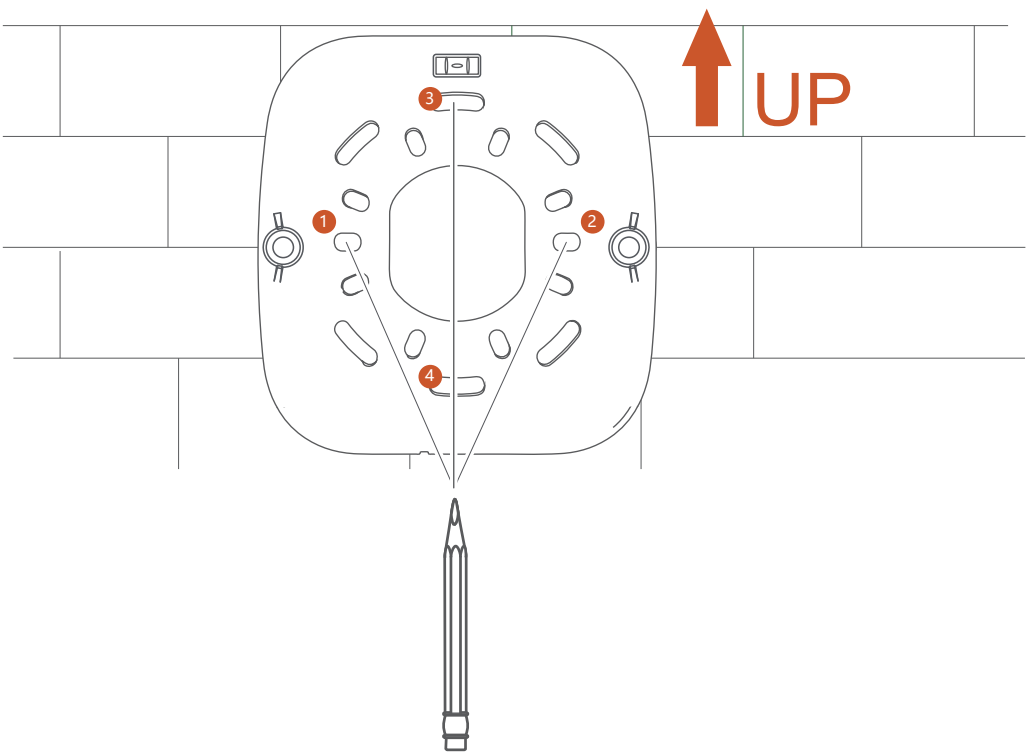

Step 5 - Mounting Bracket to Structure


Carefully push all the wires through the large opening in the bracket.

Before tightening wall mount to the structure make sure that all two wires come through the bracket as shown in final view diagram below

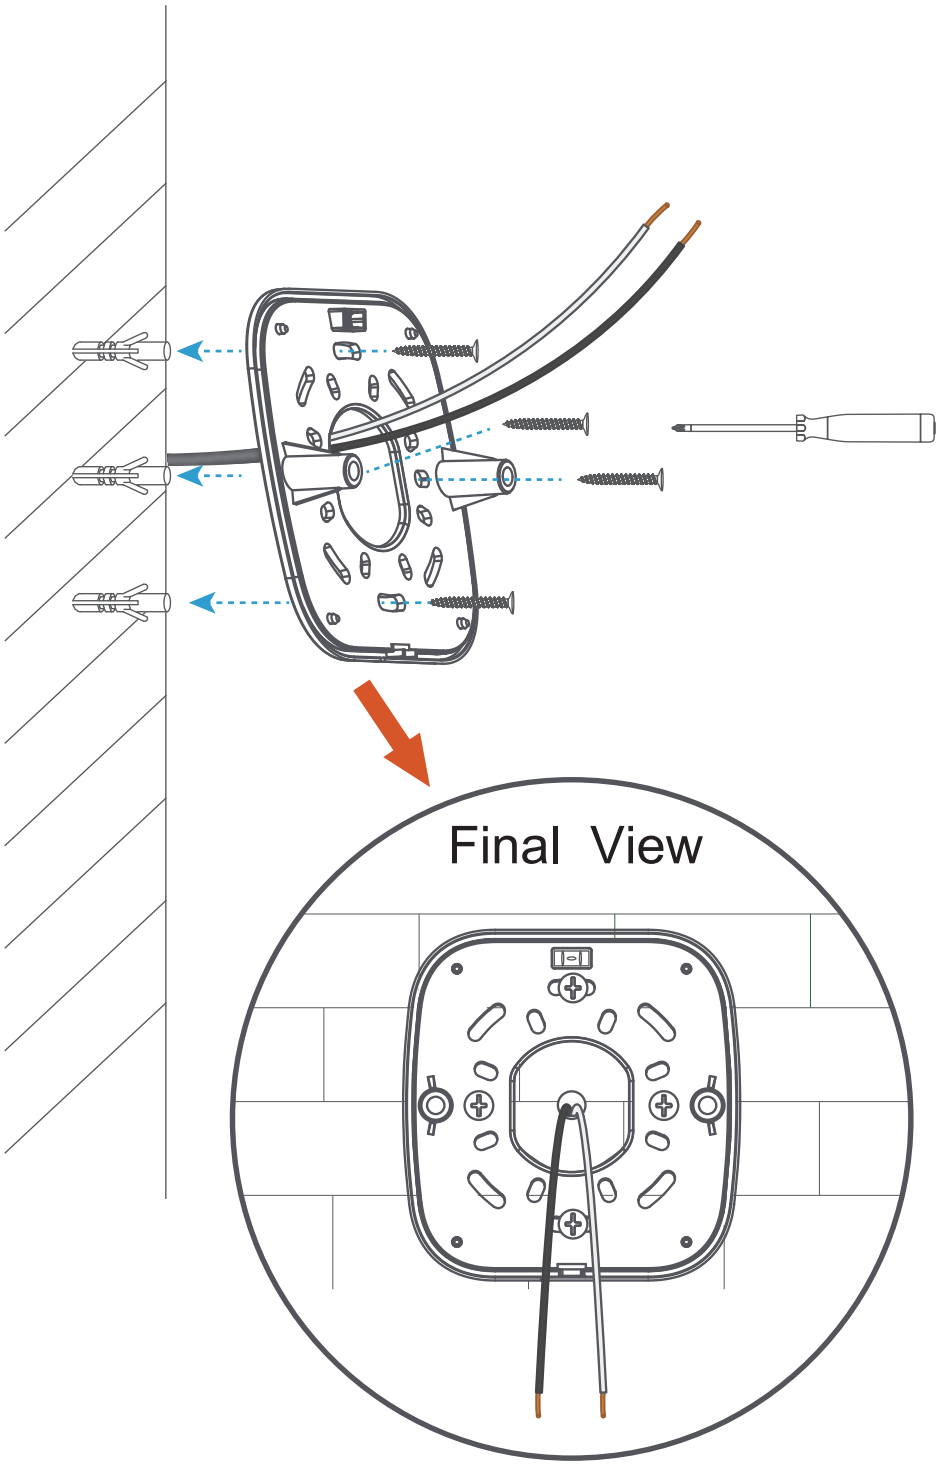

Step 6 - When Connecting All the Wires to the Proper Connections

Black is normally neutral red and white is hot. To ensure you have connected you device correctly please reference our diagram.

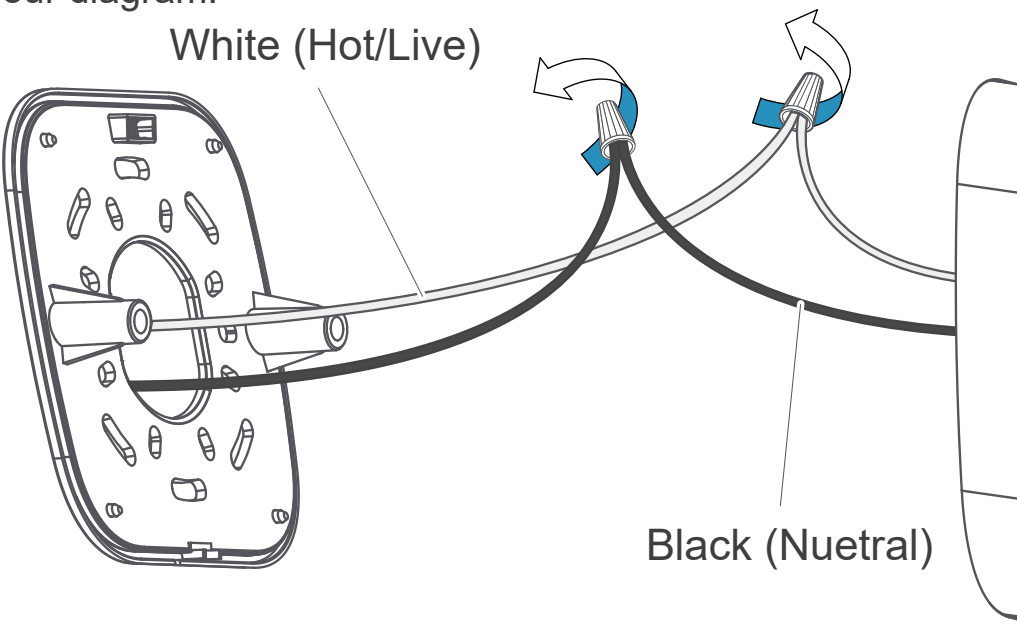

If you don't know which is neutral or hot wire coming out of the junction box, consult with a licensed electrician.

Step 7 - Mount Bracket

Turn screws clockwise to tighten.



Once screws are tighten insert rubber seals caps as diagram shown.



Step 8 - To Lock the Angle of the Floodlight and Camera in Place.

Tighten the screw to lock the light angle in position you desire.



Tighten the screw to lock the camera angle in the position you desire.

Do not remove the LED Floodlight or IR camera from Its ball socket base. This will sever the wiring and break the device.

Step 9 - Restore Power at the Breaker


After restoring power, The light on the floodlight device will stay on for 3to 5 seconds then the green LED will begin to Flash you will be now ready to begin the set-up process




Please switch it from [OFF] to [ON]

Step 10 - App Setup

Open the “Xodo ProCam”, follow the user manual to connect Floodlight Cam to your WiFi network.

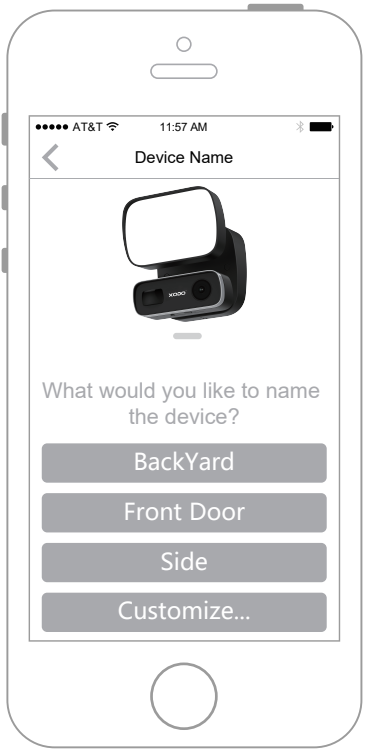



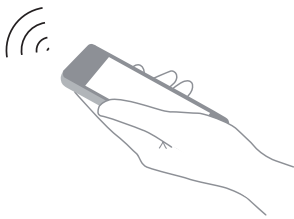


Connect Smart Floodlight Pro-Cam to Your “Xodo ProCam” APP

1. Installation of Contixo “Xodo ProCam” App

Please install the “Xodo ProCam” APP on the below devices before using.

One smartphone, or tablet (Mac or Windows PC is NOT Acceptable) Smart Floodlight Pro-Cam is supported on IOS 10.0 or newer and Android OS 4.4 or Newer

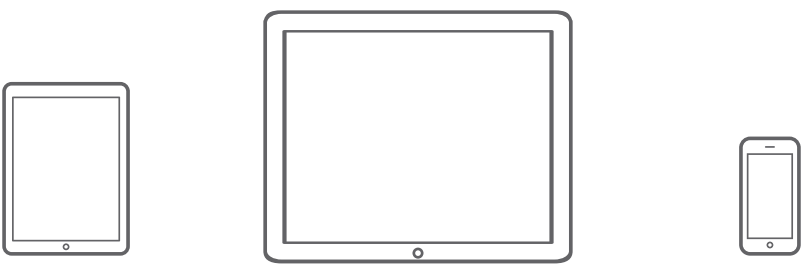

Android phone iPad iPhone


Wi-Fi Router

- **Device can only connect to 2.4Ghz Wi-Fi router.**

- Distance between the router and the device should be within 10 feet during APP configuration.

- Please don't use foriegn or special characters such as chinese characters or symbols when naming the WiFi.


- Please don't use foriegn or special characters such as chinese characters or symbols in or as the WiFi password. Wi-Fi password can not be empty or blank.

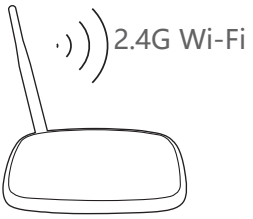


Wi-Fi Router

2. Operation Instruction(IMPORTANT! Please Read.)

After installing the Smart Floodlight Pro-Cam, turn on the power and wait for about 40 seconds,you can move on to next step after the first chime or tone.

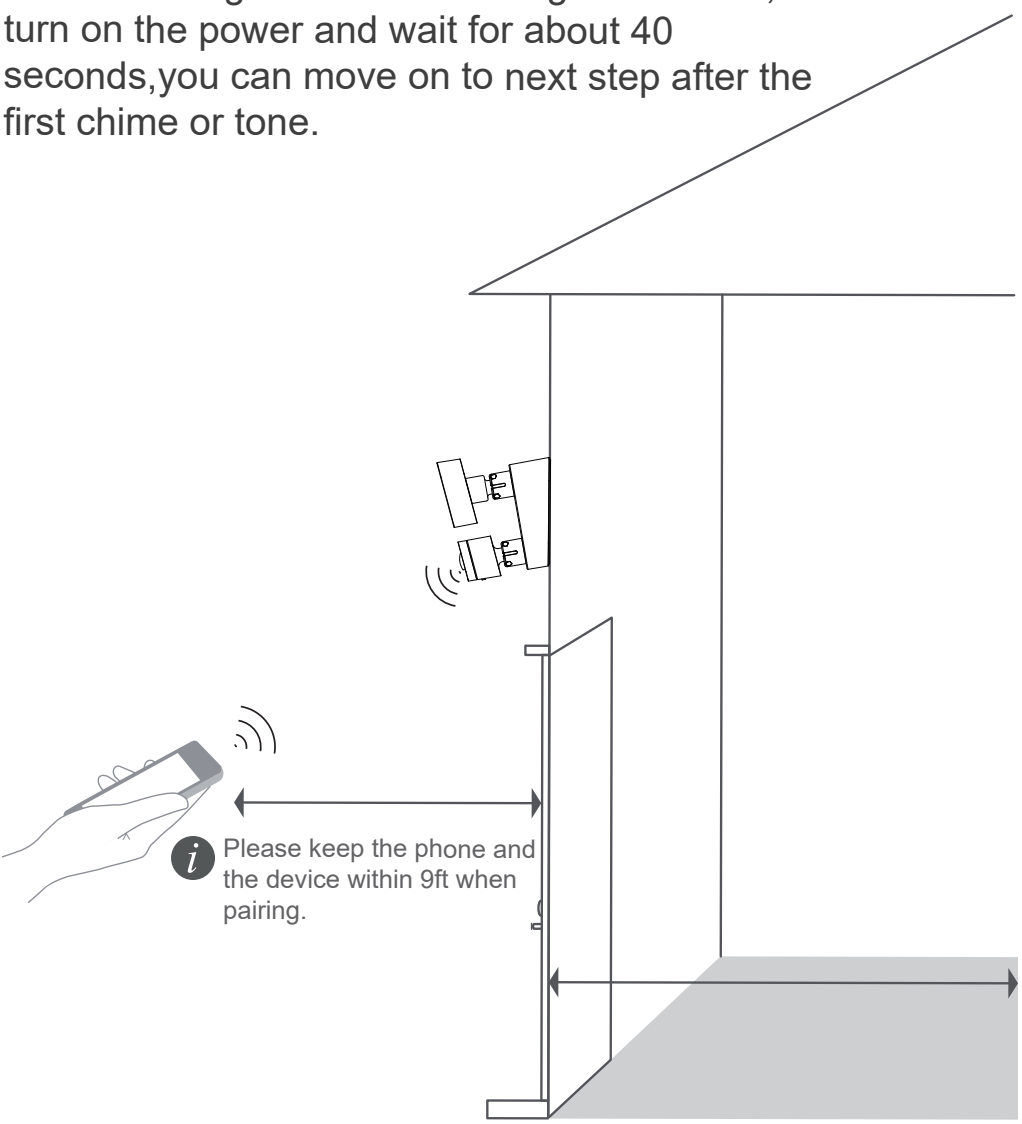


When your first setting up and pairing or confirguring your phone with the device, please keep your phone, WiFi router and the device as close as possible, otherwise, pairing could fail.

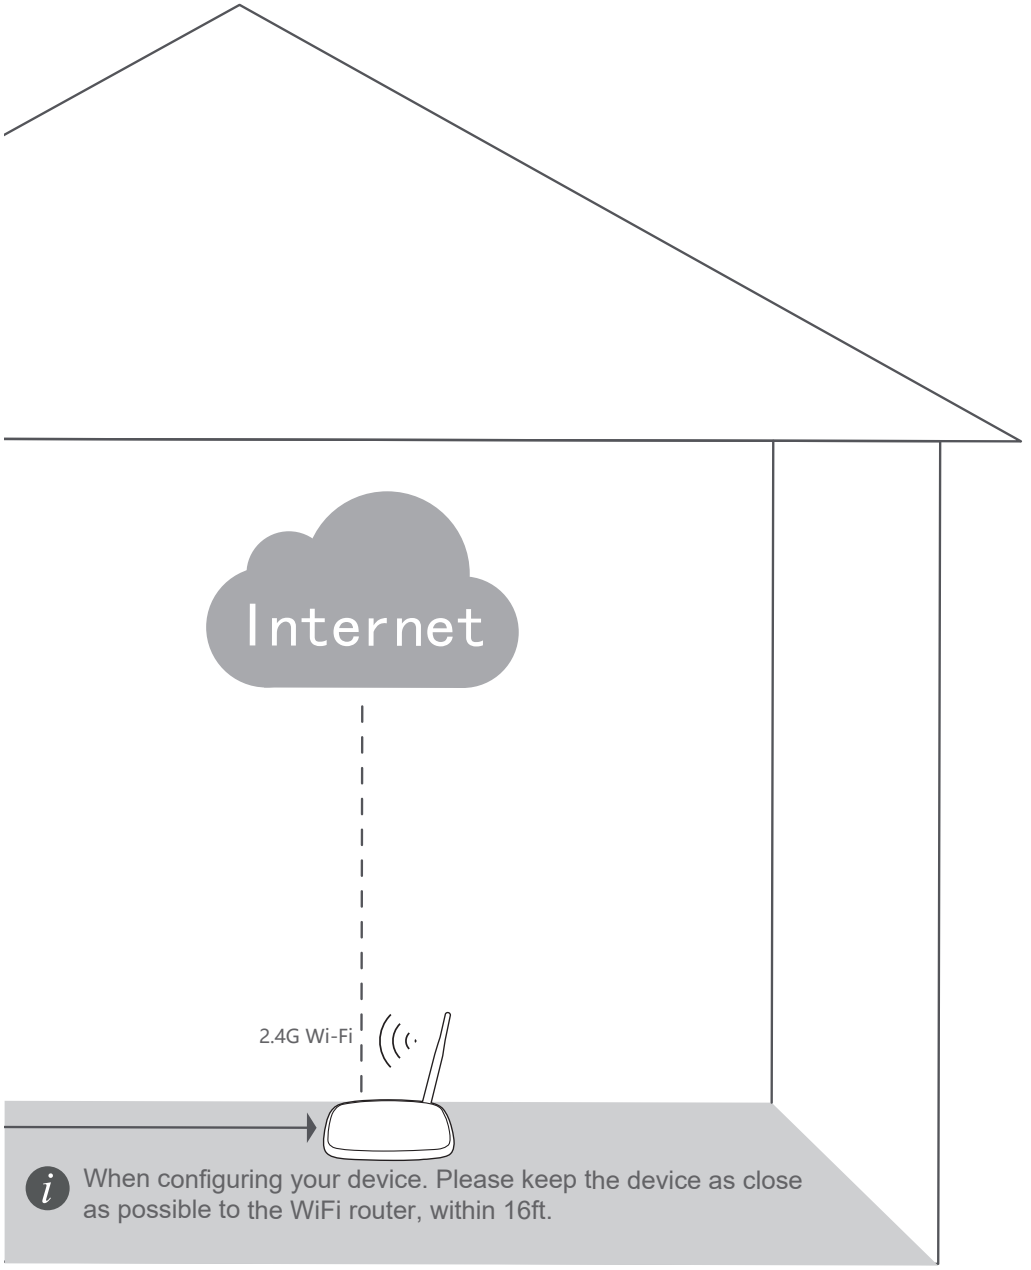


3. Configure Device

Open the “Xodo ProCam” App


1 Click " + "

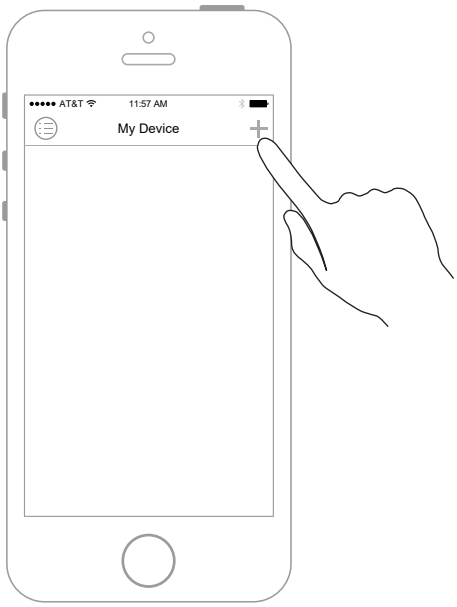


2 Click "First Add"

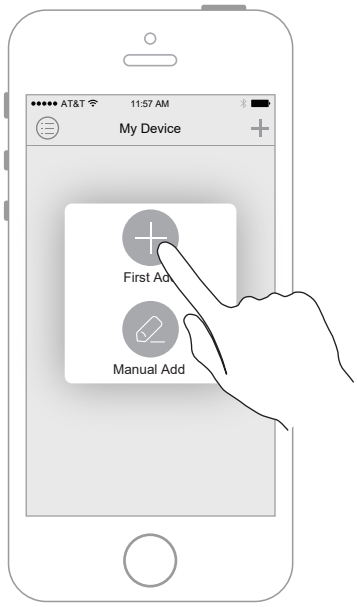


3 Name the device

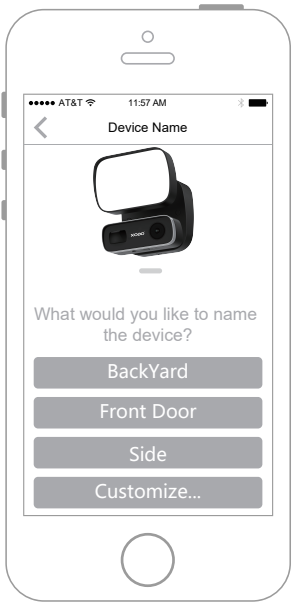


4 Scan the QR code on the back of the device

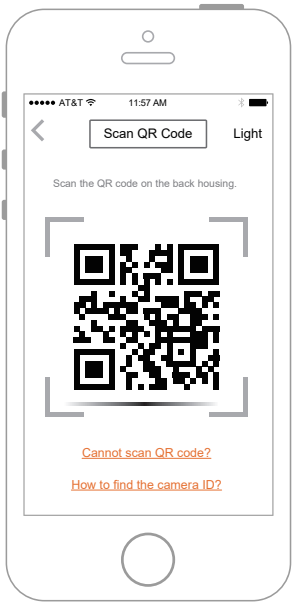

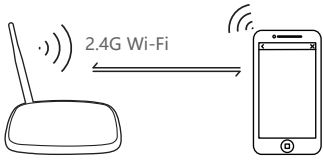

Make sure your smart phone is connected to the WiFi router before configuring


Option 1:

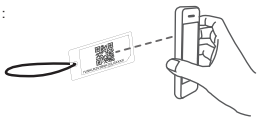

Option 2:



WI-FI Connection

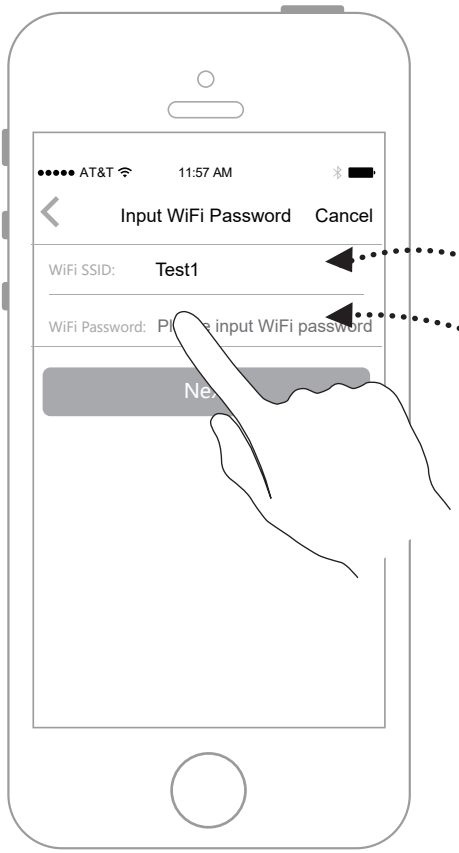


5 The WiFi Input the correct password.

WARNING


Don't use foriegn characters or special symbols to name the WiFi.

Don't use foriegn characters or special symbols as or in the WiFi password.


Please make sure input password properly(Password is CaSe sEnsiTivE)

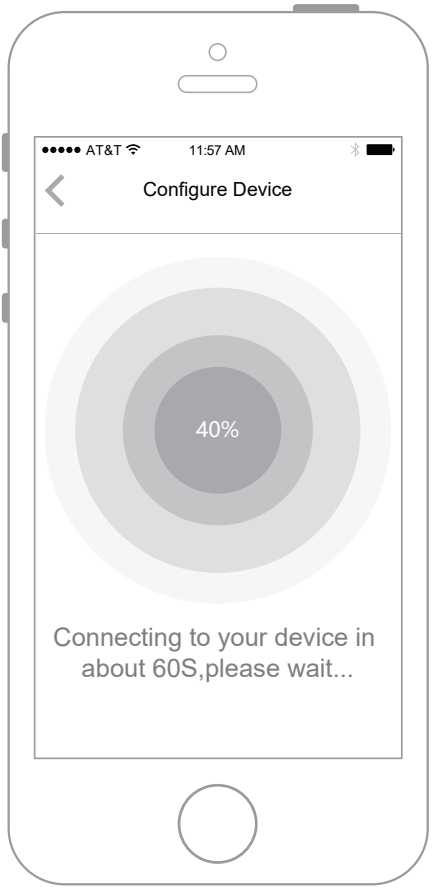

6 For Intial setup only: please put your smartphone or tablet PC close to the device within 9ft, then press to configure.

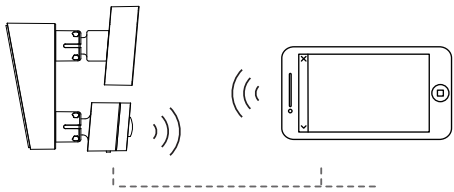


Adjust the volume of smartphone or tablet PC to maximum.

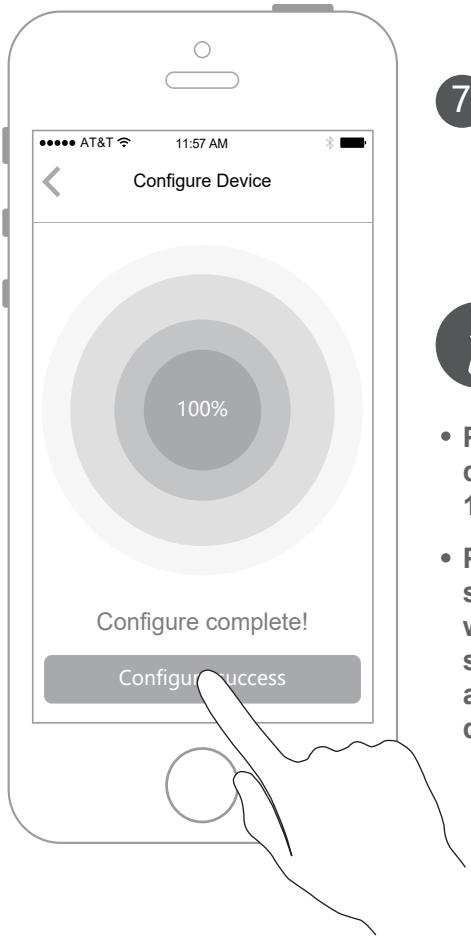

7 Initial configuration,this process should take around 1 minute to complete
The green LED light will be blinking while it is completing the configuration

If Configuration Failed


- **Please keep the distance between the device and the WiFi router within 16.5 feet.**
- **Press and hold [RESET] Button for 5 seconds, until you hear the ding. this will restore the device to factory default settings, repeat the configuration again. please see below diagram for reference**

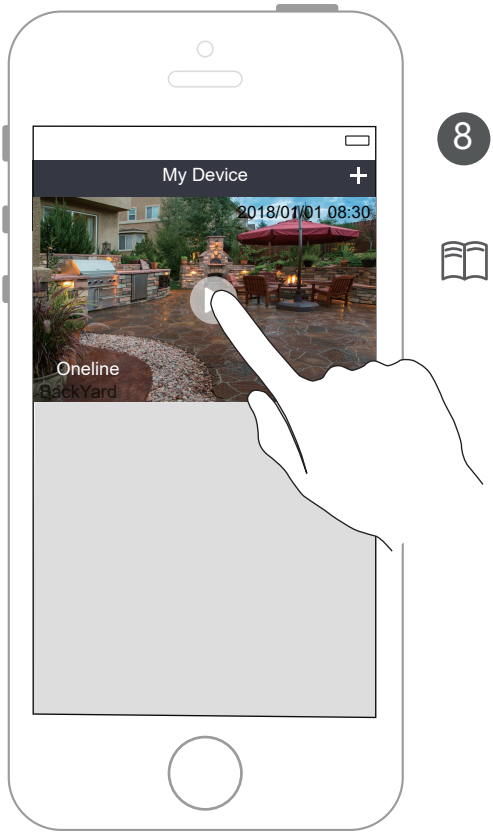

8 Click the screen to watch the video.

Note: in case of the connection is unstable or video is frozen. you may want to restart the “Xodo ProCam” App or check you WI-FI connection where ever the device is operating from. If This doesn't work you can restart your phone.

Video APP Layout

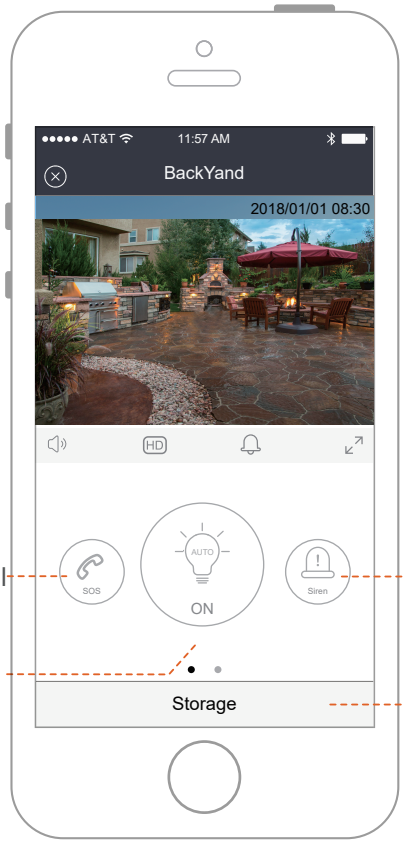


Make an emergency call

Siren(Activate the 110 decibel siren)

Light switch

To view the photos and videos

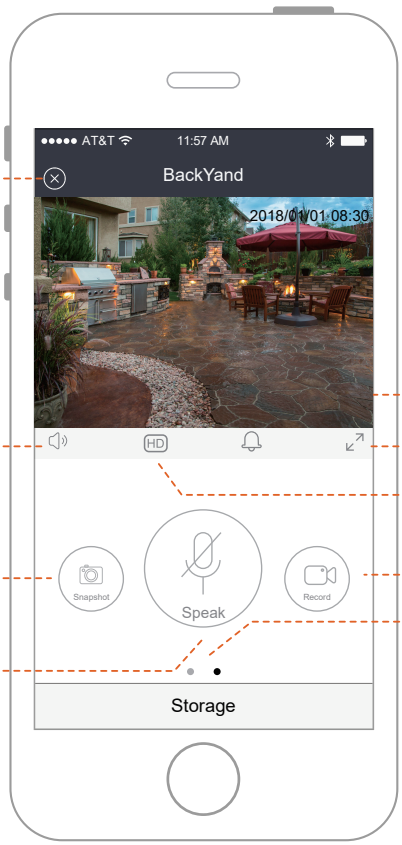

Return

Ring the bell

Listen

Full screen

LD/HD Switch

Snapshot

Recording

Switch display (Sliding switch function)

Speak ((Hold to speak)

Tips on WIFI Configuration

1. Make sure the device is powered on.
2. Make sure the the E8 floodlight is ready for configuration




Green LED Indicator Status:




● OFF No power or WiFi connected	● ON Device is starting
Fast blink WiFi disconnected	Slow blink Waiting connect to WiFi


3. Make sure the phone is connected to WiFi， and the volume is adjusted to maximum.

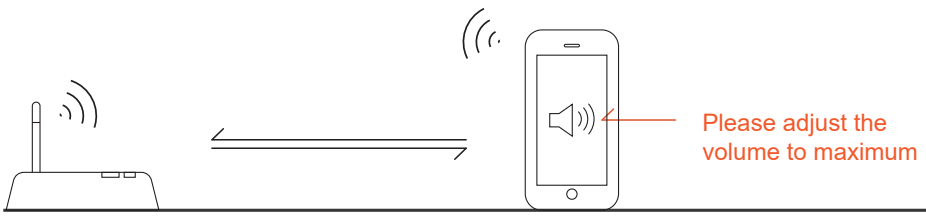

4. Make sure your using the 2.4GHz router. (If you don't know how to switch from 5Ghz to 2.4Ghz, please consult to the service provider of your Wifi router .)

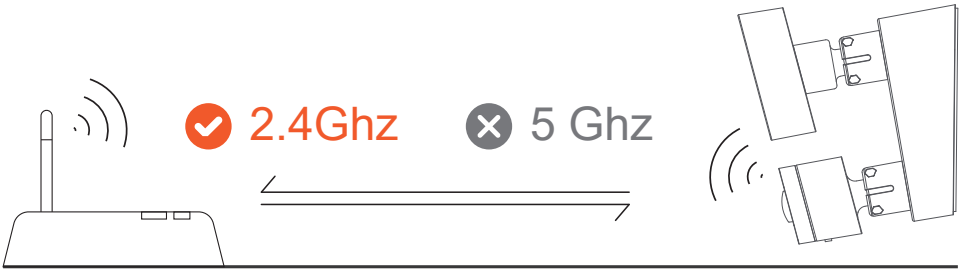

5. Make sure the device, your mobile phone, and router are within 5 meters (16 feet) when configuring. please refer to below diagram

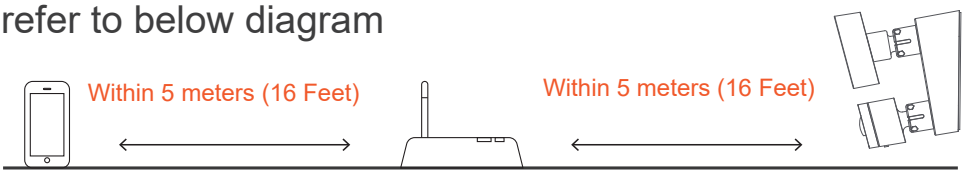

Make sure that the router's WiFi password is correct and there are no special characters.Such as %$#@* ect (WiFi password cannot be blank) .

Tips on WIFI Configuration

If failed again, please:

1. After the device is powered on, press and hold the " Reset" button for 5 seconds wait for the ding, this will reset the device, then release the button and wait 40 seconds for the chime or tone to sound. you can move on to next step after the first chime or tone. you will hear the sound 3 times.



2. Reboot the router.


1. Open App, Click "+" ,then click "Manual Input ID".

2. Input the device UID ,you can find the QR cord on backside of the camera,Then input the password and "Save".(Default password is "admin")


3. If still can not connect to Wi-Fi , please contact your vendor

FAQ

For more questions, please refer to FAQ list in our APP

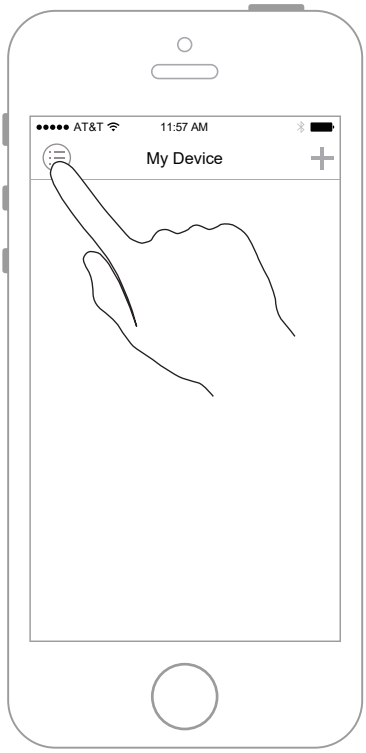

1 Open the App, then click "☰"

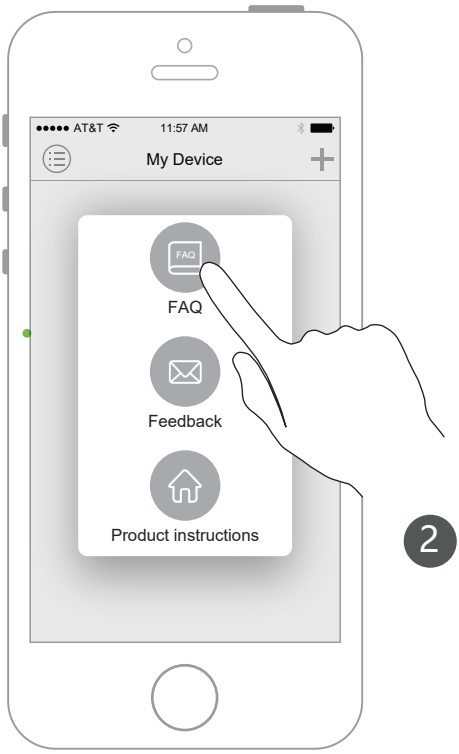

2 Click "FAQ" enter FAQ page

Micro SD Card User Caution

- **To ensure SD card video recording works properly, we recommend a class 10 or above version high speed Micro SD card, Supported Micro SD Card up to 64GB**

- **To make sure the device works normally, please properly format the SD card before first time use.**

- **Before inserting or removing the SD card, please power off the device. Insert the SD card properly into the slot as shown in the diagram below and then re-insert the weather resistant rubber cap to protect the SD card.**





Correct

Done

After inserting the SD card, re-insert the weather resistant rubber cap to protect the SD card.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

XODO®

About the User Manual:

The user manual is used as a guide.

The photos, graphic, charts and illustrations provided in the user Manual are used for explanation and interpretation only, which may be different for specific products, please refer to the real object.

The user manual maybe updated because of the products version upgrade or other requirements, if you need the latest version of the user manual, please contact customer service for the latest version of the user manual.

CONTACT INFORMATION
E-Mail: support@contixo.com
Website: www.contixo.com

©2019 Contixo Inc. All rights reserved. XODO®, the Contixo logo and associated characters, trademarks and design elements are owned and licensed by Contixo Company.