
KOBALT®

ITEM #9054609
MODEL #A081006

12-AMP 13-IN CORDED SNOW SHOVEL

KOBALT® and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ATTACH YOUR RECEIPT HERE

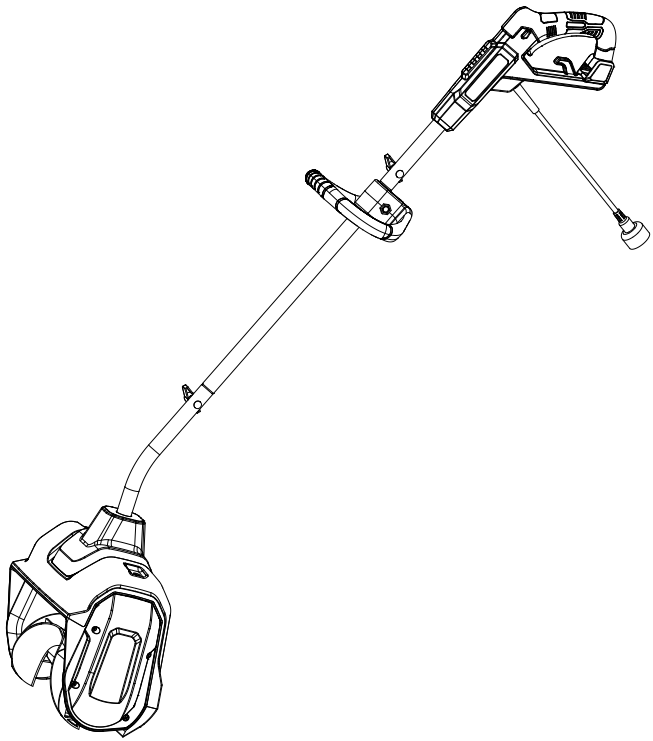

Serial Number _____

Purchase Date _____

Thank you for purchasing this **KOBALT** product.
Questions, problems or missing parts?
Before returning. contact us on:
888-356-2258, 8 a.m.-8 p.m., EST, Monday-Sunday

SG26238

TABLE OF CONTENTS


Product Specifications....2
Package Contents....3
Symbols....4
Safety Information....5
Assembly Instructions....10
Operating Instructions....11
Care And Maintenance....14
Troubleshooting....19
Warranty....20
Replacement Parts List....21

PRODUCT SPECIFICATIONS

SPECIFICATIONS	
Model	A081006
Motor	12 amp
Rated Voltage	120 V ~ 60 Hz
No Load Speed	2000 rpm
Clearing Width	13-in
Depth of Snow Cut	8-in
Max. Throw Distance	26 ft
Max. Plowing Capacity	480 lbs/min
Auger	2-blade plastic auger
Net Weight	12.8 lbs

PACKAGE CONTENTS

Package Contents
Read the owner's manual and safety instructions carefully before operating the snow shovel. Compare the illustration below to the snow shovel in order to familiarize yourself with the location of the various controls and adjustments. Save this manual for future reference.

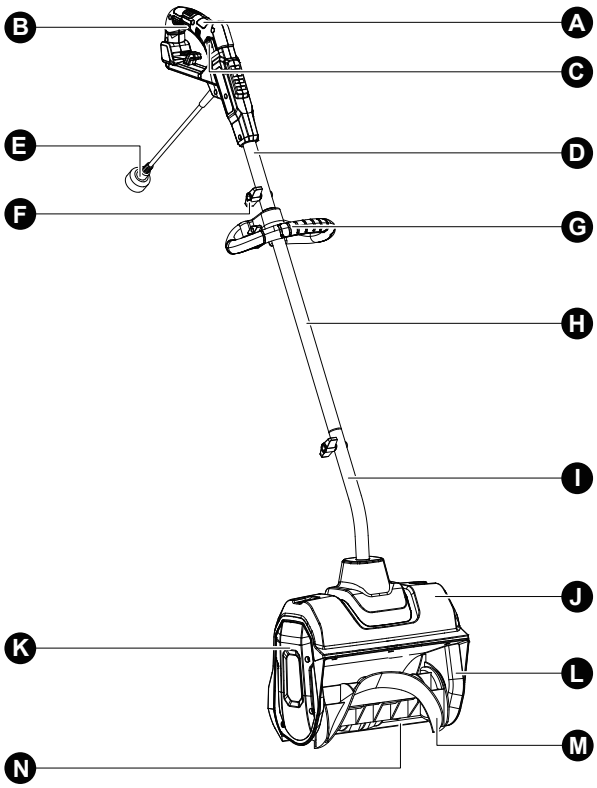

PART	DESCRIPTION
A	Handle
B	Switch Trigger
C	Switch Button
D	Upper Tube
E	Power Cord
F	Knob
G	Auxiliary Handle

PART	DESCRIPTION
H	Middle Tube
I	Lower Tube
J	Upper Cover
K	Right Side Cover
L	Snow Scraper Cover
M	Auger
N	Scraper Bar

SYMBOLS

The following table depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate.

SYMBOLS	DESIGNATION/EXPLANATION
	READ THE OPERATOR'S MANUAL(S) – Read, understand, and follow all instructions in the user manual(s) before attempting to assemble and operate.
	SAFETY ALERT – Indicates a precaution, a warning, or a danger.
	Wear safety gloves during use to protect hands.
	Always keep the power cable away from heat sources, oils, or sharp edges. Immediately remove plug from the mains if the cable is damaged, frayed, or entangled.
	WARNING! Electrical shock hazard.
	DOUBLE INSULATION – When servicing, use only identical replacement parts.
	WARNING! Turn the machine OFF and disconnect it from the power supply before inspecting, cleaning, changing accessories, or conducting any other maintenance task.
	DANGER! Cutting/ dismemberment hazard – Keep hands away from the rotating auger. Do not use hands to unclog rotor housing. Stop motor before removing debris.

SYMBOLS	DESIGNATION/EXPLANATION
	Wear hearing protection. Wear eye protection. Wear breathing protection.
	WARNING! Do not expose the unit to rain or wet conditions.
	Keep the flexible power supply cord away from the cutting blades.
	Keep bystanders and children a safe distance (at least 11 yd/10 m) away from the work area.
	DANGER! Cutting/ dismemberment hazard - Keep feet away from the rotating auger.
	CAUTION! Beware of stones and other foreign objects that could be thrown from the appliance.
	Wear safety footwear at all times to provide protection against objects that may accidentally fall on feet.
	The rotating part will continuously run for several seconds after you turn off the machine.

⚠ SAFETY INFORMATION

All Operators Must Read These Instructions Before Use

⚠ DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

⚠ IMPORTANT

Following this instruction will increase satisfaction with the tool.

GENERAL SAFETY RULES

Notice the personal safety alert symbol ⚠ used in this manual to draw your attention to a WARNING given along with the particular operating instruction. This means that the operation requires special ATTENTION, CAUTION, and AWARENESS.

- Replacement parts – When servicing this unit, use only identical replacement parts. Replace or repair damaged cords immediately. Do not use on gravel surfaces unless the snow shovel is adjusted for such surfaces in accordance with the operator's manual.
- Keep children, bystanders and pets away – All spectators, including pets, should be kept a safe distance away from the work area.
- Dress properly – Do not wear loose articles of clothing or jewelry. They can become caught in moving parts. Wear rubber boots. The electric snow shovel should not be operated in the hand-held position except when the instructions provided in this manual deem such use permissible
- Wear rubber boots when operating the snow mower.
- Extension cords – To prevent disconnection of the appliance cord from the extension cord during operation, secure the extension cord to the product.

⚠ WARNING

To prevent electric shock, use only with an extension cord suitable for outdoor use.

- Avoid accidental starting – Do not carry the electric snow shovel with your finger on the switch. Make sure the switch is off before plugging in the unit. If the cord is damaged in any manner during operation, pull the extension cord from the wall receptacle.
- If cord is damaged in any manner while plugged in, pull extension cord from wall receptacle.
- Do not abuse the cord – Never carry the electric snow shovel by the cord or yank the cord to disconnect it from the receptacle. Keep the cord away from heat, oil and sharp edges.
- Moving parts – Keep hands and feet away from moving parts. Keep guards in place and in proper working order.
- Do not force the tool – It will perform better with less likelihood of personal or mechanical injury if it is used at the rate for which it was designed.
- Do not overreach – Keep proper footing and balance at all times. If the electric snow shovel strikes a foreign object, follow these steps:
  - · Stop the electric snow shovel.
  - · Unplug power cord
  - · Inspect for damage.
  - · Repair any damage before restarting and operating the snow shovel.

⚠ SAFETY INFORMATION

- Disconnect the tool –Disconnect the electric snow shovel from the power supply when it is not in use, before servicing it, when changing accessories and when performing any other maintenance task.
- Store idle tool indoors – When not in use, the electric snow shovel should be stored indoors in a dry, locked place out of the reach of children.
- Maintain the electric snow shovel with care – Follow the applicable maintenance instructions for replacing parts and changing accessories. Lubrication is not required.
- This electric snow shovel meets or exceeds the B71.3 specifications of the American National Standards Institute in effect at the time of production. Read and understand the contents of this manual before you start the motor.

⚠ WARNING

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
Improperly using or maintaining this electric snow shovel could result in injury or death. To reduce this potential, comply with the following safety instructions.

TRAINING

- Read, understand and follow all instructions on the machine and in the manual before operating this unit. Thoroughly familiarize yourself with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.
- Children should never be allowed access to the equipment.Adults should never operate the equipment without carefully reading and understanding these instructions.
- Keep the area of operation clear of all persons, particularly small children and pets.
- Exercise caution to avoid slipping or falling.

PREPARATION

- Thoroughly inspect the area where the equipment is to be used and remove all doormats, sleds, boards, wires and other foreign objects.
- Do not operate the equipment without wearing adequate winter garments. Avoid loose fitting articles of clothing that can become caught in moving parts. Wear footwear that will improve footing on slippery surfaces.
- Do not attempt to clear snow from a gravel or crushed rock surface. This product is intended for use only on paved surfaces.
- Never attempt to make any adjustments while the motor is running (except when specifically recommended by the manufacturer).
- Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect your eyes from foreign objects that may be thrown from the machine.

OPERATION

- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic.
- After striking a foreign object, stop the motor. Thoroughly inspect the cordless snow shovel for any damage, and repair the damage before restarting and operating the cordless snow shovel.
- If the unit should start to vibrate abnormally, stop the motor and check the unit immediately to ascertain the cause. Vibration is generally a sign of trouble.
- Stop the motor and remove the battery whenever you leave the operating position, when transporting the unit, before unclogging the rotor blade housing and when making any repairs, adjustments or inspections to the unit.
- When cleaning, repairing or inspecting the cordless snow shovel, make sure that all moving parts have come to a complete stop before beginning work.
- Exercise extreme caution when operating on slopes.

⚠ SAFETY INFORMATION

- Never operate the cordless snow shovel without proper guards and other safety devices in place and in proper working order.
- Never direct the discharge toward people or areas where property damage can occur. Keep children, pets and other bystanders away from the work area.
- Do not overload the machine capacity by attempting to clear snow at too fast a rate.
- Look behind and use care when backing up with the cordless snow shovel.
- Never operate the cordless snow shovel without good visibility or light. Always be sure of your footing, and keep a firm hold on the handles. Walk, never run, with the unit.

CLEARING A CLOGGED ROTOR HOUSING

Hand contact with the rotating rotor blades inside the rotor housing is the most common cause of injury associated with cordless snow shovels. Never use your hands to clear a clogged rotor housing.

To clear the rotor housing:

- Shut the motor off and remove the battery.
- Wait 10 seconds to be sure the rotor blades have come to a complete stop.
- Always use a clean-out tool, not your hands, to free the rotating blades.

MAINTENANCE AND STORAGE

- Check all fasteners at frequent intervals for proper tightness to ensure that the equipment is in safe working condition.
- Always refer to the operator's manual for important details, such as how to properly store your cordless snow shovel for an extended period of time.
- Maintain or replace safety and instruction labels as needed.
- Run the machine a few minutes after throwing snow to prevent the rotor blades from freezing.

DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a doubleinsulated appliance, nor should a means for grounding be added to the appliance. Servicing a doubleinsulated appliance requires extreme care and knowledge of the system, and should be performed only by qualified service personnel at an authorized dealer.

Replacement parts for a doubleinsulated appliance must be identical to the parts they replace. A doubleinsulated appliance is marked with the words "Double Insulation" or "Double Insulated." The symbol ⧈ (square within a square) may also be marked on the appliance.

⧈ DOUBLE-INSULATED: GROUNDING NOT REQUIRED. WHEN SERVICING, USE ONLY IDENTICAL

This electric snow shovel is doubleinsulated, eliminating the need for a separate grounding system. Use only identical replacement parts. Read the instructions before servicing double-insulated appliances. Use this snow shovel only as described in this manual.

ELECTRICAL SAFETY

- Ground fault circuit interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for this electric snow shovel. Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
- To reduce the risk of electric shock, this appliance has a polarized plug (i.e. one blade is wider than the other). Use this appliance only with a polarized UL-, CSA- or ETL-listed extension cord recommended for outdoor, allweather use.
- The appliance plug will fit into a polarized extension cord only one way. If the appliance plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. The extension cord plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the proper wall outlet. Do not modify the appliance plug, extension cord receptacle or

extension cord plug in any way.

• To prevent electric shock, use only with an extension cord suitable for outdoor use.
Before use, check that the extension cord is in good condition. When using an extension cord, make sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.

⚠ WARNING ⚠


Electric shock may cause SEVERE INJURY or DEATH. Heed these warnings:
Select an extension cord that is:
• Specifically labelled for outdoor use.
• Of a wire size (AWG) heavy enough to carry the current the full length of the cable according to the table below.
• Select the gauge of extension cord based on the desired length and the electrical specifications found on the product label. These are the recommended gauges based on the length of cord.
• Make sure the insulation is free of cracks and that the plugs on both ends are undamaged.

EXTENSION CORD CHART

Extension Cord Length	Up to 50 ft (15 m)	+50 ft - 100 ft (+15 m - 30 m)
Wire Gauge (A.W.G.):	14	12

• To prevent the equipment cord from disconnecting from the extension cord during operation, make a knot with the two cords as shown in Table 1.

Table 1. Method of Securing Extension Cord

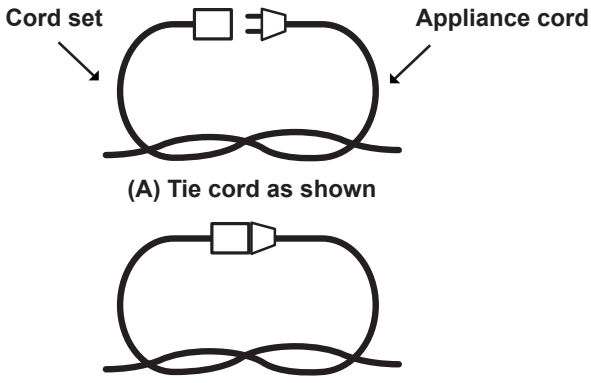

(A) Tie cord as shown

(B) Connect plug and receptacle

• Do not abuse the cord. Never pull the snow blower by the cord or yank the cord to disconnect it from the receptacle. Keep the cord away from heat, oil, and sharp edges.

PURPOSE

• This corded snow shovel is intended for removing and clearing away snow from pavements, gardens,

driveways and other groundlevel surfaces. Do not use it for other purposes.

SAVE THIS INSTRUCTIONS

⚠ Pre-Assembly

Carefully remove the corded snow shovel to see that all items are supplied.

Inspect the product carefully to ‵ake sure no breakage or damage occurred during shipping. If you find damaged or missing parts,
DO NOT return the unit to the store. Please call the customer service center at 888-356-2258.

⚠ IMPORTANT


The equipment and packaging material are not toys. Do not let children play with plastic bags, foils, or small parts. These items can be swallowed and pose a suffocation risk!

NOTE: Do not discard the shipping carton and packaging material until you are ready to use your new electric pressure washer. The packaging is made of recyclable materials. Properly dispose of these materials in accordance with local regulations.


ASSEMBLY INSTRUCTIONS

CONNECTING THE TUBES


1. Connect the upper tube assembly with the middle tube assembly. Align the screw holes.

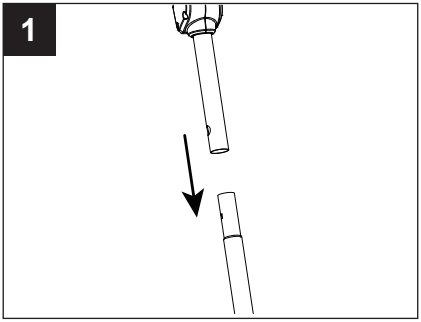


2. Insert a bolt through the aligned holes in the tubes and secure the other end with a knob. Twist until tight.

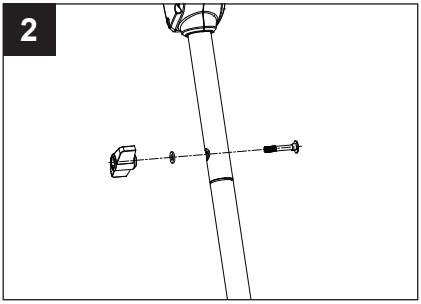

3. Connect the upper tube and middle tube assembly with the lower tube assembly. Align the screw holes.

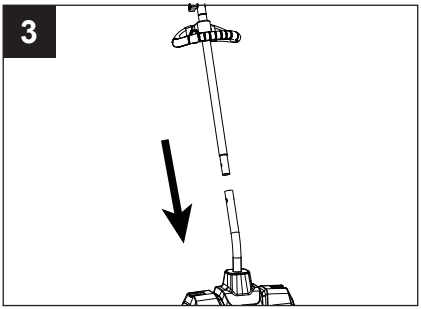

4. Insert a bolt through the aligned holes in the tubes and secure the other end with a knob. Twist until tight.

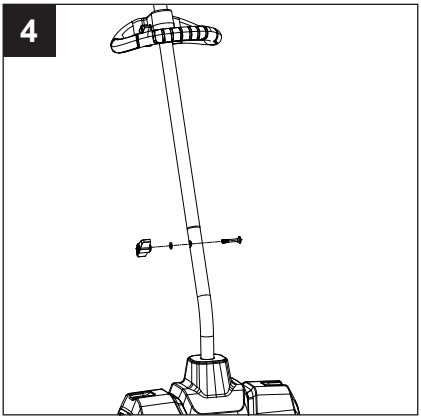


NOTE: To avoid the wiring inside the tubes intervening the assembly, make sure to connect the upper tube assembly and the middle tube assembly first. You may have to carefully move the wiring inside the tubes to one side when inserting the bolt.

ASSEMBLY INSTRUCTIONS

5. Positioning the Auxiliary Handle Loosen the auxiliary handle knob.Move the auxiliary handle to a comfortable working position. Tighten the auxiliary handle knob.

NOTE: In order to prevent the auxiliary handle from moving around or sliding on the tube, be sure to tighten securely.

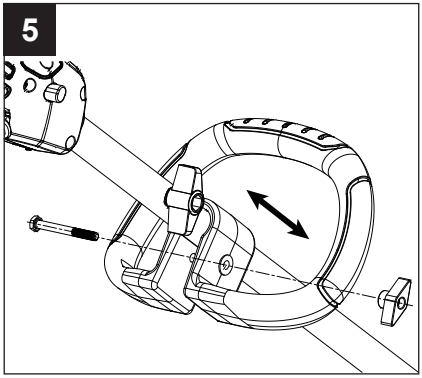

OPERATING INSTRUCTIONS

⚠ WARNING


Keep the area to be cleared free of stones, toys or other foreign objects that the rotor blades might pick up and throw. Such items could be covered by snow and are easy to overlook, so be sure to conduct a thorough inspection of the area before beginning work

⚠ WARNING

This corded snow shovel is intended for outdoor, residential use only. Do not use this appliance indoors or for commercial or industrial purposes.

CONNECTING TO A POWER SOURCE

6. To reduce the risk of electric shock, this equipment has a polarized plug (i.e. one blade is wider than the other).

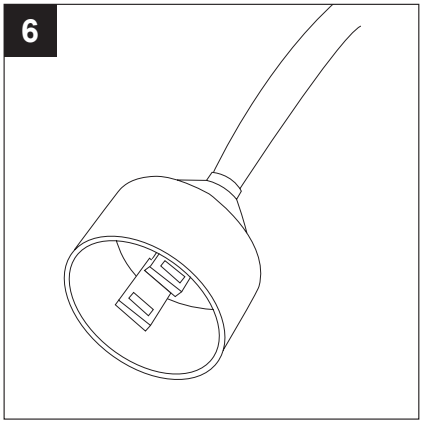

Use this equipment only with a polarized UL-, CSA- or ETL listed extension cord recommended for outdoor, all-weather use.

The equipment plug will fit into a polarized extension cord only one way. If the equipment plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet.

The extension cord plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified


electrician to install the proper wall outlet. Do not modify the equipment plug, extension cord receptacle or extension cord plug in any way.


NOTE: Check the extension cord frequently during use for holes or cracks in the insulation. Do not use a damaged cord. Do not run the cord throughstanding water or wet grass. Use only an extension cord recommended for outdoor use.

SECURING THE EXTENSION CORD

7. Make a loop with the extension cord.

8. Insert the loop through the opening in the back of the upper handle and secure the loop onto the extension cord restraint hook.

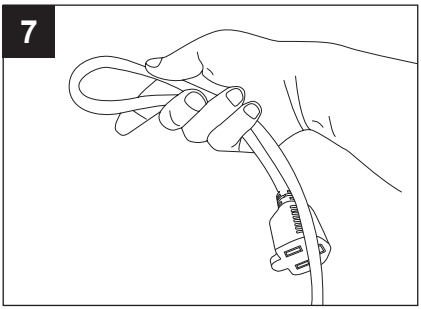


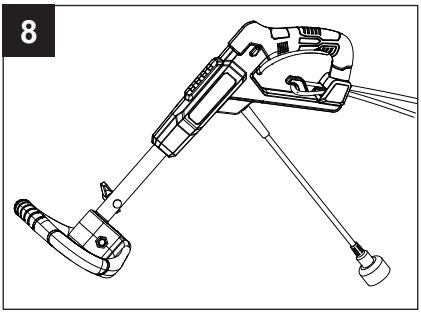

9. Connect the extension cord to the equipment cord.


NOTE: Securing the extension cord in this way helps to prevent you from accidentally disconnecting the extension cord from the equipment during operation.

Plug the extension cord into a wall outlet.
Keep the area to be cleared free of stones, toys or other foreign objects that the rotor blades might pick up and throw. Such items could be covered by snow and are easy to overlook, so be sure to conduct a thorough inspection of the area before beginning work.

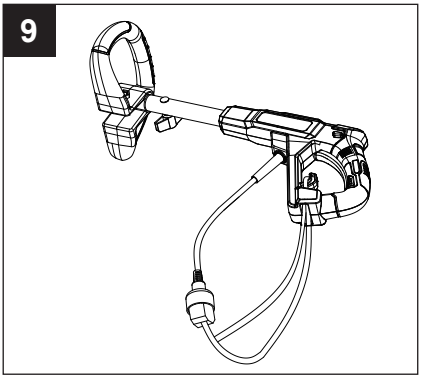

STARTING AND STOPPING

10. To start the corded snow shovel, push and hold the switch button on the top of the handle grip with your thumb and then squeeze the trigger with your fingers. Once the machine powers on, you can release the switch button and proceed with operation.

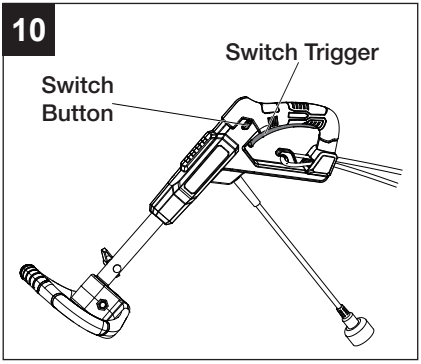

OPERATING INSTRUCTIONS

To stop the corded snow shovel, release the trigger.

OPERATING TIPS

1. Start the corded snow shovel. Push the shovel forward at a comfortable rate, yet slow enough to clear the path completely. The clearing width of the snow shovel and the depth of snowfall should dictate your forward speed.
2. Direct the snow discharge to the right or to the left by holding the corded snow shovel at a slight angle.
3. To remove snow most efficiently, throw the snow downwind and slightly overlap each swath.
4. If you need to clear snow from a crushed rock or gravel surface, push down on the handle to clear the scraper of any loose material that the rotor blades could throw.
5. This corded snow shovel cuts a path 13 in. (33 cm) wide and up to 6 in. (15 cm) deep in one pass.
6. When clearing deeper drifts, hold the corded snow shovel by the upper and lower handles and use a swinging or sweeping motion. Remove up to 6 in. (15 cm) of snow with each pass and repeat as many times as needed.
7. Keep the cord clear of obstructions, sharp objects and the rotating auger. Do not pull sharply on the cord or abuse it in any manner. Frequently inspect the cord for signs of damage. If damage is found, replace the cord immediately.
8. Disconnect the extension cord after using the corded snow shovel. Hang the extension cord with the shovel so it will not be misplaced or damaged.

⚠ WARNING


Disconnect the extension cord before performing any maintenance task. If the extension cord is plugged into the equipment, someone could accidentally turn on the equipment while you are performing maintenance on it, which could result in serious personal injury.

⚠ WARNING


Disconnect the power supply to the corded snow shovel before performing any maintenance task.

REPLACING THE AUGER


11. Disassemble the left side cover by removing the four screws that hold it in place.

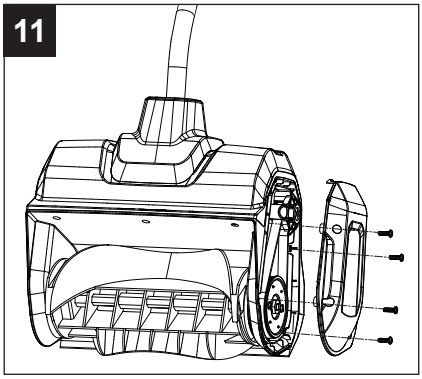


12. Disassemble the bearing bracket by removing the four screws that hold it in place.

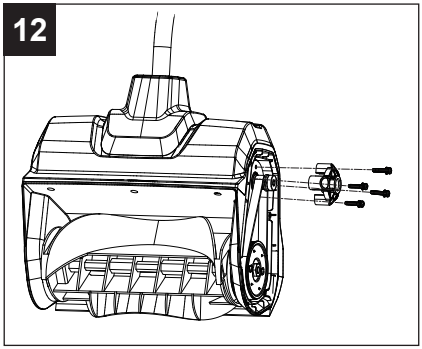


13 Remove the belt from the drive wheel.

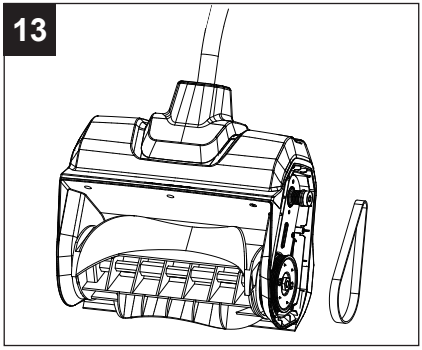


14. Remove the driven wheel and the rubber brake pad.

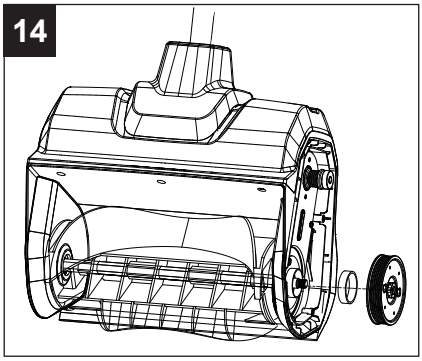


15. Remove the three screws and the bracket.

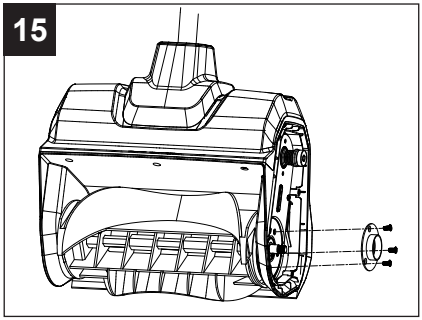


16. Disassemble the right side cover by removing the four screws that hold it in place.

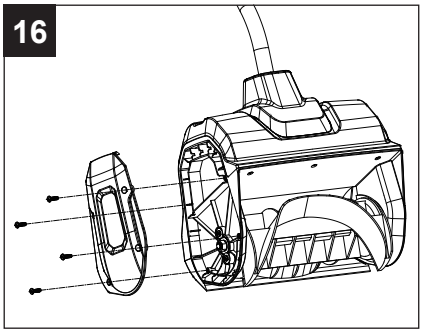


17. Use one hand to secure the auger, at the same time, use the other hand to remove the auger assembly nut on the right side.

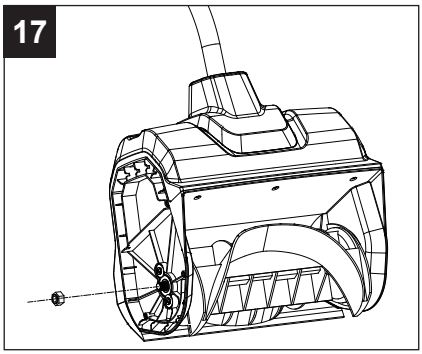


18. From the left side, remove the auger axle.

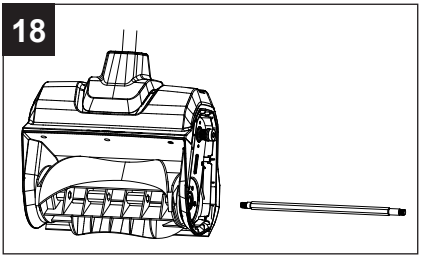

19. Remove the old auger from the housing.

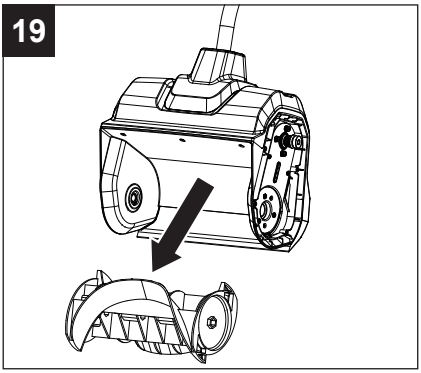


20. Install the replacement auger by following the above steps in reverse order.

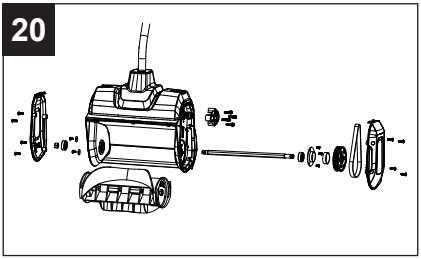


⚠ WARNING

21. When installing the rubber brake pad into the driven wheel, use suitable tools to insert the holes from the upper face of the wheel to open the metal brake pads on the lower face.

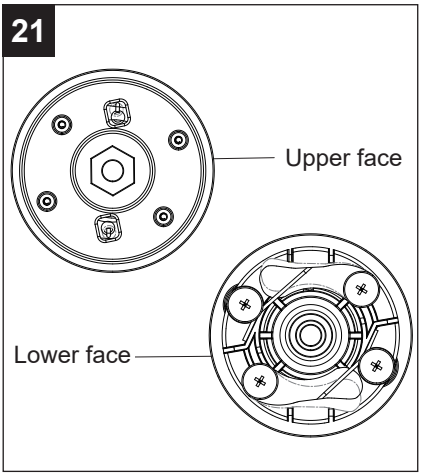


REPLACING THE BELT

22. Disassemble the left side cover by removing the four screws that hold it in place.

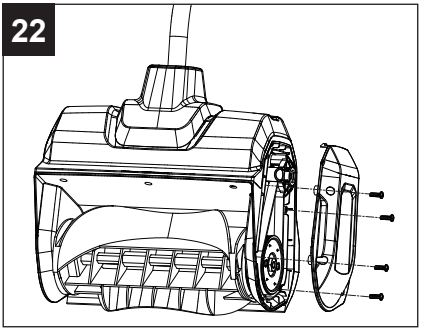


23. To remove the old belt from the driven wheel, use one hand to slowly turn the auger while use the other hand to lift the belt.
Replace a new belt in place. Place the left side cover back into position and refasten the four screws.

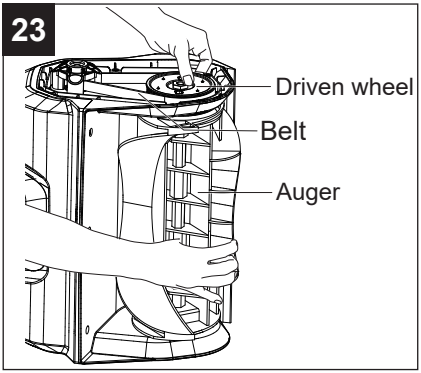


REPLACING THE SCRAPER BAR


24. Turn over the snow shovel. Using a drill, remove the five screws that secure the scraper bar to the base of the machine.

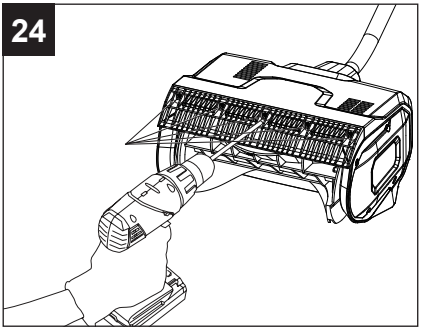

25. Remove the old scraper bar.

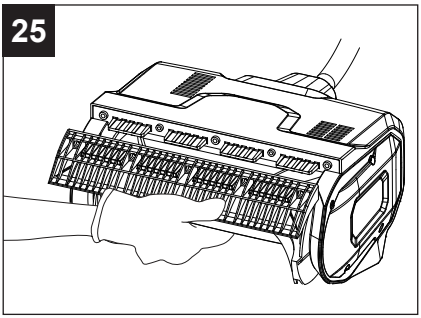

26. Install a new scraper bar and fasten it securely to the housing with the five screws.

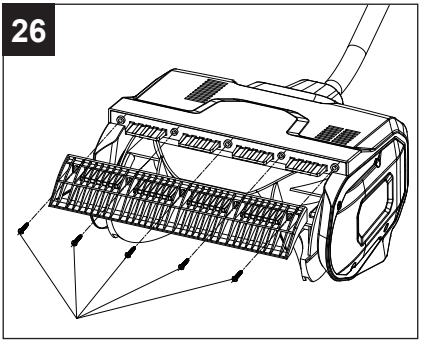

LIFETIME LUBRICATION

1. This corded snow shovel does not need lubrication. All bearings are lubricated at the factory for the life of the product.

TRANSPORTATION

1. Only carry by its handle/grip area.
2. Protect from any heavy impact or strong vibrations which may occur during transportation.
3. Secure to prevent it from slipping or falling over.

STORAGE

1. Examine the corded snow shovel thoroughly for worn, loose or damaged parts.
2. Clean the snow shovel before storing or transporting. Be sure to secure the unit while transporting.
3. Disconnect the power supply to the corded snow shovel before storing.
4. Store the corded snow shovel indoors in a locked, dry place out of the reach of children to prevent unauthorized use or damage.

DISPOSAL

Waste product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Users should clean up dust generated during operation to protect environment.



Electrical products should not be

discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

SERVICE AND SUPPORT

If your **KOBALT®** A081006 corded snow shovel requires service or maintenance, please call the customer service center at 888-356-2258 for assistance.

MODEL AND SERIAL NUMBERS

When contacting the company, reordering parts, or arranging service from an authorized dealer, you will need to provide the model and serial numbers, which can be found on the decal located on the housing of the unit. Copy these numbers into the space provided.

Record the following numbers from the housing or handle of your new product:

Model #:

A 0 8 1 0 0 6

Serial #:

TROUBLESHOOTING

Use this table to see possible solutions for problems with the snow shovel. If these suggestions do not solve the problem, see “Warranty”.

PROBLEM	POSSIBLE CAUSE	RECOMMENDED ACTIONS
The handle is not in position.	The handle is not installed properly.	Make sure the bolts are correctly installed through the handle bars. Check to see if the hand knobs are tightened. Refer to this manual to assemble the handle.
Product does not start.	The snow shovel is unplugged.	Verify that the snow shovel is plugged into an electric outlet.
	The switch is defective.	Replace with a new one.
Machine stops	Fuse has blown.	Replace fuse. Switch off other machines using the same circuit.
	Incorrect mains voltage.	Check that the mains voltage corresponds to specification on the model tag.
	Chute partially blocked.	Clean the chute.
The motor is on, but the auger does not turn.	The belt is damaged.	Replace with a new one.

WARRANTY

5-YEAR LIMITED WARRANTY
This electric snow shovel is warranted to the original purchaser from the original purchase date for five (5) years subject to the warranty coverage described herein. This electric snow shovel is warranted for the original user to be free from defects in material and workmanship.


If you believe that the electric snow shovel is defective at any time during the specified warranty period, simply return the electric snow shovel along with proof of purchase to the place of purchase for a free replacement or refund, or call 888-356-2258 for warranty service.

This warranty is void if: defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; the damage is due to normal wear, damage is due to abuse (including overloading of the tool beyond capacity), improper maintenance, neglect or accident; or the damage is due to the use of the tool after partial failure or use with improper accessories or unauthorized repair or alteration.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

REPLACEMENT PARTS LIST

MODEL: A081006

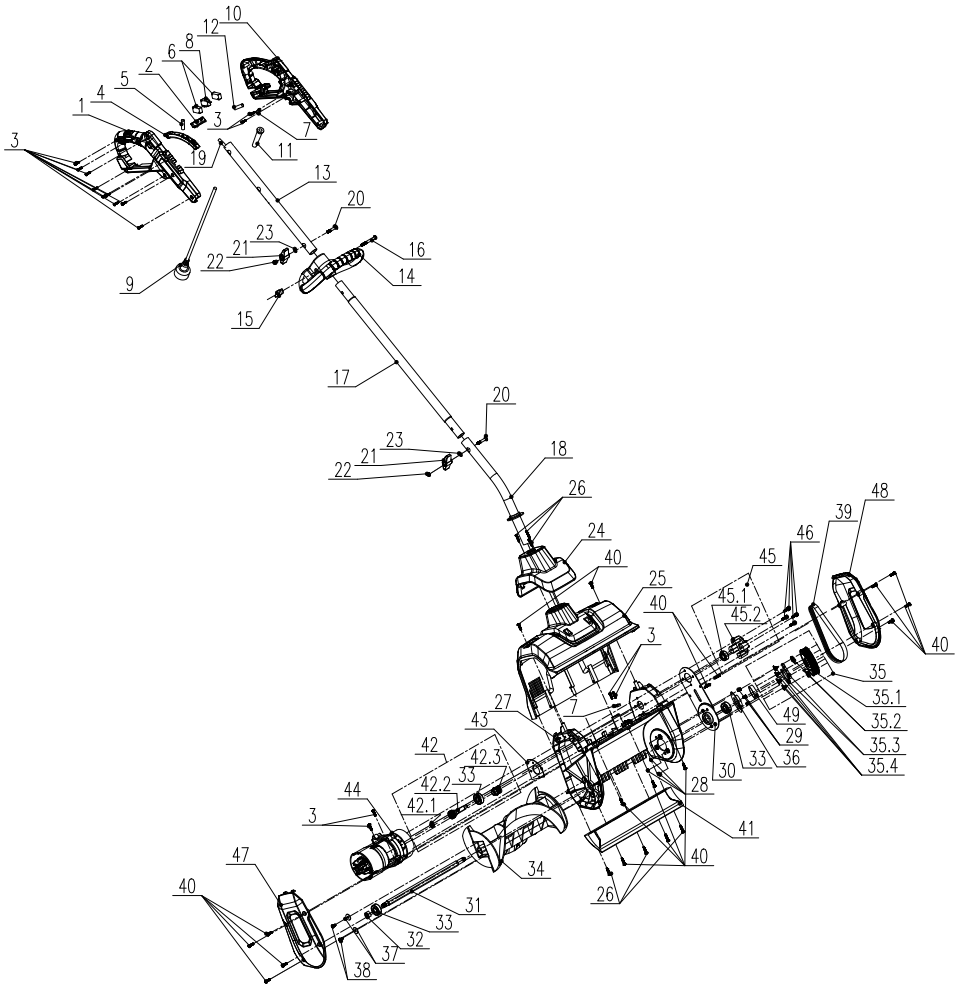

NO.	PARTS#	DESCRIPTION	QTY.	WARRANTY
1	A081006-003-00	Handle	1	YES
2	A081006-005-00	Button	1	YES
3	8SJAB40-16	Self-attack screw	16	YES
4	A081006-004-00	Trigger	1	YES
5	8342-431001-00	Switch spring	1	YES
6	A081006-008-00	Rubber plug	2	YES
7	8184-282102-00	Cable Pressplate	2	YES
8	8042-660501-00	Microswitch	1	YES
9	A081006-010-00	UL Waterproof power cord	1	YES
10	A081006-002-00	Handle	1	YES
11	8332-211501-00	Cable Protective sleeve	1	YES
12	8342-750601-00	Lock thrust button spring	1	YES
13	A081006-007-00	Push rod	1	YES
14	A082014-019-00	Handle	1	YES
15	8313-502302-01	Tension knob	1	YES
16	8SFDD06-55	Bolt	1	YES
17	A082014-017-00	Tube	1	YES
18	A082014-018-00	Tube	1	YES
19	A081006-009-00	Connecting line	1	YES
20	A062010-042-00	Bolt	2	YES
21	8313-512001-00	Knob	2	YES
22	8NA-06	Hexagon nut	2	YES
23	A062010-047-00	Flat Washer	2	YES
24	A082014-005-00	Upper cover	1	YES
25	A082014-004-00	Upper cover	1	YES
26	8SJAB50-25D	Self-attack screw	6	YES
27	A082014-003-00	Snow scraper cover	1	YES
28	8NH-05D	Type 1 non-metal insert hexagon lock nut	3	YES
29	8SEAD05-14D	Screw	3	YES

NO.	PARTS#	DESCRIPTION	QTY.	WARRANTY
30	A082014-027-00	Bracket	1	YES
31	A082014-032-00	Shaft	1	YES
32	8NH-10D	Nut	1	YES
33	8BC-321210-ST03	Bearing	3	YES
34	A082014-006-00	Auger	1	NO
35	A081006-025-00	Brake disc assembly	1	YES
35.1	A081006-019-00	Driven wheel	1	YES
35.2	A081006-026-00	Torsional spring	2	YES
35.3	A081006-021-00	Brake pad	2	YES
35.4	A081006-024-00	Flat head screw	4	YES
36	A081006-022-00	Supporting base	1	YES
37	8202-462203-00	Brake gasket	2	YES
38	8SJAB50-10D	Self-attack screw	2	YES
39	8345-661701-01	Polywedge band	1	NO
40	8SJAB50-16D	Self-attack screw	18	YES
41	A082014-009-00	Snow scraper shovel	1	NO
42	A081006-015-00	Gear assembly	1	YES
42.1	8BC-130605-ST	Bearing	1	YES
42.2	A081003-012-00	Gear shaft	1	YES
42.3	A081003-013-00	Belt pulley	1	YES
43	A081006-006-00	Baffle plate	1	YES
44	A081006-012-00	Motor assembly	1	YES
45	A081006-016-00	End Cover assembly	1	YES
45.1	8BC-220807-ST03	Bearing	1	YES
45.2	A081006-020-00	Bearing bracket	1	YES
46	8SJAN50-25D	Self-attack screw	4	YES
47	A082014-008-00	Right shroud cover	1	YES
48	A082014-007-00	Left shroud cover	1	YES
49	A081006-023-00	Brake pad	1	YES

Printed in China