# 36" x 36" shower walls

transolid' remodel

# FEATURES

- 36" x 36" Shower Walls for existing construction.
- Thick 1/4" 100% Solid Surface material for superior strength, beauty and easy cleaning. Surface will not support bacteria growth.
- Walls can be attached to moisture-resistant wall board, or directly over tile with supplied adhesive. Walls are trimmable for custom fit.
- Integrated pieces fit together for an easy, clean installation.
- Two wall shelves included for convenient storage
- Wall Kit includes two wrap around front edge trim pieces, front and side top bullnose trim pieces with coped, mitered inside corners, two inside flat corner molding pieces, one 1-oz. tube mounting adhesive, four 11-oz. tubes 100% silicone adhesive and one roll mounting tape.
- 10 Year Limited Residential Warranty / 3 Year Commercial Warranty

# COLORS


• 4 Transitions colors with a 16" x 16" square tile pattern. 4 Classic colors with plain pattern.

# **OPTIONS**

- Extension wall panels add up to 24" of height to extend shower walls to ceiling.
- Matching shower base with concealed drain.
- 3 Wall Pockets: horizontal, vertical or arched and a Window Trim Kit also available. See Accessories Specification sheet for details.



Shown with F3636 Shower Base, X3662 Extension Wall Kit

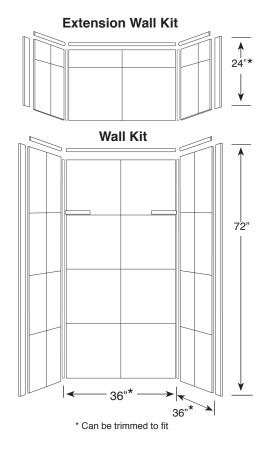

#### Specified Model

	SIZE	MODEL NO.	DESCRIPTION	Width	Depth	Height	
SHOWER WALL KIT							
	36" x 36"	RBE3667	Shower Wall Kit	36"	to 36"	72"	
OPTIONAL COMPONENTS							
	36" x 36"	F3636	Shower Base 36" 36"			3"	
	36" x 36"	X3662	Extension Wall Kit	36"	to 36"	24"	
	Wall Pockets and Window Trim Kit (see separate spec. sheet)						
COMPLETE SHOWER KITS							
	36" x 36"	RKWF3667	Walls & Base Kit	36"	36"	75"	
	36" x 36"	RKWFX3667	Walls, Base, Ext. Kit	36"	36"	99"	

To Be Specified: Pattern/Color (see below)

#### 16" Square Tile Pattern / Colors

	91 White Carrara
	92 Silver Mocha
	94 Sand Mountain
	96 Almond Sky


#### Plain / Colors

	01 White
	08 Biscuit
	67 Matrix Khaki
	86 Sea Shore



# INSTALLATION NOTES:

This product is to be installed according to the installation guide supplied with shower walls. This product designed to be installed over clean, smooth tile, waterproof drywall or cement board. If installing directly over tile, remove all loose pieces and fill for a consistent, smooth substrate.

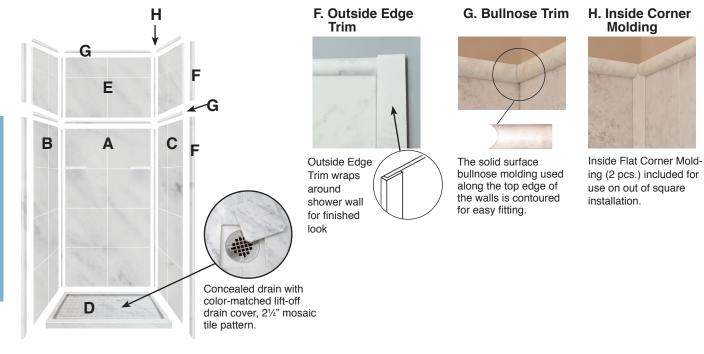


	MODEL #	DESCRIPTION	
Α	RB367	Back Wall (1 panel)	
В	RE367L	Left End Wall (1 panel)	
С	C RE367R Right End Wall (1 panel)		
D	D F3636 Shower Base - center drain		
Е	X3662	Extension Wall Kit	

# **OPTIONS: ACCESSORIES**

Available for on-site installation. Must be ordered separately. See Accessories Specification for further information.






Arched Wall Pocket WSA1522

✓ Horizontal Wall Pocket WSH2216

Vertical Wall Pocket WSV0830



Window Trim Kit WTK36

# **Product Information**

	SHOWER DOOR		
MODEL NO.	MAXIMUM WIDTH	MAXIMUM HEIGHT	
RBE3667	33-1/2"	72"	