


TRIM & MOLDING PROFILES

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece is 94" long and is waterproof.

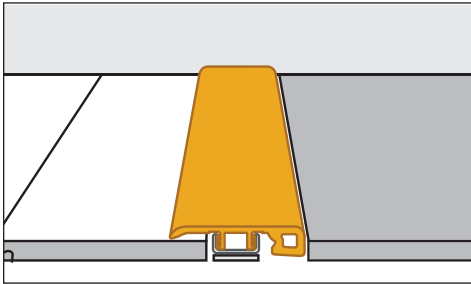


BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Baby Threshold** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

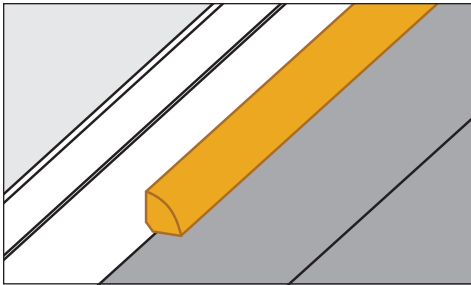


QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

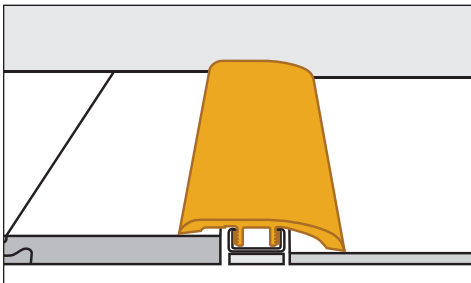


REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

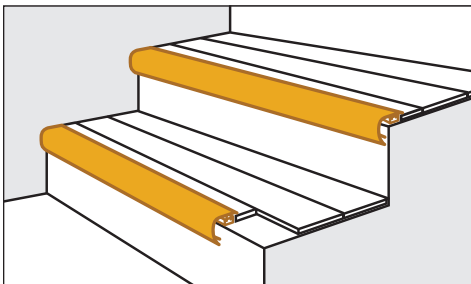


STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

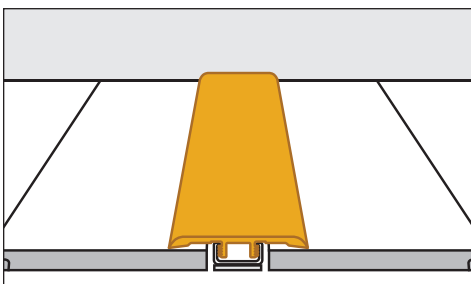


T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.


INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

TRIM INSTRUCTIONS & DETAILS




LENGTH: 94"




LENGTH: 94"



LENGTH: 94"

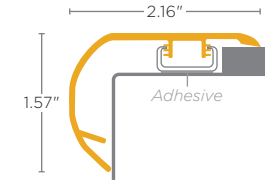

LENGTH: 94"



LENGTH: 94"

COLOR	PRODUCT #	BABY THRESHOLD		QUARTER ROUND		REDUCER		STAIRNOSE		T-MOLDING	
		SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #
Bluegrass Trail Maple	1051339	1074151	03Z9005009	1074149	03W8605009	1074152	03W8905009	1074153	03Z8705009	1074150	03Z8805009
Boulder Creek Hickory	1051340	1074126	03Z9003002	1074124	03W8603002	1074127	03W8903002	1074128	03Z8703002	1074125	03Z8803002
Cliffside Oak	1051335	1074106	03Z9007010	1074104	03W8607010	1074107	03W8907010	1074108	03Z8707010	1074105	03Z8807010
Cold Mountain Oak	1051336	1074111	03Z9007015	1074109	03W8607015	1074112	03W8907015	1074113	03Z8707015	1074110	03Z8807015
Hawks Crest Hickory	1051341	1074131	03Z9005005	1074129	03W8605005	1074132	03W8905005	1074133	03Z8705005	1074130	03Z8805005
Hot Springs Hickory	1051342	1074136	03Z9004008	1074134	03W8604008	1074137	03W8904008	1074138	03Z8704008	1074135	03Z8804008
Rivers Edge Oak	1051334	1074101	03Z9005003	1074099	03W8605003	1074102	03W8905003	1074103	03Z8705003	1074100	03Z8805003
Spring Creek Bamboo	1051343	1074141	03Z9005011	1074139	03W8605011	1074142	03W8905011	1074143	03Z8705011	1074140	03Z8805011
Stepp Falls Bamboo	1051344	1074146	03Z9003006	1074144	03W8603006	1074147	03W8903006	1074148	03Z8703006	1074145	03Z8803006
Stepping Stone Oak	1051338	1074121	03Z9005004	1074119	03W8605004	1074122	03W8905004	1074123	03Z8705004	1074120	03Z8805004
Timber Creek Oak	1051337	1074116	03Z9004001	1074114	03W8604001	1074117	03W8904001	1074118	03Z8704001	1074115	03Z8804001