MESHTEC Advanced Streen Systems PREMIUM PATIO SECURITY SCREEN DOOR





This guide contains procedures and instructions for proper measurement before installing a security screen door. If a circumstance comes up that is not covered in this guide, please contact us for help at:


Unique Home Designs 973 N. Colorado Street, Gilbert AZ. 85233 or VIEW INSTALLATION VIDEOS AND LATEST INFORMATION AT helpmeinstallit.com


Getting Started


Inspect Your Entryway for Obstructions: Check for any obstructions above and around your entryway that may prevent the outward swing of your new security door, and/or its installation, such as: light fixtures, door bell, low overhang, door handle of your existing door, and trees, bushes, or hanging plants.

Identify or Create Required Mounting Surface

Your new security patio door will require a flat minimum mounting surface of 1-1/2" above, on both sides and below your entry door. In some cases this may require a build out. If a build out is required, install bottom of build out first (**Fig. 1**), making sure it is flush with stoop to avoid creating a tripping hazard. Secure all sides of the build out to studs in the wall.

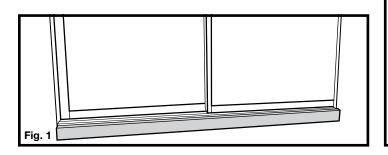

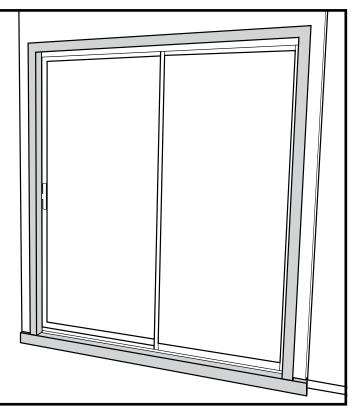

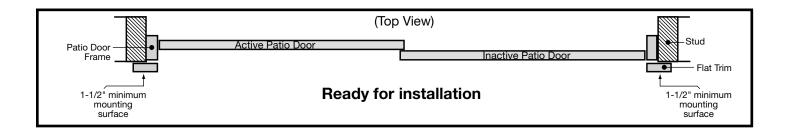

MESHTEC AVARCED SYSTEMS PREMIUM PATIO SECURITY SCREEN DOOR

PRODUCT MEASURING GUIDE




Measure for Rough Opening Height and Width

Measure for Rough Opening Height

Measure from inside top edge to existing sliding patio door track.

Measure for Rough Opening Width

Measure from inside edge to inside edge of existing sliding patio door frame.

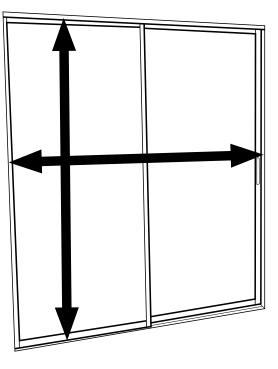

Instructions:

Determine which fit range your measurements fall within and order that standard size door.

