


REDUCING WIDTH

Ready-to-Assemble Vinyl Fencing

1

Simply remove Boards from Panel and cut Rails to desired length (make sure Rails are 4" wider than the finished Panel size, so that the Rails can be inserted into the Post(s)).

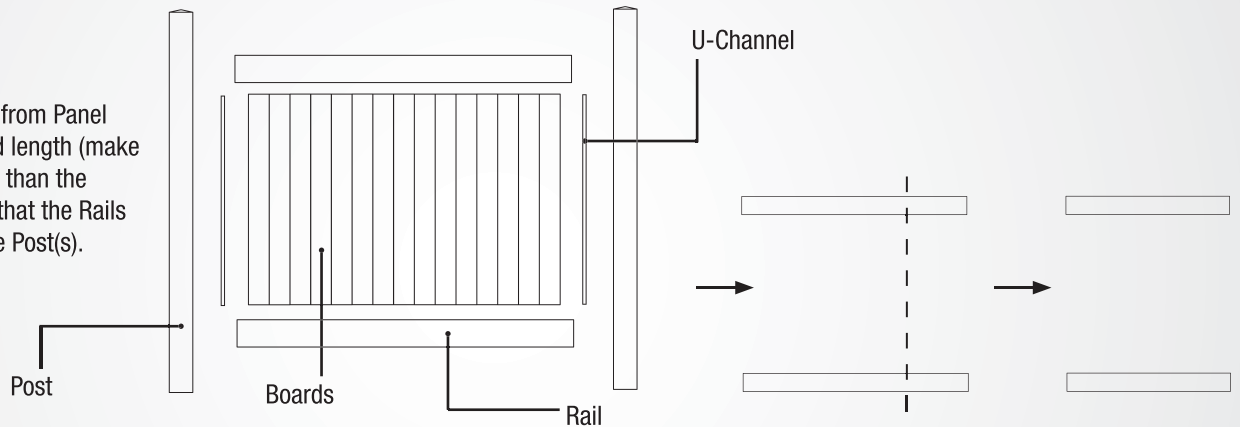


Contractors Tip: If cutting one of the 6" Boards is necessary to achieve the desired Panel width, draw a line the length of the Board and slowly cut using a fine tooth saw.

Contractors Tip: For added security, add Rail Clips in the ends of the cut rail. Please purchase Freedom Custom Rail Clips and follow the simple instructions.


2

Add Bottom Rail into first Post and loosely into second Post.

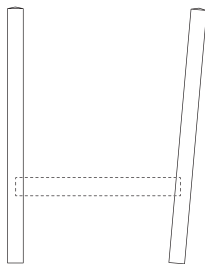


3

Slide End Boards into U-Channels.

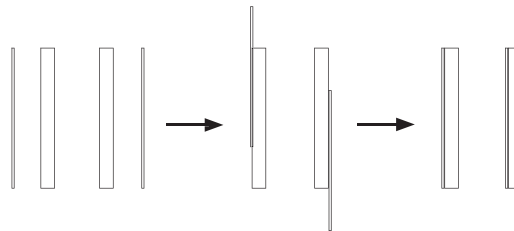


4

Place Boards in Bottom Rail starting from left to right, ensuring Boards with U-Channels are on ends.

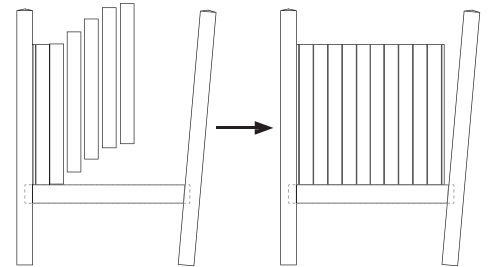

5

Attach Top Rail over Boards working your way from left to right.

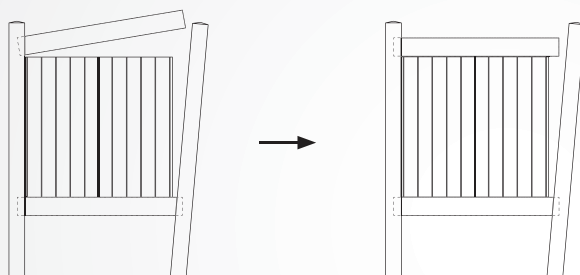

6

Ensure Panel is plumb and now tightly flush against second Post.

