

88 5403 90


Cabana Banana II Ottoman

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


*Home
Styles*

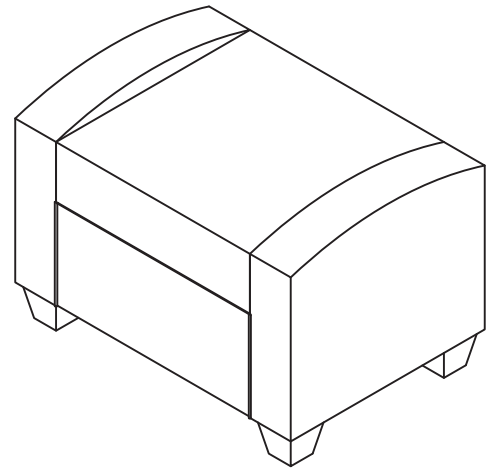


Part List

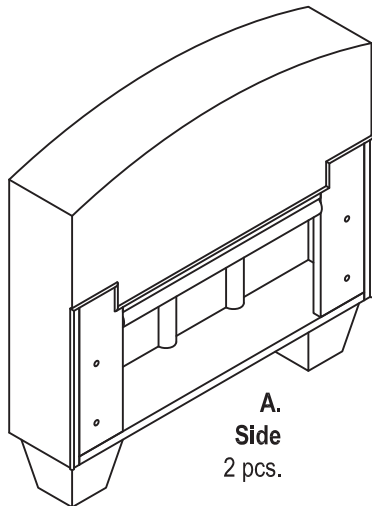


A.
Side
2 pcs.

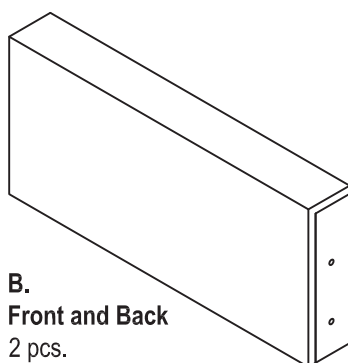

B.
Front and Back
2 pcs.

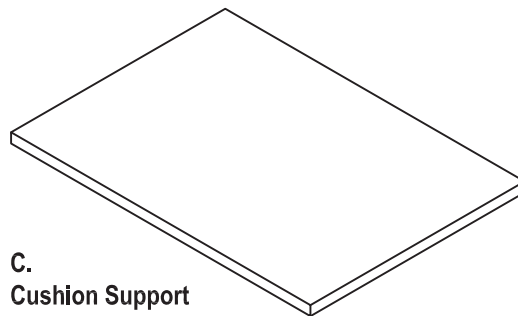


C.
Cushion Support
1 pc.

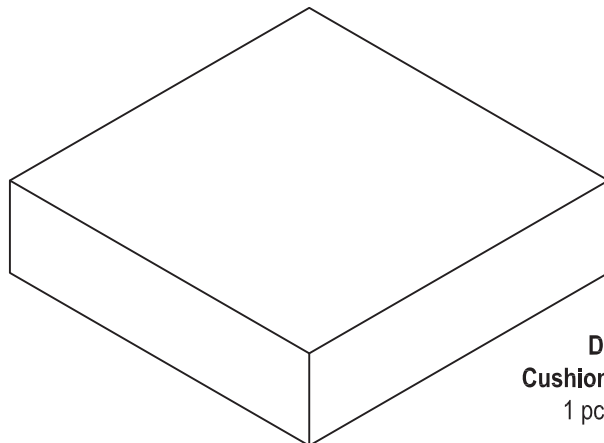


D.
Cushion
1 pc.

Hardware List

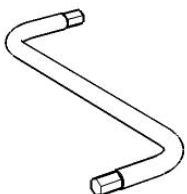

Allen Key
1 pc.



Bolt
8 pcs.(+1 extra)



Flat Washer
8 pcs.(+1 extra)



Spring Washer
8 pcs.(+1 extra)

IMPORTANT




- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Allen Key in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.

STEP 1

Place one of Side (A) on a soft cloth.

Attach Front and Back (B) to Side (A) using Bolts, Spring Washers and Washers.

To tighten Bolts, turn clockwise using Allen Key.
(See figure 1).

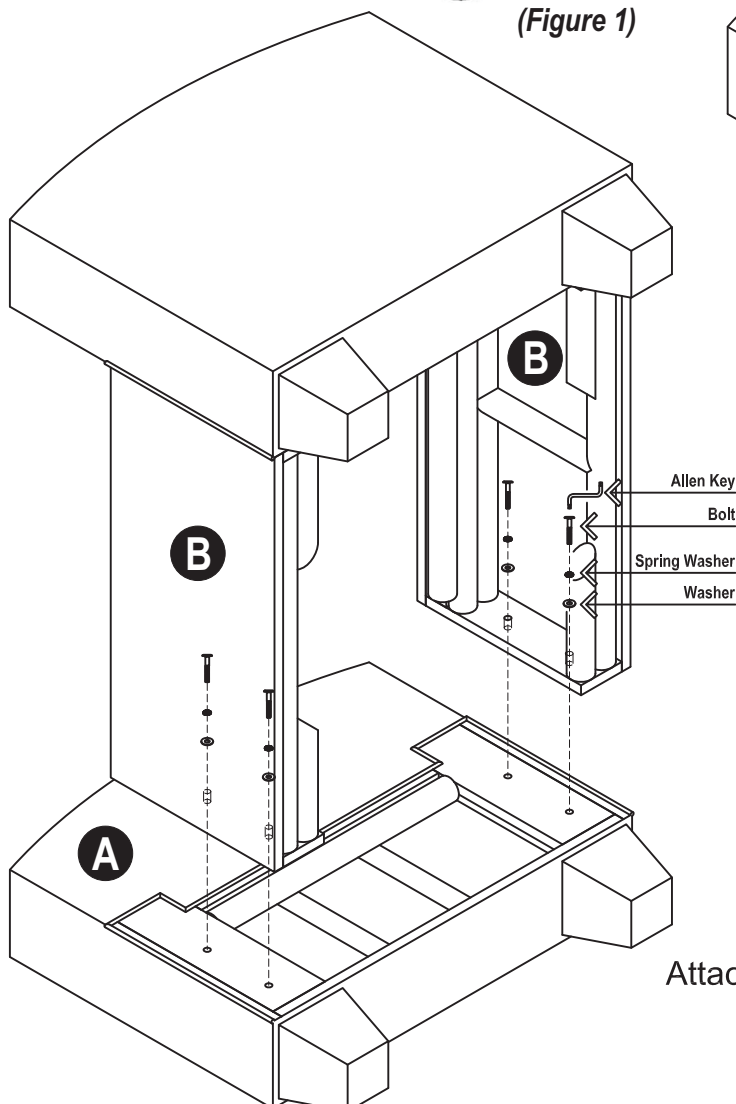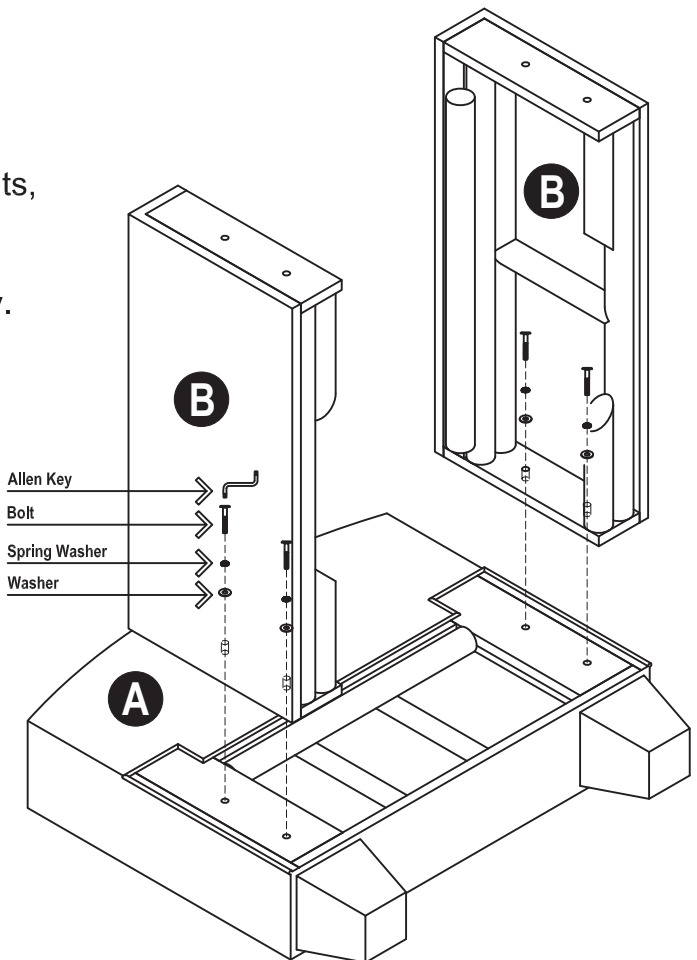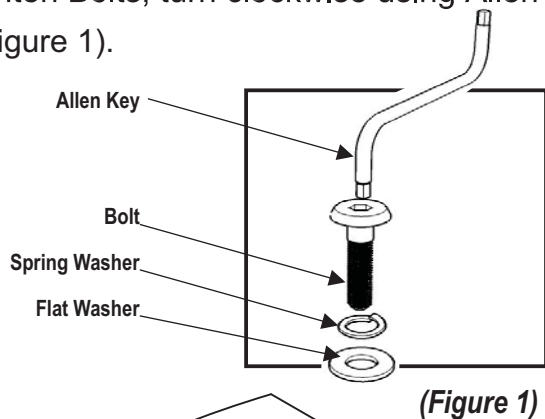



STEP 2

Attach Front and Back (B) to Side (A) using Bolts, Spring Washers and Washers.

Tighten Bolts.

STEP 3

Place Cushion Support (C) onto unit.

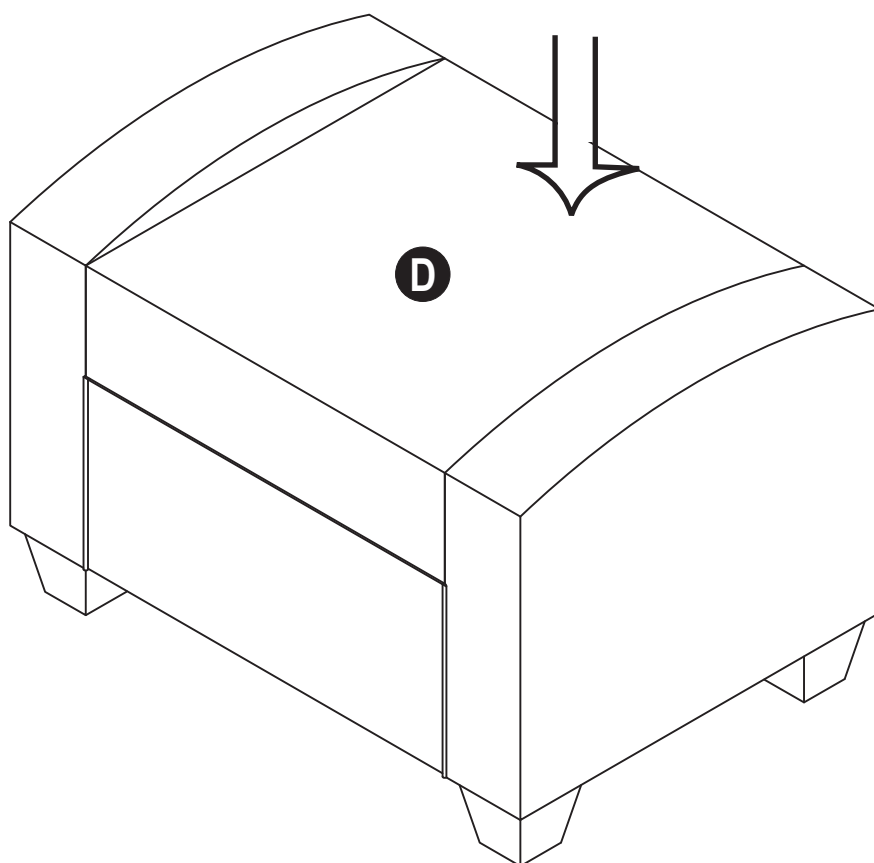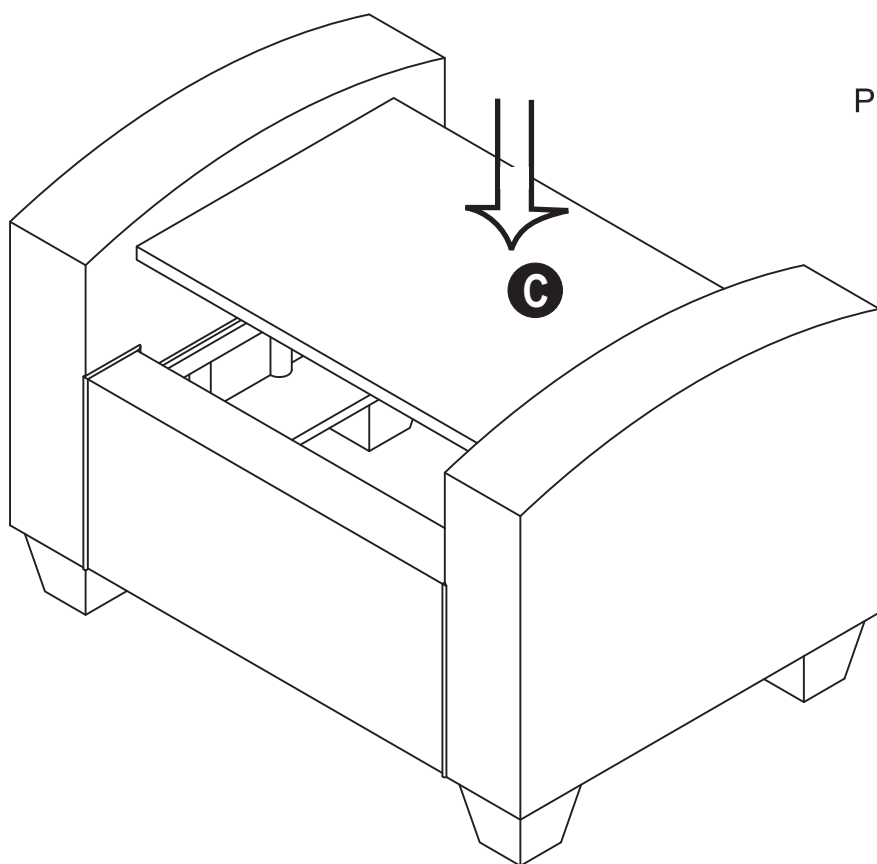

STEP 4

Place Cushion onto unit.