

88 5542 5012


Bermuda Queen Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

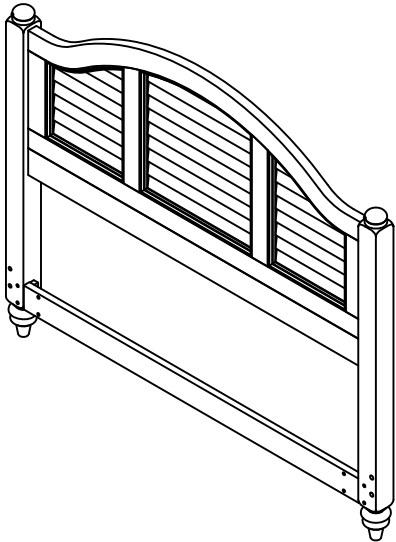

Part List

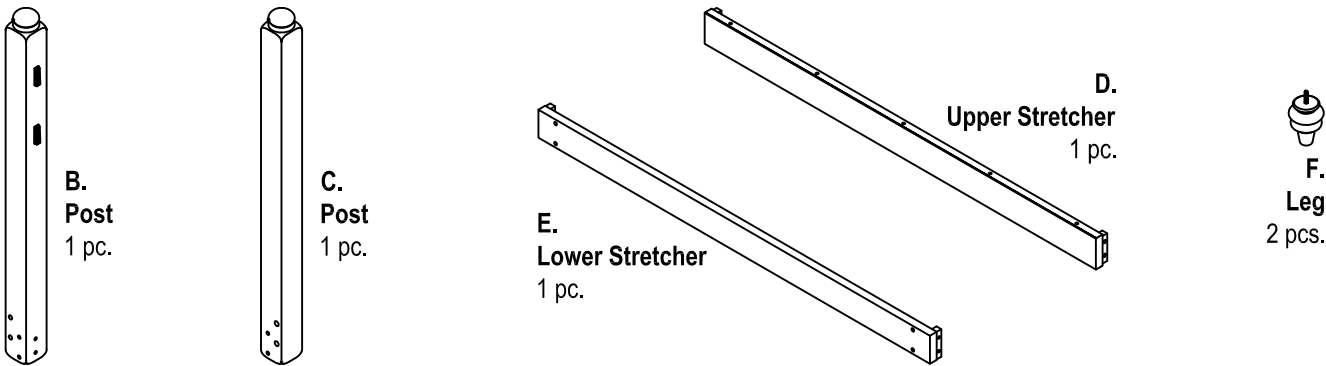


Hardware List

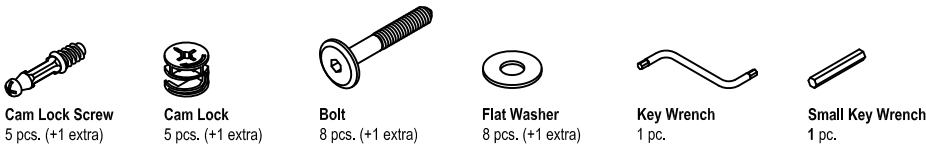

For assembly also need the following :

88 5542 5011 Bermuda Queen Headboard Panel

Carton quantity: 1

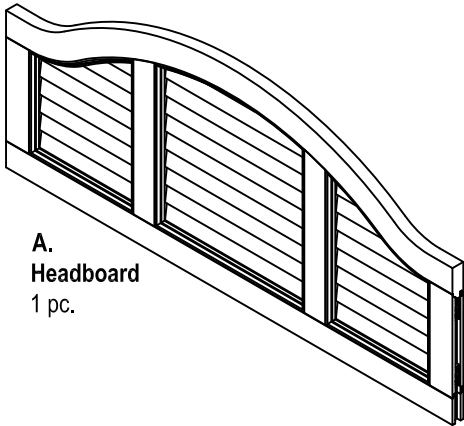

A.  
Headboard  
1 pc.

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319  
servicedesk@homestyles-furniture.com


# Assembly Instructions 2/3

**IMPORTANT**

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.


**STEP 1**

Insert Cam Lock Screws into the pre-drilled holes of Headboard (A).

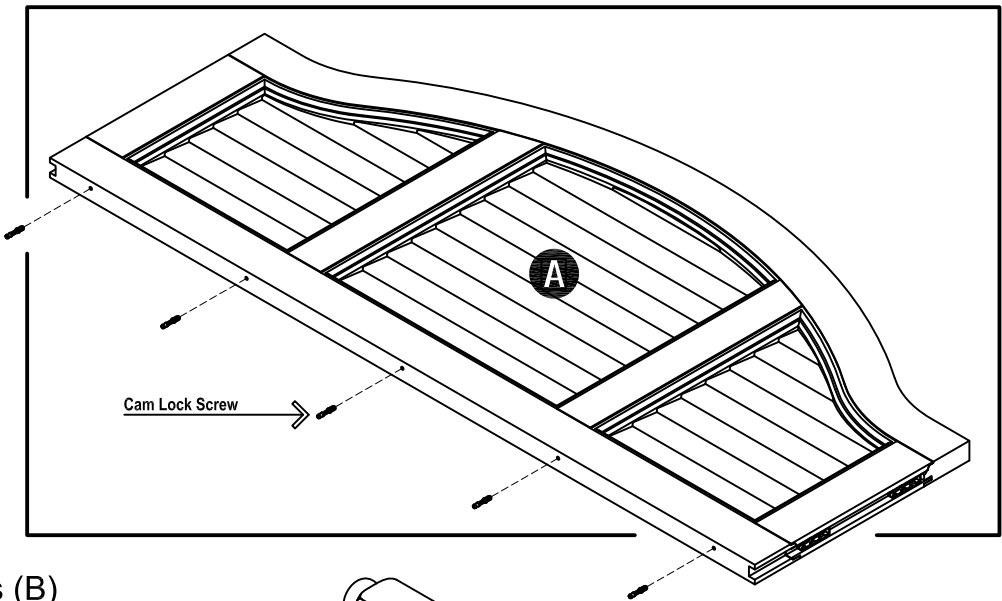


**STEP 2**

Attach Leg (F) to the Posts (B) and (C).

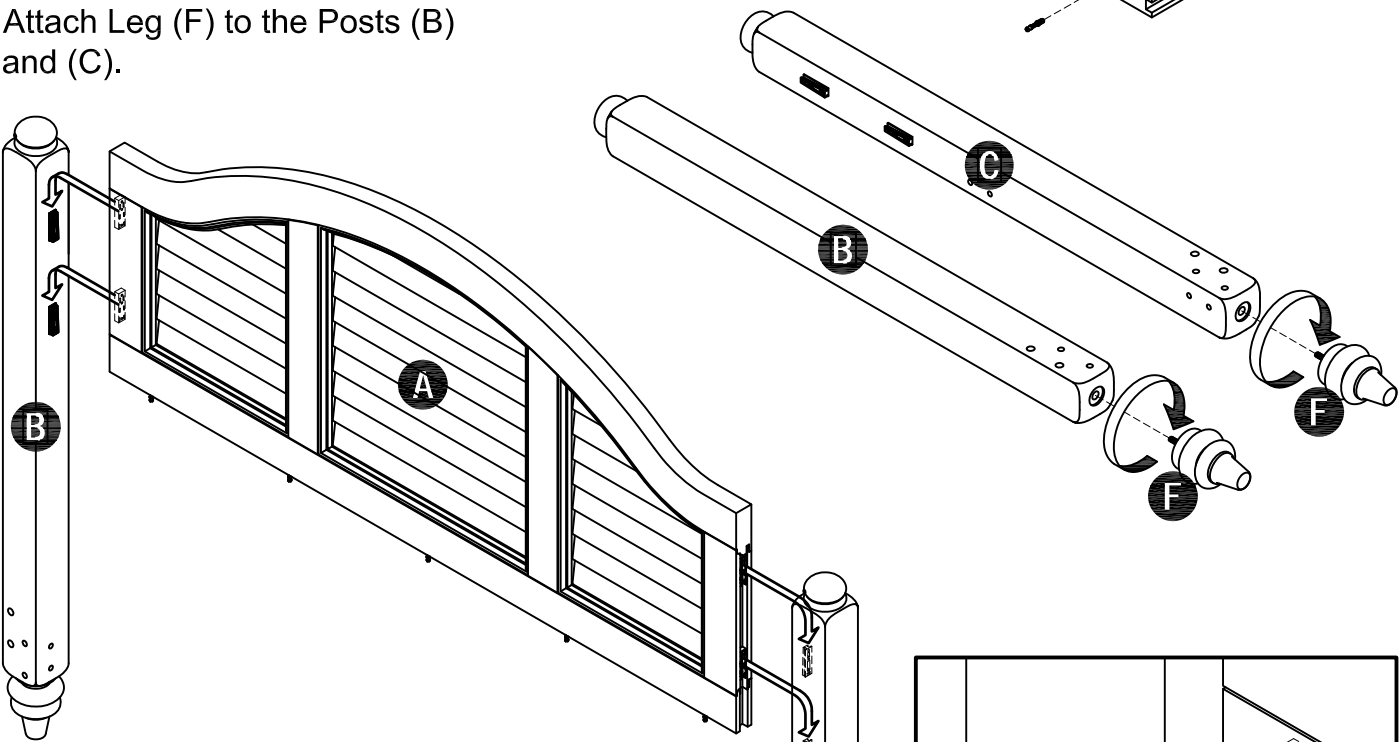

**STEP 3**

Attach Headboard (A) to Posts (B) and (C) by sliding metal clip on Headboard (A) down to metal sleeve on Posts (B) and (C). (See figure 1)


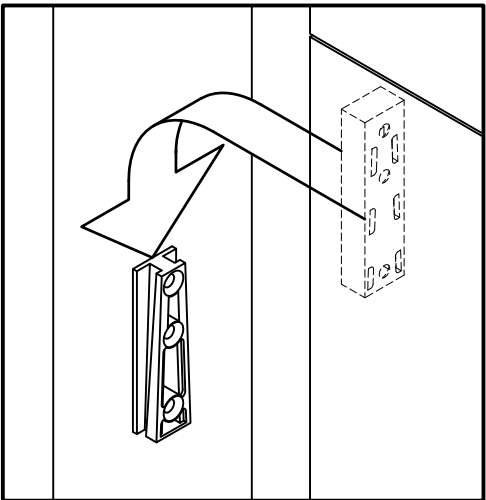


(Figure 1)

# Assembly Instructions 3/3

## STEP 4


Attach Upper Stretcher (D) to unit using Cam Locks.  
(See figure 2)

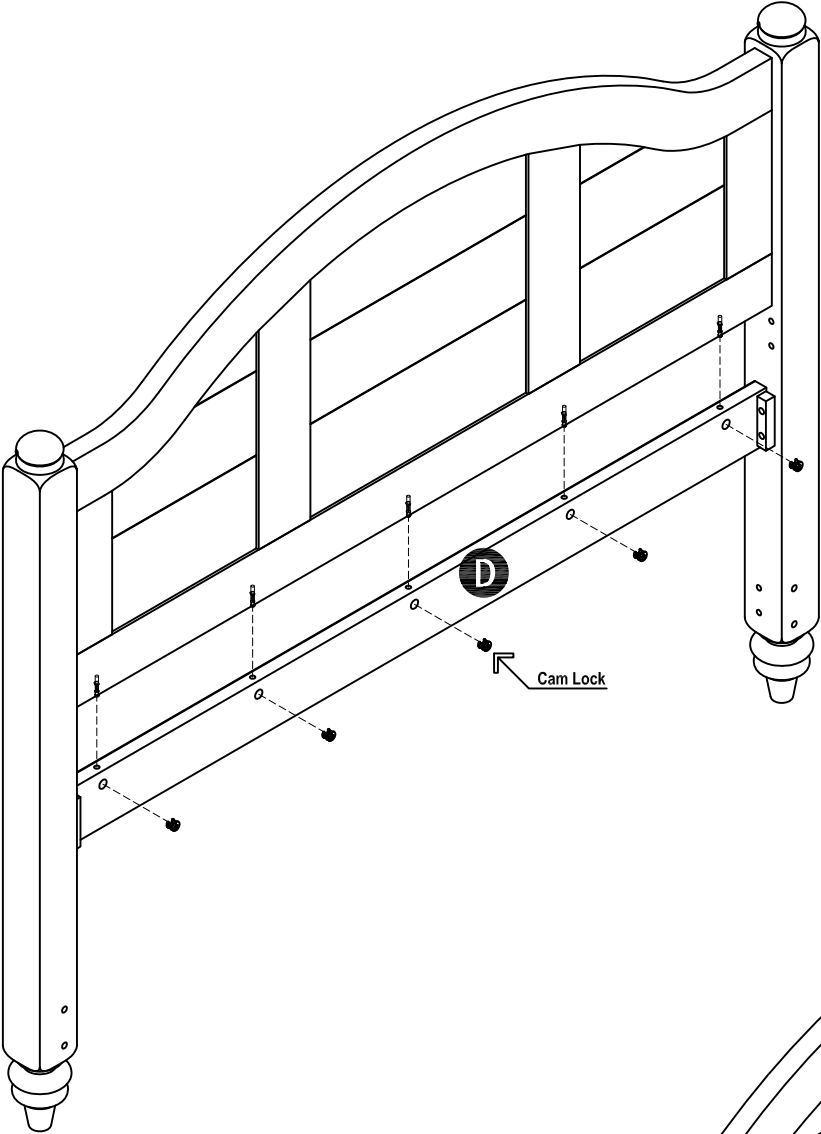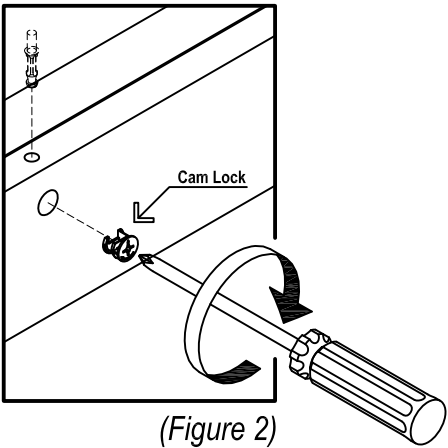

## STEP 5

Attach Lower Stretcher (E) to unit with Bolts and Flat Washers.

Turn Bolt clockwise using Key Wrench.  
(See figure 3)

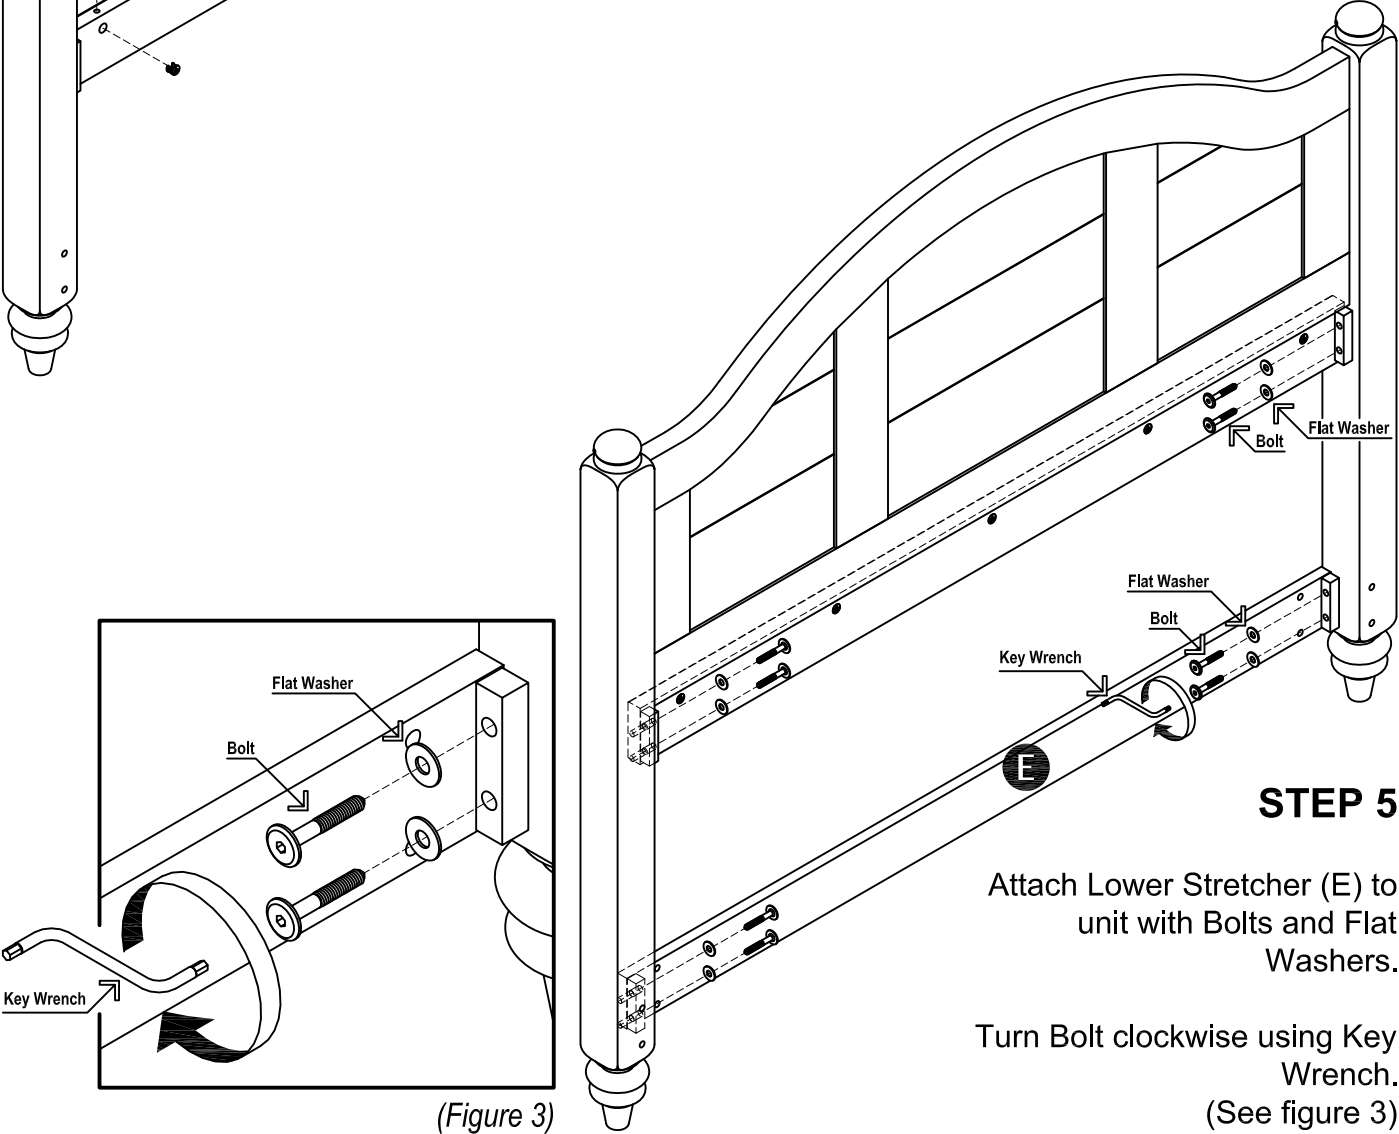

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.




**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.

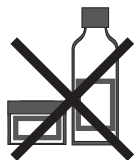

**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

