SAKRETE">

REPAIRING MORTAR JOINTS

using Sakrete Mortar Mixes Project how-to guide

The Pro's Choice Since 1936

PREPARATION




Ensure product is mixed according to instructions on the package.

Using a brush, wet the wall to ensure that mortar will bond to the mortar joint.





APPLICATION

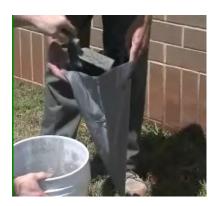

Fill grout bag with mortar. Using a grout bag allows for increased accuracy and reduced mess versus using a trowel.



Insert the tip of the grout bag into the joint and squeeze.



REPAIRING MORTAR JOINTS

using Sakrete Mortar Mixes Project how-to guide

The Pro's Choice Since 1936

FINISHING



Using a joint tool, insert it into the joint and slowly drag across the joint. Apply additional mortar, if needed, to ensure the joint is completely filled.



Turn the tool sideways and scrape off any excess mortar.

NOTE: For complete product information, please refer to product data sheet.