



# IDEAL TLC™ F Connector Termination Instructions



1) Use coax stripper to strip cable so 1/4" of conductor and 1/4" of braiding are exposed. (45-605 shown)

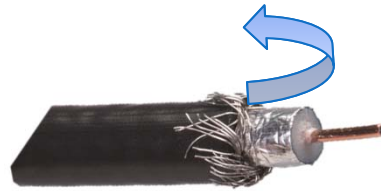

2) Fold back braiding, make sure no braids are touching the center conductor. Straighten conductor if needed. Do not remove foil that is attached to the white dielectric (RG6/6Q)

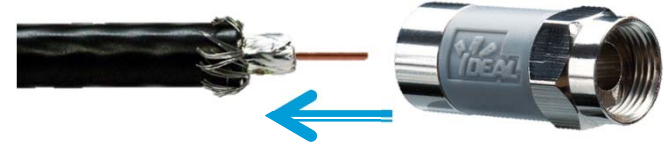

3) Center cable over back end of connector and push connector on to cable until fully seated. Connector post will slide. This is normal.



Threads hidden

4) Cable is fully seated when white dielectric is flush with the bottom of the nut.



Threads exposed

5) Holding the connector, pull back on cable to expose threaded rings and lock connector into place. No tool is required.



6) Verify threaded rings are exposed and dielectric is at/near connector nut bottom. Connect to device.

RG6 coax is used in this example. General preparation instructions are the same for RG6 Quad TLC IDEAL F connectors. When working with RG6 Quad cable, the outer foil can be removed, and the inner braiding should be folded down. This makes it easier to push the connector on to the cable.

