
TECHNICAL DATA

WINDEMERE - SET SCREW

TISSUE PAPER HOLDER

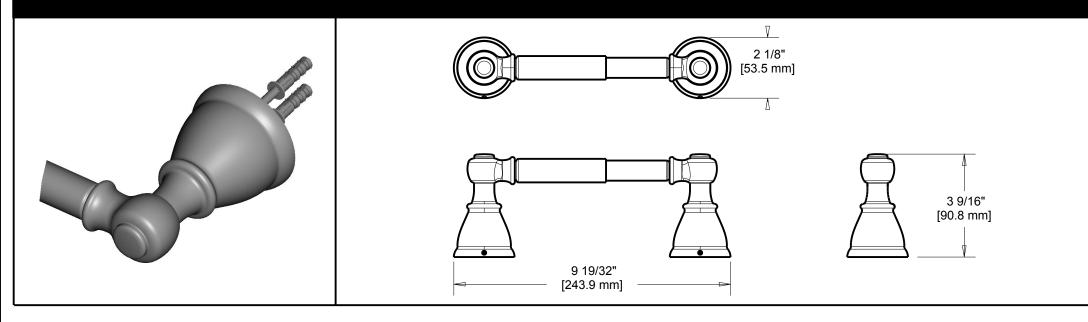

- MATERIALS: Post Zinc Die Cast TP Spring - Steel Wall Plate - Steel, Zinc Plated
- INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.

OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.



Liberty Hardware Manufacturing Corporation • 140 Business Park Drive • Winston-Salem, NC 27107 • 800.542.3789 • www.libertyhardware.com ©2011 LHMC, A Masco Company