

INSTALLATION INSTRUCTIONS

Parts Included


- (1) Spout • (2) Collar nut • (3) Cover plate • (4) 4 Floor fixing screws • (5) 2 Braided hoses (1/2" NPT)
(6) Fixing ring • (7) Handshower w/hose

Tools Needed

- Adjustable Wrench • Slip Joint Pliers • Pipe Putty or Teflon Pipe Tape • Screwdriver

Installation Instructions

1. Turn off the water supply.
2. Determine the location for your faucet and drill a 2" hole in the floor.
3. Connect braided hoses to faucet.
4. Position the faucet and push the hoses through the hole in the floor.
5. Secure the faucet to the floor by screwing down the fixing ring with the screws provided.
6. Connect the water supply to the the braided hoses.
7. Use the collar nut to secure the spout to the body of the faucet.

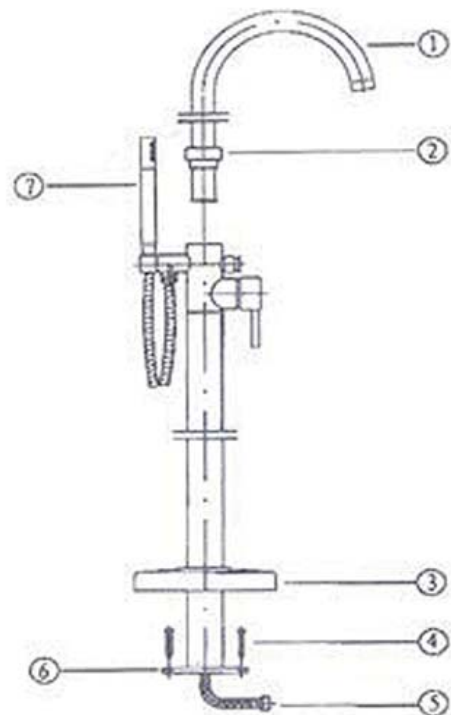

Cleaning Instructions

Wipe this whole set off with warm water and a soft cloth. DO NOT use soaps, cleansers, or brass cleaners as they will disintegrate the protective lacquer coating and leave the brass exposed causing it to tarnish.