



Framed/Frameless Bifold Door

This Package Includes:

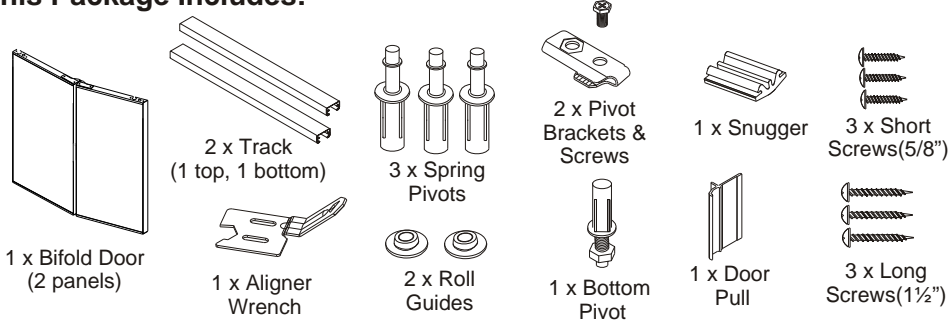



Tools Required:

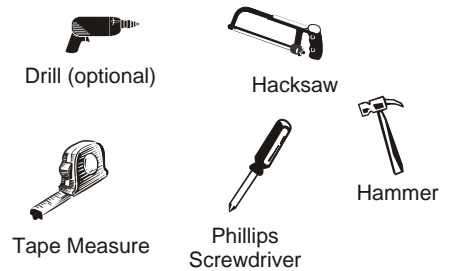

Step One

Trim Track to Fit Opening (if necessary)

Cut the Top and Bottom Track 1/16" (2mm) shorter than the opening width with a fine tooth hacksaw. Insert the roll guides and fasten the pivot brackets into the track prior to installation of the track. Install the pivot brackets 1 7/8" (48mm) from the wall as illustrated.

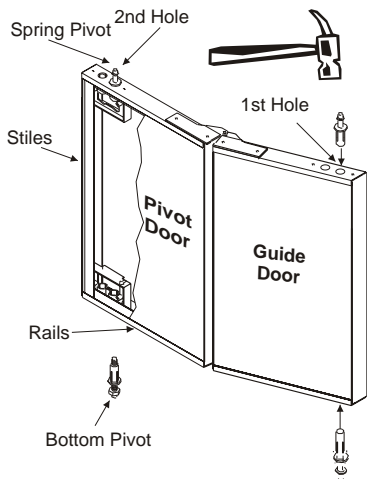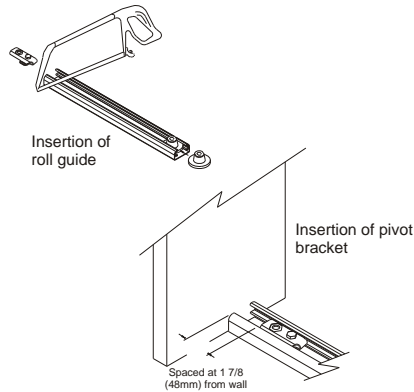

Step Two

Insert Pivots


Insert spring pivot into the second hole at the top of the pivot door. The bottom pivot, used for height adjustment, must be inserted into the second hole at the bottom of the pivot door. The remaining spring pivots are inserted into the first holes of the guide door.

Please Note: For Brass Laminate bifold doors only, locate door with the light scuff marks found at the midpoint of the stiles. Orient this door as pivot door. Affix door pull over scuff marks (as per step 5).

Step Four

Install Doors

Insert the spring pivot on the top of the pivot door into the pivot bracket of the top track. Then place the bottom pivot into the bracket of the bottom track. Close the door so that it is slightly ajar. Depress the pivots in the guide panel door and snap the pins into the top and bottom roll guides.

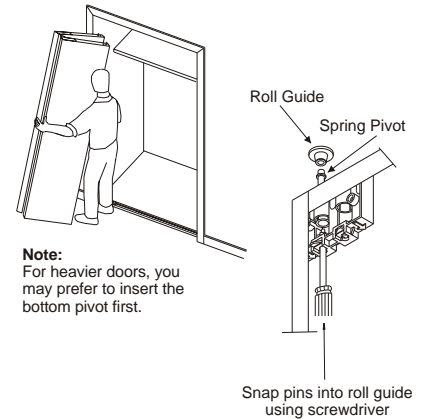


Step Five

Final Adjustments

Both top and bottom pivot brackets can be adjusted laterally. For lateral adjustment release pivot bracket screw and slide pivot bracket along track, once located, re-tighten screw. Height adjustment is achieved by lifting door slightly and turning the bottom pivot with the aligner wrench as shown.

Attach the door pull onto the pivot door at desired height (approx. 40" (1016mm) from the floor). Clean the stile with isopropyl (rubbing) alcohol before attaching the pull to the door.


Trim snugger in 1/16" (2mm) increments until door closes with a light snap.

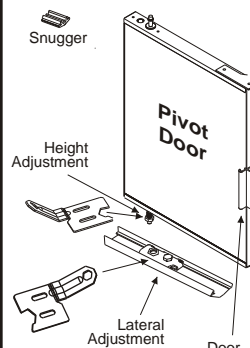

Step Three

Attach Top and Bottom Track

Screw in tracks at a minimum of 1/2" (12mm), in from the jamb face (use long screws for the top track and short screws for the bottom track). This will ensure that the door does not protrude from the opening while it is closed.

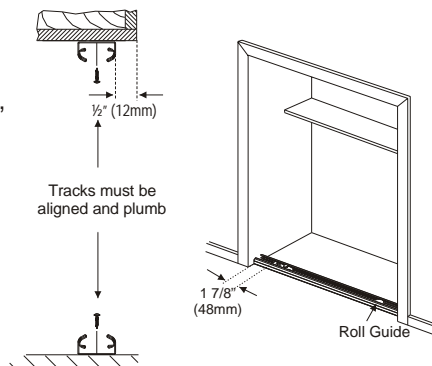

Four Door Application

As per steps 1 - 5, pivot brackets are installed 1-7/8" (48mm) from each door jamb, and roll guides are placed at opposite end of the pivot bracket as illustrated. Place two snugners into top track. Trim one snugger in 1/16" (2mm) increments until doors close with a light snap.

