



# FastTrack®

## Shelving & Bracket Install Tips

Follow these steps to properly install wire shelving into Fasttrack closet brackets



### STEP 1



(Figure 1)

Start by inserting the brackets in the desired location on the Fasttrack uprights. Insert the top tabs first and then lock it in by pushing it down towards the wall. Ensure that the bottom tabs are securely inserted into the slots on the upright. (Figure 1)

### STEP 2



(Figure 2)

Place your shelf on the brackets so that the front of the shelf is resting on the front of the brackets. (Figure 2)


### STEP 3



(Figure 3)

Grab the rear of the shelf and flex it up slightly while holding the front of the shelf against the front of the brackets. (Figure 3)


### STEP 4A

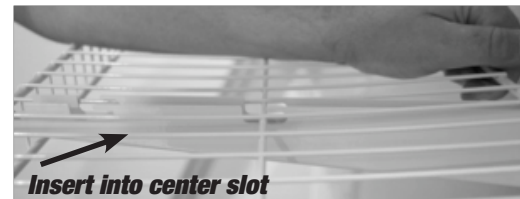

(Figure 4A-12 inch shelf)

Line up the shelf with the slots on the bracket and place the center wires of the shelf into the slots. (Figure 4A & 4B)

### STEP 4B

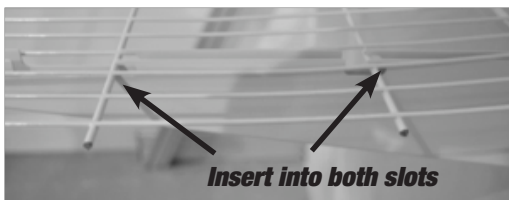

(Figure 4B-16 inch shelf)

For deep shelving (16" or 20"), secure the shelf within the slots in two places. (Figure 4B)

### STEP 5



(Figure 5)

Once the shelf is in the slots, push the shelf towards the wall to secure the back wire into its slot. (Figure 5) Your shelf is now installed. Repeat this process for any additional shelves you wish to place in this system.