


Once the plank is in place, **IT'S OK TO WALK ON FLOOR IMMEDIATELY.** After all the planks are set you are ready to cover with ¾" round floor finish molding. Moldings may be stained to match the color of the floor or painted the wall color. Finishing trims can be used at doorways and other areas where **eZflor®** meets abutting floors. **DIAGRAM 4.** (MOLDINGS NOT INCLUDED).

DIAGRAM 4

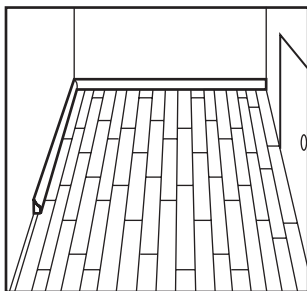

CARE AND MAINTENANCE

- Dust mop, vacuum, or sweep regularly
- Use soft bristle attachments
- Use vinyl cleaner
- Use carpet glides under all furniture legs

IMPORTANT:

- Do not clean with soap
- Do not slide furniture or objects
- Do not walk on floor with cleated or spiked heeled shoes
- Damage from pets of any kind will not be warranted

GENERAL WARRANTY – Manufacturer warrants all 1st quality vinyl flooring against manufacturing defects, excluding shine and surface wear-thru, when used for it's intended purpose(s); residential interior floor use only; and according to the printed instructions for (1) one year from date of purchase by original purchaser.

This product is intended for do-it-yourself applications and therefore, no claims for labor are allowable.

LIFETIME LIMITED RESIDENTIAL WEAR-THRU WARRANTY – Manufacturer's surface wear-thru warranty is limited to normal residential interior use on dry interior floors by original purchaser. Guarantee is limited to the wear layer and worn area only, excluding the finish and shine, if maintained and installed according to the printed instructions and is not guaranteed for wet areas such as patios, etc.


All other guarantees, implied or otherwise, limited to on (1) year from date of purchase, FOR COST OF PRODUCT ONLY, by original purchaser.

MADE IN CHINA

Cryntel®
Step up in Style!

eZflor®
Free Grip™ luxury flooring

Congratulations on your purchase of **eZflor®**. Simply **Lay in Place** Luxury Vinyl Flooring. You have purchased one of the finest flooring products. Please read all the installation instructions prior to use.

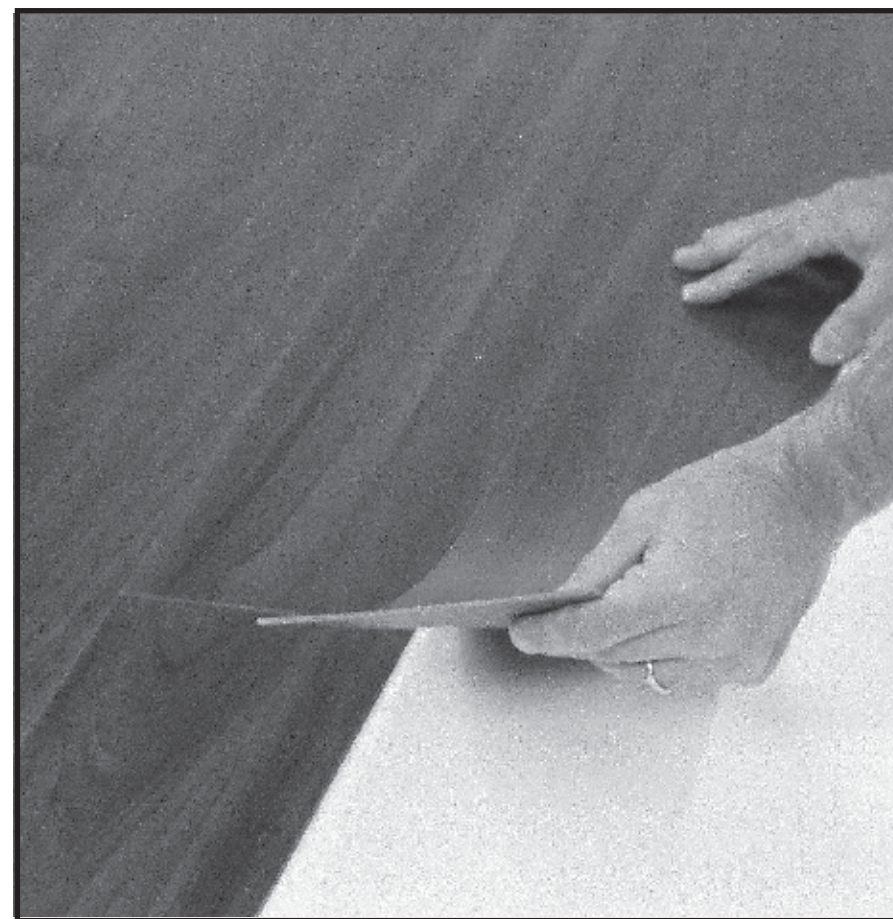

**“The Easiest Floor You Will Ever Install”
Stays in Place Without Adhesive.**

Congratulations on your purchase of **eZflor® Lay in Place** Vinyl Flooring. You have purchased one of the finest flooring products. Please read all the installation instructions prior to use.

INSTALLATION INSTRUCTIONS:

IMPORTANT: **eZflor®** has a special **Free Grip™** coating that holds flooring in place to the subfloor, but not permanently, making installation easy, fast and clean. If at any time you need to remove one plank, some or even all of the planks, they come up easily without damaging or leaving residue on the subfloor. This product should only be used for interior, residential, on-grade (4” suspended concrete slab) or above grade.

FOR RESIDENTIAL INTERIOR USE ONLY:

- **DO NOT** INSTALL OVER SEALED SUBFLOOR
- **DO NOT** INSTALL OVER RADIANT HEATED FLOOR
- **DO NOT** INSTALL IN EXTERIOR AREAS
- **DO NOT** INSTALL OVER UNSUITABLE SUBFLOORS SUCH AS CHIPBOARD
- **DO NOT** INSTALL OVER SUBFLOORS WHERE MOISTURE EXISTS
- **DO NOT** INSTALL OVER UNEVEN OR BUMPY SUBFLOORS
- **DO NOT** INSTALL IN SUNROOMS

NEVER USE SOLVENT BASED FLOOR PREPARATION, CARE OR FINISHING.

I. PREPARATION:

- A.) **eZflor®** Vinyl Plank can be installed over concrete, existing wood floors, plywood and smooth tight sheet vinyl or vinyl tile. Surface(s) must be clean smooth, structurally sound, and moisture free.
- B.) **TOOLS NEEDED:** Shur Tape Lowe’s 256904 (optional), chalk-line, tape measure, carpenter’s square utility knife/scissors, pencil, broom and latex floor primer, if applicable.
- C.) **ACCLIMATION:** Plank must be kept in a clean, dry area, at room temperature (60°F - 80°F), for at least 24 hours prior to, during and after installation.
- D.) **FINAL PREPARATION:** If desired, remove all baseboards, wall trims so plank can be installed flush to walls. At end of installation cover the expansion space with suitable base molding and/or wall molding.
- E.) **SUBFLOOR SHOULD BE LEVELED** to 1/8” within a 10’ radius. Fill all low areas with a latex patching compound and let cure for 24 – 36 hrs. High spots should be ground, chipped or sanded level.
- F.) **LEVEL AND SMOOTH** subfloor with a latex based product that is recommended by your dealer.

CAUTIONS: Never use solvent type subfloor primers, filler or levelers. ALWAYS USE LATEX FLOOR PRIMER ON ALL POROUS SURFACES SUCH AS WOOD OR CONCRETE. DO NOT USE OVER VINYL SUBFLOORS.

- G.) **DOOR TRIM** and jamb moldings should be undercut at about 1/4”. To be sure, place a plank next to the doorframe or jamb as a guide. Mark and cut.
- H.) **SCRAPE** old subfloor to remove paint, plaster, or other foreign material that would interfere with a good bond with the **eZflor®** and the subfloor. BROOM SWEEP and vacuum the area before beginning installation. **ALWAYS WEAR SAFETY GLASSES, DUST MASK AND OTHER PROTECTIVE GEAR WHERE APPLICABLE.**

II. SUBFLOORS / SUBFLOOR HINTS

- Install over smooth and dry concrete, wood and well-adhered vinyl flooring.
- A.) **EXISTING FLOOR COVERING:** When installing over existing floor coverings, such as sheet vinyl or vinyl tile, make sure surface is clean and stripped of all dirt, wax and liquid coatings, and make sure that the floor covering is completely and tightly secured in place.
 - B.) **UNDERLAYMENT BOARD**, such as plywood and other suitable subfloor should be underlayment grade and have a 1/8” gap around the perimeter. Reminder to always apply plank to the smooth side of the underlayment material.
 - C.) **CONCRETE SUBFLOORS** Always determine if moisture is present before beginning installation. Your dealer can assist with testing procedure(s); if moisture exists in slab, apply a moisture barrier (suggested by your dealer) before installing plank. Concrete slabs containing anti-freeze chemicals, admixtures, quick dry mix or curing compounds which are hygroscopic are **NOT ACCEPTABLE.**

DO NOT INSTALL over previously sealed subfloor. First, strip or cover with sheet vinyl or other underlayment.


SHEET VINYL AS A MOISTURE BARRIER

If sheet vinyl is to be applied as a moisture barrier or underlayment, do not use a Polyurethane product. Only use sheet goods suggested by your dealer. Most sheet vinyl is OK to use and the manufacturer recommends the use of sheet vinyl as a safeguard.

III. INSTALLATION

- A. Begin installation parallel to the longest wall starting in the corner. **DIAGRAM 1.**
 - If the beginning row does not touch a wall, use two-sided tape (Shur Tape Lowe’s item #256904) under the first row to anchor the installation.


DIAGRAM 1

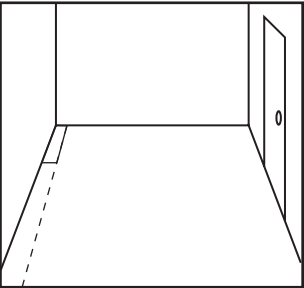

Suggested Option:
Place a strip of Shur Tape
(Lowe’s item #256904) along
the first row of your installation.


- B. Make sure the corners of the planks are lined up to keep a straight line.
 - Complete the installation on the first row including cut pieces. **DIAGRAM 2.** (Place cut edge against wall and the factory edge next to the adjoining plank) To make precise cuts, score top surface of plank with sharp utility knife and a carpenters square edge, as a guide, then snap plank.
- CAUTION: KEEP FINGERS AWAY FROM KNIFE BLADE TO AVOID INJURY. KNIFE CAN SLIP AND CAUSE INJURY.**

DIAGRAM 2

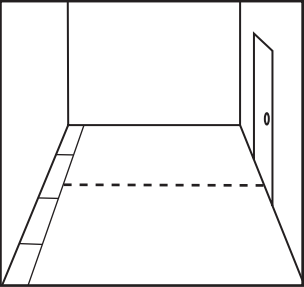

- C. The second row begins at the center of plank one and two. RANDOMLY STAGGER THE PLANKS and continue laying planks, while pressing seams tightly together. Staggered planks should be 6” or greater. **DIAGRAM 3.**

DIAGRAM 3

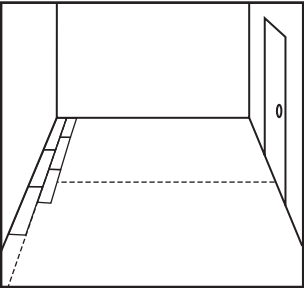

- D. Continue to set each row wall to opposite wall, until room is complete. Use a matching molding at doorways where flooring does not continue to an adjoining room.