

H0610500TX

Rymark Corner Wall

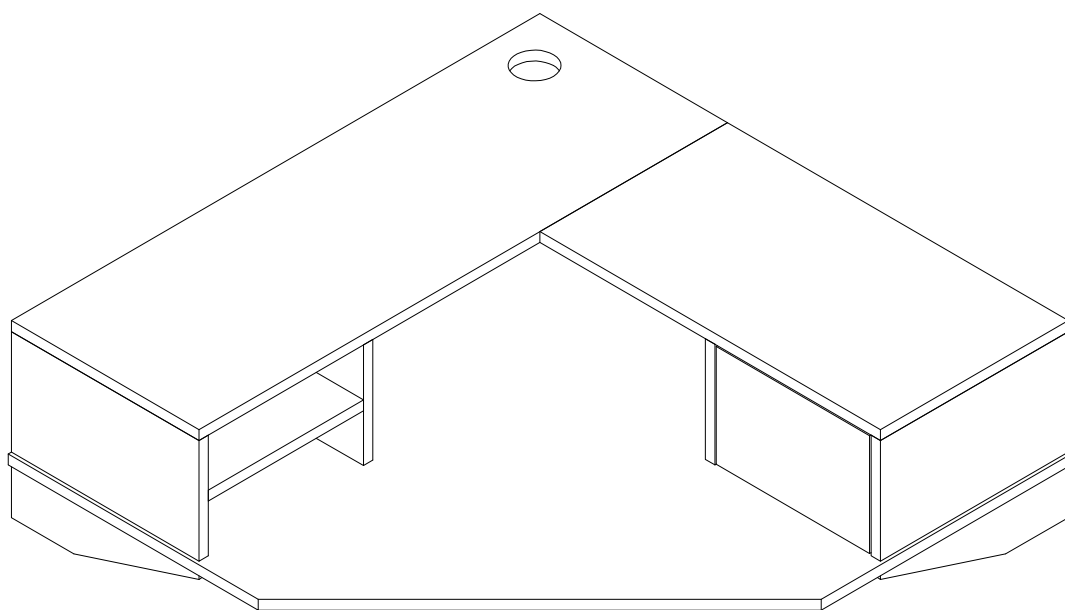
Mount Desk

Assembly Instructions



Southern
ENTERPRISES

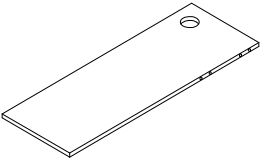
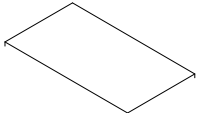
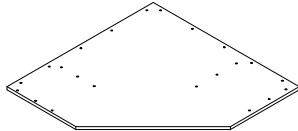
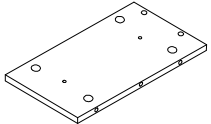
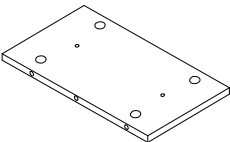
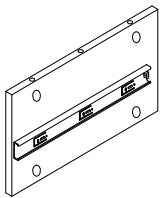
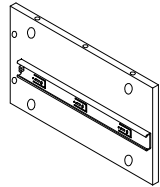
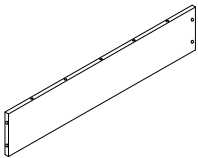
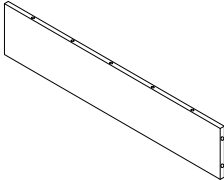
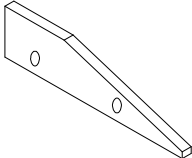
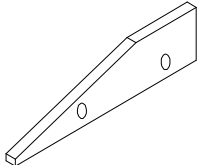
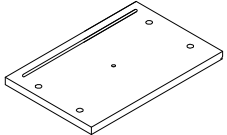
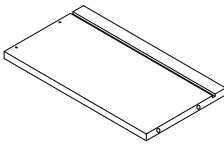
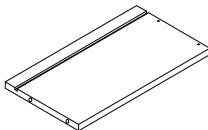
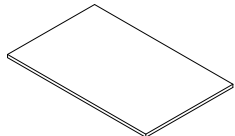
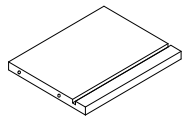
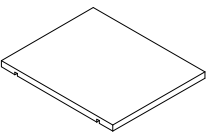
For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seifurniturestore.com

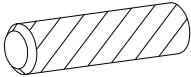
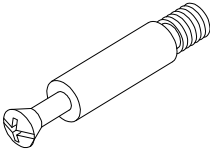
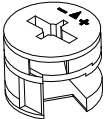
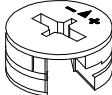
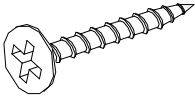
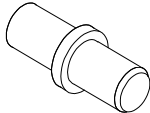
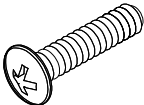

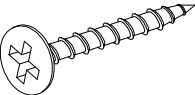
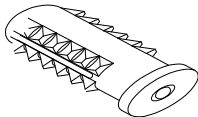
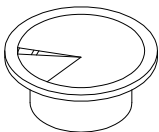
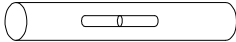
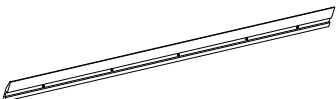

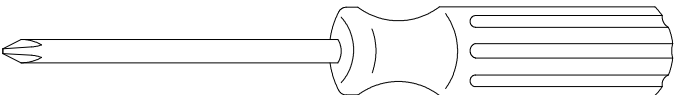


Rymark Corner Wall Mount Desk

Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or a blanket. Check that you have all parts indicated. Call customer service if any hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage

A. Quantity of 1  Left Top Panel	B. Quantity of 1  Right Top Panel	C. Quantity of 1  Bottom Panel	D. Quantity of 1  Side Panel(Left)
E. Quantity of 1  Left Vertical Panel	F. Quantity of 1  Right Vertical Panel	G. Quantity of 1  Side Panel(Right)	H. Quantity of 1  Back Panel(Left)
I. Quantity of 1  Back Panel(Right)	J. Quantity of 1  Left Apron	K. Quantity of 1  Right Apron	L. Quantity of 1  Drawer Front Panel
M. Quantity of 1  Drawer Side Panel(Left)	N. Quantity of 1  Drawer Side panel(Right)	O. Quantity of 1  Drawer Bottom Panel	P. Quantity of 1  Drawer Back Panel
Q. Quantity of 1  Shelf			

1.  Wood Dowel 8*30mm Quantity of 22	2.  Cam Bolt Quantity of 38
3.  Cam Lock Quantity of 34	4.  Cam Lock Quantity of 4
5.  Screw 1/8*1"L Quantity of 4	6.  shelf pin Quantity of 4
7.  Bolt Quantity of 1	8.  Knob Quantity of 1
9.  Screw 1/8"*1-1/2"L Quantity of 10	10.  Plastic anchor Quantity of 10
11.  Wire cap Quantity of 1	12.  Level Quantity of 1
13.  Slide Quantity of 2	14.  Quantity of 8
Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.	
Assembly Tools Required: No.2 Phillips Screwdriver, Hammer, Tape Measure, Electric Drill, and Pencil (Not Included)	
	

Rymark Corner Wall Mount Desk

Assembly Instructions

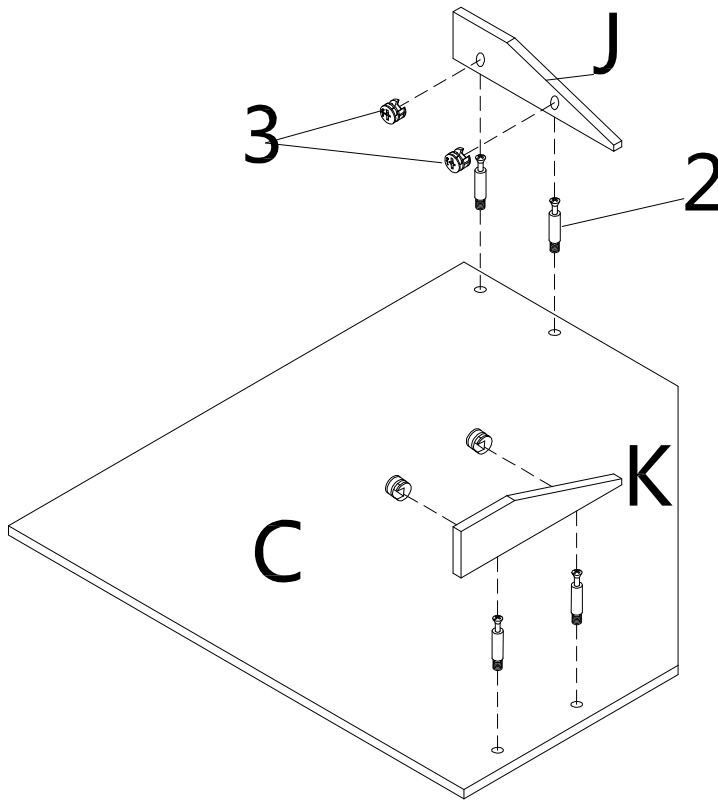


Figure 1

Insert Cam Locks **(3)** into predrilled holes on Aprons **(J/K)**.

Screw Cam Bolts **(2)** into pre-drilled holes on Bottom Panel **(C)**.

Attach Aprons **(J/K)** to Bottom Panel **(C)** by inserting Cam Bolts **(2)** into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Locks **(3)** clockwise with a Philips screwdriver (not included).

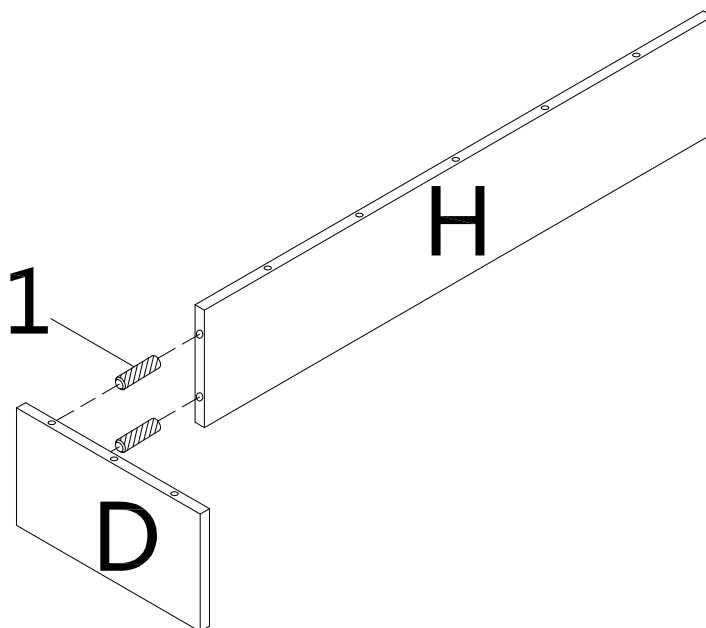


Figure 2

Attach Left Back Panel **(H)** to Left Side Panel **(D)** using Wood Dowels **(1)**.

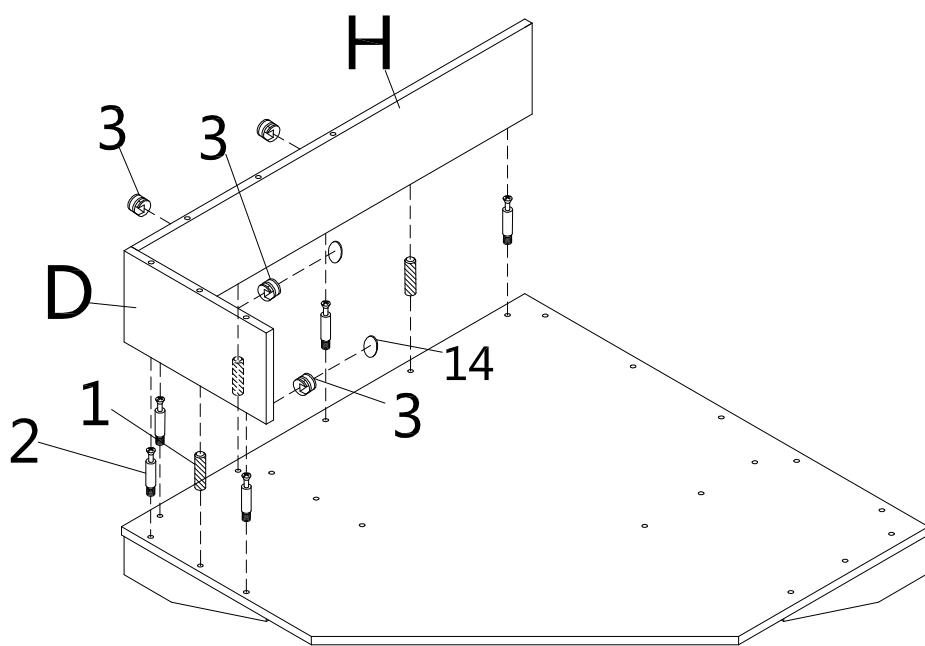


Figure 3

Insert Cam Locks **(3)** into predrilled holes on pre-assembled unit from Figure 2.

Screw Cam Bolts **(2)** into pre-drilled holes on pre-assembled unit from Figure 1.

Attach pre-assembled unit from Figure 2 to pre-assembled unit from Figure 1 by inserting Wood Dowels **(1)** & Cam Bolts **(2)** into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Locks **(3)** clockwise with a Philips screwdriver (not included).

Cover cam lock holes with Covers **(14)**.

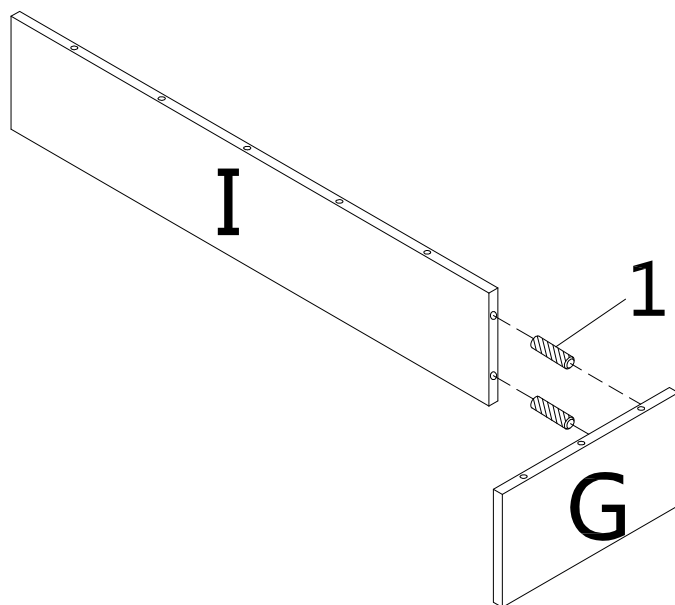


Figure 4

Attach Right Back Panel **(I)** to Right Side Panel **(G)** using Wood Dowels **(1)**.

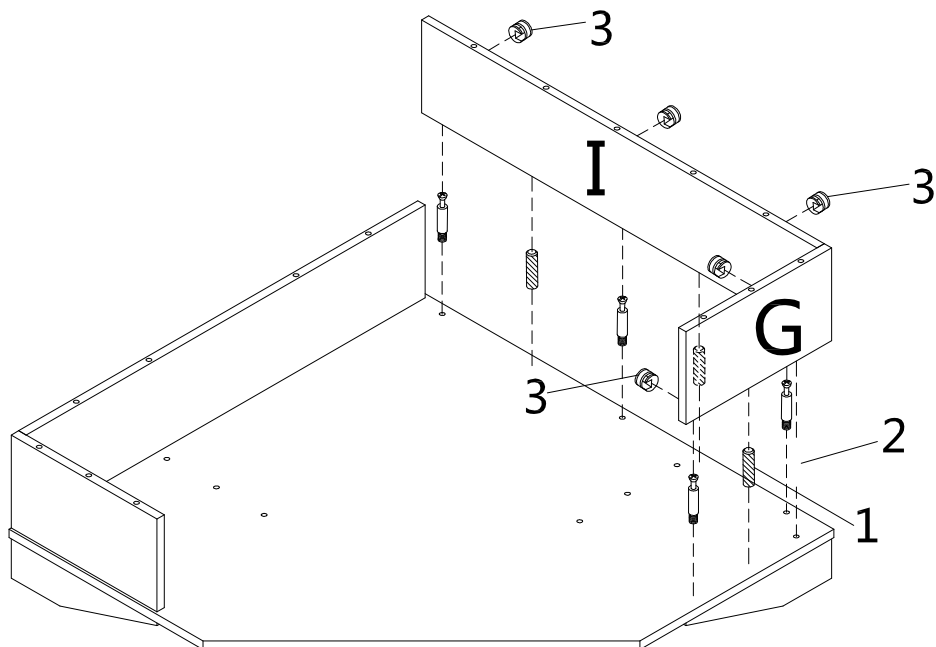


Figure 5

Insert Cam Locks **(3)** into predrilled holes on pre-assembled unit from Figure 4.

Screw Cam Bolts **(2)** into pre-drilled holes on pre-assembled unit from Figure 3.

Attach pre-assembled unit from Figure 3 to pre-assembled unit from Figure 3 by inserting Wood Dowels **(1)** & Cam Bolts **(2)** into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Locks **(3)** clockwise with a Philips screwdriver (not included).

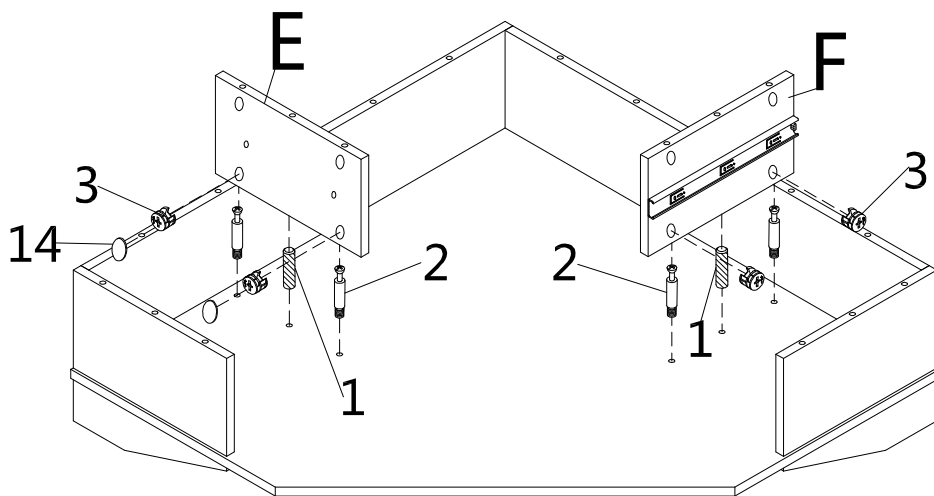


Figure 6

Insert Cam Locks **(3)** into holes on Vertical Panels **(E/F)**.

Screw Cam Bolts **(2)** into pre-drilled holes on pre-assembled unit from Figure 5.

Attach Vertical Panels **(E/F)** to pre-assembled unit from Figure 5 by inserting Cam Bolts **(2)** and Wood Dowels **(1)**.

Tighten by rotating Cam Locks **(3)** clockwise with Phillips screwdriver (not included).

Cover cam lock holes with Covers **(14)**.

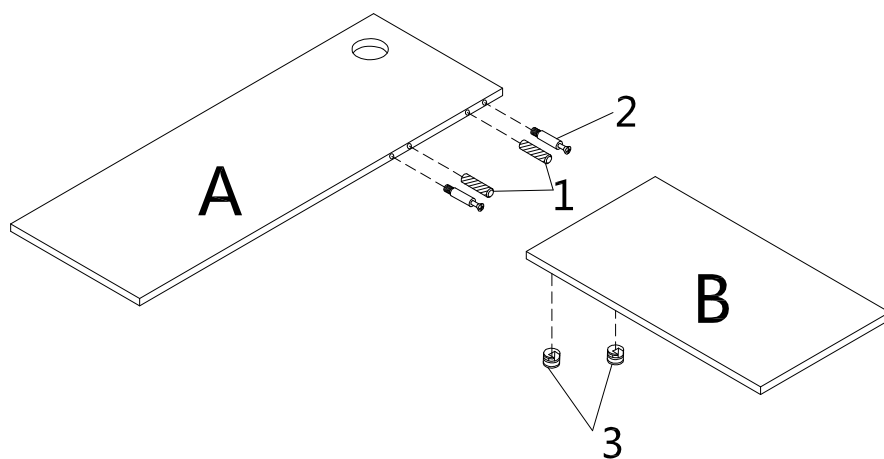


Figure 7

Insert Cam Locks **(3)** into holes on Right Top Panel **(B)**.

Screw Cam Bolts **(2)** into pre-drilled holes on Left Top Panel **(A)**.

Attach Right Top Panel **(B)** to Left Top Panel **(A)** by inserting Cam Bolts **(2)** and Wood Dowels **(1)**.

Tighten by rotating Cam Locks **(3)** clockwise with Phillips screwdriver (not included).

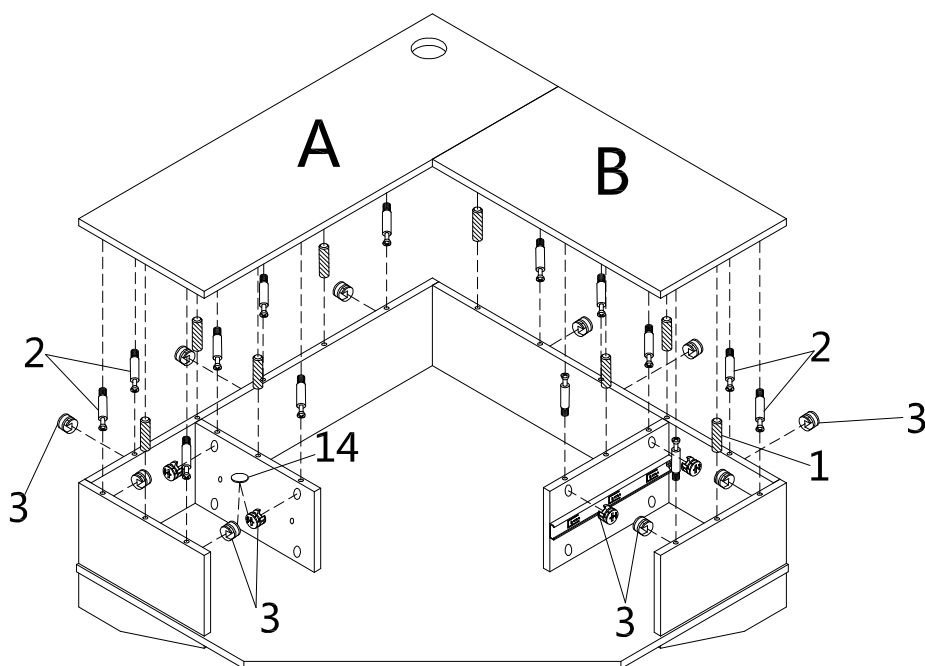


Figure 8

Insert Cam Locks **(3)** into holes on pre-assembled unit from Figure 6.

Screw Cam Bolts **(2)** into pre-drilled holes on pre-assembled unit from Figure 7.

Attach pre-assembled unit from Figure 7 to pre-assembled unit from Figure 6 by inserting Cam Bolts **(2)** and Wood Dowels **(1)**.

Tighten by rotating Cam Locks **(3)** clockwise with Phillips screwdriver (not included).

Cover cam lock holes with Covers **(14)**.

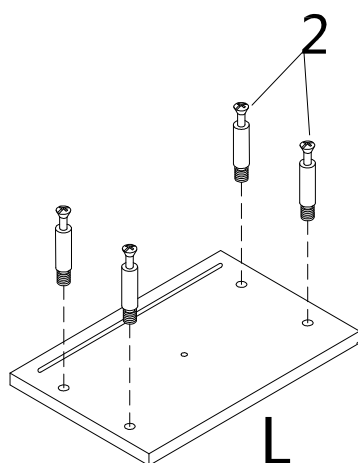


Figure 9

Screw Cam Bolts **(2)** into pre-drilled holes on drawer front **(L)**.

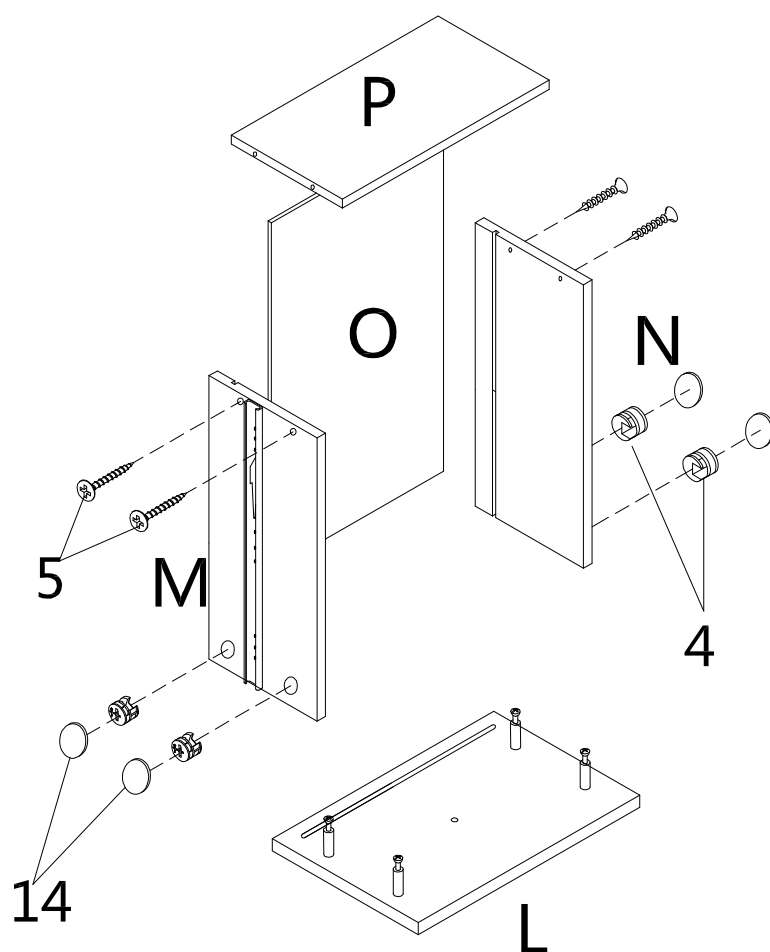


Figure 10

Insert Cam Locks **(3)** into holes on Drawer Side Panels **(M/N)**.

Attach Drawer Side Panels **(M/N)** to Drawer Front Panel **(L)** by inserting Cam Bolts **(4)**.

Tighten by rotating Cam Locks **(4)** clockwise with Phillips screwdriver.

Insert the drawer Bottom Panel **(O)** into the corresponding grooves of Drawer Front Panel **(L)** & Drawer Side Panels **(M/N)**.

Attach the Drawer Back Panel **(P)** & Drawer Side Panels **(M/N)** to Bottom Panel **(O)** by matching the grooves and tighten using Screws **(5)**.

Cover cam lock holes with Covers **(14)**.

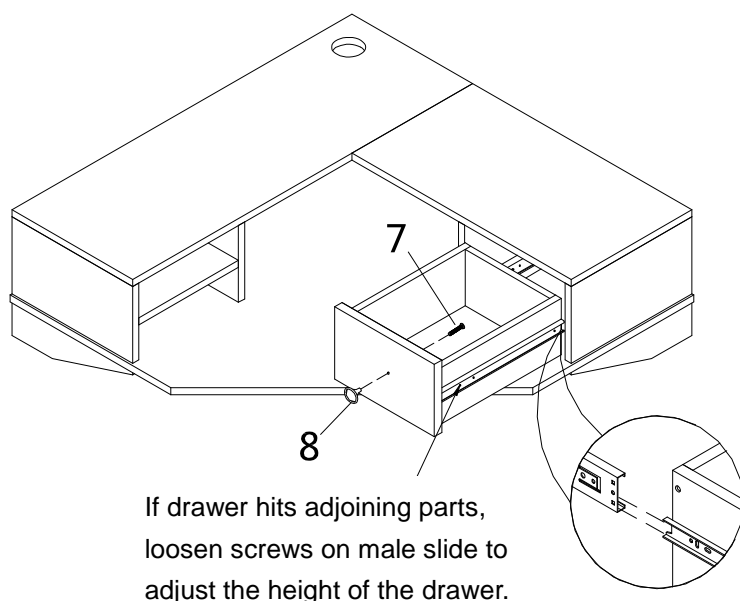


Figure 11

Insert Drawers into glides on assembled unit.

Attach Knobs **(8)** to Drawer Front with Bolt **(7)**.

Tighten with Phillips screwdriver (not included).

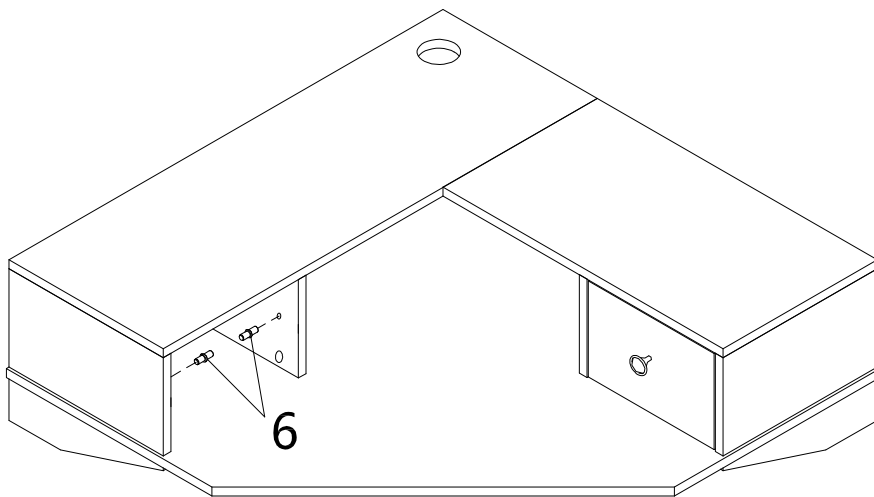


Figure 12

Insert Shelf Pins **(6)** into corresponding hole on pre-assembled unit from Figure 11.

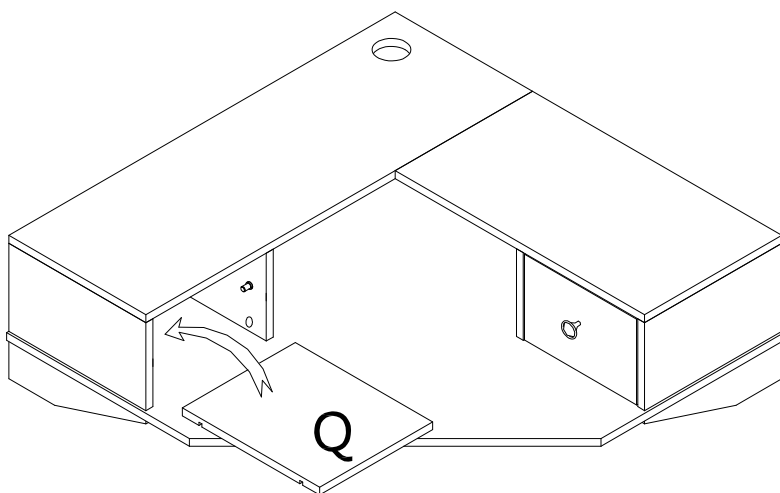


Figure 13

Place Shelf **(Q)** on shelf pins **(6)**.

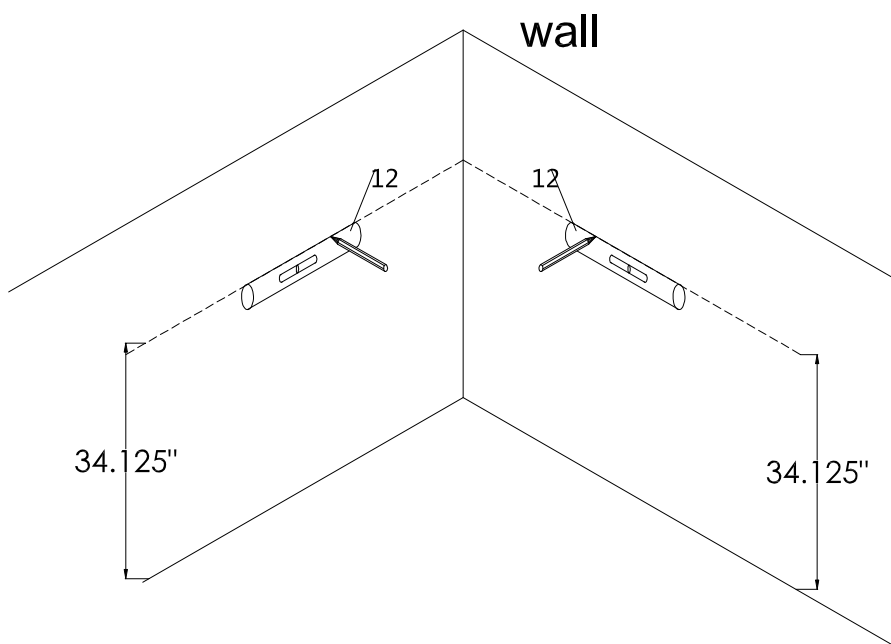


Figure 14

Please mark two lines on wall with pencil (not included).

Use level (**12**) on wall to ensure lines are accurate.

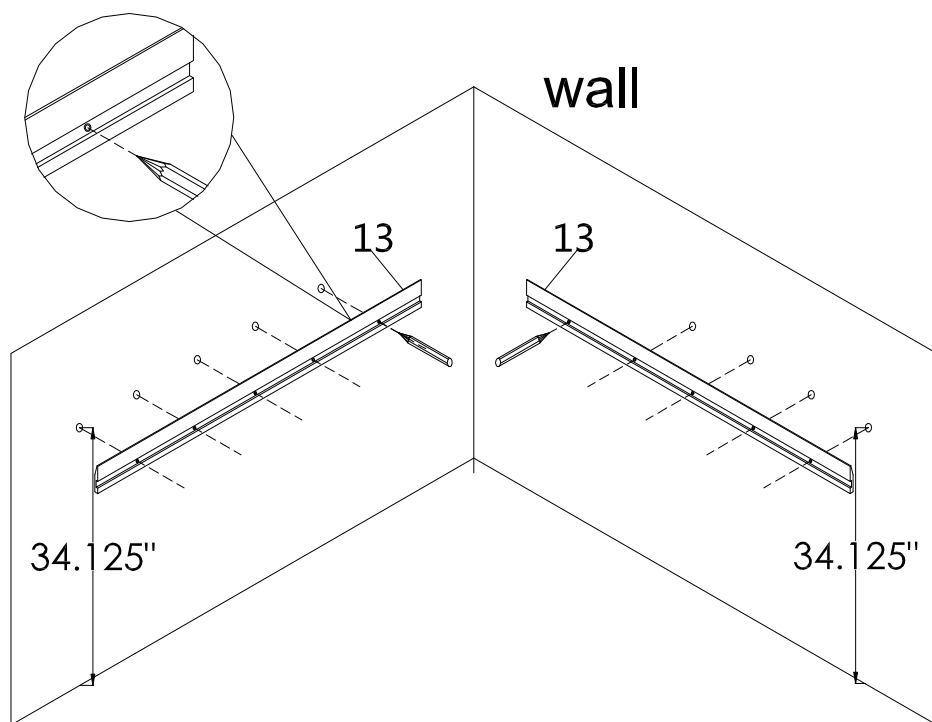


Figure 15

Place Slide (**13**) against the wall at the desired location.

Mark each hole with a pencil (not included).

Remove the slide.

Note: If mounting to sheet rock (cavity wall) it is advisable to mount at least one screw (without anchor) directly to a wall stud.

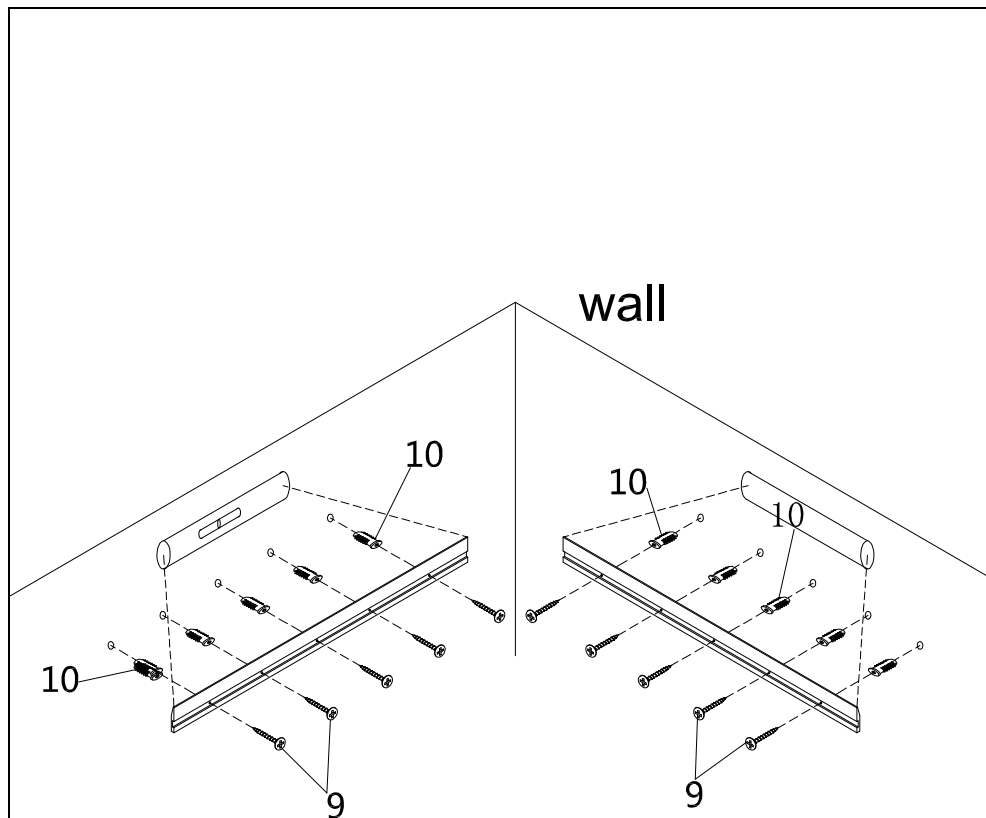


Figure 16

Using a power drill and 3/16" drill bit, drill a hole through the wall at each marked location where Screws **(9)** will not hit a stud in the wall.

Insert Plastic Anchors **(10)** into each hole and lightly tap with a Hammer (not included) until they are securely flush with the face of the wall.

After the Plastic Anchors **(10)** are securely in place, position Slide **(13)** to be mounted to the wall.

Using a Phillips screwdriver (not included), drive the Screws **(9)** into Plastic Anchors **(10)** until the Slide **(13)** is securely placed on the wall.

Use a level **(12)** to ensure Slide **(13)** is level.

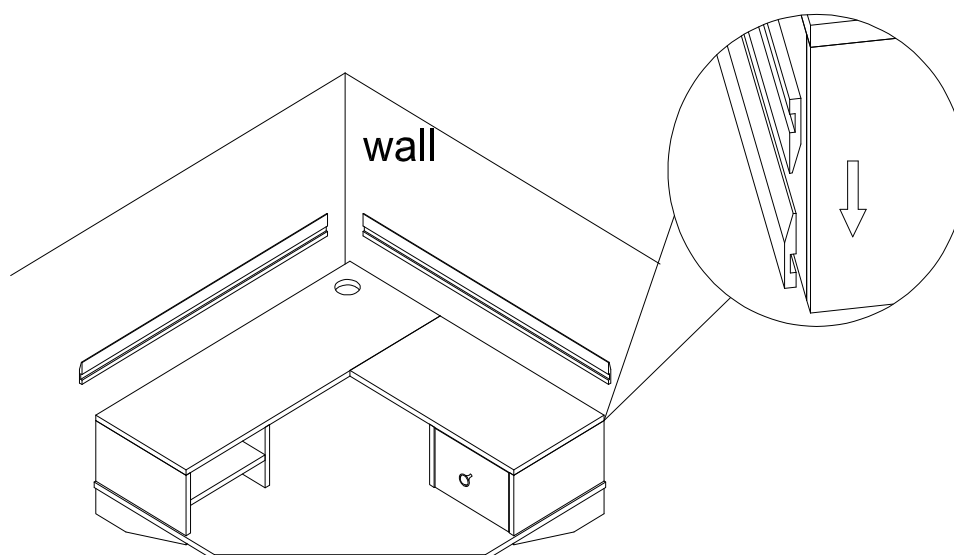
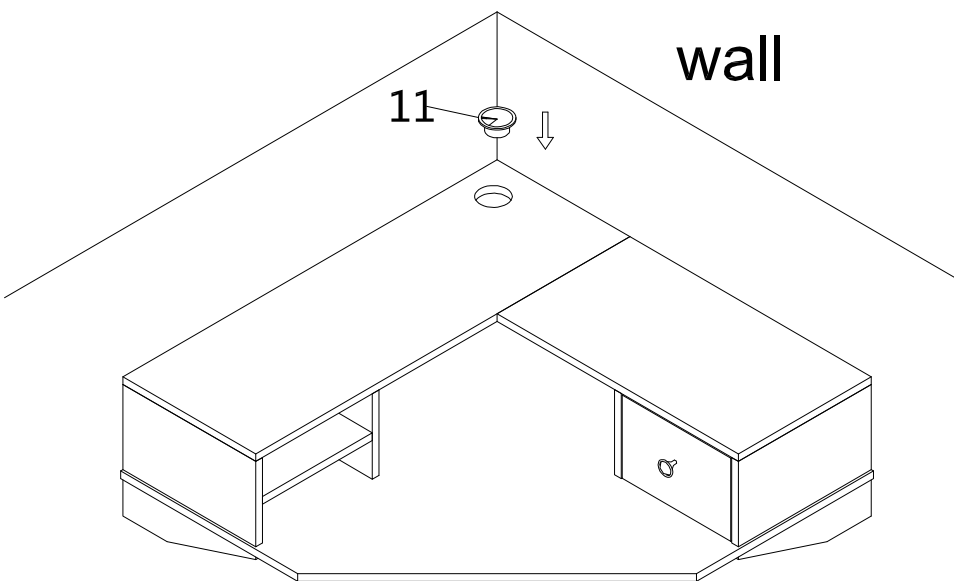


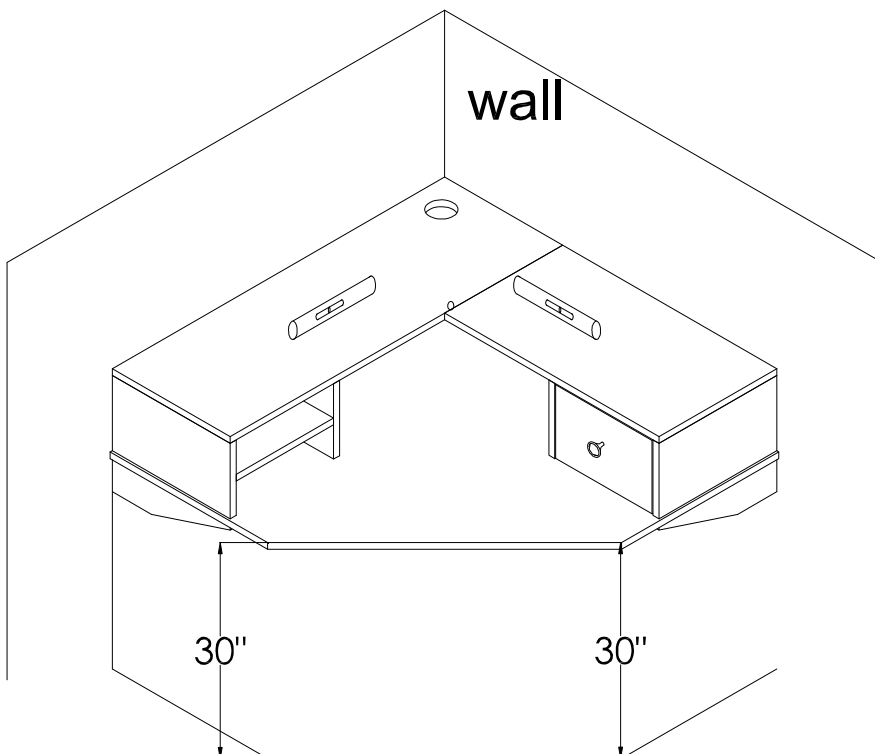
Figure 17

Place the pre-assembled unit from Figure 16 to Slide **(13)**.



Place Wire Cap **(11)** on pre-assembled unit from Figure 17.

Figure 18



Use level **(12)** on desk to ensure desktop is level.

Figure 19

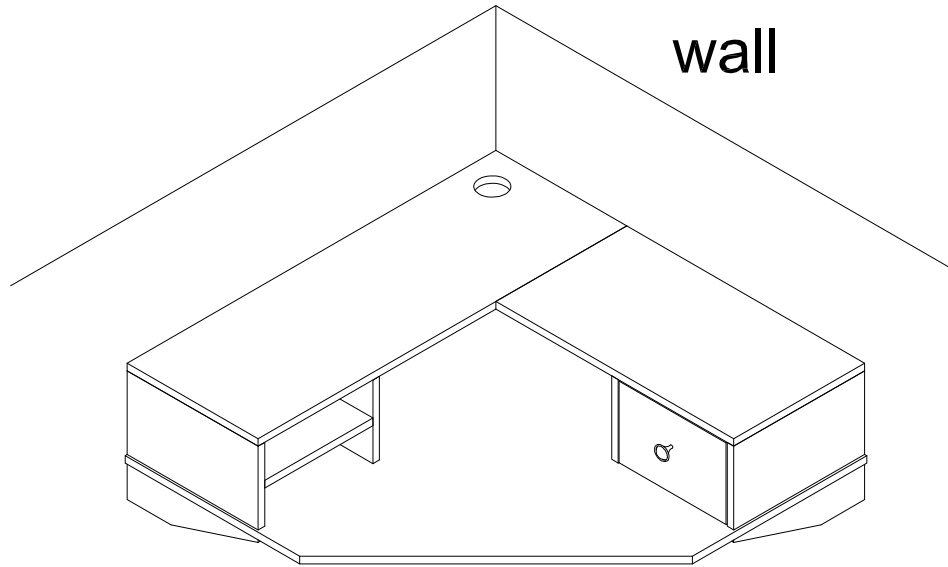


Figure 20

Now your Rymark Corner Wall Mount Desk is ready for use!

Note:

Max loading weight of top : 20lbs

Max loading weight of drawer:

10lbs

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No

Parts Letter

Parts Description

Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend mowe are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019