

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (1) Medium Base Decorative Filament 60W bulbs (provided), Maximum 150W, Alternate bulb (1) 42W CFL Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering November result.

Package Contents

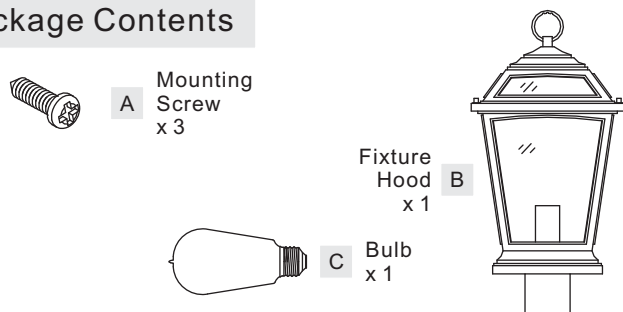

STEP 1 – Remove Package Material out of the Cage

- A. Remove Fixture Hood from top of the Cage by unlocking Lock Balls and Rubber Washers. Remove Package Material out of the Cage.

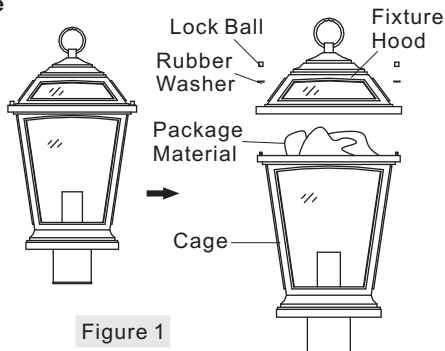


Figure 1

STEP 2 – Install Bulb

- A. This fixture uses standard bulb 60W (supplied) with a standard screw base. Maximum 150 watts.
B. Insert bulb and screw properly into place.
C. Place Fixture Hood back onto Cage and secure with Rubber Washers and Lock Balls.

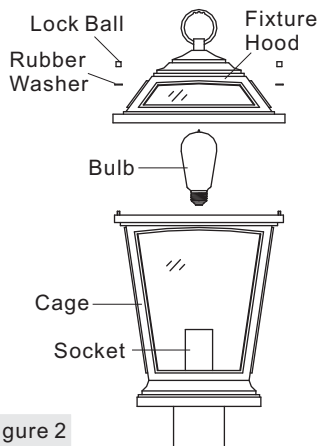


Figure 2

STEP 3 – Drill Pilot Holes on Post

- A. Carefully fit the Post Fitter over the end of the Post (not supplied), making sure the Post Fitter is fully seated.
B. Mark the drill point for the (3) Mounting Screws, using (3) Mounting Holes as reference. After marking hole locations, remove fixture from post and drill 1/16" pilot holes for screws.

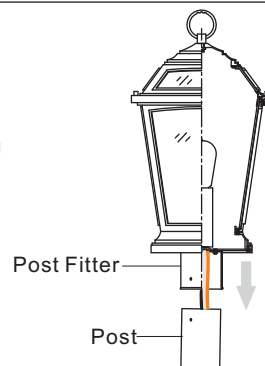


Figure 3

STEP 4 – Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

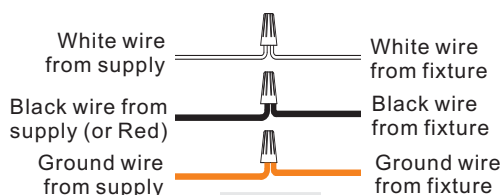


Figure 4

STEP 5 – Attach Fixture Body to Post

- A. Coat the top 1" of the Post with Clear Silicone Caulk (not supplied) and position the Post Fitter onto the Post. Be sure to seat it completely, aligning the holes in the Fitter with the 1/16" Pilot Holes drilled into the Post.
B. Secure the Fixture to Post with (3) Mounting Screws.

Your fixture is now assembled and ready to use. Enjoy!





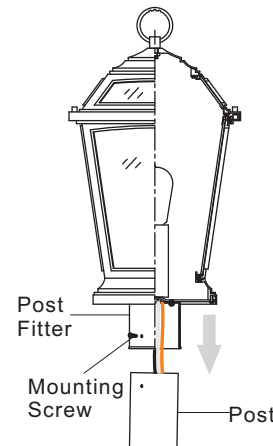


Figure 5

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

RGE9011WT

FINISH: WESTERN BRONZE

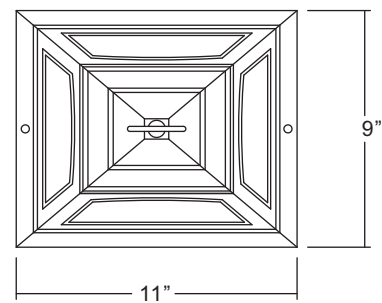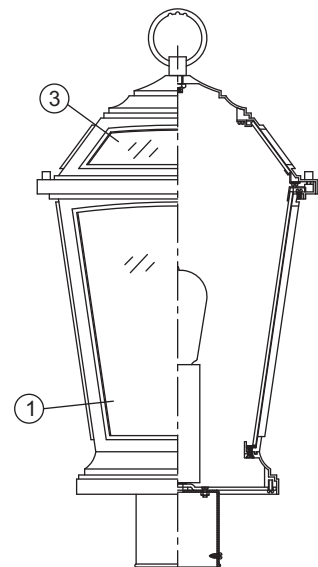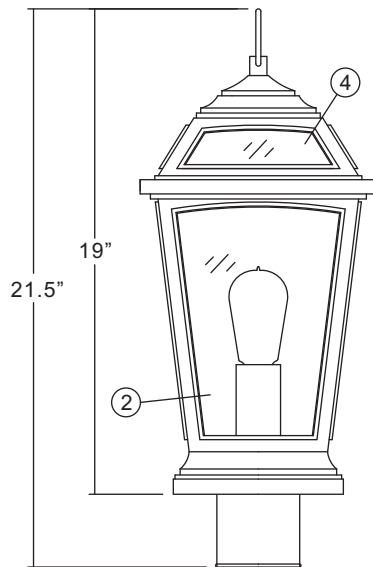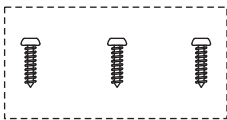

(1) Medium Base
Decorative
Filament 60W
bulbs (provided),
Maximum 150W.

NOTE: ALL DIMENSIONS ARE ROUNDED UP
TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	G3981PA	PANEL CLEAR WATER GLASS	2
2	G3982PA	PANEL CLEAR WATER GLASS	2
3	G3983PA	PANEL CLEAR WATER GLASS	2
4	G3984PA	PANEL CLEAR WATER GLASS	2

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com