
6 CORPORATE PARKWAY	struction Sheet #IS-KD2816MM For Style KD2816MM
Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (2) Medium Base bulbs, 100W Maximum. Alternate bulbs (2) 23W CFL. Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.	
 ▲ Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject 	
glass parts to any shock while in operation or shattering may result. Package Contents Image: Con	 STEP 1 - Install Shade, Nipple with Hex Nut, Socket Assembly, Center Column, Fixture Loop and Side Arms together A. Thread the Center Column (B) onto the top center of the Socket Assembly (D). Align the holes on the side of the Body to Spiders before tighten them together. B. Pass the bolts on the top end of the Side Arm (C) through the soles on the Body as shown. Secure by threading the Lock Ball (E) onto the bottom end of the Side Arm (C) through the Spiders. C. Thread the Hex Nut end of the Nipple (F) onto the hex coupling underside of the Socket Assembly (D). By using pilers, thread the Hex Nut against the hex coupling and hand tighten until snug. D. Pass Tabs at the top edge of the Shade (K) over the Bolts extruding from Spiders. Thread Lock Balls (E) onto Bolts to secure the Shade (K). Hand tighten until snug. Thread the Fixture Loop (A) onto the nipple in the top center of the Conter Column (B) and hand tighten until snug. Thread the Spacer Tube (G), the Check Ring (H), Flat Washers (I). Plastic Washers (J) and the Diffuser (L) over the end of the Nipple (F) as shown. Secure by threading the Knurled Nut (M) onto the Nipple (F) as shown. Secure by threading the Knurled Nut (M) onto the end of the Nipple (F) and hand tighten until snug. B. Thread the Finial (N) onto the end of the Nipple (F) and hand tighten until snug. B. Thread the Finial (N) onto the end of the Nipple (F) and hand tighten until snug. B. Thread the Finial (N) onto the end of the Nipple (F) and hand tighten until snug. B. Thread the Finial (N) onto the end of the Nipple (F) and hand tighten until snug. Figure 2
Image: State of the state o	



REV.A

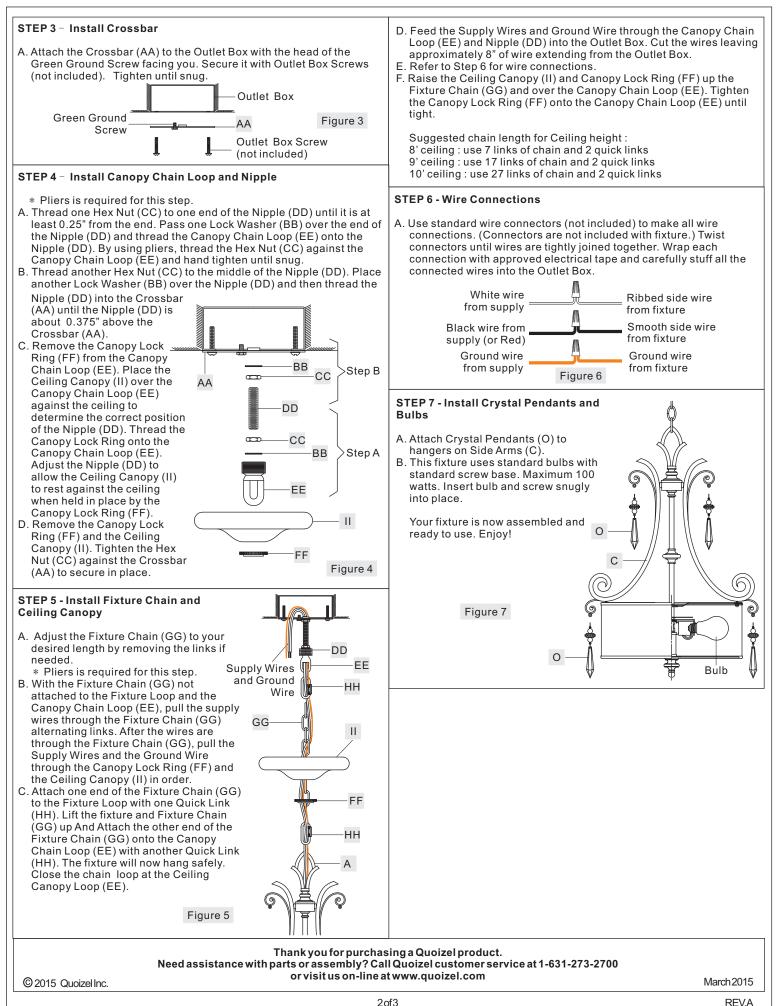